

# Notebook Tour

## User Guide

© Copyright 2008 Hewlett-Packard  
Development Company, L.P.

Bluetooth is a trademark owned by its  
proprietor and used by Hewlett-Packard  
Company under license. Java is a U.S.  
trademark of Sun Microsystems, Inc.  
Microsoft and Windows are U.S. registered  
trademarks of Microsoft Corporation. SD  
Logo is a trademark of its proprietor.

The information contained herein is subject  
to change without notice. The only  
warranties for HP products and services are  
set forth in the express warranty statements  
accompanying such products and services.  
Nothing herein should be construed as  
constituting an additional warranty. HP shall  
not be liable for technical or editorial errors  
or omissions contained herein.

First Edition: June 2008

Document Part Number: 487046-001

## Safety warning notice

- 
- ⚠ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
-



---

# Table of contents

## 1 Identifying hardware

## 2 Components

Product notice .....	2
Top components .....	3
Pointing devices .....	3
Lights .....	4
Buttons, switches, and fingerprint reader .....	6
Keys .....	8
Display .....	9
Front components .....	10
Rear components .....	11
Right-side components .....	12
Left-side components .....	13
Bottom components .....	14
Wireless antennae .....	15
Additional hardware components .....	16

## 3 Labels

Index .....	19
-------------	----



---

# 1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:

1. Select **Start > My Computer**.
2. In the left pane of the System Tasks window, select **View system information**.
3. Select **Hardware** tab > **Device Manager**.

You can also add hardware or modify device configurations using Device Manager.

---

# 2 Components

## Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.



# Top components

 
## Pointing devices



Component	Description
(1) Pointing stick	Moves the pointer and selects or activates items on the screen.
(2) Left pointing stick button	Functions like the left button on an external mouse.
(3) TouchPad*	Moves the pointer and selects or activates items on the screen.
(4) Left TouchPad button*	Functions like the left button on an external mouse.
(5) Right pointing stick button	Functions like the right button on an external mouse.
(6) TouchPad scroll zone*	Scrolls up or down.
(7) Right TouchPad button*	Functions like the right button on an external mouse.

\*This table describes factory settings. To view or change pointing device preferences, select **Start > Control Panel > Printers and Other Hardware > Mouse**.

## Lights

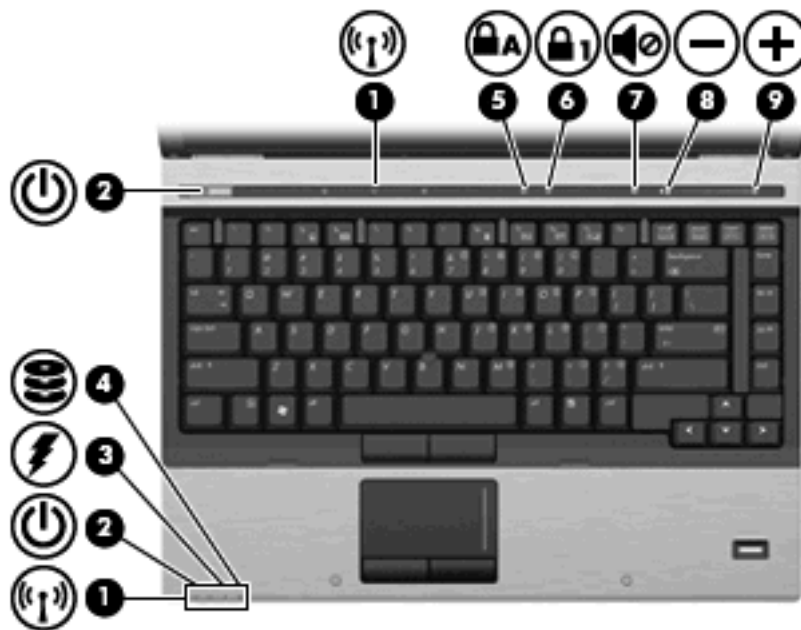

Component	Description
(1) Wireless lights (2)*	<ul style="list-style-type: none"> <li>On: An integrated wireless device, such as a wireless local area network (WLAN) device, the HP Broadband Wireless Module, and/or a Bluetooth® device, is on.</li> <li>Amber: All wireless devices are off.</li> </ul>
(2) Power lights (2)†	<ul style="list-style-type: none"> <li>On: The computer is on.</li> <li>Blinking: The computer is in Standby.</li> <li>Blinking rapidly: An AC adapter with a higher power rating should be connected.</li> <li>Off: The computer is off or in Hibernation.</li> </ul>
(3) Battery light	<ul style="list-style-type: none"> <li>Amber: A battery is charging.</li> <li>Turquoise: A battery is close to full charge capacity.</li> <li>Blinking amber: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly.</li> <li>Off: If the computer is plugged into an external power source, the light turns off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.</li> </ul>
(4) Drive light	<ul style="list-style-type: none"> <li>Blinking turquoise: The hard drive or optical drive is being accessed.</li> <li>Amber: HP 3D DriveGuard has temporarily parked the internal hard drive, and if present, the hard drive in the upgrade bay.</li> </ul>
(5) Caps lock light	On: Caps lock is on.

Component	Description
(6) Num lock light	On: Num lock is on or the embedded numeric keypad is enabled.
(7) Volume mute light	<ul style="list-style-type: none"> <li>• On: Computer sound is on.</li> <li>• Amber: Computer sound is off.</li> </ul>
(8) Volume down light	Blinking: The volume scroll zone is being used to decrease speaker volume.
(9) Volume up light	Blinking: The volume scroll zone is being used to increase speaker volume.

\*The 2 wireless lights display the same information. The light on the wireless button is visible only when the computer is open. The wireless light on the front of the computer is visible whether the computer is open or closed.

†The 2 power lights display the same information. The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.


## Buttons, switches, and fingerprint reader

 


Component	Description
(1) Power button	<ul style="list-style-type: none"> <li>When the computer is off, press the button to turn on the computer.</li> <li>When the computer is on, press the button to shut down the computer.</li> <li>When the computer is in Standby, press the button briefly to exit Standby.</li> <li>When the computer is in Hibernation, press the button briefly to exit Hibernation.</li> </ul> <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select <b>Start &gt; Control Panel &gt; Performance and Maintenance &gt; Power Options</b>.</p>
(2) Internal display switch	Turns off the display if the display is closed while the power is on.
(3) Info button	Launches Info Center, which enables you to open various software solutions.
(4) Wireless button	Turns the wireless feature on or off but does not establish a wireless connection. <p><b>NOTE:</b> A wireless network must be set up in order to establish a wireless connection.</p>
(5) Presentation button	Starts the presentation feature.
(6) Volume mute button	Mutes and restores speaker sound.
(7) Volume scroll zone	Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also press the

Component	Description
(8) Fingerprint reader (select models only)	left side of the volume slider to decrease volume, or press the right side of the volume slider to increase volume.
	Allows a fingerprint logon to Windows, instead of a password logon.


## Keys

 **NOTE:** Your computer may look slightly different from the illustration in this section.

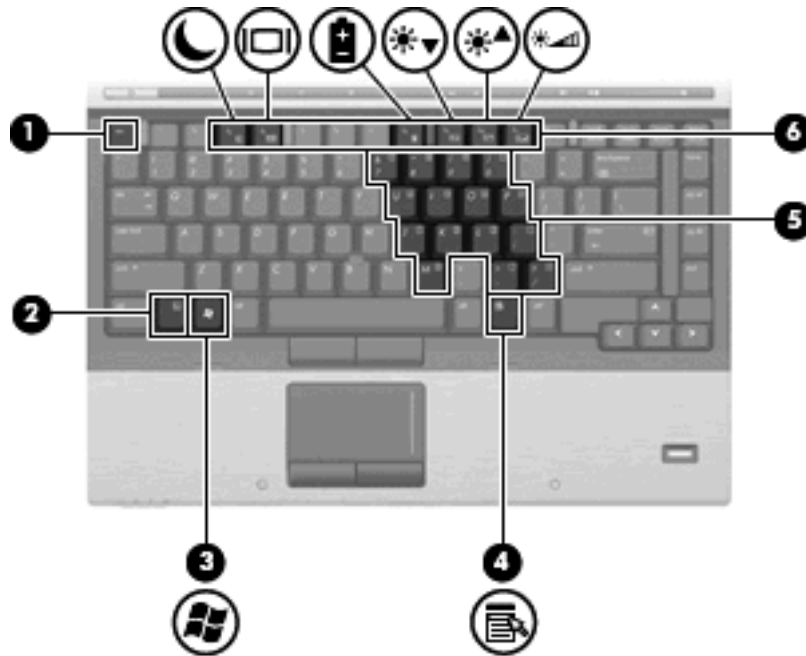

Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes frequently used system functions when pressed in combination with a function key or the <code>esc</code> key.
(3) Windows logo key	Displays the Windows Start menu.
(4) Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5) Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad.
(6) Function keys	Execute frequently used system functions when pressed in combination with the <code>fn</code> key.

## Display

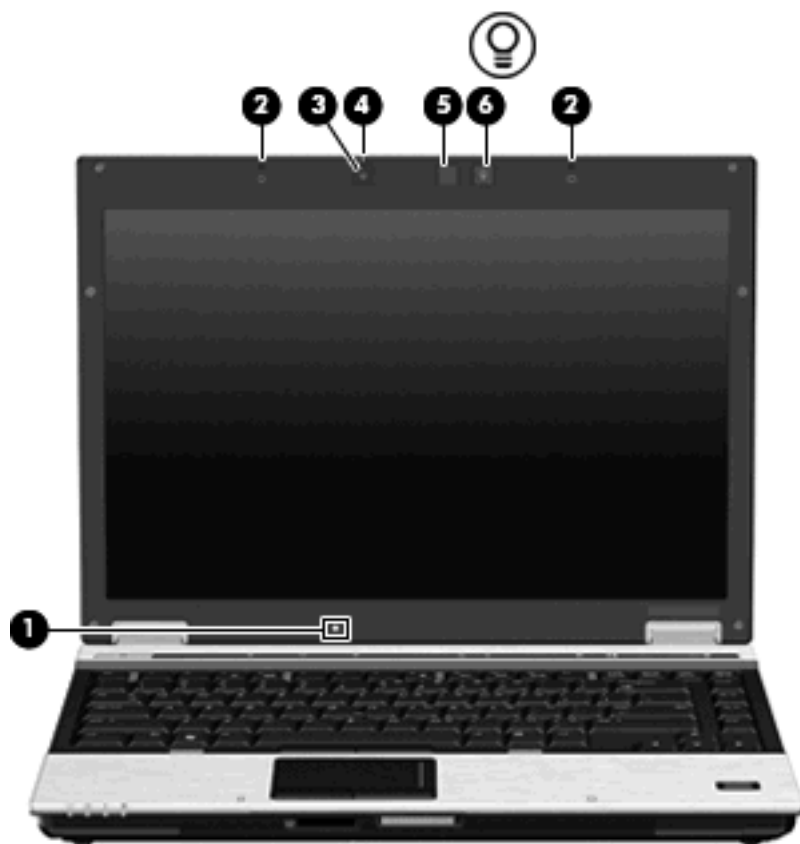 

Component	Description
(1) Ambient light sensor	Automatically adjusts the display brightness based on the lighting conditions in your environment.
(2) Internal microphones (2)	Record sound.
(3) HP Webcam	Records video and captures still video.
(4) HP Webcam light	On: The integrated camera is in use.
(5) Keyboard light	Illuminates the keyboard in low-light conditions when the keyboard light button is pressed.
(6) Keyboard light button	Opens and turns on the keyboard light.

## Front components



Component	Description
(1) Wireless light	<p>On: An integrated wireless device, such as a wireless local area network (WLAN) device, the HP Broadband Wireless Module, and/or a Bluetooth device, is on.</p> <p>Amber: All wireless devices are off.</p>
(2) Power light	<ul style="list-style-type: none"> <li>On: The computer is on.</li> <li>Blinking: The computer is in Standby.</li> <li>Blinking rapidly: An AC adapter with a higher power rating should be connected.</li> <li>Off: The computer is off or in Hibernation.</li> </ul>
(3) Battery light	<ul style="list-style-type: none"> <li>Amber: A battery is charging.</li> <li>Turquoise: A battery is close to full charge capacity.</li> <li>Blinking amber: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly.</li> <li>Off: If the computer is plugged into an external power source, the light turns off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.</li> </ul>
(4) Drive light	<p>Blinking turquoise: The hard drive or optical drive is being accessed.</p> <p>Amber: HP 3D DriveGuard has temporarily parked the hard drive.</p>
(5) Speakers (2)	Produce sound.
(6) SD Card Reader	Supports the Secure Digital (SD) Memory Card and MultiMediaCard (MMC) optional digital card formats.
(7) Display release button	Opens the computer.
(8) Bluetooth compartment	Contains a Bluetooth device.



## Rear components



 
Component	Description
(1) Security cable slot	Attaches an optional security cable to the computer.  <b>NOTE:</b> The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.
(2) Power connector	Connects an AC adapter.
(3) External monitor port	Connects an external VGA monitor or projector.

## Right-side components




Component	Description
(1) Smart card reader	Supports optional smart cards and Java™ cards.
(2) Upgrade bay	Supports an optical drive or hard drive.
(3) USB port	Connects an optional USB device.
(4) RJ-45 (network) jack	Connects a network cable.
(5) RJ-11 (modem) jack	Connects a modem cable.

## Left-side components

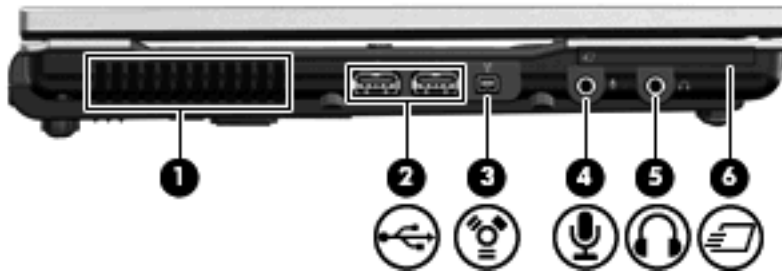


Component	Description
(1) Vent	Enables airflow to cool internal components.  <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(2) USB ports (2)	Connect optional USB devices.
(3) 1394 port	Connects an optional IEEE 1394 or 1394a device, such as a camcorder.
(4) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(5) Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.
(6) ExpressCard slot	Supports optional ExpressCards.

## Bottom components

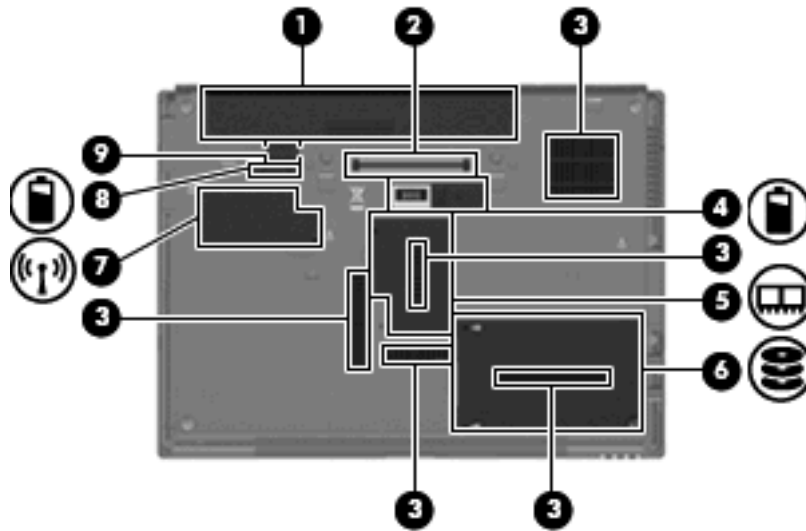 

Component	Description
(1) Battery bay	Holds the battery.
(2) Docking connector	Connects an optional docking device.
(3) Vents (5)	Enable airflow to cool internal components.  <b>CAUTION:</b> To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.  <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4) Accessory battery connector	Connects an optional accessory battery.
(5) Memory module compartment	Contains the expansion memory module slot.
(6) Hard drive bay	Holds the hard drive.
(7) WWAN module compartment	Contains a WWAN module (select models only).  <b>CAUTION:</b> To prevent an unresponsive system and the display of a warning message, replace the device with only a WLAN module authorized for use in the computer by the governmental agency that regulates wireless devices in your country. If you replace the device and then receive a warning message, remove the device to restore computer functionality, and then contact technical support through Help and Support.
(8) Battery release latch	Releases the battery from the battery bay.
(9) SIM slot (select models only)	Contains a wireless subscriber identity module (SIM). The SIM slot is located inside the battery bay.

## Wireless antennae

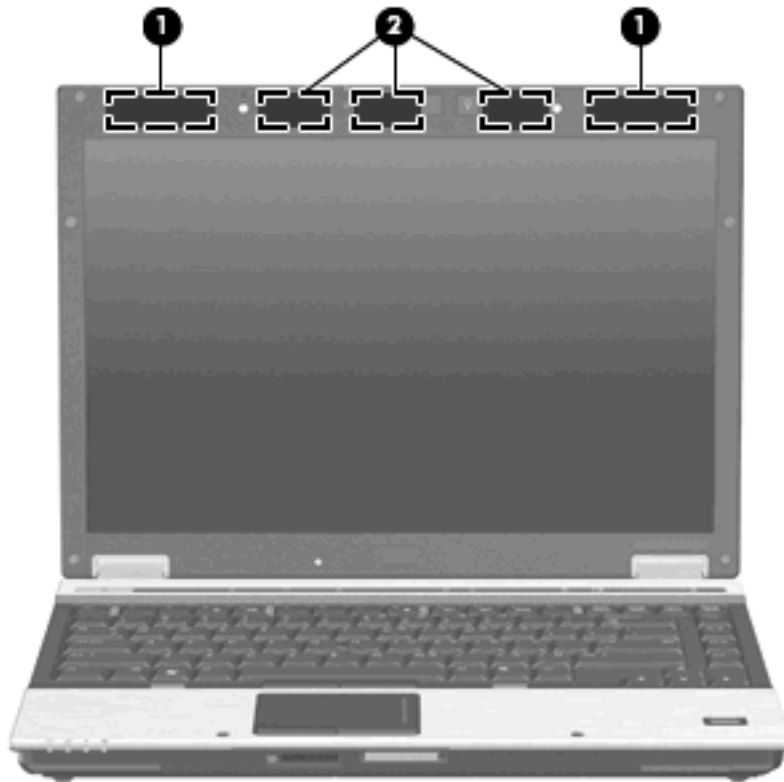 

Component	Description
(1) WWAN antennae (2)*	Send and receive wireless signals to communicate with wireless wide-area networks (WWAN).
(2) WLAN antennae (3)*	Send and receive wireless signals to communicate with wireless local area networks (WLAN).

\*The antennae are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennae free from obstructions.

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

## Additional hardware components



 
Component	Description
(1) Power cord*	Connects an AC adapter to an AC outlet.
(2) Battery*	Powers the computer when the computer is not plugged into external power.
(3) AC adapter	Converts AC power to DC power.
(4) Modem cable (select models only)*	Connects the internal modem to an RJ-11 telephone jack or to a country- or region-specific modem cable adapter.
(5) Country- or region-specific modem cable adapter (select models only)	Adapts the modem cable to a non-RJ-11 telephone jack.

\*Modem cables, batteries, and power cords vary in appearance by country or region.

## 3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides important information including:

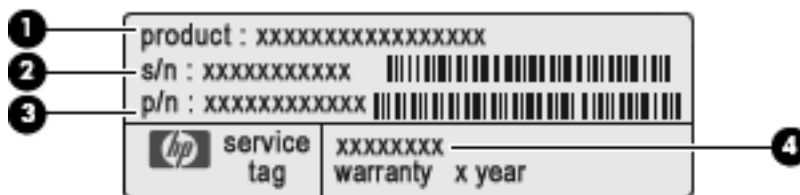

- Product Name **(1)**. This is the product name affixed to the front of your notebook.
- Serial Number (s/n) **(2)**. This is an alphanumeric number that is unique to each product.
- Part Number/Product Number (p/n) **(3)**. This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
- Model Description **(4)**. This is the number you need to locate documents, drivers, and support for your notebook.

Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.

- Microsoft® Certificate of Authenticity—Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label—Provides regulatory information about the modem and lists the agency approval markings required by some of the countries in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the memory module compartment.
- Wireless certification label(s) (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device, an HP Broadband Wireless Module, or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are

affixed inside the WWAN module compartment, inside the hard drive bay, and/or inside the battery bay.

- SIM (subscriber identity module) label (select models only)—Provides the ICCID (Integrated Circuit Card Identifier) of your SIM. This label is located inside the battery bay.
- HP Broadband Wireless Module serial number label (select models only)—Provides the serial number of your HP Broadband Wireless Module. This label is located inside the battery bay.



---

# Index

## Symbols/Numerics

1394 port, identifying 13

## A

AC adapter, identifying 16  
accessory battery connector,  
identifying 14  
ambient light sensor, identifying 9  
applications key, Windows 8  
audio-in (microphone) jack,  
identifying 13  
audio-out (headphone) jack,  
identifying 13

## B

battery bay 14, 17  
battery light, identifying 4, 10  
battery release latch,  
identifying 14  
battery, identifying 16  
bays  
battery 14, 17  
hard drive 14  
Bluetooth compartment,  
identifying 10  
Bluetooth label 18  
buttons  
display release 10  
info 6  
keyboard light 9  
pointing stick 3  
power 6  
presentation 6  
TouchPad 3  
volume mute 6  
wireless 6

## C

caps lock light, identifying 4  
Certificate of Authenticity label 17

compartments  
Bluetooth 10  
expansion memory module 14  
components  
additional hardware 16  
bottom 14  
front 10  
left-side 13  
rear 11  
right-side 12  
top 3  
wireless antennae 15  
connector, power 11  
cord, power 16  
country-specific modem cable  
adapter, identifying 16

## D

display release button,  
identifying 10  
docking connector, identifying 14  
drive light, identifying 4, 10

## E

esc key, identifying 8  
expansion memory module  
compartment, identifying 14  
ExpressCard slot, identifying 13  
external monitor port,  
identifying 11

## F

fingerprint reader, identifying 7  
fn key, identifying 8  
function keys, identifying 8

## H

hard drive bay, identifying 14  
headphone (audio-out) jack 13

HP Broadband Wireless Module  
serial number label 18  
HP Webcam light, identifying 9  
HP webcam, identifying 9

## I

IEEE 1394 port, identifying 13  
info button, identifying 6  
internal display switch,  
identifying 6  
internal microphone, identifying 9

## J

jacks  
audio-in (microphone) 13  
audio-out (headphone) 13  
RJ-11 (modem) 12  
RJ-45 (network) 12

## K

keyboard light button,  
identifying 9  
keyboard light, identifying 9  
keypad keys, identifying 8  
keys  
esc 8  
fn 8  
function 8  
keypad 8  
Windows applications 8  
Windows logo 8

## L

labels  
Bluetooth 18  
HP Broadband 18  
Microsoft Certificate of  
Authenticity 17  
modem approval 17  
regulatory 17

- service tag 17
- SIM 18
- wireless certification 18
- WLAN 18

- latch, battery release 14

#### lights

- battery 4, 10
- caps lock 4
- drive 4, 10
- HP webcam 9
- mute 5
- num lock 5
- power 4, 10
- volume down 5
- volume mute 5
- volume up 5
- wireless 4, 10

#### M

- memory module compartment, identifying 14
- microphone (audio-in) jack 13
- Microsoft Certificate of Authenticity label 17
- modem approval label 17
- modem cable adapter, identifying 16
- modem cable, identifying 16
- monitor port, external 11
- mute button, identifying 6
- mute light, identifying 5

#### N

- num lock light, identifying 5

#### O

- operating system
  - Microsoft Certificate of Authenticity label 17
  - Product Key 17

#### P

- pointing stick buttons, identifying 3
- pointing stick, identifying 3
- ports
  - 1394 13
  - external monitor 11
  - USB 12, 13
- power button, identifying 6
- power connector, identifying 11

- power cord, identifying 16
- power light, identifying 10
- power lights, identifying 4
- presentation button, identifying 6
- Product Key 17

- product name and number, computer 17

#### R

- regulatory information
  - modem approval label 17
  - regulatory label 17
  - wireless certification labels 18
- release latch, battery 14
- RJ-11 (modem) jack, identifying 12
- RJ-45 (network) jack, identifying 12

#### S

- scroll zone, TouchPad 3
- SD Card Reader, identifying 10
- security cable slot, identifying 11
- serial number, computer 17
- service tag 17
- SIM label 18
- SIM slot, identifying 14
- slots
  - memory module 14
  - SIM 14
  - smart card reader 12
- smart card reader, identifying 12
- speaker, identifying 10

#### T

- TouchPad
  - buttons 3
  - identifying 3
  - scroll zone 3
- traveling with the computer
  - modem approval label 17
  - wireless certification labels 18

#### U

- upgrade bay, identifying 12
- USB ports, identifying 12, 13

#### V

- vent 13
- vents, identifying 14
- volume down light, identifying 5

- volume mute button, identifying 6
- volume mute light, identifying 5
- volume scroll zone, identifying 6
- volume up light, identifying 5

#### W

- webcam light, identifying 9
- webcam, identifying 9
- Windows applications key, identifying 8
- Windows logo key, identifying 8
- wireless button, identifying 6
- wireless certification label 18
- wireless light, identifying 4, 10
- WLAN antennae, identifying 15
- WLAN device 18
- WLAN label 18
- WWAN antenna, identifying 15
- WWAN module compartment, identifying 14

