Notebook Tour User Guide

© Copyright 2008 Hewlett-Packard Development Company, L.P.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Second Edition: June 2008

Document Part Number: 482522-002

Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.

Safety warning notice

▲ WARNING! To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

Table of contents

1 Identifying hardware

2	Components	
	Top components	2
	TouchPad	2
	Keys	
	Buttons and speakers	
	Front components	5
	Rear component	
	Right-side components	
	Left-side components	
	Bottom components	
	Display components	
	Lights	
	Cleaning the display	11
	Wireless antennae (select models only)	12
	Additional hardware components	
3	Labels	
In	dex	15

1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:

- Select Start > Computer > System properties.
- In the left pane, click Device Manager.


You can also add hardware or modify device configurations using Device Manager.

NOTE: Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

2 Components

Top components


TouchPad

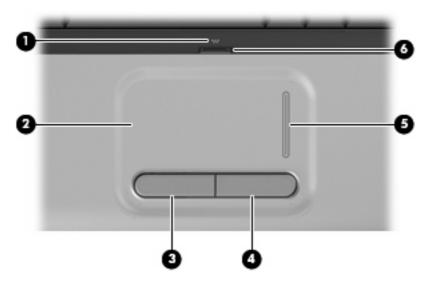

Component		Description
(1)	TouchPad light	White: TouchPad is enabled.
		 Amber: TouchPad is disabled.
(2)	TouchPad*	Moves the pointer and selects or activates items on the screen
(3)	Left TouchPad button*	Functions like the left button on an external mouse.
(4)	Right TouchPad button*	Functions like the right button on an external mouse.
(5)	TouchPad vertical scroll zone	Scrolls up or down.
(6)	TouchPad on/off button	Enables/disables the TouchPad.

^{*}This table describes factory settings. To view and change TouchPad preferences, select **Start > Control Panel > Hardware and Sound > Mouse**.

Keys

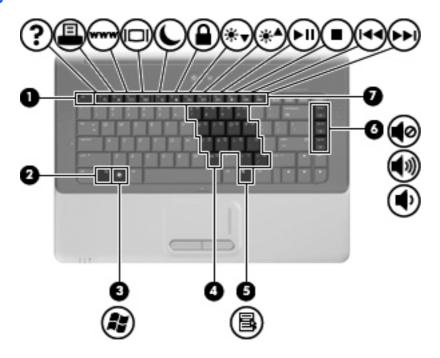


Com	ponent	Description
(1)	esc key	Displays system information about your computer when pressed in combination with the fn key.
(2)	fn key	Executes frequently used system functions when pressed in combination with a function key or the esc key.
(3)	Windows logo key	Displays the Windows Start menu.
(4)	Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5)	Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad.
(6)	Volume keys	Adjusts system volume when pressed in combination with the fn key.
(7)	Function keys	Execute frequently used system functions when pressed in combination with the fn key.

Buttons and speakers



Component		Description
(1)	Speakers (2)	Produce sound.
(2)	Power button	When the computer is off, press the button to turn on the computer.
		 When the computer is on, press the button briefly to initiate Sleep.
		 When the computer is in the Sleep state, press the button briefly to exit Sleep.
		When the computer is in Hibernation, press the button briefly to exit Hibernation.
		If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.
		To learn more about your power settings, select Start > Control Panel > System and Maintenance > Power Options .
(3)	Wireless button	Turns the wireless feature on or off, but does not create a wireless connection.
		NOTE: A wireless network must be set up in order to establish a wireless connection.

Front components

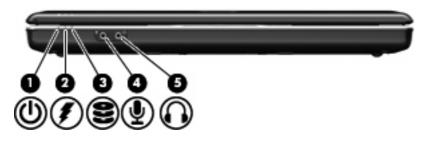

Com	ponent	Description
(1)	Power light	 On: The computer is on. Blinking: The computer is in the Sleep state. Off: The computer is off or in Hibernation.
(2)	Battery light	 On: A battery is charging. Blinking: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly. Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.
(3)	Drive light	Blinking: The hard drive or optical drive is being accessed.
(4)	Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(5)	Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.


NOTE: This table describes factory settings. For information about changing factory settings, refer to the user guides located in Help and Support.

Rear component




Component	Description
Vent	Enables airflow to cool internal components.
	NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Right-side components

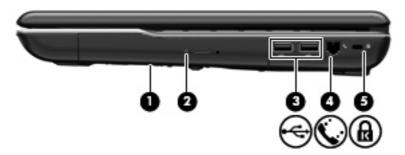


Component		Description
(1)	Optical drive	Reads optical discs and, on select models, also writes to optical discs.
(2)	Optical drive light	Blinking: The optical drive is being accessed.
(3)	USB ports (2)	Connect optional USB devices.
(4)	RJ-11 (modem) jack (select models only)	Connects a modem cable.
(5)	Security cable slot	Attaches an optional security cable to the computer.
		NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.

Left-side components

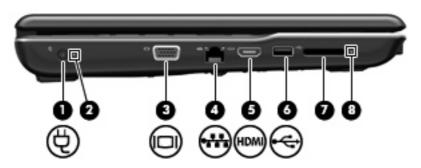

Com	ponent	Description
(1)	Power connector	Connects an AC adapter.
(2)	AC adapter light	On: The computer is connected to external power.
		Off: The computer is not connected to external power.
(3)	External monitor port	Connects an external VGA monitor or projector.
(4)	RJ-45 (network) jack	Connects a network cable.
(5)	HDMI port	Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio component.
(6)	USB port	Connects an optional USB device.
(7)	Digital Media Slot	Supports the following optional digital card formats:
		Memory Stick (MS)
		Memory Stick Pro (MSP)
		MultiMediaCard (MMC)
		Secure Digital (SD) Memory Card
		xD-Picture Card (XD)
		xD-Picture Card (XD) Type H
		xD-Picture Card (XD) Type M
(8)	Digital Media Slot light	On: A digital card is being accessed.

Bottom components

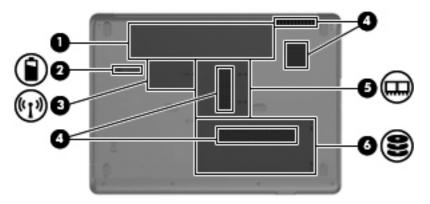

Com	ponent	Description
(1)	Battery bay	Holds the battery.
(2)	Battery release latch	Releases the battery from the battery bay.
(3)	WLAN module compartment	Holds the WLAN module.
		CAUTION: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.
(4)	Vents (4)	Enable airflow to cool internal components.
		NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(5)	Memory module compartment	Contains the memory module slots.
(6)	Hard drive bay	Holds the hard drive.

Display components



Component		Description
(1)	Integrated webcam light	On: The integrated webcam is in use.
(2)	Integrated webcam	Records audio and video and captures still photographs.
(3)	Internal microphone	Records sound.

Lights



Comp	ponent	Description
(1)	TouchPad light	White: TouchPad is enabled.
		Amber: TouchPad is disabled.
(2)	Caps lock light	On: Caps lock is on.
(3)	Power light*	On: The computer is on.
		Blinking: The computer is in the Sleep state.
		Off: The computer is off or in Hibernation.
(4)	Wireless light	 Blue: An integrated wireless device, such as a wireless loca area network (WLAN) device and/or a Bluetooth® device, is turned on.
		Amber: All wireless devices are turned off.
(5)	Num lock light	On: Num lock is on or the integrated numeric keypad is enabled.

^{*}The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.

Cleaning the display

To remove smudges and lint, frequently clean the display with a soft, damp, lint-free cloth. If the screen requires additional cleaning, use premoistened antistatic wipes or an antistatic screen cleaner.

△ CAUTION: To prevent permanent damage to the computer, never spray water, cleaning fluids, or chemicals on the display.

Wireless antennae (select models only)

On select computer models, at least 2 antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.



NOTE: For optimal transmission, keep the areas immediately around the antennae free from obstructions.

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

Additional hardware components



Component		Description	
(1)	Power cord*	Connects an AC adapter to an AC outlet.	
(2)	AC adapter	Converts AC power to DC power.	
(3)	Battery*	Powers the computer when the computer is not plugged into external power.	
(4)	Modem cable* (select models only)	Connects the internal modem to an RJ-11 telephone jack or to a country- or region-specific modem adapter.	

3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag: Provides the product brand and series name, serial number (s/n), and product number (p/n) of your computer. Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.
- Microsoft® Certificate of Authenticity: Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label: Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label: Provides regulatory information about the modem and lists the agency
 approval markings required by some of the countries or regions in which the modem has been
 approved for use. You may need this information when traveling internationally. The modem
 approval label is affixed inside the hard drive and WLAN module door.
- Wireless certification label(s) (select models only): Provide information about optional wireless devices and the approval markings of some of the countries or regions in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the hard drive and WLAN module door.
- SIM (subscriber identity module) label (select models only): Provides the ICCID (Integrated Circuit Card Identifier) of your SIM. This label is located inside the battery bay.
- HP Broadband Wireless Module serial number label (select models only): Provides the serial number of your HP Broadband Wireless Module. This label is located inside the battery bay.

Index

A AC adapter light, identifying 8 AC adapter, identifying 13 antennae 12	rear 6 right-side 7 top 2 connectors, power 8	RJ-11 (modem) 7 RJ-45 (network 8
applications key, Windows 3 audio-in (microphone) jack, identifying 5	cord, power 13	keypad keys, identifying 3 keys esc 3
audio-out (headphone) jack, identifying 5	Digital Media Slot light, identifying 8 Digital Media Slot, identifying 8	fn 3 function 3 keypad 3
battery bay 14 battery bay, identifying 9 battery light, identifying 5	drive light, identifying 5 drives, hard 9	volume 3 Windows applications 3 Windows logo 3
battery release latch,	esc key, identifying 3	L
identifying 9	external monitor port,	labels
battery, identifying 13	identifying 8	Bluetooth 14
bays		HP Broadband 14
battery 9, 14	F	Microsoft Certificate of
hard drive 9	fn key, identifying 3 function keys, identifying 3	Authenticity 14 modem approval 14
Bluetooth label 14 buttons	randion keys, identifying 5	regulatory 14
power 4	н	service tag 14
TouchPad 2	hard drive bay, identifying 9	SIM 14
TouchPad on/off 2	HDMI port, identifying 8	wireless certification 14
wireless 4	headphone (audio-out) jack 5	WLAN 14
	HP Broadband Wireless Module	latches
C	serial number label 14	battery release 9
caps lock, lights 11		lights
Certificate of Authenticity label 14	integrated webcam ,	AC adapter 8
cleaning the display 11	identifying 10	battery 5
compartments	internal microphone,	caps lock 11
memory module 9 WLAN module 9	identifying 10	Digital Media Slot 8 drive 5
components	3	num lock 11
additional hardware 13	J	power 5, 11
bottom 9	jacks	TouchPad 2, 11
display 10	audio-in (microphone) 5	wireless 11
front 5	audio-out (headphone) 5	
left-side 8		

M	slots
memory module compartment,	Digital Media 8
identifying 9	memory module 9
microphone (audio-in) jack 5	security cable 7
microphone, internal 10	speakers, identifying 4
Microsoft Certificate of Authenticity	
label 14	Т
modem approval label 14	TouchPad buttons, identifying 2
modem cable, identifying 13	TouchPad light, identifying 2, 11
monitor port, external 8	TouchPad on/off button 2
	TouchPad scrolling zones,
N	identifying 2
num lock light, identifying 11	TouchPad, identifying 2
	traveling with the computer
0	modem approval label 14
operating system	wireless certification labels 14
Microsoft Certificate of	
Authenticity label 14	U
Product Key 14	USB ports, identifying 7, 8
optical drive, identifying 7	
	V
P	vents, identifying 6, 9
ports	volume keys, identifying 3
external monitor 8	
HDMI 8	W
USB 7, 8	webcam light, identifying 10
power button, identifying 4	webcam, identifying 10
power connector, identifying 8	Windows applications key,
power cord, identifying 13	identifying 3
power light, identifying 5, 11	Windows logo key, identifying 3
Product Key 14	wireless antennae 12
product name and number,	wireless button 4
computer 14	wireless certification label 14
_	wireless light, identifying 11
R	WLAN device 14
regulatory information	WLAN label 14
modem approval label 14	WLAN module compartment,
regulatory label 14	identifying 9
wireless certification labels 14	
RJ-11 (modem) jack,	
identifying 7	
RJ-45 (network) jack,	
identifying 8	
S	
scrolling zones, TouchPad 2	
security cable slot, identifying 7	
serial number, computer 14	
service tag 14	
SIM label 14	