

# Notebook Tour

## User Guide

© Copyright 2008 Hewlett-Packard  
Development Company, L.P.

Microsoft and Windows are U.S. registered  
trademarks of Microsoft Corporation.  
Bluetooth is a trademark owned by its  
proprietor and used by Hewlett-Packard  
Company under license. SD Logo is a  
trademark of its proprietor.

The information contained herein is subject  
to change without notice. The only  
warranties for HP products and services are  
set forth in the express warranty statements  
accompanying such products and services.  
Nothing herein should be construed as  
constituting an additional warranty. HP shall  
not be liable for technical or editorial errors  
or omissions contained herein.

First Edition: June 2008

Document Part Number: 468134-001

## Safety warning notice

- 
- ⚠ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
-



---

# Table of contents

## 1 Identifying hardware

## 2 Components

Product notice .....	2
Top components .....	2
TouchPad .....	2
Lights .....	3
Buttons, speakers, and fingerprint reader .....	4
Keys .....	5
Display .....	6
Front components .....	8
Rear component .....	9
Right-side components .....	9
Left-side components .....	10
Bottom components .....	11
Wireless antennae .....	12
Additional hardware components .....	13

## 3 Labels

Index .....	16
-------------	----




---

# 1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:

1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.

You can also add hardware or modify device configurations using Device Manager.

 **NOTE:** Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing applications, running utilities, or changing Windows settings. Refer to Windows Help for more information.

---

## 2 Components

### Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.

### Top components

#### TouchPad




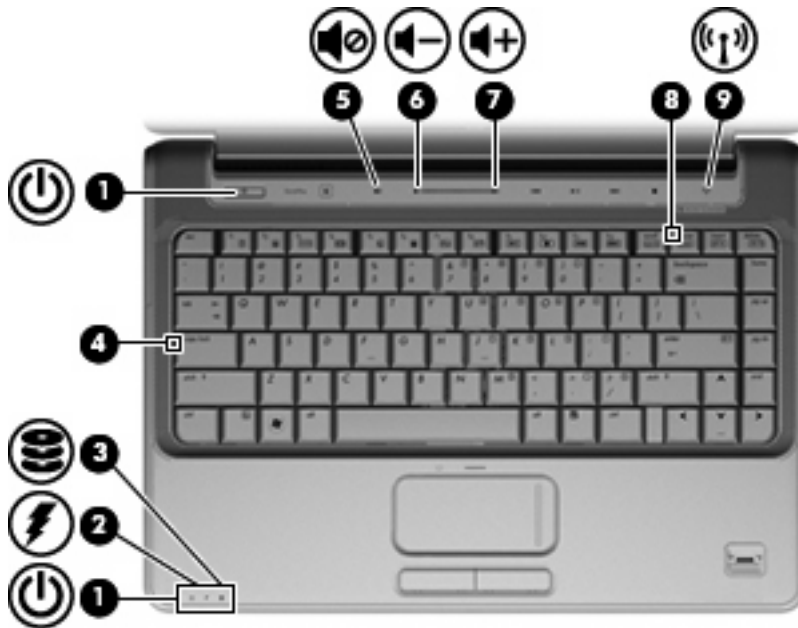 
Component	Description
(1) TouchPad light	<ul style="list-style-type: none"><li>• White: TouchPad is enabled.</li><li>• Amber: TouchPad is disabled.</li></ul>
(2) TouchPad*	Moves the pointer and selects or activates items on the screen.
(3) Left TouchPad button*	Functions like the left button on an external mouse.
(4) TouchPad on/off button	Enables/disables the TouchPad.
(5) TouchPad vertical scroll zone*	Scrolls up or down.
(6) Right TouchPad button*	Functions like the right button on an external mouse.

\*This table describes factory settings. To view or change pointing device preferences, select **Start > Control Panel > Hardware and Sound > Mouse**.



# Lights

 **NOTE:** Your computer may look slightly different from the illustration in this section.




Component	Description
(1) Power lights (2)*	<ul style="list-style-type: none"> <li>On: The computer is on.</li> <li>Blinking: The computer is in the Sleep state.</li> <li>Off: The computer is off or in Hibernation.</li> </ul>
(2) Battery light	<ul style="list-style-type: none"> <li>On: A battery is charging.</li> <li>Blinking: A battery that is the only available power source has reached a low battery level or a critical battery level.</li> <li>Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.</li> </ul>
(3) Drive light	<ul style="list-style-type: none"> <li>Blinking: The hard drive or optical drive (select models only) is being accessed.</li> <li>On: HP ProtectSmart Hard Drive Protection has temporarily parked the internal hard drive, and if present, the hard drive in the swappable bay.</li> </ul>
(4) Caps lock light	On: Caps lock is on.
(5) Volume mute light	<ul style="list-style-type: none"> <li>White: Computer sound is turned on.</li> <li>Amber: Computer sound is turned off.</li> </ul>
(6) Volume down light	On: The volume scroll zone is being used to decrease speaker volume.

Component	Description
(7) Volume up light	On: The volume scroll zone is being used to increase speaker volume.
(8) Num lock light	On: Num lock is on or the embedded numeric keypad is enabled.
(9) Wireless light	<ul style="list-style-type: none"> <li>Blue: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is on.</li> <li>Amber: All wireless devices are off.</li> </ul>

\*The 2 power lights display the same information. The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.

## Buttons, speakers, and fingerprint reader

 **NOTE:** Your computer may look slightly different from the illustration in this section.



Component	Description
(1) Speakers (2)	Produce sound.
(2) Power button*	<ul style="list-style-type: none"> <li>When the computer is off, press the button to turn on the computer.</li> <li>When the computer is on, briefly press the button to initiate Sleep.</li> </ul>

Component	Description
	<ul style="list-style-type: none"> <li>When the computer is in the Sleep state, briefly press the button to exit Sleep.</li> <li>When the computer is in Hibernation, briefly press the button to exit Hibernation.</li> </ul> <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select <b>Start &gt; Control Panel &gt; System and Maintenance &gt; Power Options</b>.</p>
(3) Media button	<ul style="list-style-type: none"> <li>Launches the QuickPlay program (for models with QuickPlay preinstalled).</li> <li>Launches the DVDPlay program (for models with DVDPlay preinstalled).</li> </ul> <p><b>NOTE:</b> If the computer has been set up to require a logon password, you may be asked to log on to Windows. QuickPlay or DVDPlay launches after you log on. Refer to the QuickPlay or DVDPlay software Help for more information.</p>
(4) Volume mute button	Mutes and restores speaker sound.
(5) Volume scroll zone	Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the minus sign on the scroll zone to decrease volume, or tap the plus sign on the scroll zone to increase volume.
(6) Previous/rewind button	<ul style="list-style-type: none"> <li>Plays the previous track or chapter when the button is pressed once.</li> <li>Rewinds media when the button is pressed simultaneously with the <b>fn</b> key.</li> </ul>
(7) Play/pause button	Plays or pauses media.
(8) Next/fast forward button	<ul style="list-style-type: none"> <li>Plays the next track or chapter when the button is pressed once.</li> <li>Fast forwards media when pressed simultaneously with the <b>fn</b> key.</li> </ul>
(9) Stop button	Stops playback.
(10) Wireless button	<p>Turns the wireless feature on or off but does not establish a wireless connection.</p> <p><b>NOTE:</b> A wireless network must be set up in order to establish a wireless connection.</p>
(11) Fingerprint reader (select models only)	Allows a fingerprint logon to Windows, instead of a password logon.

\*This table describes factory settings. For information about changing factory settings, refer to the user guides located in Help and Support.

## Keys




**NOTE:** Your computer may look slightly different from the illustration in this section.



Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes frequently used system functions when pressed in combination with a function key or the <code>esc</code> key.
(3) Windows logo key	Displays the Windows Start menu.
(4) Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5) Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad.
(6) Function keys	Execute frequently used system functions when pressed in combination with the <code>fn</code> key.

## Display

 **NOTE:** Your computer may look slightly different from the illustration in this section.



Component	Description
(1) Internal display switch	Turns off the display if the display is closed while the computer is turned on.
(2) Internal digital dual array microphones (2)	Record sound.
(3) Integrated webcam light (select models only)	On: The integrated webcam is in use.
(4) Integrated webcam (select models only)	Records video and captures still photographs.

## Front components




Component	Description
(1) Power light	<ul style="list-style-type: none"><li>On: The computer is on.</li><li>Blinking: The computer is in the Sleep state.</li><li>Off: The computer is off or in Hibernation.</li></ul>
(2) Battery light	<ul style="list-style-type: none"><li>On: A battery is charging.</li><li>Blinking: A battery that is the only available power source has reached a low battery level or a critical battery level.</li><li>Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.</li></ul>
(3) Drive light	<ul style="list-style-type: none"><li>Blinking: The hard drive or optical drive (select models only) is being accessed.</li><li>On: HP ProtectSmart Hard Drive Protection has temporarily parked the internal hard drive, and if present, the hard drive in the swappable bay.</li></ul>
(4) Consumer infrared lens	Receives a signal from the HP Remote Control (select models only).
(5) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(6) Audio-out (headphone) jacks (2)	Produce sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.

 
## Rear component



Component	Description
Vent	Enables airflow to cool internal components.  <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.


## Right-side components

 **NOTE:** Your computer may look slightly different from the illustration in this section.

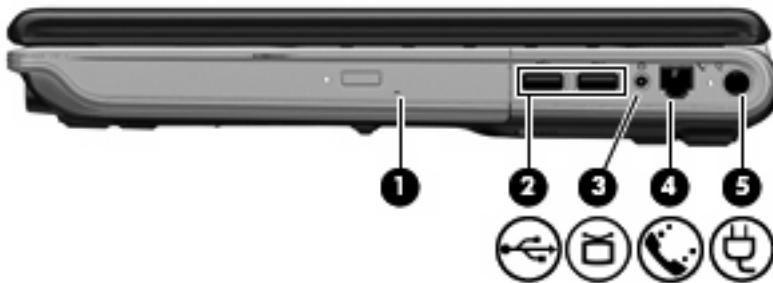

Component	Description
(1) Swappable bay	Supports an optical drive or hard drive.
(2) USB ports (2)	Connect optional USB devices.
(3) TV antenna/cable jack (select models only)	Connects a TV antenna, a digital cable device, or a satellite device that receives standard or high-definition TV broadcasts.
(4) RJ-11 (modem) jack (select models only)	Connects a modem cable.
(5) Power connector	Connects an AC adapter.


## Left-side components

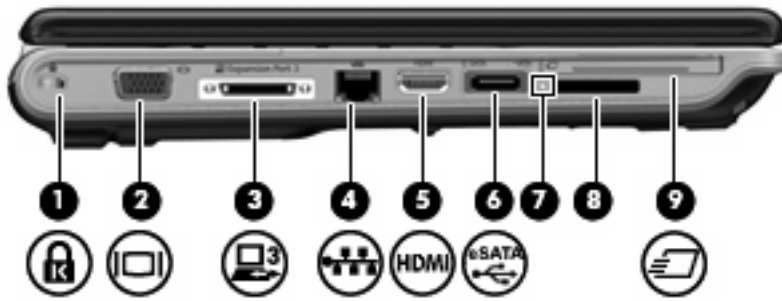 

Component	Description
(1) Security cable slot	Attaches an optional security cable to the computer.  <b>NOTE:</b> The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.
(2) External monitor port	Connects an external VGA monitor or projector.
(3) Expansion port 3	Connects the computer to an optional docking device or optional expansion product.  <b>NOTE:</b> The computer has only one expansion port. The term <i>expansion port 3</i> describes the type of expansion port.
(4) RJ-45 (network) jack	Connects a network cable.
(5) HDMI port	Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio component.
(6) eSATA/USB port	Connects high-performance eSATA components, such as an eSATA external hard drive, or connect an optional USB device.
(7) Digital Media Slot light	On: A digital card is being accessed.
(8) Digital Media Slot	Supports the following optional digital card formats: <ul style="list-style-type: none"> <li>• Memory Stick (MS)</li> <li>• Memory Stick Pro (MSP)</li> <li>• MultiMediaCard (MMC)</li> <li>• Secure Digital (SD) Memory Card</li> <li>• xD-Picture Card (XD)</li> </ul>
(9) ExpressCard slot	Supports optional ExpressCard/54 cards.




## Bottom components

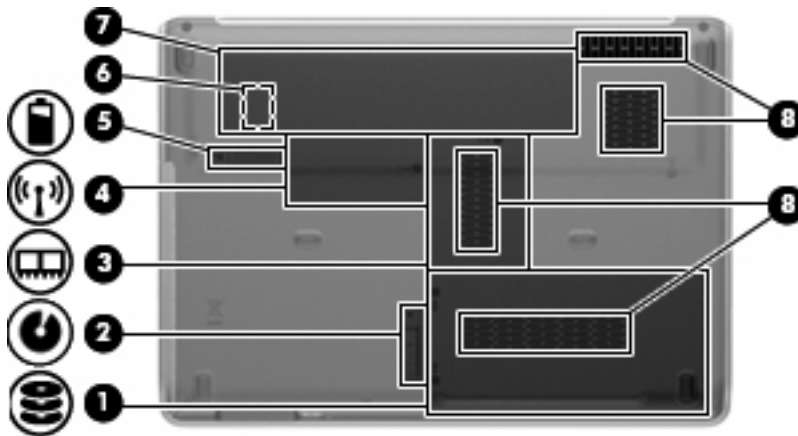 

Component	Description
(1) Hard drive and WLAN module compartment	<p>Holds the hard drive and the wireless LAN (WLAN) module.</p> <p><b>CAUTION:</b> To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.</p>
(2) Swappable bay release latch	Releases the swappable bay module.
(3) Memory module compartment	Contains the 2 memory module slots.
(4) Mini Card compartment	<p>On select models, holds a wireless WAN (WWAN) module and/or the TV tuner card.</p> <p><b>CAUTION:</b> To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.</p>
(5) Battery release latch	Releases the battery from the battery bay.
(6) SIM slot (select models only)	Contains a subscriber identity module (SIM). The SIM slot is located inside the battery bay.
(7) Battery bay	Holds the battery.
(8) Vents (3)	<p>Enable airflow to cool internal components.</p> <p><b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>

## Wireless antennae

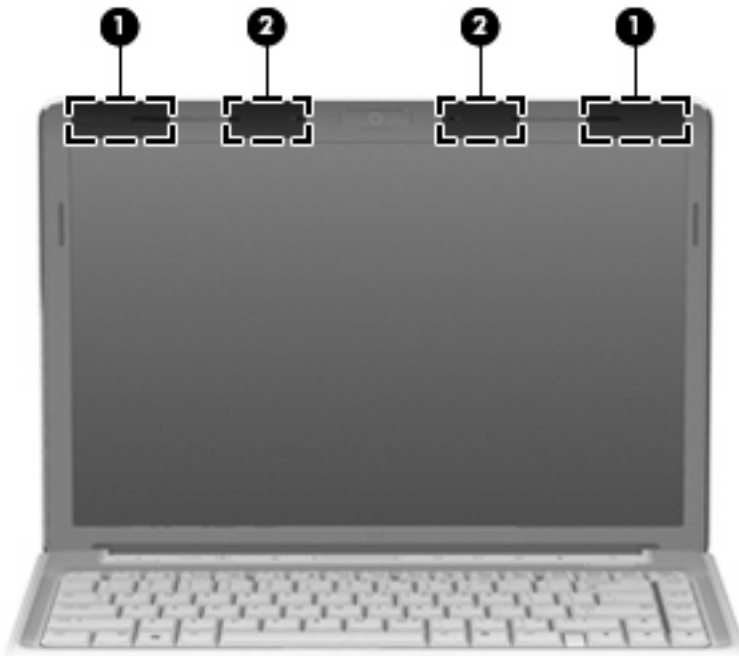 

Component		Description
(1)	WWAN antennae (2)*	Send and receive wireless signals to communicate with wireless wide-area networks (WWAN).
(2)	WLAN antennae (2)*	Send and receive wireless signals to communicate with wireless local area networks (WLAN).

\*The antennae are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennae free from obstructions.

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

## Additional hardware components



Component	Description
(1) Power cord*	Connects an AC adapter to an AC outlet.
(2) AC adapter	Converts AC power to DC power.
(3) Battery*	Powers the computer when the computer is not plugged into external power.

\*Batteries and power cords vary in appearance by region and country.

## 3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides important information including:



- Product Name (1). This is the product name affixed to the front of your notebook.
- Serial Number (s/n) (2). This is an alphanumeric number that is unique to each product.
- Part Number/Product Number (p/n) (3). This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
- Model Description (4). This is the most important number you need to locate documents, drivers, and support for your notebook.

Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.

- Microsoft® Certificate of Authenticity—Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label—Provides regulatory information about the modem and lists the agency approval markings required by some of the countries or regions in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the hard drive bay.
- Wireless certification label(s) (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries or regions in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the Mini Card compartment.

- SIM (subscriber identity module) label (select models only)—Provides the ICCID (Integrated Circuit Card Identifier) of your SIM. This label is located inside the battery bay.
- HP Broadband Wireless Module serial number label—Provides the serial number of your HP Broadband Wireless Module. This label is located inside the battery bay.

---

# Index

- A**
  - AC adapter, identifying 13
  - antennae 12
  - applications key, Windows 6
  - audio-in (microphone) jack, identifying 8
  - audio-out (headphone) jacks, identifying 8
- B**
  - battery bay, identifying 11
  - battery light, identifying 3, 8
  - battery release latch, identifying 11
  - battery, identifying 13
  - bays
    - battery 11, 14
    - hard drive 11
  - Bluetooth label 14
  - buttons
    - media 5
    - next/fast forward 5
    - play/pause 5
    - power 4
    - previous/rewind 5
    - stop 5
    - TouchPad 2
    - TouchPad on/off 2
    - volume mute 5
    - wireless 5
- C**
  - caps lock light, identifying 3
  - Certificate of Authenticity label 14
  - compartments
    - memory module 11
    - Mini Card 11
  - components
    - additional hardware 13
    - bottom 11
    - front 8
    - left-side 10
    - rear 9
    - right-side 9
    - top 2
  - connector, power 9
  - cord, power 13
- D**
  - digital dual array microphones, identifying 7
  - Digital Media Slot light, identifying 10
  - Digital Media Slot, identifying 10
  - display switch, identifying 7
  - drive light, identifying 3, 8
- E**
  - eSATA/USB port, identifying 10
  - esc key, identifying 6
  - expansion port, identifying 10
  - ExpressCard slot, identifying 10
  - external monitor port, identifying 10
- F**
  - fingerprint reader, identifying 5
  - fn key, identifying 6
  - function keys, identifying 6
- H**
  - hard drive bay, identifying 11
  - HDMI port, identifying 10
  - headphone (audio-out) jacks 8
  - HP Broadband Wireless Module
    - serial number label 15
- I**
  - infrared lens, identifying 8
- J**
  - integrated webcam light, identifying 7
  - integrated webcam, identifying 7
  - internal digital dual array microphones, identifying 7
  - internal display switch, identifying 7
  - jacks
    - audio-in (microphone) 8
    - audio-out (headphone) 8
    - RJ-11 (modem) 9
    - RJ-45 (network) 10
    - TV antenna/cable 9
- K**
  - keypad keys, identifying 6
  - keys
    - esc 6
    - fn 6
    - function 6
    - keypad 6
    - Windows applications 6
    - Windows logo 6
- L**
  - labels
    - Bluetooth 14
    - HP Broadband 15
    - Microsoft Certificate of Authenticity 14
    - modem approval 14
    - regulatory 14
    - service tag 14
    - SIM 15
    - wireless certification 14
    - WLAN 14

- latch
  - battery release 11
  - swappable bay release 11
- lights
  - battery 3, 8
  - caps lock 3
  - Digital Media Slot 10
  - drive 3, 8
  - integrated webcam 7
  - mute 3
  - num lock 4
  - power 3, 8
  - TouchPad 2
  - volume down 3
  - volume mute 3
  - volume up 4
  - wireless 4
- M**
  - media activity buttons, identifying 5
  - media button, identifying 5
  - memory module compartment, identifying 11
  - microphone (audio-in) jack 8
  - Microsoft Certificate of Authenticity label 14
  - Mini Card compartment, identifying 11
  - modem approval label 14
  - monitor port, external 10
  - mute button, identifying 5
  - mute light, identifying 3
- N**
  - next/fast forward button, identifying 5
  - num lock light, identifying 4
- O**
  - operating system
    - Microsoft Certificate of Authenticity label 14
    - Product Key 14
- P**
  - play/pause button, identifying 5
- ports
  - eSATA/USB 10
  - expansion 10
  - external monitor 10
  - HDMI 10
  - USB 9
- power button, identifying 4
- power connector, identifying 9
- power cord, identifying 13
- power lights, identifying 3, 8
- previous/rewind button, identifying 5
- Product Key 14
- product name and number, computer 14
- R**
  - regulatory information
    - modem approval label 14
    - regulatory label 14
    - wireless certification labels 14
  - RJ-11 (modem) jack, identifying 9
  - RJ-45 (network) jack, identifying 10
- S**
  - scrolling regions, TouchPad 2
  - security cable slot, identifying 10
  - serial number, computer 14
  - service tag 14
  - SIM label 15
  - SIM slot, identifying 11
  - slots
    - Digital Media 10
    - ExpressCard 10
    - memory module 11
    - security cable 10
    - SIM 11
  - speakers, identifying 4
  - stop button, identifying 5
  - swappable bay release latch, identifying 11
  - swappable bay, identifying 9
- T**
  - TouchPad
    - buttons 2
    - identifying 2
    - scrolling regions 2
  - TouchPad light, identifying 2
  - TouchPad on/off button 2
- traveling with the computer
  - modem approval label 14
  - wireless certification labels 14
- TV antenna/cable jack, identifying 9
- U**
  - USB ports, identifying 9
- V**
  - vents, identifying 9, 11
  - volume down light, identifying 3
  - volume mute button, identifying 5
  - volume mute light, identifying 3
  - volume scroll zone, identifying 5
  - volume up light, identifying 4
- W**
  - webcam, identifying 7
  - Windows applications key, identifying 6
  - Windows logo key, identifying 6
  - wireless antennae 12
  - wireless button, identifying 5
  - wireless certification label 14
  - wireless light, identifying 4
  - WLAN antennae, identifying 12
  - WLAN label 14
  - WLAN module 11, 14
  - WWAN antennae, identifying 12
  - WWAN module 11

