HP LF Printing Knowledge Center



Printing in Black & White

Application: Adobe Photoshop CS

Printer: HP Designjet 30/90/130 series printers


Software: EFI Designer Edition for HP

Operating System: Mac OS X



The simplest approach to creating a black and white image is taking a color image and converting it to grayscale in a photo imaging program such as Photoshop. In addition, although converting an image from color to grayscale is easy, the opposite operation is complex, in this case it is better to have it in color in the first place.

- 1. First recommendations:
 - See the Media type functionality & features and choose the most appropriate media.
 - It is essential to have the media type correctly calibrated with this printer and print mode, consult the <u>Calibrate my printer</u> section.
- 2. Open the EFI Designer Edition RIP.
- 3. EFI Designer Edition RIP settings, **Preferences**:
 - Color:
 - Uncheck the Active Color Management checkbox.
 - Paper name: Select the paper type that is loaded on the printer (always calibrated) and "Best" print quality.
 - Print resolution: 600 x 600.

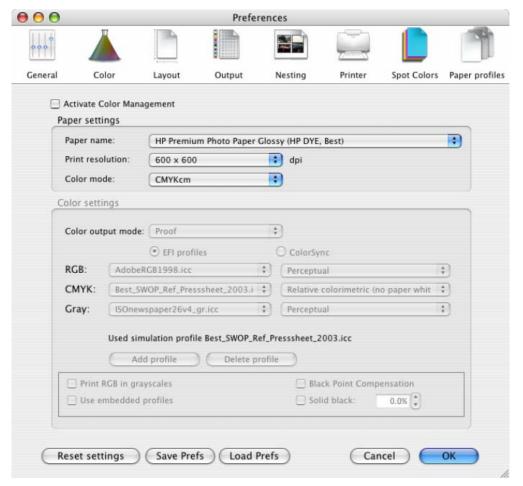


- 4. Open Adobe Photoshop CS.
- 5. Configure the Color Settings, Photoshop menu > Color Settings...:
 - Make sure the **Advanced Mode** check box is ticked.
 - Working Space > RGB: Adobe RGB (1998).


- Working Space > CMYK: Euroscale Coated v2 (for Europe), U.S. Web Coated (SWOP) v2 (for US) and Japan Standard v2 (for Japan).
- Working Space > Gray: Dot Gain 15%.
- Color Management Policies: Preserve Embedded Profiles.
- Profile Mismatches: check Ask When Opening and Ask When Pasting.
- Missing Profiles: check Ask When Opening.
- Conversion Options > Intent: Perceptual.
- OK



- 6. Open the image, File menu > Open...:
 - If the document has an embedded color profile that does not match the current working space, select **Use the embedded profile**. Otherwise, select **Assign working space**.

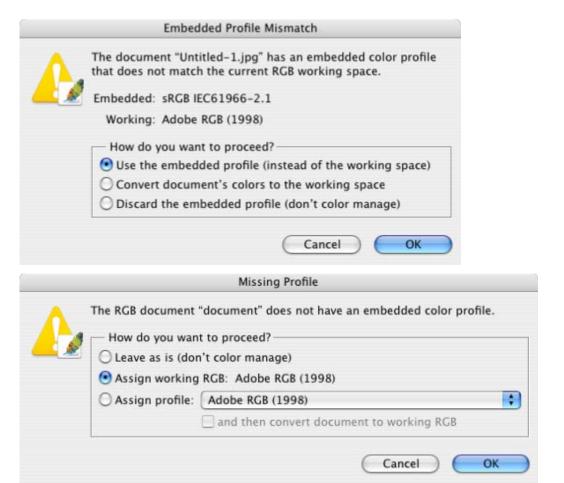


- Click **OK**.
- 7. Convert the image to grayscale, **Image menu > Mode > Grayscale**.
- 8. Adobe Photoshop Print with Preview... settings, File menu > Print with Preview...:
 - Page Setup:
 - Format for...: Select the printer (ex. EFISoftwarePrinter).
 - Paper Size: Select the paper size of the media loaded on the printer.
 - Orientation: Select the orientation of your image on the paper.
 - o Click **OK**.
 - Set the Position and the Scaled Print Size you need.
 - Check Show More Options.
 - Select the Color Management tab:
 - Source Space: Document.
 - Print Space Profile: Same as source.

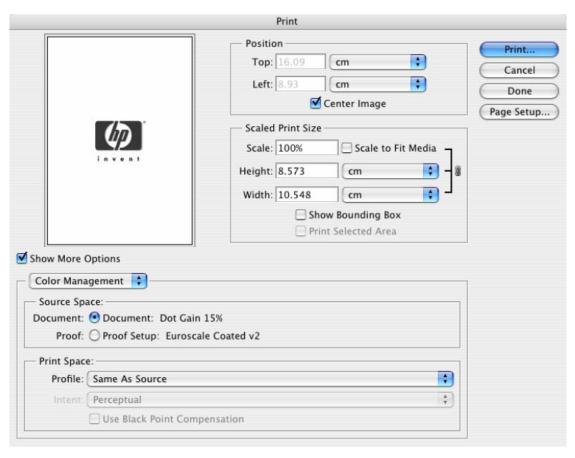

9. Print, Print...:

- Printer: Select the printer (ex. EFISoftwarePrinter).
- Printer Features (Mac OS X v10.3):
 - o **Paper Size:** Setup.
 - Select RIP's Default on the others settings.

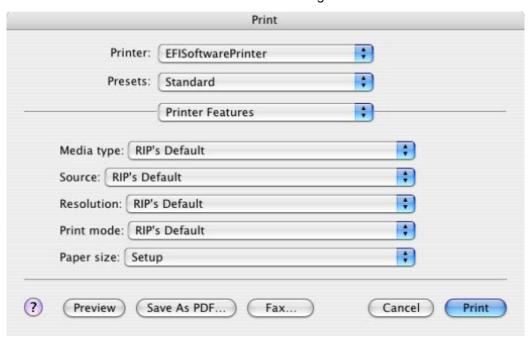

• Click Print.

For more information on HP Designjet products

www.hp.com/go/designjet

© 2005 Hewlett-Packard Development Company, L.P. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Adobe Photoshop and PostScript are trademarks of Adobe Systems Incorporated. PANTONE is Pantone, Inc.'s check-standard trademark for color.

Rev. 1.3, 02/2005

