

## Printing a photo

<u>Printer:</u> HP Designjet 30/90/130 series <u>Software</u>: EFI Designer Edition for HP <u>Operating System:</u> Mac OS X



- 1. First recommendations:
  - See the <u>Media type functionality & features</u> and choose the most appropriate media.
  - It is essential to have the media type correctly calibrated with the printer and print mode, consult the <u>Calibrate my printer</u> document.
- 2. Open the EFI Designer Edition RIP.
- 3. EFI Designer Edition RIP settings, **Preferences**:
  - Color:
    - Check that the **Color Management** is active.
    - Paper name: Select the paper type that is loaded on the printer (always calibrated) and "Best" print quality.
    - Print resolution: 600 x 600.
    - Color output mode: Photo print.
    - o Select EFI Profiles or ColorSync.
    - RGB: select the profile of the scanner or camera you have used to get the photo (source profile), press Add profile button to add it. If you don't have it, select one of the list and Perceptual.

## o Check Use embedded profiles.

			Prefer	rences				
000							7	
General	Color	Layout	Output	Nesting	Printer	Spot Colors	Paper profiles	
<b>A</b>	ctivate Color Manag	ement						
	per settings							
P	aper name:	(HP Premium Plus Photo Paper Glossy (HP DYE, Best)						
P	rint resolution:	600 x 600		; dpi				
c	Color mode:	CMYKcm	CMYKcm					
Co	lor settings							
		( <b>-</b>						
C	Color output mode:	Photo print						
		EFI profile		O ColorSyn			-	
F	CGB: AdobeR	GB1998.icc		Perceptua	Perceptual			
(	CMYK: Best_SW	OP_Ref_Press	sheet_2003.i	* Relative of	olorimetric (n	o paper whit	:)	
C	Gray: ISOnews	paper26v4_g	r.icc	Relative o	Relative colorimetric (no paper whit 主			
	<i>—</i>			~				
	Add	profile	Delete p	rofile				
(	Print RGB in gray	/scales		🗹 Blac	Slack Point Compensation			
(	Vse embedded profiles			Solid black: 0.0%				
Re	set settings ) (	Save Pref	Load F	Prefs	Car	cel C	ОК	
	(				C.u.			

- Layout:
  - **Orientation:** Select the orientation of your image on the paper.

- Set the **Alignment** and the **Scaling** setting you need.
- Printer:
  - **Paper size:** Select the paper size of the media loaded on the printer.
- Click OK.
- 4. Add button, browse your file and click **Open** or drag and drop the file to the spool panel.
- Check the print layout before printing, select the file and press the **Preview** button, if it is ready click **Print**. If you need to retouch any setting, you can do it in the **Individual Job Settings** (View menu > Job Info).

## For more information on HP Designjet products

www.hp.com/go/designjet

© 2005 Hewlett-Packard Development Company, L.P. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Adobe Photoshop and PostScript are trademarks of Adobe Systems Incorporated. PANTONE is Pantone, Inc.'s check-standard trademark for color.

Rev. 1.0, 09/2005

