

# 从这里开始

HP Photosmart B8500 series

## Start Here

HP Photosmart B8500 series



### 1 除非步骤 9 中另有提示, 否则请勿连接 USB 线

Do not connect the USB cable until prompted in step 9

 


### 2 包装盒中的物品


Box contents



安装 CD  
Installation CD

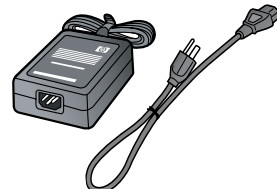

电源线  
Power Cable

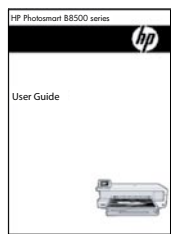 

使用手册  
User Guide



 
5 个墨盒  
5 Ink Cartridges



打印头  
Printhead



10 X 15 mm 照片纸\*  
4 X 6 photo paper\*



USB 线\*  
USB Cable\*

\*可能包含


\*May be included



CB981-90005


### 3 拆除包装

 Remove packaging

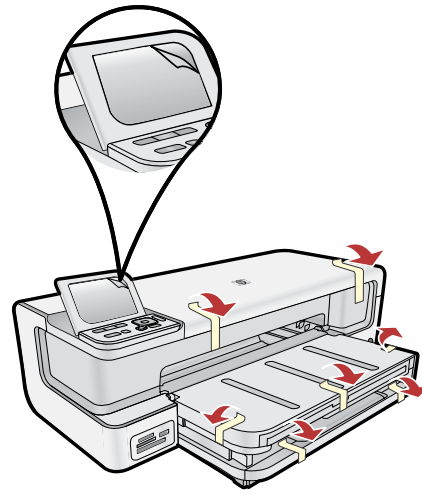

a. 撕掉设备上的所有胶带。撕掉显示屏上的保护膜。

 a. Remove all tape from the device. Remove the protective film from the display.

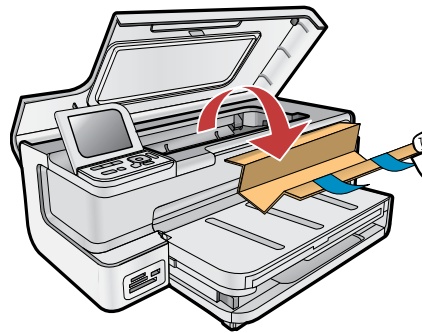


b. 打开墨盒检修门并从内部取出所有包装材料。

b. Open the ink cartridge access door and remove all packing materials from inside.


### 4 连接电源

 Connect power

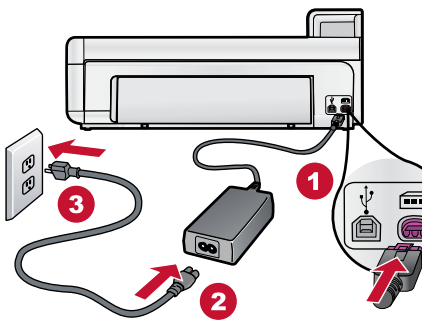


a. 连接电源线和适配器。

 a. Connect the power cord and adapter.

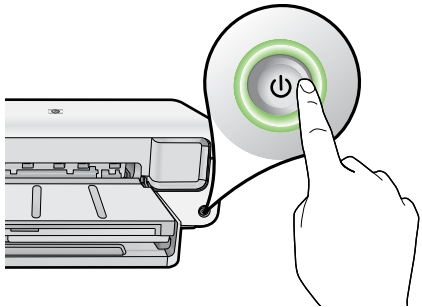

b. 按下 以开启设备。

 b. Press to turn on the device.

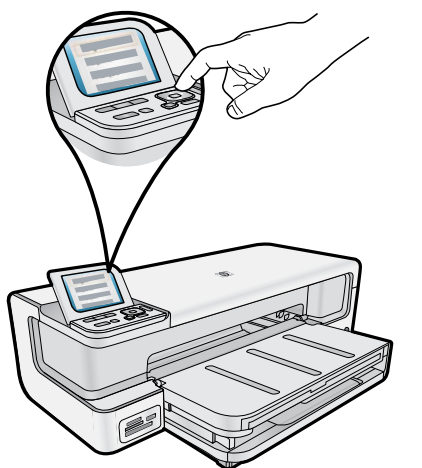


c. 选择语言和国家/地区。

c. Select your language and country/region.

### 5a 安装打印头

 
Install the printhead

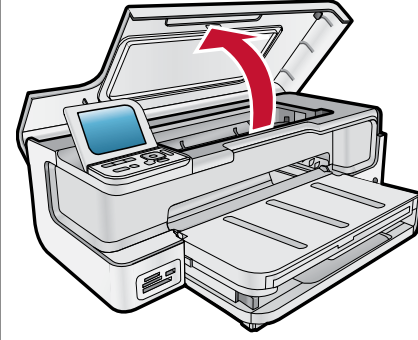

a. 打开墨盒检修门。


a. Open the ink cartridge access door.

 托架卡销  
Carriage latch

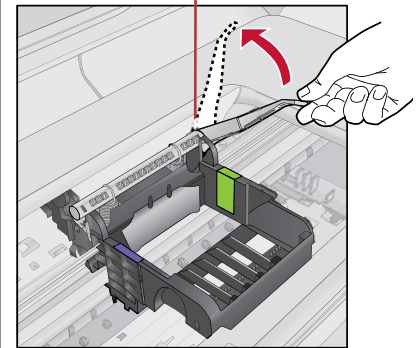


b. 用力抬起灰色卡销把手, 如图所示。

 b. Firmly lift the gray latch handle, as shown.

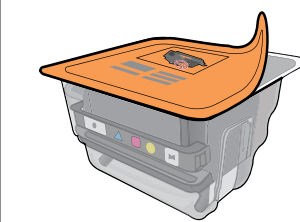

彩色图标  
Colored icons

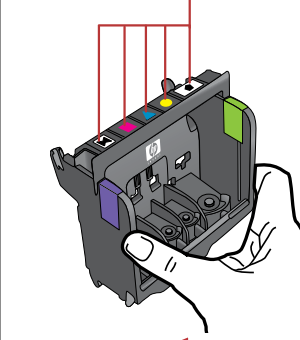 


c. 取出包装中的打印头。请勿触摸铜色触点。请勿划擦打印机或其他表面上的触点。

c. Remove the printhead from the packing. Do not touch the copper colored contacts. Do not scratch the contacts on the printer or other surface.




d. 使打印头保持竖直状态, 如图所示。

 d. Hold the printhead upright, as shown.

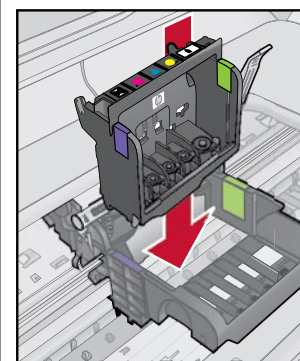

e. 将打印头向下放入设备中, 如图所示。

 e. Lower the printhead into the device, as shown.

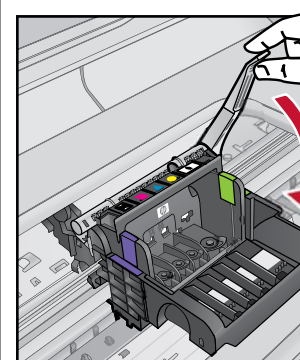

f. 慢慢地放下卡销把手。


f. Slowly lower the latch handle.

### 5b 安装墨盒

 Install the ink cartridges


注意: 安装墨盒前请完成步骤 5a (如左列所述)。

IMPORTANT: You must complete step 5a (in the previous column) before installing ink cartridges.

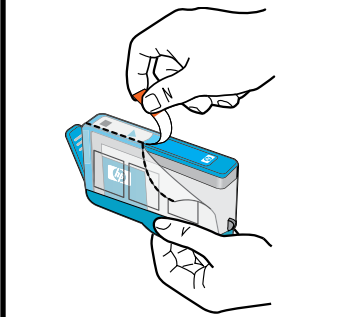


a. 拉起橙色标签, 撕去塑料包装。

 a. Remove the plastic wrap by pulling the orange tab.

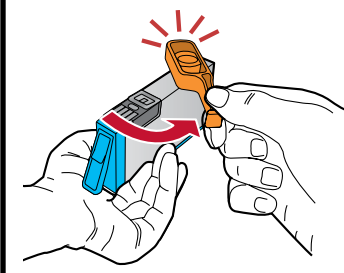


b. 旋动橙色保护帽, 将其取下。

 b. Twist the orange cap to snap it off.

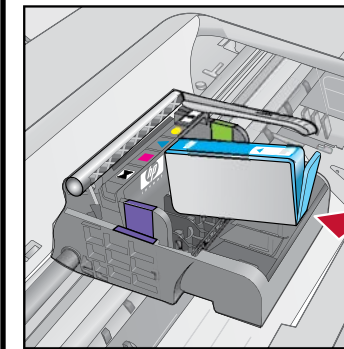


c. 翻转墨盒, 使其滑动到适当的插槽中, 然后向下按压直至卡入到位。

 c. Turn the ink cartridge over, slide it into the appropriate slot, and then press down until it clicks into place.

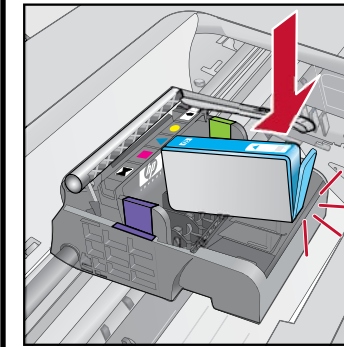


d. 对所有墨盒重复步骤 a、b 和 c。

 d. Repeat steps a, b, and c for all ink cartridges.

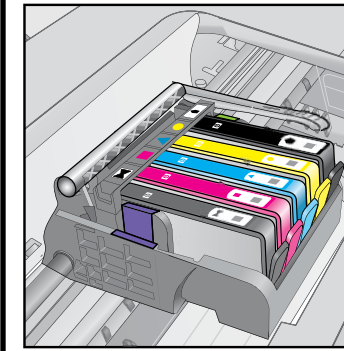

e. 关闭墨盒检修门。初始化过程随即开始, 这将耗时几分钟并发出一些噪音。

 e. Close the ink cartridge access door. The initialization process begins, which takes several minutes and makes some noise.

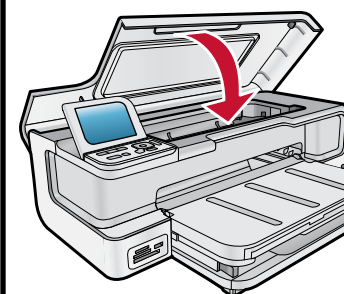


在初始化过程进行的同时, 继续执行下一步操作, 放入纸张。

While the initialization process continues, proceed to the next step to load paper.


### 6 放入纸张

 Load paper

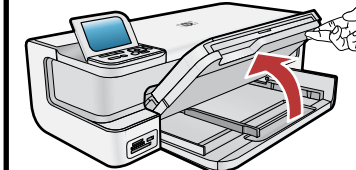


a. 同时抬起出纸盒和照片纸盒。

 a. Raise the output and photo trays together.

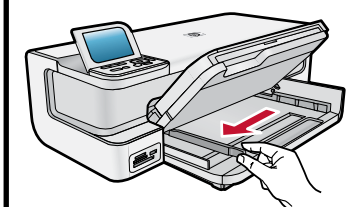


b. 将纸张宽度导轨滑到左侧。

 b. Slide the paper-width guide to the left.

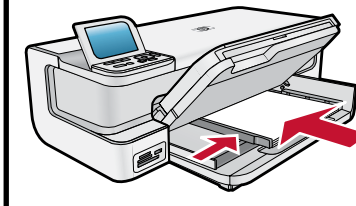

c. 将普通白纸放入主纸盒, 然后滑动纸张导轨, 使其紧贴纸张边缘。

 c. Insert plain white paper into the main tray and slide the paper guide against the paper.

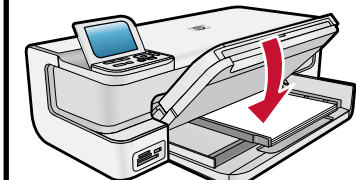

d. 同时放下照片纸盒和出纸盒。

d. Lower the photo and output trays together.


### 7 放入照片纸

 Load photo paper




a. 抬起出纸盒。

a. Raise the output tray.

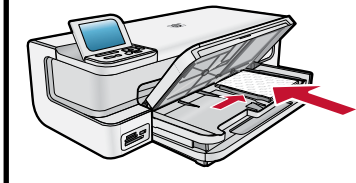


b. 将照片纸光面朝下放入照片纸盒。滑动纸张导轨, 使其紧贴照片纸边缘。

 b. Load photo paper with the glossy side down in the photo tray. Slide the paper guide against the photo paper.

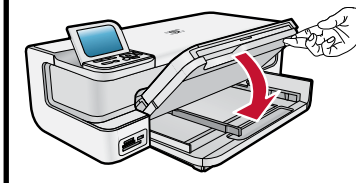

c. 完全放下出纸盒。

 c. Lower the output tray completely.

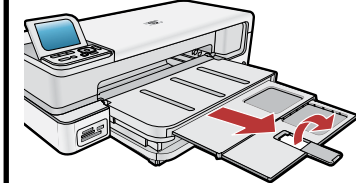


d. 拉出纸盒延长板, 并抬起纸张托架。

d. Pull out the tray extender and lift up the paper catch.


### 8 打印校准页

 Print the alignment page

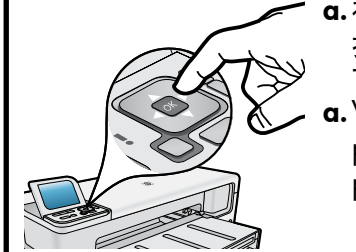

a. 初始化过程完成后, 按“确定”以打印校准页。可能需要几分钟的时间。

 a. When initialization is complete, press OK to print an alignment page. It may take a few minutes.

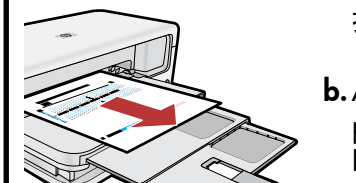

b. 此时, 校准工作即告完成。按“确定”。

b. After the alignment page is printed, alignment is complete. Press OK.

## 9 安装软件 - Windows Install the software - Windows



**注:** 除非另有提示, 否则请勿连接 USB 线。

a. 启动计算机并登录 (如有必要), 然后等待桌面出现。放入 CD, 然后按照屏幕上的说明进行操作。

 
**注意:** 如果没有出现启动屏幕, 请依次双击“我的电脑”、带有 HP 徽标的“CD-ROM”图标和“setup.exe”。

**NOTE:** Do not connect the USB cable until prompted.

a. Turn on your computer, log in if necessary, and then wait for the desktop to appear. Insert the CD and follow the onscreen instructions.

**IMPORTANT:** If the startup screen does not appear, double-click **My Computer**, double-click the **CD-ROM** icon with the HP logo, and then double-click **setup.exe**.

## B

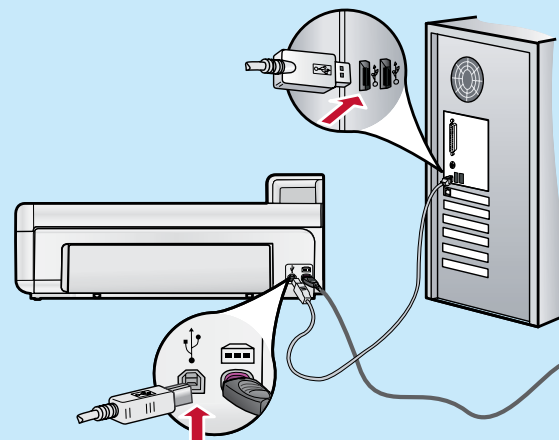


**注意:** 如果随附物品中没有 USB 线, 请另行购买。

b. USB 提示出现后, 请将 USB 线的一端连接到 HP 设备背面的端口, 然后将另一端连接到计算机的任意一个 USB 端口。按照屏幕上的说明完成软件安装。

**IMPORTANT:** Purchase a USB cable separately if it is not included.

b. Once the USB prompt appears, connect the USB cable to the port on the back of the HP device, and then to any USB port on the computer. Follow the onscreen instructions to complete the software installation.

## 9 安装软件 - Mac Install the software - Mac

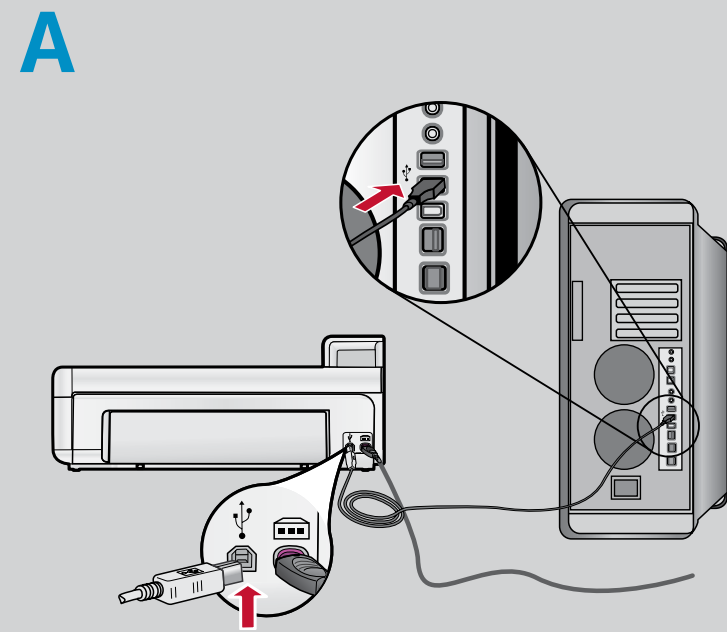 

**注意:** 如果随附物品中没有 USB 线, 请另行购买。

a. 请将 USB 线的一端连接到 HP 设备背面的端口, 然后将另一端连接到计算机的任意一个 USB 端口。

**IMPORTANT:** Purchase a USB cable separately if it is not included.

a. Connect the USB cable to the port on the back of the HP device, and then to any USB port on the computer.

## B



HP\_B8500\_Series



b. 放入 CD。

c. 双击“HP Installer”图标。按照屏幕上的说明进行操作。

d. 完成“安装助手”屏幕上的所有操作。

b. Insert the CD.

c. Double-click the **HP Installer** icon. Follow the onscreen instructions.

 
d. Complete the **Setup Assistant** screen.

## 浏览功能 Explore the features

HP Photosmart 软件程序已经安装到您的计算机上, 现在您可以尝试使用 HP 设备上的所有功能了。


Now that your HP Photosmart software program is installed on your computer, you can try out any of the features using your HP device.

## 打印存储卡上的照片 Print a photo from a memory card

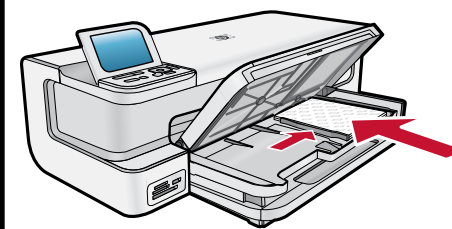

a. 如果您没有进行过此操作, 请将照片纸放入照片纸盒。

 a. If you have not already done so, load photo paper in the photo tray.

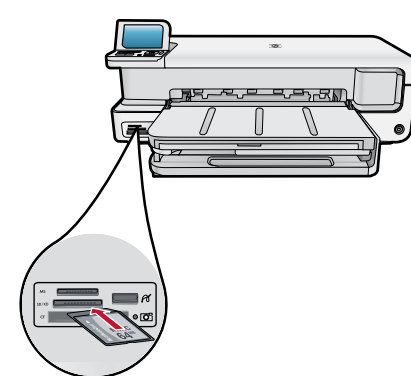

b. 将存储卡插入到 HP 设备上的适当存储卡槽中。

b. Insert a memory card in the appropriate memory card slot in the HP device.

c. 按方向键查看要打印的照片, 然后按“确定”。

c. Press the arrow keys to view the photo you want to print, then press **OK**.



d. 按下控制面板上的“打印照片”按钮打印照片。

d. Press the **Print Photos** button on the control panel to print the photo.

## 疑难排解 Troubleshooting



**问题:** (仅适用于 Windows) 显示 Microsoft “添加硬件”屏幕。

**解决方法:** 取消所有屏幕操作。拔掉 USB 线, 然后重新放入绿色 HP 软件 CD。

**Problem:** (Windows only) The **Microsoft Add Hardware** screen appears.

**Action:** Cancel all screens. Unplug the USB cable, and then re-insert the green HP software CD.

 


**问题:** (仅适用于 Windows) 屏幕上不显示连接 USB 线的提示信息。

**解决方法:** 取消所有屏幕操作。取出并重新放入绿色 HP 软件 CD。

**Problem:** (Windows only) You did not see the screen prompting you to connect the USB cable.

**Action:** Cancel all screens. Remove, and then re-insert the green HP software CD.

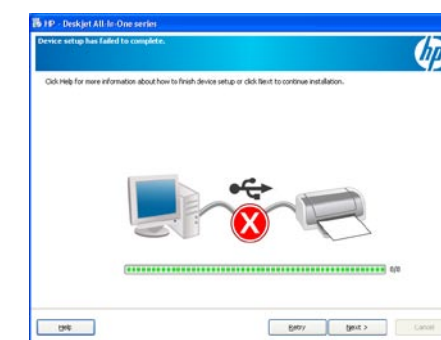

**问题:** (仅适用于 Windows) 显示“设备安装失败”屏幕。

**解决方法:** 断开设备连接, 然后再重新连接。检查所有连接。确保 USB 线已插入计算机。请勿将 USB 线插在键盘或无源 USB 集线器上。

**Problem:** (Windows only) The **Device Setup Has Failed To Complete** screen appears.

**Action:** Unplug the device and plug it in again. Check all connections. Make sure the USB cable is plugged into the computer. Do not plug the USB cable into a keyboard or a non-powered USB hub.

## 使用 HP 软件 Use HP software



**Windows:** HP 解决方案中心针对 HP 设备和软件的多项功能提供了便捷的访问渠道, 包括设备状态、设置、耗材订购和帮助。

 
**Windows:** The HP Solution Center provides convenient access to many features of your HP device and software, including device status, settings, supplies ordering, and help.



**Mac:** HP Photosmart Studio 允许您整理、管理和编辑图像与视频。

**Mac:** HP Photosmart Studio allows you to organize, manage, and edit your images and videos.

## 需要更多信息? Need more information?



[www.hp.com/support](http://www.hp.com/support)



[www.hp.com](http://www.hp.com)

中国印刷  
Printed in [country] - English