HP LF Printing Knowledge Center



How to emulate a previous Designjet printer

<u>Printer:</u> HP Designjet T1100 series <u>Software:</u> HP PS Driver <u>Operating System:</u> Windows



You should consider that there are various factors that can influence our opinions when emulating other printer devices, such as:

- The environmental conditions: Changes in temperature, humidity, or lighting.
- *The type of photo:* Changes in the scene content and the proximity of other colors also have an effect in the way in which we view the same image.
- The subjective perception about your own photo: Physiological differences between people, to differences in their past, individual experiences of color and linguistic tendencies can result in people talking about colors differently even in response to the same environmental conditions from a single image.

Some sources of variability are controllable with nothing more than a little common sense. Here are a few recommendations:

- Ensure that the media type used is the most appropriate media for your image and the same media used in the device you want to emulate.
- Ensure that the Paper Type setting on the front panel corresponds to the paper you intend to use.
- Ensure also that all your software settings (IQ and resolution settings) are consistent device to device.
- It is essential that the paper you want to use is correctly color calibrated for the printer.
 Refer to the following document <u>Calibrate my printer</u>.
- 1. Open your application.
- 2. Configure the Color Preferences of your application.
- 3. Open your document or import an image.
- 4. Make sure you have configured the document properly (document size and orientation).
- 5. Select File menu > Print...:
- 6. Configure the printing options in your application.

In this workflow, the application does no color conversion, but sends all necessary information to the HP Designjet T1100ps printer.

When printing from a color-managed application, it is very important that you set up printing options and turn off color management in the application dialog box.

- 7. Configure the driver printer options; Select the printer (ex. HP Designjet T1100 24in) and click **Properties** button:
 - Paper/Quality tab:
 - **Paper Options > Document size**: Select the paper size of the media loaded on the printer. Select **Custom...** button if you want to create a custom page size.
 - **Paper Options > Paper Source**: Select the source of the paper, Roll or Sheet.
 - **Paper Options > Paper Type**: Select the paper type that is loaded on the printer.
 - **Orientation**: Select the orientation of your image on the paper.
 - **Print Quality**: Select Standard options and drag the slider to Quality.

💩 HP Designjet T1100ps 24in PS3 Printing Prefere	ences 🔹 🤶 🔀
Advanced Printing Shortcuts Paper/Quality Features Col	or Services
Paper Options	
Document size: 8.26 × 11.69 inches	
A4 on roll media 🗸 🗸	
Margins/Layout <u>C</u> ustom	
Currently loaded paper:	
Manual Feed: Unloaded Roll: Matte Film, 24 inches	Printed on: 8.26 × 11.69 inches
Pap <u>e</u> r Source:	Show previe <u>w</u> before printing
Automatically Select	Print Quality
Paper <u>T</u> ype:	Standard options
Matte Film	
	· · · · ·
Orientation	Speed Quality
Portrajt	Custom options
O Landscage	
	OK Cancel Apply

- Features tab:
 - Resizing Options: Select the scale option you want, select Print document on and the paper size on which the document will be scaled, or, the % of actual size. Make sure that the document size is not bigger than the paper size you have on the printer.

0	Check Show	preview	before	printing.
---	-------------------	---------	--------	-----------

vanced Printing Shortcuts Paper/Quality	Features Color Serv	vices	
Resizing Options			
💽 Actual size		4	
Print document on:			
A4 on roll media			
○ % of actual size:			
100		Printed on: 11.69 × 8.26 inches	
<	>	Show preview before printing	
	Roll Op	tions	
	Roll Op		
Paper Saving Options Pages per sheet:		tions able automatic cutter move top/bottom blank areas op lines	
Paper Saving Options		tions able automatic cutter move top/bottom blank areas	
Paper Saving Options Pages per sheet:	Roll Op Dis Re Crc Ro Ro	tions able automatic cutter move top/bottom blank areas op lines	
Paper Saving Options Pages per sheet: 1 page per sheet	Roll Op Dis Re Crc Ro	tions able automatic cutter move top/bottom blank areas op lines tate by 90 <u>d</u> egrees	
Paper Saving Options Pages per sheet: 1 page per sheet Page order:	Roll Op Dis Re Crc Ro Ro	tions able automatic cutter move top/bottom blank areas op lines tate by 90 <u>d</u> egrees	
Paper Saving Options Pages per sheet: 1 page per sheet Page order: Right, then Down	Roll Op Dis Re Cro Ro	tions able automatic cutter move top/bottom blank areas op lines tate by 90 <u>d</u> egrees	

• Color tab:

- Select **Print in color**.
- Select Color management > Printer managed colors > sRGB (HP).

😻 HP Designjet T1100ps 24in PS3 Document Proper	rties 🔹 🤶 🔀
Advanced Printing Shortcuts Paper/Quality Features Color	Services
Color Options Print in color Print in Grayscale Print in pure black and white Color management: Application Managed Colors Printer managed colors Default RGB Source profile: \$RGB (HP) Default CMYK Source profile: Europe ISO Coated FOGRA27 Printer Emulation: Off Image: HP Professional PANTONE Emulation	 ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓
(In the second s	2 Help
	OK Cancel

• Select **OK** twice.

For more information on HP Designjet products

www.hp.com/go/designjet

© 2007 Hewlett-Packard Development Company, L.P. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

PostScript are trademarks of Adobe Systems Incorporated. PANTONE is Pantone, Inc.'s check-standard trademark for color.

Rev. 1,0 09/2007

