

Troubleshooting Guide

HP t5630/t5630w, t5545, t5145, and t5540 Thin Clients

© Copyright 2009 Hewlett-Packard Development Company, L.P. The information contained herein is subject to change without notice.

Microsoft and Windows are trademarks of Microsoft Corporation in the U.S. and other countries.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

Troubleshooting Guide

Thin Client

Second Edition (April 2009)

Document Part Number: 504101-002

About This Book

- ⚠ **WARNING!** Text set off in this manner indicates that failure to follow directions could result in bodily harm or loss of life.
 - ⚠ **CAUTION:** Text set off in this manner indicates that failure to follow directions could result in damage to equipment or loss of information.
 - 📄 **NOTE:** Text set off in this manner provides important supplemental information.
-

Table of contents

1 Product Description

Product features	1
Serial Number Location	2
Front Panel Components	2
Top Components	3
Rear Panel Components	4
Installing the Rubber Feet	4
Installing the Stand	5
Removing the Stand	6

2 Hardware Changes

General Hardware Installation Sequence	7
Removing and Replacing the Secure USB Compartment Cover	8
Removing the Secure USB Compartment Cover	8
Replacing the Secure USB Compartment Cover	9
Removing and Replacing the Side Access Panel and Metal Side Cover	10
Removing the Side Access Panel and Metal Side Cover	10
Replacing the Metal Side Cover and Side Access Panel	11
Installing Thin Client Options	12
Installing the USB Device	12
Removing and Replacing the Battery	13
External Drives	14

3 Mounting the Thin Client

HP Quick Release	15
Supported Mounting Options	17
Non-supported Mounting Option	19

4 BIOS Settings, (F10) Utility

Using the BIOS Settings	20
Changing BIOS Settings from the repset utility	20
Changing BIOS Settings Using the F10 Utility	21
Setup Utility—System Information	22

Setup Utility—Standard CMOS Features	22
Setup Utility—Advanced BIOS Features	22
Setup Utility—Integrated Peripherals	23
Setup Utility—Power Management Setup	24
Setup Utility—Utility Task Actions	24

5 Diagnostics and Troubleshooting

LEDs	25
Power-On Sequence	26
Power-On Diagnostic Tests	26
Beep Codes	27
POST Error Messages	27
Troubleshooting	28
Basic Troubleshooting	28
Diskless (No-Flash) Unit Troubleshooting	29
Troubleshooting Flowcharts	31
Initial Troubleshooting	31
Initial Troubleshooting Part 2	32
No Power, Part 1	33
No Power, Part 2	34
No Power, Part 3	35
No Video, Part 1	36
No Video, Part 2	37
No Video, Part 3	38
No Video, Part 4	39
Error Messages	40
NO OS Loading	41
OS Not Loading from Flash	42
Non-Functioning Pointing Device or Keyboard	43
No Internal Network Connection	44
No Audio	45
No IP Address	46
Booting in Continuous Loop	47

6 Restoring the Flash Image

System Requirements	48
Getting Started	48
Creating an ISO Image	49
Formatting a USB Flash Drive	49
Unpacking the Image and Tools for Deployment	50
Deploying with PXE	50

Appendix A Specifications

Appendix B Adding an Image Restore Tool

Appendix C Configuring a PXE Server

Prerequisites	54
Installing Remote Installation Services (RIS PXE Server)	54
Authorizing Remote Installation Services (RIS PXE Server)	54
Configuring Remote Installation Services	55
Set User Permissions on the Active Directory Server	55
RIS Menu	56
Creating Network Bootable Disk to Map Drives	56
For More Information	56

Appendix D FTP Update

Server Requirements	57
DHCP Server	57
FTP Server	57
Description	58
Host Settings	58
Select Image to Update	59

Appendix E System BIOS

Restoring a Corrupt BIOS	61
Updating a BIOS	62

Appendix F Electrostatic Discharge

Preventing Electrostatic Damage	63
Grounding Methods	63

Index	64
--------------------	-----------

1 Product Description

HP offers a comprehensive set of products to manage HP thin clients. Providing rich product solutions allows customers to choose which management products will work best for them. By supporting HP Device Manager, HP Client Automation Starter, or Altiris as free management solutions, customers will have robust management tools to help manage all of their HP thin clients. HP thin clients have the following advantages:

- No hard drives or diskette drives
- 5 minute hardware setup time
- No moving parts
- central deployment and management using HP Management Solutions

Operating systems

The t5630/t5630w thin client models use the Microsoft Windows XP Embedded (XPe) or Windows Embedded Standard (WES) operating system.

The t5145 and t5545 Linux thin clients offer an extensible Linux image built upon Debian.

The t5540 thin client uses Windows CE.

Product features

For more information, refer to the model-specific QuickSpecs at http://h18004.www1.hp.com/products/quickspecs/QuickSpecs_Archives/QuickSpecs_Archives.html.

Serial Number Location


Every thin client includes a unique serial number located as shown in the following illustration. Have this number available when contacting HP customer service for assistance.

Figure 1-1 Serial number location



Front Panel Components

Figure 1-2 Front panel components

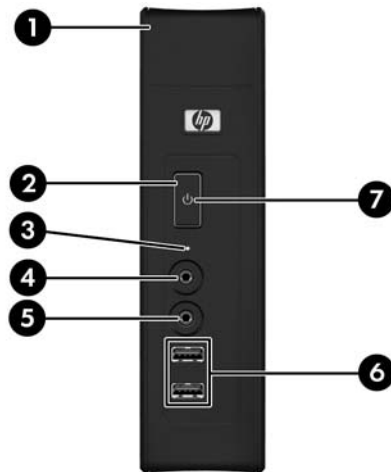


(1)	Secure USB compartment	(5)	Line-out (headphone) audio connector
(2)	Power button	(6)	Universal serial bus (USB) connectors (2)
(3)	Flash activity LED	(7)	Power LED
(4)	Line-in (microphone) connector		

Top Components


The secure USB compartment allows you to use two USB devices in a secured location.

Figure 1-3 Top components, external view

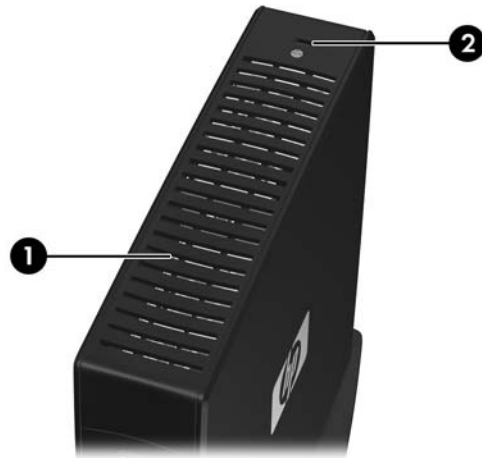

-
- | | |
|-----|------------------------|
| (1) | Secure USB compartment |
| (2) | Cable lock slot |
-


Figure 1-4 Top components, internal view

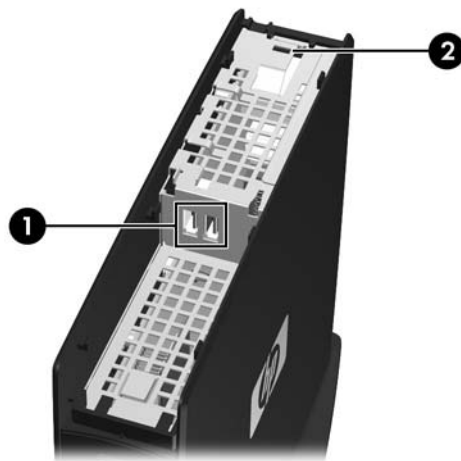

-
- | | |
|-----|----------------------------------|
| (1) | Secure USB compartment ports (2) |
| (2) | Cable lock slot |
-

Rear Panel Components

Figure 1-5 Rear panel components

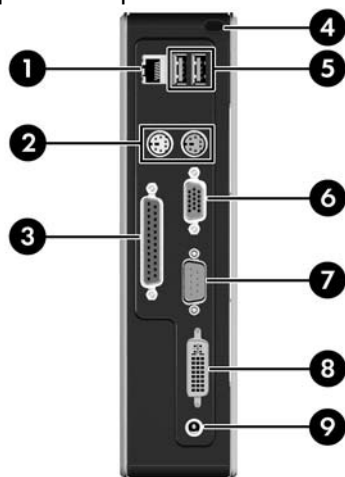

(1)	Ethernet RJ-45 connector	(6)	VGA connector
(2)	PS/2 connectors (2)	(7)	Serial connector
(3)	Parallel connector	(8)	DVI-D connector
(4)	Secure cable routing slot	(9)	Power connector
(5)	Universal serial bus (USB) connectors (2)		

Installing the Rubber Feet

You may want to use your thin client in a horizontal orientation. If your unit has VESA (Video Electronics Standards Association) holes in the side, you can install rubber feet on the left side of the unit. The rubber feet help keep the unit safely in place.

To install the rubber feet:

1. Locate the VESA (Video Electronics Standards Association) holes in the left side of the thin client.
 - △ **CAUTION:** If you use the thin client in a horizontal orientation without the rubber feet, it may slide and result in equipment damage. If your unit does not have VESA mounting holes, you will need to obtain the optional side panels with VESA mounting holes.
2. Remove the feet from their backing.

3. Align the feet with their holes and press them in securely.

Figure 1-6 Installing the rubber feet



Installing the Stand

If your unit does not have VESA mounting holes, you will need to use the thin client in a vertical orientation and install the stand for stability.

To install the stand:

1. Turn unit upside down.
2. Locate the slots on the bottom of the unit into which the tabs on the stand fit. Position the stand with the wide part toward the front of the unit. Align the tabs on the widest part of the stand with the slots approximately 7.6 cm (3 inches) from the front of the unit and the tabs on the narrower part with the slots approximately 3.8 cm (1.5 inches) from the rear of the unit **(1)**.
3. Insert the tabs into the slots, and slide toward the rear until it locks into place **(2)**.

Figure 1-7 Installing the stand




Removing the Stand

To remove the stand:

1. Turn unit upside down.
2. Lift the tab (1), and then pull the stand up to remove it from the unit (2).

Figure 1-8 Removing the stand

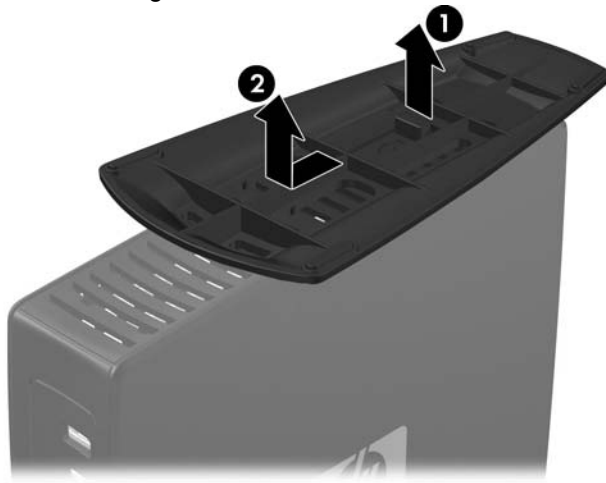

2 Hardware Changes

General Hardware Installation Sequence

To ensure the proper installation thin client hardware components:

1. Back up any data, if necessary.
2. If the thin client is powered on:
 - a. Turn off the computer properly through the operating system, then turn off any external devices.
 - b. Disconnect the power cord from the power outlet and disconnect any external devices.
 - c. Disconnect any external devices or cables, such as a cable lock.

⚠ WARNING! To reduce the risk of personal injury from electrical shock and/or hot surfaces, be sure to disconnect the power cord from the wall outlet and allow the internal system components to cool before touching.


⚠ WARNING! To reduce the risk of electrical shock, fire, or damage to the equipment, do not plug telecommunications or telephone connectors into the network interface controller (NIC) receptacles.

⚠ CAUTION: Static electricity can damage the electronic components of the thin client or optional equipment. Before beginning these procedures, ensure that you are discharged of static electricity by briefly touching a grounded metal object. See [Electrostatic Discharge on page 63](#) for more information.

3. Remove the secure USB compartment cover. See [Removing and Replacing the Secure USB Compartment Cover on page 8](#) for more information.
4. Remove the side access panel and metal side cover. See [Removing and Replacing the Side Access Panel and Metal Side Cover on page 10](#) for more information.
5. Remove any hardware that you will replace.
6. Install or replace equipment. For removal and replacement procedures, see the following sections:
 - [Installing the USB Device on page 12](#)
 - [Removing and Replacing the Battery on page 13](#)

📝 NOTE: Option kits include more detailed installation instructions.


7. Replace the side access panel and metal side cover. See [Removing and Replacing the Side Access Panel and Metal Side Cover on page 10](#).
8. Replace the secure USB compartment cover. See [Removing and Replacing the Secure USB Compartment Cover on page 8](#).
9. Reconnect any external devices and power cords.
10. Turn on the monitor, the thin client, and any devices you want to test.
11. Load any necessary drivers.


 **NOTE:** You can download select hardware drivers from HP. Go to <http://www.hp.com> and search for your specific thin client model.

12. Reconfigure the thin client, if necessary.

Removing and Replacing the Secure USB Compartment Cover

The secure USB compartment allows you to install two USB devices in a secure location inside the thin client. The cable management feature allows you to install a USB mouse and a USB keyboard in this compartment. See [Installing the USB Device on page 12](#) for more information. Along with providing a hidden location, the secure USB compartment can be locked by the optional security cable lock.


 **CAUTION:** The ambient temperature inside of the secure USB compartment can reach up to 55° C (131° F) in worst case conditions. Make sure the specifications for any device you install in the compartment indicate the device can tolerate a 55° C (131° F) ambient environment.

 **NOTE:** In addition to following these instructions, follow the detailed instructions that accompany the accessory you are installing.

Before beginning the installation process, review [General Hardware Installation Sequence on page 7](#) for procedures you should follow before and after installing or replacing hardware.

Removing the Secure USB Compartment Cover

Use the following procedure to remove the secure USB compartment cover.


 **WARNING!** Before removing the secure USB compartment cover, ensure that the thin client is turned off and the power cord is disconnected from the electrical outlet.

To remove the secure USB compartment cover:

1. On rear of the thin client, remove the screw that secures the compartment cover to the unit **(1)**.

2. Push the compartment cover about 0.6 cm (1/4 inch) toward the front of the unit **(2)**, and then lift it off the unit **(3)**.

Figure 2-1 Removing the secure USB compartment cover

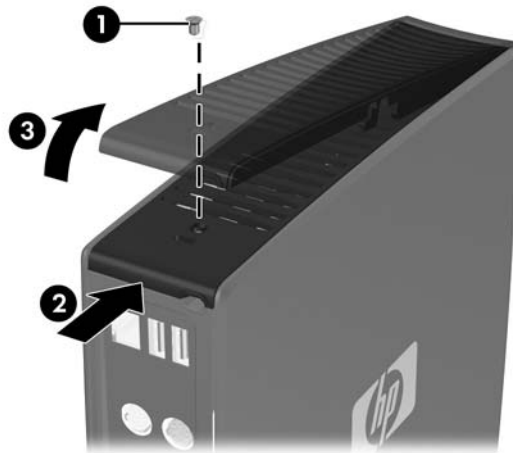


Replacing the Secure USB Compartment Cover

To replace the secure compartment cover:

1. Place the cover on top of the unit so it is offset about 0.6 cm (1/4 inch) toward the front of the unit, allowing the tabs on the cover to align with the slots on the chassis **(1)**.
2. Slide the cover toward the back of the unit until the cover is flush with the back panel of the chassis **(2)**.
3. Replace the screw **(3)**.

Figure 2-2 Replacing the secure compartment cover

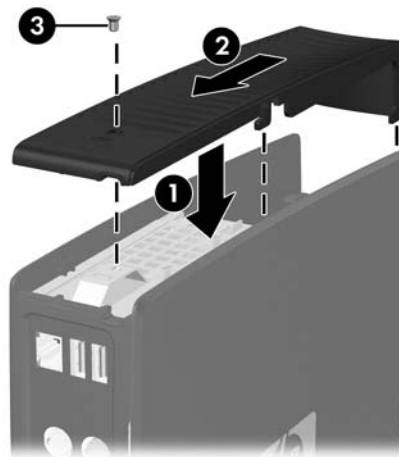

Removing and Replacing the Side Access Panel and Metal Side Cover


Removing the Side Access Panel and Metal Side Cover

⚠ WARNING! Before removing the side access panel, ensure that the thin client is turned off and the power cord is disconnected from the electrical outlet.

To remove the access panel:

1. Remove the secure compartment cover (1). For more information, see [Removing the Secure USB Compartment Cover on page 8](#).
2. Lay the unit flat on a stable surface with the right side up and the left side down.
3. Slide the access panel about 3 mm (1/8 inch) toward the top of the unit (2), and then lift the access panel up and off the unit (3).

Figure 2-3 Removing the side access panel

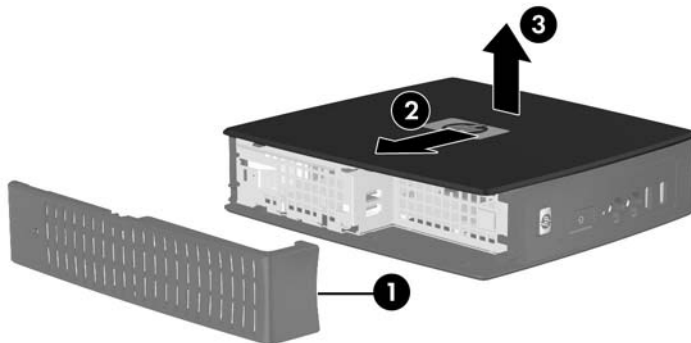


To remove the metal side cover:

📝 NOTE: You must remove the metal side cover to access internal components such as the battery or the memory.

1. Remove the four screws that secure the metal side cover to the chassis (1).

2. Lift the metal side cover, rear side first, off the unit **(2)**.

Figure 2-4 Removing the metal side cover

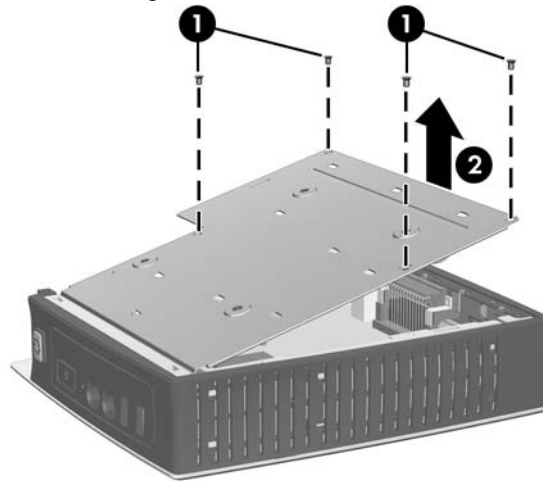


Replacing the Metal Side Cover and Side Access Panel

To replace the metal side cover:

1. Slip the front edge of the metal side cover under the lip on the chassis and lower the cover until it snaps into place **(1)**.
2. Align the screw holes of the metal side cover with the chassis holes and insert and tighten the four screws **(2)**.

Figure 2-5 Replacing the metal side cover

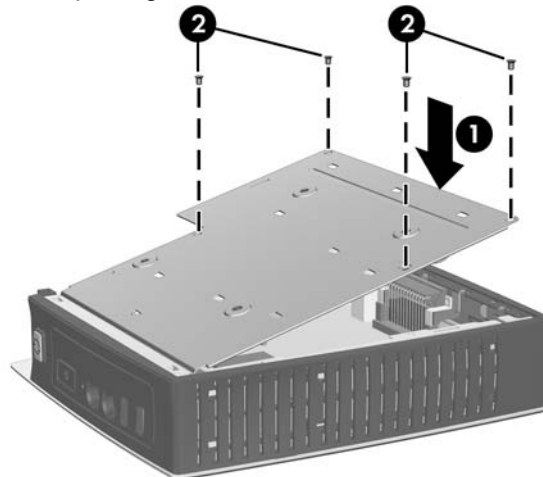

To replace the access panel:

1. Align the tabs on the access panel with the slots in the metal side cover and place the access panel on the side of the unit, offset about 3 mm (1/8 inch) toward the top of the unit **(1)**.
2. Slide the panel toward the bottom of the unit until the cover is flush with the bottom panel of the chassis **(2)**.

Installing Thin Client Options

Various options can be installed on the thin client:


- [Installing the USB Device on page 12](#)
- [Removing and Replacing the Battery on page 13](#)

Installing the USB Device

Before beginning the replacement process, review [General Hardware Installation Sequence on page 7](#) for procedures you should follow before and after installing or replacing hardware.


- ▲ Insert the USB device into the USB port in the secure USB compartment. See the following illustration for the location of the ports in the secure USB compartment.

Figure 2-6 USB ports in the secure USB compartment

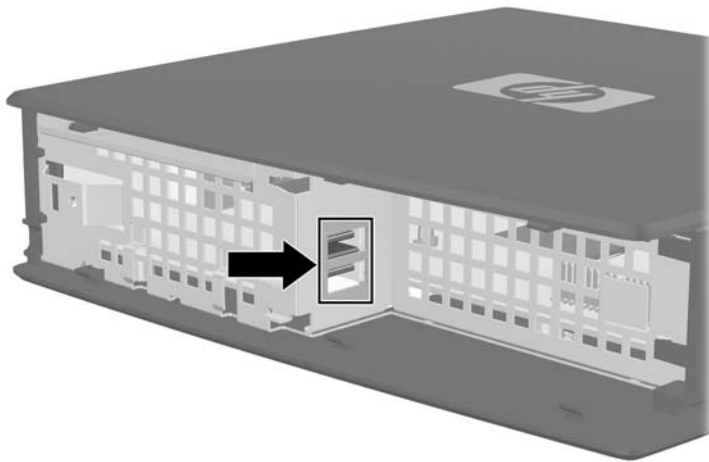

If you install a USB mouse and a USB keyboard in the secure USB compartment, route the cables around and through the clips, then out the secure cable routing slot, as shown in the following illustration.

Figure 2-7 Using the secure cable routing slot

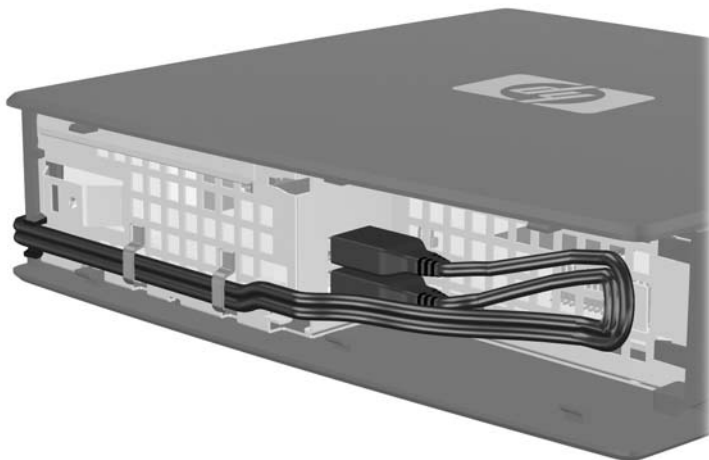

Removing and Replacing the Battery

Before beginning the replacement process, review [General Hardware Installation Sequence on page 7](#) for procedures you should follow before and after installing or replacing hardware.


- ⚠ **WARNING!** Before removing the side access panel, ensure that the thin client is turned off and the power cord is disconnected from the electrical outlet.

To remove and replace the battery:

1. Locate the battery on the system board.
2. To release the battery from its holder, gently push the metal guard that extends above one edge of the battery very slightly toward the rear of the unit, and then lift the battery out **(1)**.

📝 **NOTE:** Be careful not to bend the metal guard.

Figure 2-8 Removing and replacing the internal battery

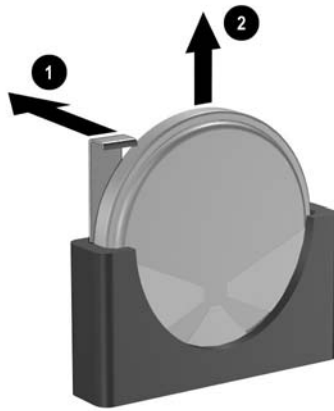

3. To insert the new battery, align the replacement battery with the positive side toward the rear of the unit. Slide one edge of the battery into the slot and push down until the guard snaps over the edge of the battery **(2)**.

HP encourages you to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, go to <http://www.hp.com> and search for “recycle”.



Batteries, battery packs, and accumulators should not be disposed of together with the general household waste. In order to forward them to recycling or proper disposal, please use the public collection system or return them to HP, an authorized HP partner, or their agents.



The Taiwan EPA requires dry battery manufacturing or importing firms, in accordance with Article 15 or the Waste Disposal Act, to indicate the recovery marks on the batteries used in sales, giveaways, or promotions. Contact a qualified Taiwanese recycler for proper battery disposal.

External Drives

Various external USB drives are available as options for HP thin clients. For more information about these drives, visit <http://www.hp.com> and search for the specific thin client model, or refer to the instructions that accompany the option.

For more information about available options, visit the HP Web site <http://www.hp.com> and search for the specific thin client model.

3 Mounting the Thin Client

HP Quick Release

If your thin client does not have VESA mounting holes, you must obtain and install the optional side panels with VESA mounting holes and HP Quick Release.

This thin client incorporates four mounting points on each side of the unit. These mounting points follow the VESA (Video Electronics Standards Association) standard, which provides industry-standard mounting interfaces for Flat Displays (FDs), such as flat panel monitors, flat displays, and flat TVs. The HP Quick Release connects to the VESA-standard mounting points, allowing you to mount the thin client in a variety of orientations.


 **NOTE:** When mounting to a thin client, use the 10 mm screws supplied with the HP Quick Release.


Figure 3-1 HP Quick Release



To use the HP Quick Release with a VESA-configured thin client:


1. Using four 10 mm screws included in the mounting device kit, attach one side of the HP Quick Release to the thin client as shown in the following illustration.

Figure 3-2 Connecting the HP Quick Release to the thin client

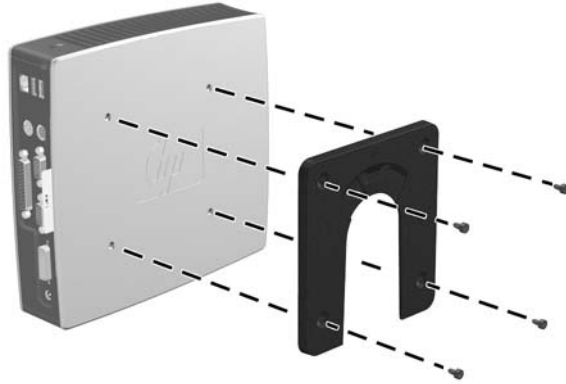


2. Using four screws included in the mounting device kit, attach the other side of the HP Quick Release to the device to which you will mount the thin client. Make sure the release lever points upward.

Figure 3-3 Connecting the HP Quick Release to another device

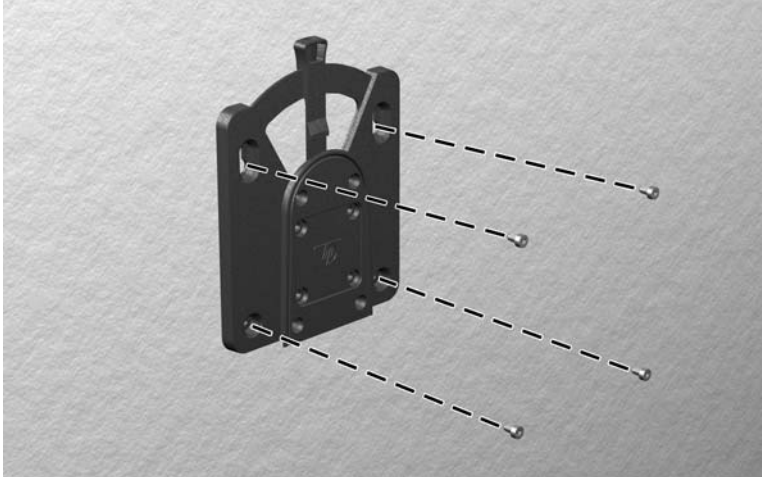

3. Slide the side of the mounting device attached to the thin client (1) over the other side of the mounting device (2) on the device on which you want to mount the thin client. An audible 'click' indicates a secure connection.

Figure 3-4 Connecting the thin client

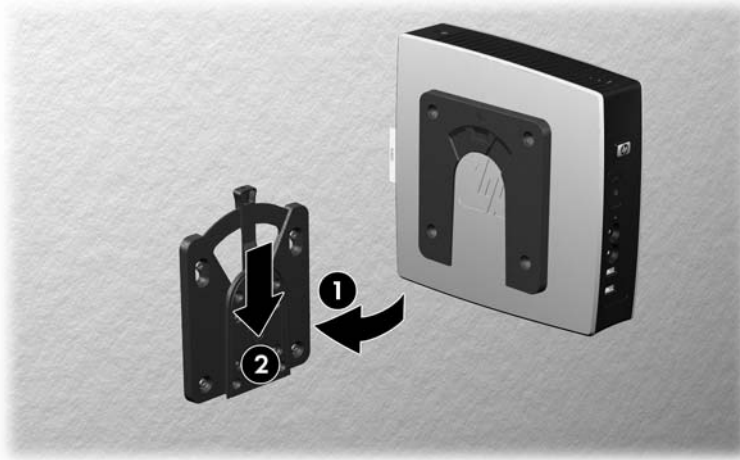

NOTE: When attached, the HP Quick Release automatically locks in position. You only need to slide the lever to one side to remove the thin client.

CAUTION: To ensure proper function of the HP Quick Release and a secure connection of all components, make sure both the release lever on one side of the mounting device and the rounded opening on the other side face upward.

Supported Mounting Options

The following illustrations demonstrate some of the supported and not supported mounting options for the mounting bracket.

- You can mount a thin client between a flat panel monitor and the wall.

Figure 3-5 Thin client mounted with flat panel on wall



- You can mount the thin client on the back of a flat panel monitor stand.

Figure 3-6 Thin client mounted on back of monitor stand



- You can mount the thin client on a wall.

Figure 3-7 Thin client mounted on wall



- You can mount the thin client under a desk.

Figure 3-8 Thin client mounted under desk



Non-supported Mounting Option

- △ **CAUTION:** Mounting a thin client in a non-supported manner could result in failure of the HP Quick Release and damage to the thin client and/or other equipment.

Do not mount the thin client on a flat panel monitor stand, between the panel and the stand.

Figure 3-9 Unsupported mounting position—thin client between stand and monitor



4 BIOS Settings, (F10) Utility

Using the BIOS Settings


VIA Eden processors and the VIA VX800 chipset are used in the t5145, t5540, t5545 and t5630/t5630w products.

Changing BIOS Settings from the repset utility

Some BIOS settings may be changed locally within the operating system without having to go through the F10 utility¹. This table identifies the items that can be controlled with this method.


BIOS Setting	Default Value	Other Values
1st Boot Device	USB	ATA Flash, Network, Disabled
2nd Boot Device	ATA Flash	USB, Network, Disabled
3rd Boot Device	Network	ATA Flash, USB, Disabled
Boot Up NumLock	Off	On
F12 Boot	Enabled	Disabled
Integrated Audio	Enabled	Disabled
Network Controller	Enabled	Disabled
Serial Port 1	3F8/IRQ4, other values = 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3	Disabled
Parallel Port	378/IRQ7, other values = 278/IRQ5, 3BC/IRQ7	Disabled
PWRON After PWR-Fail	Former State	On, Off
Wake-on-PME	Enabled	Disabled
BIOS Wake Up	Disabled	Enabled, days of the week & time
Asset Tag No	000000000000000000	User input (18 chars)
Setup Password	blank	User input (8 chars max)
Power-On Password	blank	User input (8 chars max)
Parallel Mode	ECP/EPP	Standard, EPP, ECP
ECP Mode Use DMA	DMA3	DMA1
USB Controller	Enabled	Disabled
External USB Ports	Enabled	Disabled

Halt On	All, but Keyboard	No Errors
Security Option	Setup	Always
USB Keyboard Support	Enabled	Disabled
USB Mouse Support	Disabled	Enabled

 **NOTE:** Settings that can be controlled from the operating system with repset can also be controlled remotely by sending the client an Altiris job that uses the repset tool to apply the setting changes.

Changing BIOS Settings Using the F10 Utility

1. Turn on or restart the thin client.
2. As soon as the thin client is turned on, press **F10** when the “press F10” prompt appears on the screen to enter the Setup Utility.

 **NOTE:** If you do not press **F10** at the appropriate time, you must restart the thin client and again press **F10** when the **F10=Setup** message displays in the task bar at the bottom of the screen. When the F10 POST Screen display is set to zero seconds, it may be necessary to press and hold **F10** on the keyboard, then power on the thin client.

3. The Setup Utility screen is divided into five menu headings and five task actions.

The Menu Headings are: System Information, Standard CMOS Features, Advanced BIOS Features, Integrated Peripherals, Power Management Setup

The Task Actions are: Load Factory Defaults, Set Administrative Password, Set User Password, Save & Exit Setup, Exit without Saving

Use the arrow keys (up and down or left and right) to select the appropriate heading, and then press **Enter**. To return to the Setup Utility menu, press the **Esc** key.

4. To apply and save changes, select **Save & Exit Setup**.

If you have made changes that you do not want applied, select **Exit without Saving**.

To reset to original factory settings, select **Load Factory Defaults**.


 **CAUTION:** Do NOT turn the thin client power off while the ROM is saving the Setup (F10) changes, because the CMOS could become corrupted. It is safe to turn off the computer only after exiting the F10 Setup screen.

Table 4-1 Setup (F10) Utility Main Menu

Heading	Table
System Information	Setup Utility—System Information on page 22
Standard CMOS Features	Setup Utility—Standard CMOS Features on page 22
Advanced BIOS Features	Setup Utility—Advanced BIOS Features on page 22
Integrated Peripherals	Setup Utility—Integrated Peripherals on page 23
Power Management Setup	Setup Utility—Power Management Setup on page 24

Setup Utility—System Information


 **NOTE:** Support for specific Setup options may vary depending on the hardware configuration.

Table 4-2 Setup Utility—System Information

Option	Description
Product Name	(view only)
Processor Type	(view only)
Processor Speed	(view only)
Amount of flash memory	(view only)
Memory size	(view only)
System ROM	(view only)
Integrated MAC	(view only)
UUID	(view only)
Chassis Serial #	(view only)
Asset Tracking Number	(view only)
Asset Tag	Enter asset tracking number.

Setup Utility—Standard CMOS Features

Table 4-3 Setup Utility—Standard CMOS Features

Option	Description
Date (mm:dd:yy)	Allows you to set system date
Time (hh:mm:ss)	Allows you to set system time.
IDE Primary Master	Indicates ATA Flash settings.
Halt On	Allows you to select system response of All Errors, No Errors, or All But Keyboard when POST Error has been detected. Default is All But Keyboard.

Setup Utility—Advanced BIOS Features

Table 4-4 Setup Utility—Advanced BIOS Features

Option	Description
Quick Power-on Self Test	Allows the system to skip certain tests while booting. This will decrease the time needed to boot the system. Enabled/Disabled. Default is Enabled
1st Boot Device	Select Boot Device Priority. Default is USB.
2nd Boot Device	Select Boot Device Priority. Default is ATA Flash.
3rd Boot Device	Select Boot Device Priority. Default is Network.
Boot Up Numlock Status	Select power on state for Numlock. Default is OFF.

Table 4-4 Setup Utility—Advanced BIOS Features (continued)

Security Option	Select whether the Password is required every time the system boots or only when you enter Setup. Default is Setup.
POST Delay (secs)	Set a delay that is added to POST to allow more time to press F10 to enter the Setup Utility. Default is None.
F12 Boot	Enable/Disable F12 network boot. Default is Enabled.

Setup Utility—Integrated Peripherals

Table 4-5 Setup Utility—Integrated Peripherals

Option	Description
Integrated Audio	Enable or Disable Onboard AC97 Audio controller. Default is Enabled.
Network Controller	Enable or Disable Onboard LAN device. Default is enabled.
USB Controller	Enable or Disable USB controller. Default is enabled.
Advanced USB Options	Enable or Disable USB external ports. Default is enabled.
USB External Ports	Default is enabled.
USB Keyboard Support	Allows use of USB keyboard under DOS. Default is enabled.
USB Mouse Support	Allows use of USB Mouse under DOS. Default is disabled.
Serial Port 1	Select serial port base IO port address and IRQ. Default is 3F8/IRQ4.
Parallel Port	Select parallel port base IO port address and IRQ. Default is 378/IRQ7.
Parallel Mode	Select parallel port transfer mode of Standard, EPP, ECP, or ECP/EPP. Default is ECP/EPP.
ECP Mode Use DMA	Select DMA channel of 1 or 3 if parallel is operated in ECP mode. Default is 3.

Setup Utility—Power Management Setup

Table 4-6 Setup Utility—Power Management Setup

Option	Description
PWRON After PWR-Fail	When power is lost and comes back, the option determines what power state the system should go to. Options are Off, On, and Former-Sts. Default is Former-Sts.
Wake on PME	Enable/disable system wakeup capability for OnBoard LAN device and PCI card. Default is enabled.
BIOS Wake up	Enable RTC alarm wakeup. Default is disabled.
Day of Week	Select the alarm RTC wakeup day of Sunday through Saturday.
Time of Day	Select the alarm RTC wakeup time of day (hh:mm).

Setup Utility—Utility Task Actions

Table 4-7 Setup (F10) Utility Task Actions

Heading	Table
Load Factory Defaults	Select Yes or No (Y/N)
Set Administrator Password	Allows you to set, change, and disable the administrator password.
Set User Password	Allows you to set, change, and disable the user password. NOTE: When the user password is set, it prevents unauthorized access to the user's setup. User password provides read-only access to Setup options.
Save & Exit Setup	Saves data to CMOS, then exit the Setup Utility.
Exit without Saving	Exit the Setup Utility without saving any changes.

5 Diagnostics and Troubleshooting

LEDs

Table 5-1 Power and IDE Flash Activity LEDs

LED	Status
Power LED Off	When the unit is plugged into the wall socket and the Power LED is off, the unit is powered off. However, the network can trigger a Wake On LAN event in order to perform management functions.
Power LED On	Displays during boot sequence and while the unit is on. During boot sequence, hardware initialization is processed and startup tests are performed on the following: <ul style="list-style-type: none">• Processor initialization• Memory detection and initialization• Video detection and initialization <p>NOTE: If one of the tests fails, the unit will simply stop, but the LED will stay on. If the video test fails, the unit beeps. There are no messages sent to video for any of these failed tests.</p> <p>NOTE: After the video is initialized, anything that fails will have an error message.</p>
<p>NOTE: RJ-45 LEDs are located inside the RJ-45 connector on the top, rear panel of the thin client. The LEDs are visible when the connector is installed. Blinking green indicates network activity, and amber indicates a 100MB speed connection.</p>	
IDE LED is Off	When the unit is powered on and the flash activity light is off, then there is no access to the system flash.
IDE LED blinks Green	Indicates the system is accessing the internal IDE flash.


Power-On Sequence

At power-on, the flash boot block code initializes the hardware to a known state, then performs basic power-on diagnostic tests to determine the integrity of the hardware. Initialization performs the following functions:

1. Initializes CPU and memory controller.
2. Initializes VGA software.
3. Initializes and configures all PCI devices.
4. Initializes the video to a known state.
5. Initializes USB devices to a known state.
6. Performs power-on diagnostics. For more information, see [Power-On Diagnostic Tests on page 26](#).
7. The unit boots the operating system.

Power-On Diagnostic Tests

The Power-on diagnostics performs basic integrity tests of the hardware to determine its functionality and configuration. If a diagnostic test fails during hardware initialization the unit simply stops. There are no messages sent to video.

 **NOTE:** You may try to restart the unit and run through the diagnostic tests a second time to confirm the first shutdown.

The following table lists the tests that are performed on t5000 units.

Table 5-2 Power-On Diagnostic Test

Test	Description
Boot Block Checksum	Tests boot block code for proper checksum value
DRAM	Simple write/read pattern test of the first 640k of memory
Parallel Port	Initiates the port's driver and determines if the device is present
Serial Port	Tests the serial port using simple port verification test to determine if ports are present
Timer	Tests timer interrupt by using polling method
RTC CMOS battery	Tests integrity of RTC CMOS battery
NAND flash device	Tests for proper NAND flash device ID present

Beep Codes

If there are no video errors, the system goes directly to POST messages.

Beep Code	Description
1 long, 2 short	A video error has occurred and the BIOS cannot initialize the video screen to display any additional information.
1 long, 3 short	System running in boot block recovery mode.

POST Error Messages

Table 5-3 POST Error Messages

POST Error Message	Description
BIOS ROM checksum error - System halted	The checksum of the BIOS code in the BIOS chip is incorrect, indicating the BIOS code may have become corrupt. To restore a corrupt BIOS, refer to System BIOS on page 61 or call your local HP Call Center for a diagnosis. For phone numbers of an HP Call Center near you, visit the following Web site: http://www.hp.com/cgi-bin/hpsupport/index.pl
CMOS battery failed	The CMOS battery is no longer functional. For information on replacing the battery, refer to Removing and Replacing the Battery on page 13 .
CMOS checksum error - Defaults loaded	Checksum of CMOS is incorrect, so the system loads the default equipment configuration. A checksum error may indicate that CMOS has become corrupt. A weak battery may have caused this error. Replace the battery if necessary. For more information, refer to Removing and Replacing the Battery on page 13 .
CPU at nnnn	Displays the running speed of the CPU.
Press ESC to skip memory test	The user may press Esc to skip the full memory test.
Hard Disk Install Failure	Cannot find or initialize the hard drive controller or the drive. Make sure the controller is installed correctly. If no hard drives are installed, be sure the Hard Drive selection in Setup is set to NONE .
Keyboard error or no keyboard present	Cannot initialize the keyboard. Make sure the keyboard is attached correctly and no keys are pressed during POST. To purposely configure the system without a keyboard, set the error halt condition in Setup to HALT ON ALL, BUT KEYBOARD . The BIOS then ignores the missing keyboard during POST.
Memory Test	This message displays during a full memory test, counting down the memory areas being tested.
Memory Test Fail	If POST detects an error during memory testing, additional information appears giving specifics about the type and location of the memory error.
Override enabled - Defaults loaded	If the system cannot boot using the current CMOS configuration, the BIOS can override the current configuration with a set of BIOS defaults designed for the most stable, minimal performance system operations.
Press TAB to show POST screen	Press the Tab key during POST to display messages hidden by the HP logo.
Error: Non-System disk or disk error	The BIOS was unable to find a suitable boot device. For the t5000 Series, this may mean an uninitialized or corrupt ATA Flash. Reflash the unit. For more information, refer to Restoring the Flash Image on page 48 .

Troubleshooting

Basic Troubleshooting

If the thin client is experiencing operating problems or will not power on, review the following items.

Table 5-4 Power-On Troubleshooting

Issue	Procedures
The thin client unit is experiencing operating problems.	<p>Ensure that the following connectors are securely plugged into the thin client unit:</p> <ul style="list-style-type: none">• Power connector• Keyboard• Mouse• Network RJ-45 connector• Monitor
The thin client unit does not power on.	<ol style="list-style-type: none">1. Verify that the power supply is good by installing it on a known working unit and testing it. If the power supply does not work on the test unit, replace the power supply.2. If the unit does not work properly with the replaced power supply, have the unit serviced.
The thin client unit powers on and displays a splash screen, but does not connect to the server.	<ol style="list-style-type: none">1. Verify that the network is operating and the network cable is working properly.2. Verify that the unit is communicating with the server by having the System Administrator ping the unit from the server:<ul style="list-style-type: none">◦ If the thin client pings back, then the signal was accepted and the unit is working. This indicates a configuration issue.◦ If the thin client does not ping back and the thin client does not connect to the server, re-image the unit.
No link or activity on the network RJ-45 LEDs or the LEDs do not illuminate blinking green after powering on the thin client unit. (The network LEDs are located inside the RJ-45 connector on the top, rear panel of the thin client. Indicator lights are visible when the connector is installed.)	<ol style="list-style-type: none">1. Verify that the network is not down.2. Make sure the RJ-45 cable is good by installing the RJ-45 cable onto a known working device—if a network signal is detected then the cable is good.3. Verify the power supply is good by replacing the power cable to the unit with a known working power supply cable and testing it.4. If network LEDs still do not light and you know the power supply is good, then re-image the unit.5. If network LEDs still do not light, run the IP configuration procedure.6. If network LEDs still do not light, have the unit serviced.

Table 5-4 Power-On Troubleshooting (continued)

A newly connected unknown USB peripheral does not respond or USB peripherals connected prior to the newly connected USB peripheral will not complete their device actions.	An unknown USB peripheral may be connected and disconnected to a running platform as long as you do not reboot the system. If problems occur, disconnect the unknown USB peripheral and reboot the platform.
Video does not display.	<ol style="list-style-type: none">1. Verify that the monitor brightness is set to a readable level.2. Verify the monitor is good by connecting it to a known working computer and ensure its front LED turns green (assuming the monitor is Energy Star compliant). If the monitor is defective, replace it with a working monitor and repeat testing.3. Re-image the thin client unit and power on the monitor again.4. Test the thin client unit on a known working monitor. If the monitor does not display video, replace the thin client unit.

Diskless (No-Flash) Unit Troubleshooting

This section is only for those units that do not have ATA Flash capability. Because there is no ATA Flash in this model the boot priority sequence is:

- USB device
- PXE

To troubleshoot the unit:

1. When the unit boots, the monitor should display the following information:

Table 5-5 Diskless Unit Troubleshooting

Item	Information	Action
MAC Address	NIC portion of the system board is OK	If no MAC Address, the system board is at fault. Contact the Call Center for service.
GUID	General system board information	If no GUID information, the system board is at fault and should be replaced.
Client ID	Information from server	If no Client ID information there is no network connection. This may be caused by a bad cable, down server, or a bad system board. Contact the Call Center for service for the bad system board.
MASK	Information from server	If no MASK information there is no network connection. This may be caused by a bad cable, down server, or a bad system board. Contact the Call Center for service for the bad system board.
DHCP IP	Information from server	If no DHCP IP information there is no network connection. This may be caused by a bad cable, down server, or a bad system board. Contact the Call Center for service for the bad system board.

If you are running in an MS RIS PXE environment go to step 2.

If you are running in a Linux environment go to step 3.

2. If you are running in an MS RIS PXE environment press the **F12** key to activate the network service boot as soon as the DHCP IP information appears on the screen.

If the unit does not boot to the network the server is not configured to PXE.


If you missed the F12 cue, the system will try to boot to the ATA flash that is not present. The message on the screen will read: **ERROR: Non-system disk or disk error. Replace and press any key when ready.**

Pressing any key will restart the boot cycle.


3. If you are running in a Linux environment, an error message will appear on the screen if there is no Client IP. **ERROR: Non-system disk or disk error. Replace and press any key when ready.**

Troubleshooting Flowcharts


Initial Troubleshooting

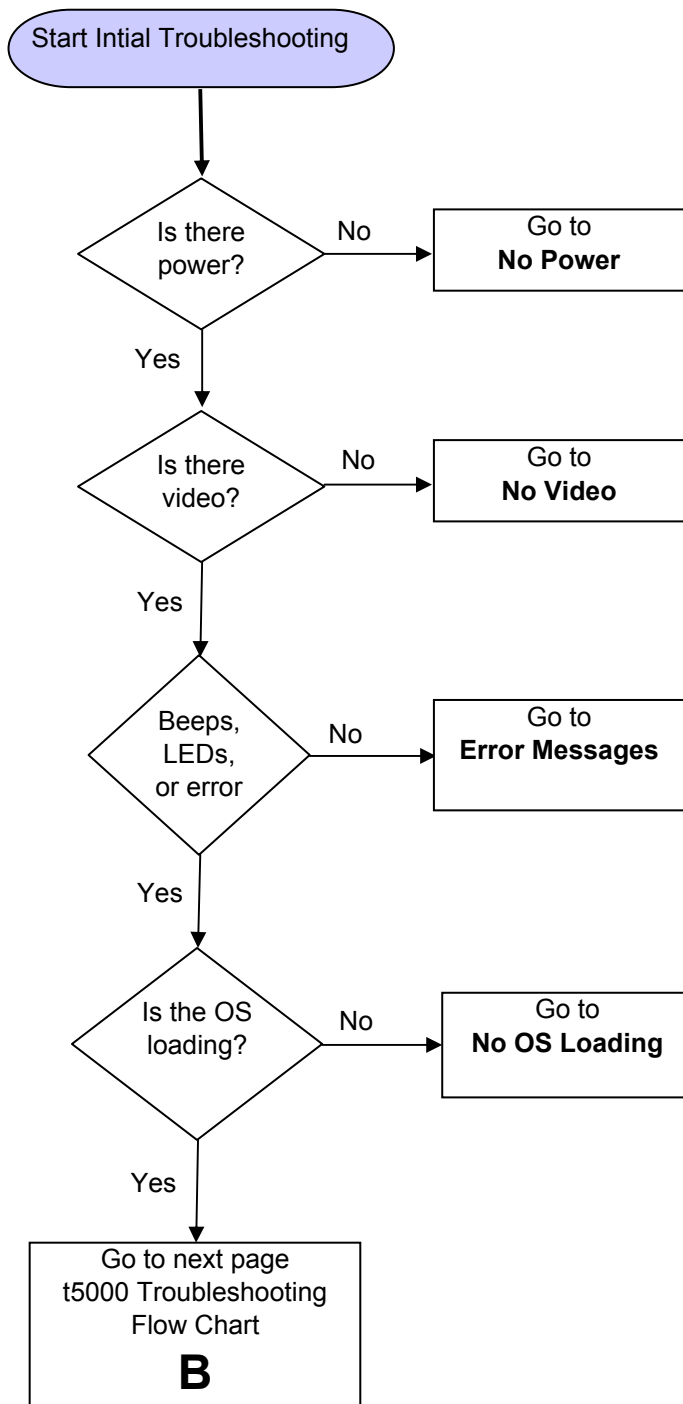


Initial Troubleshooting Part 2

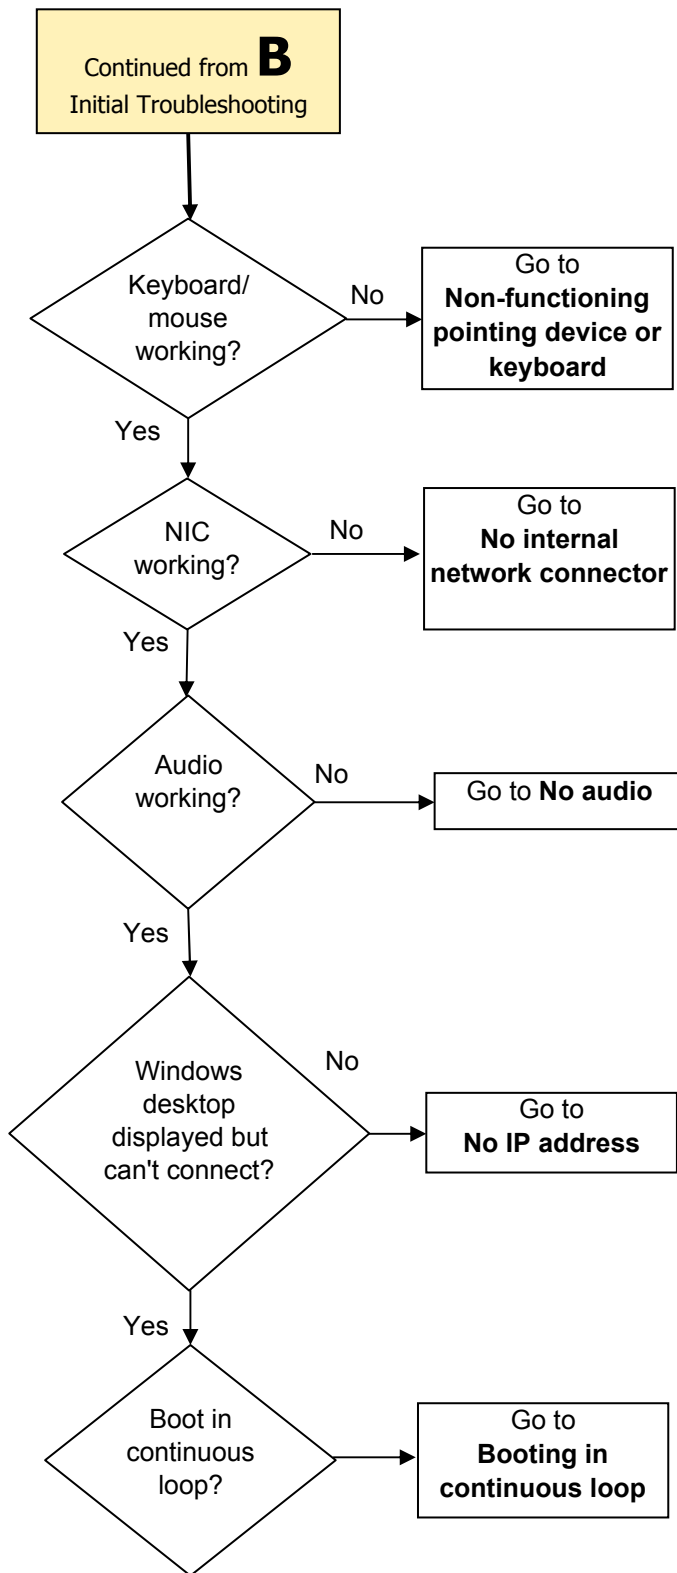


No Power, Part 1

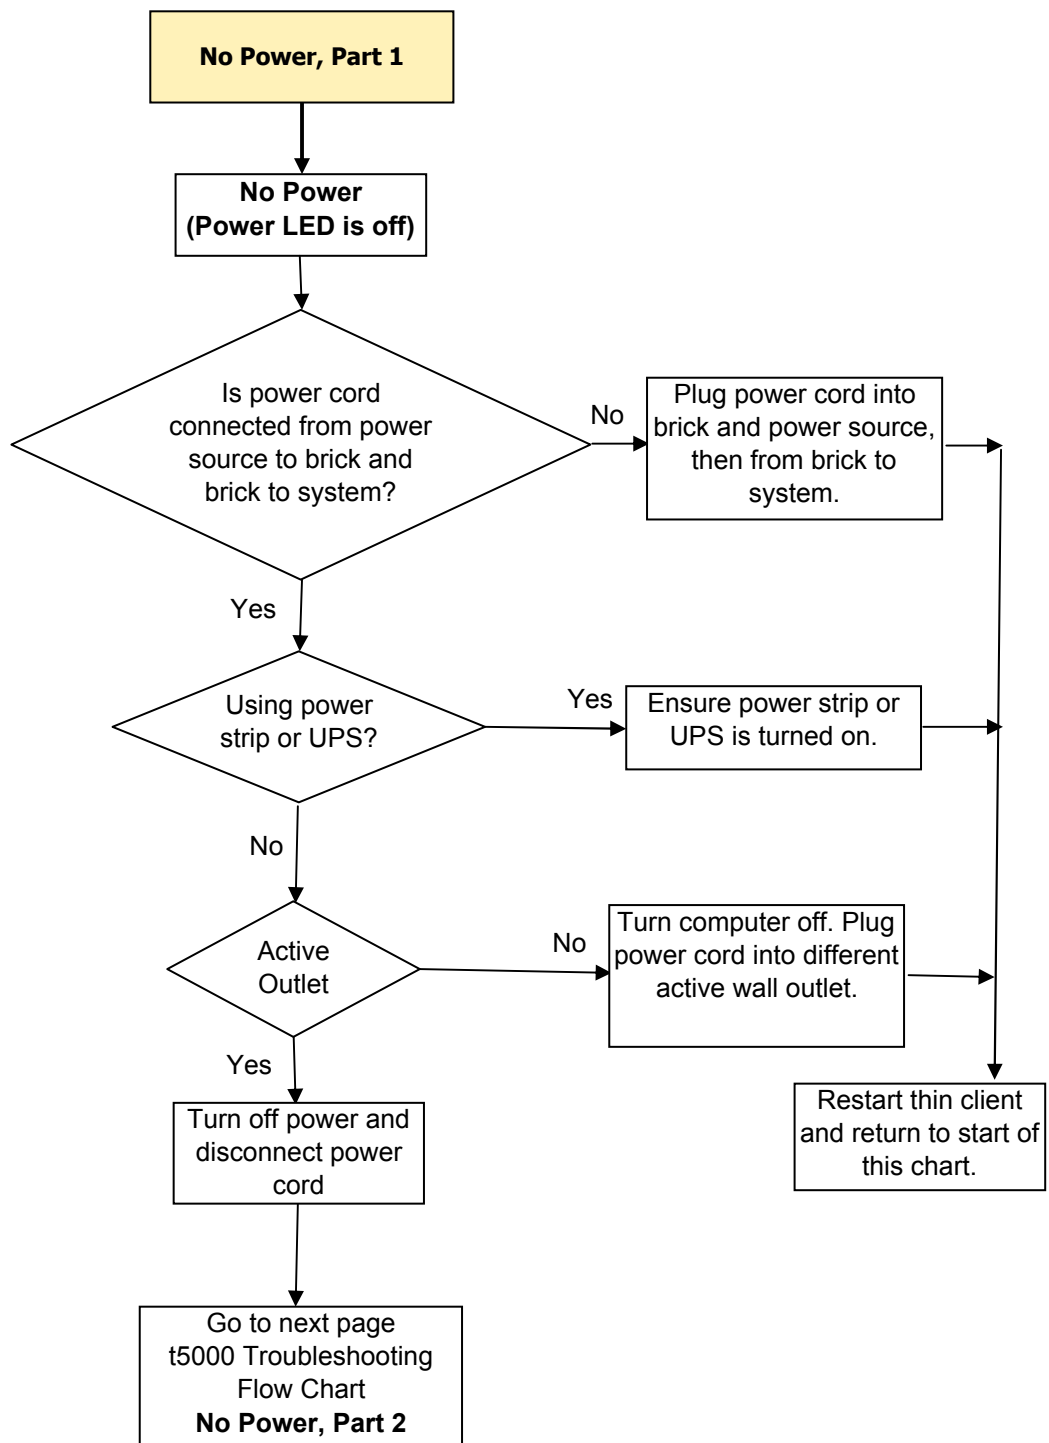


No Power, Part 2

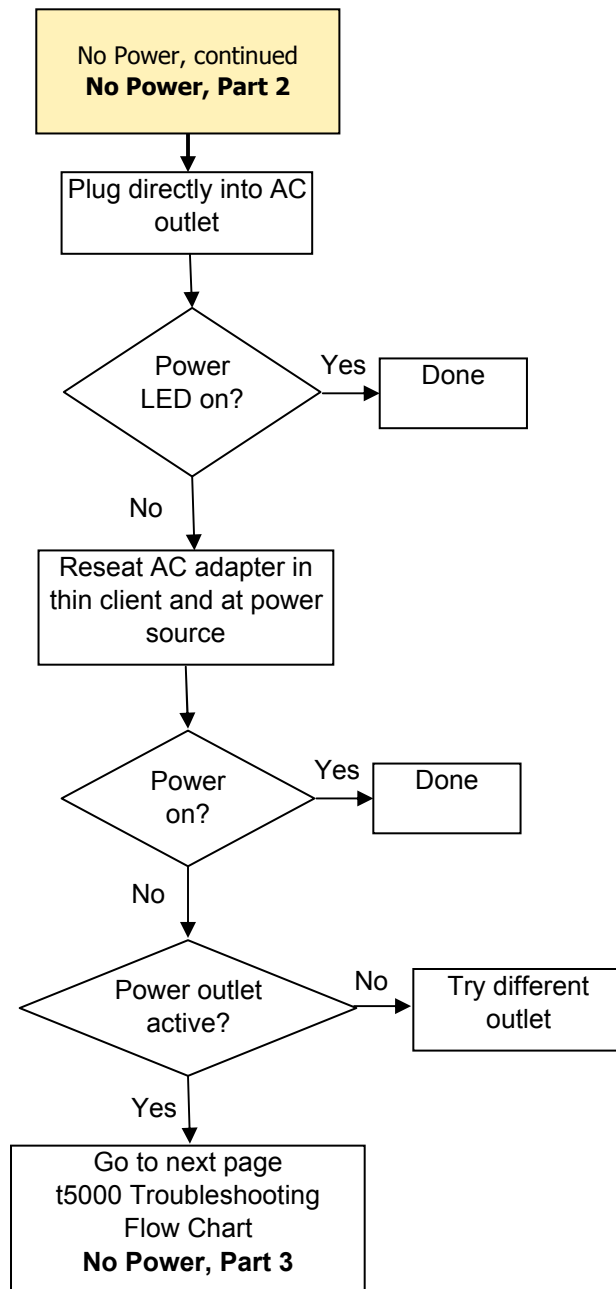


No Power, Part 3

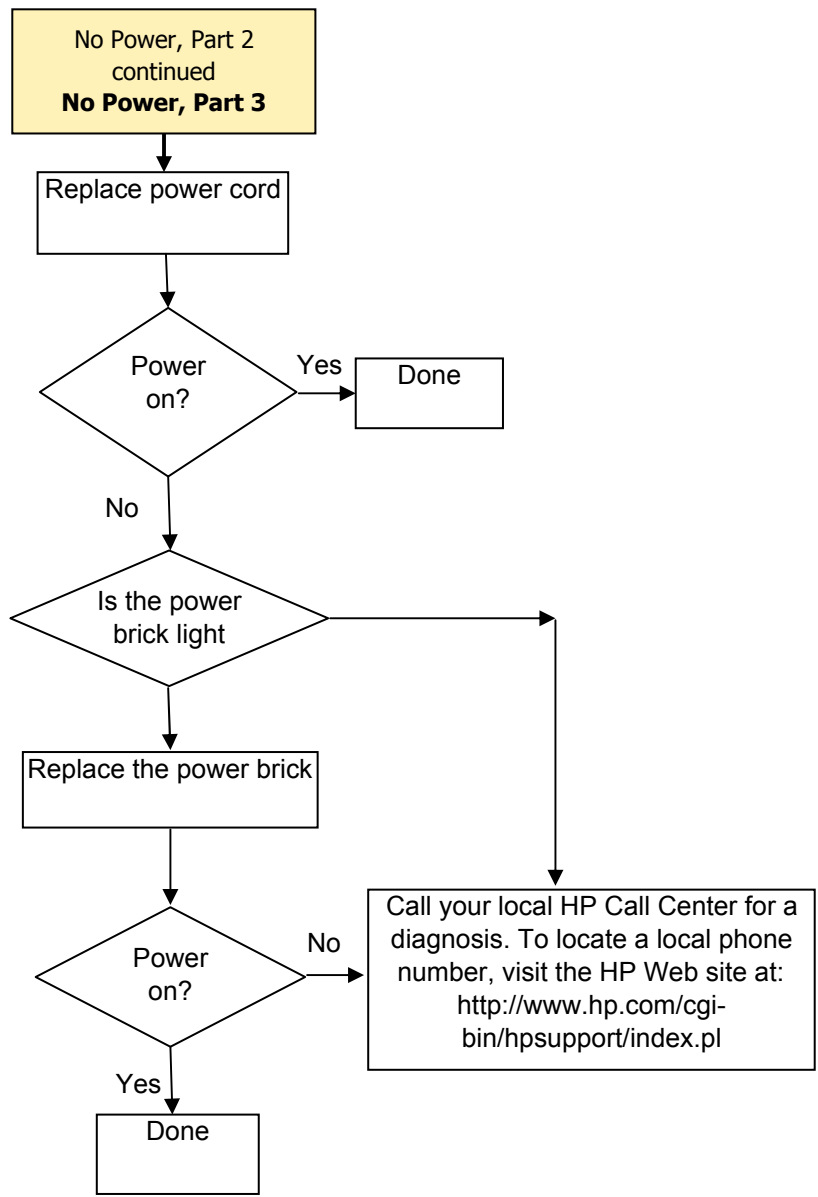


No Video, Part 1

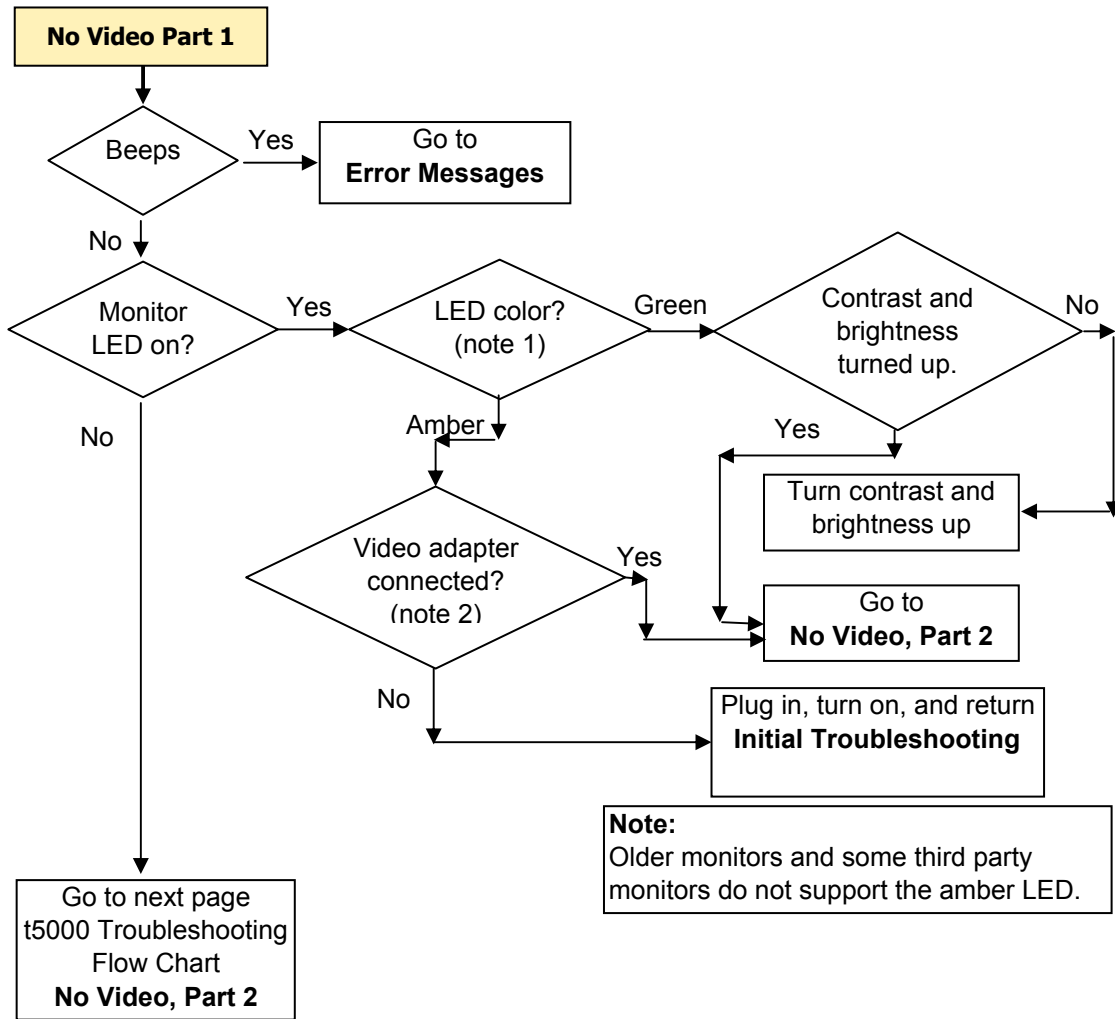


No Video, Part 2

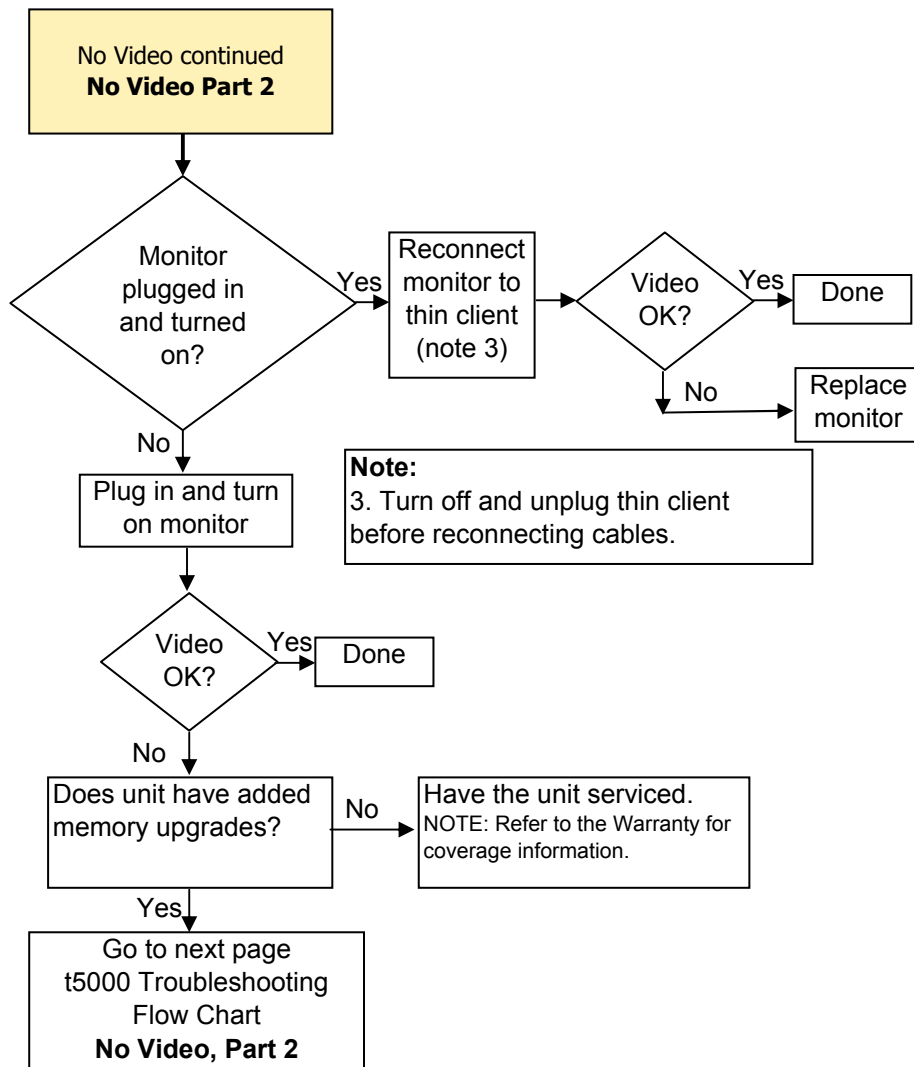


No Video, Part 3

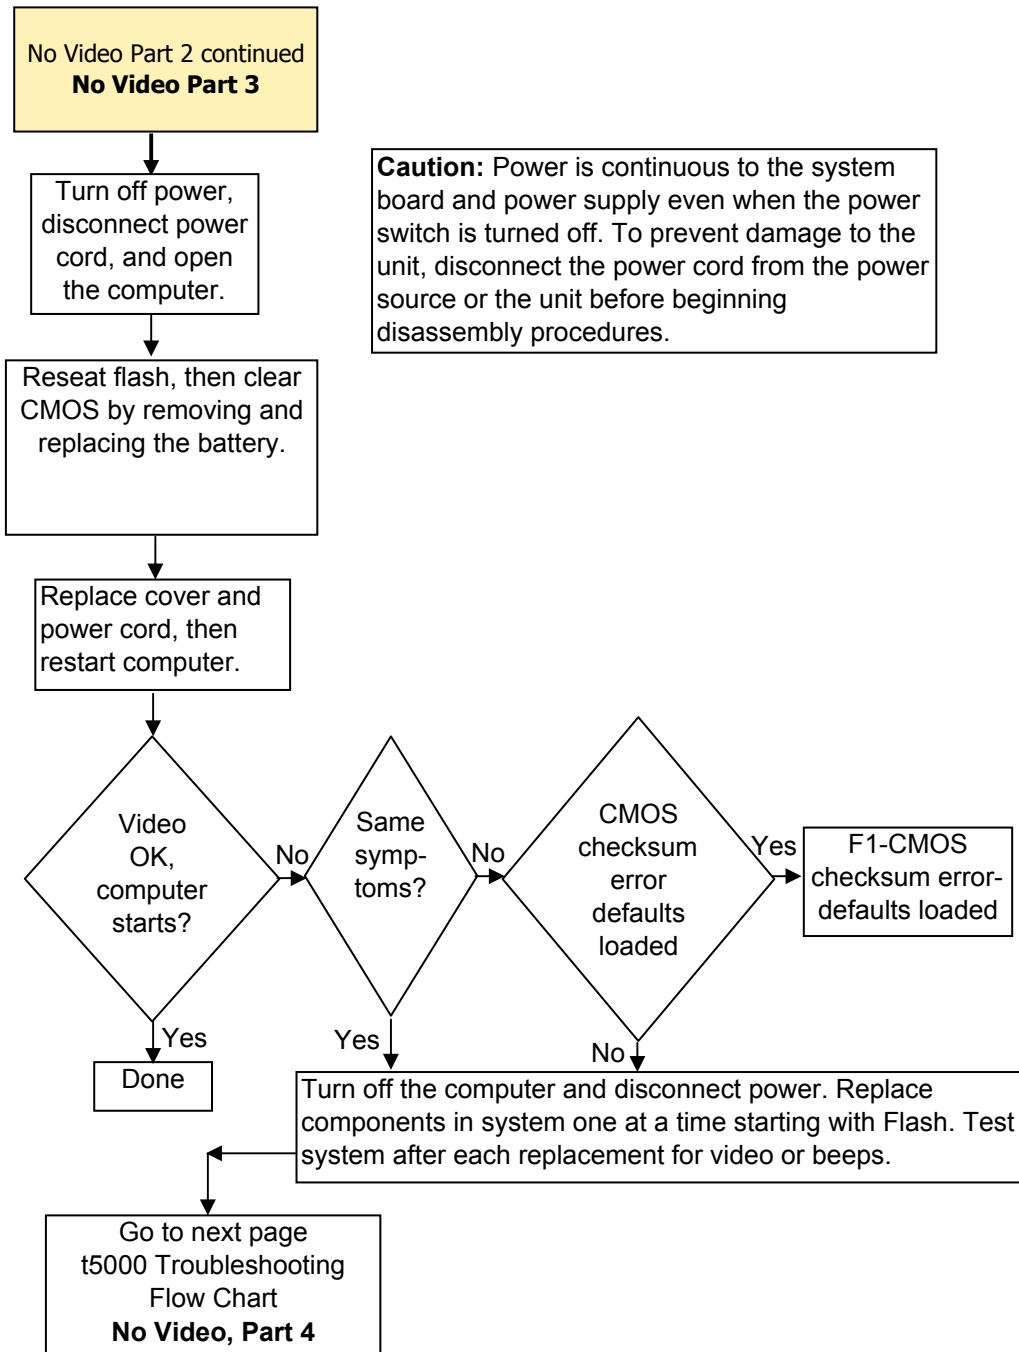


No Video, Part 4

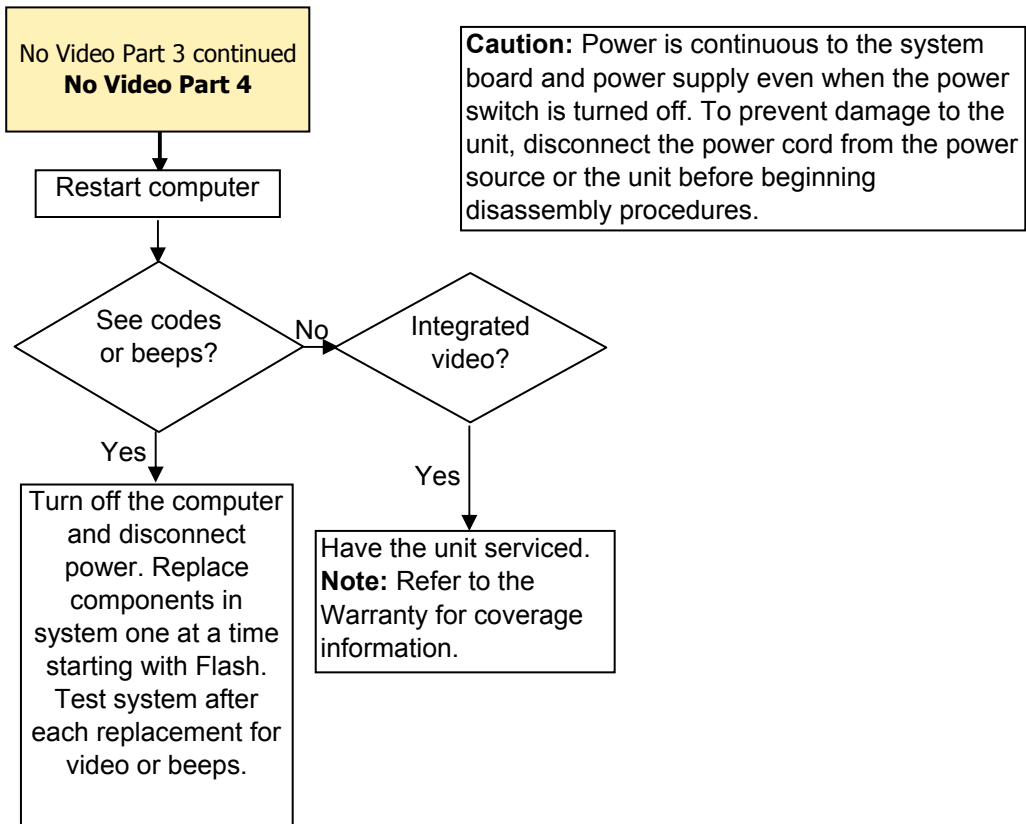


Error Messages

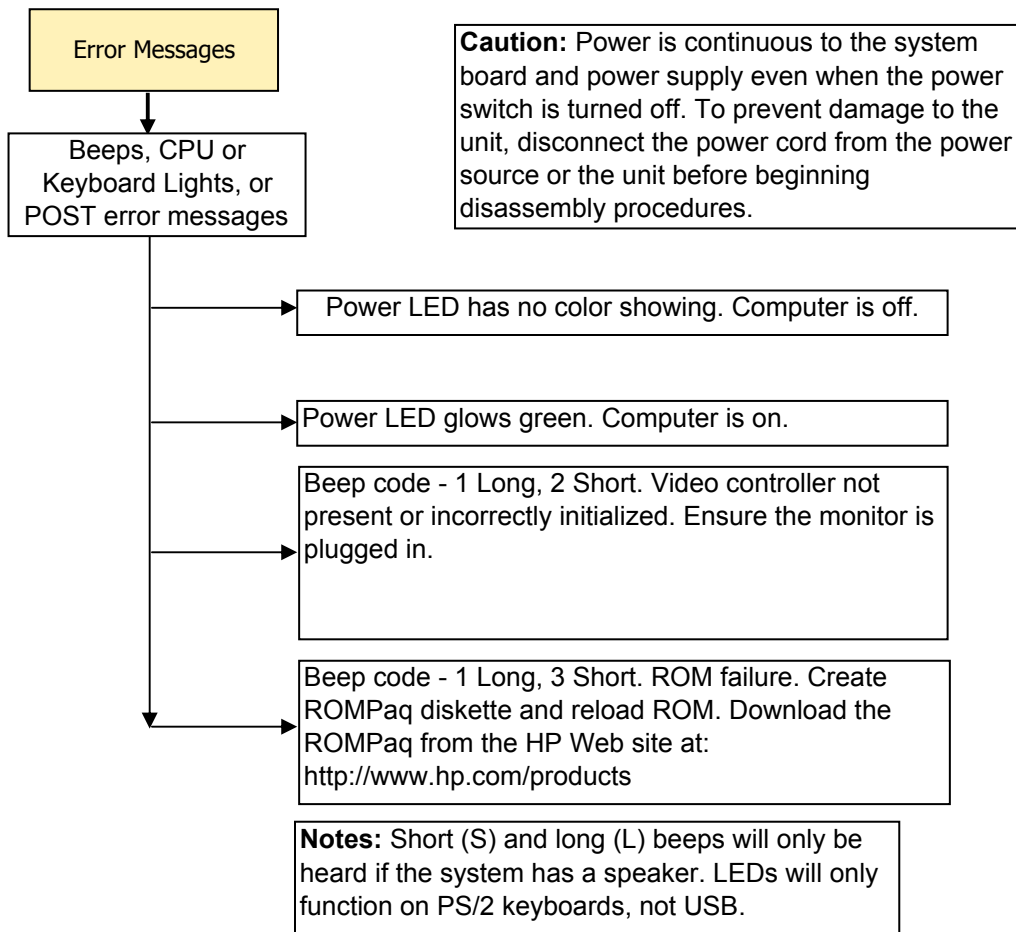


NO OS Loading

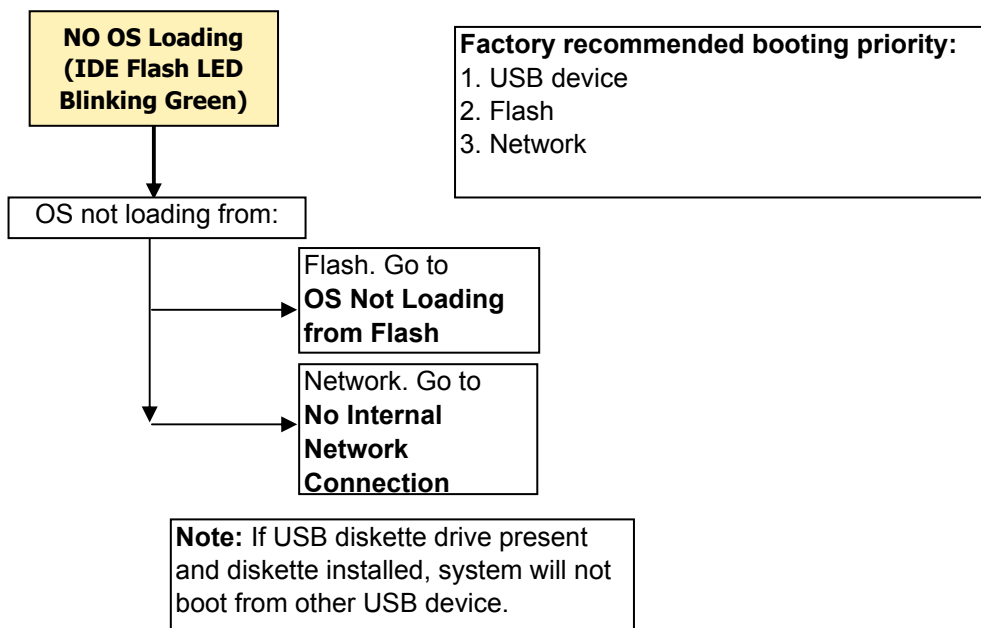


OS Not Loading from Flash

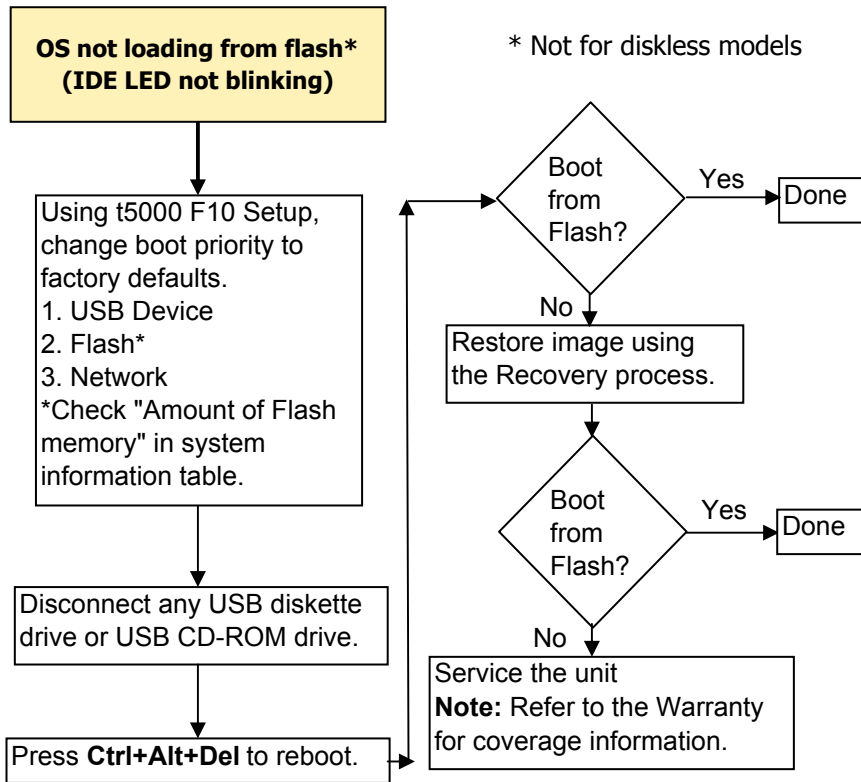


Non-Functioning Pointing Device or Keyboard

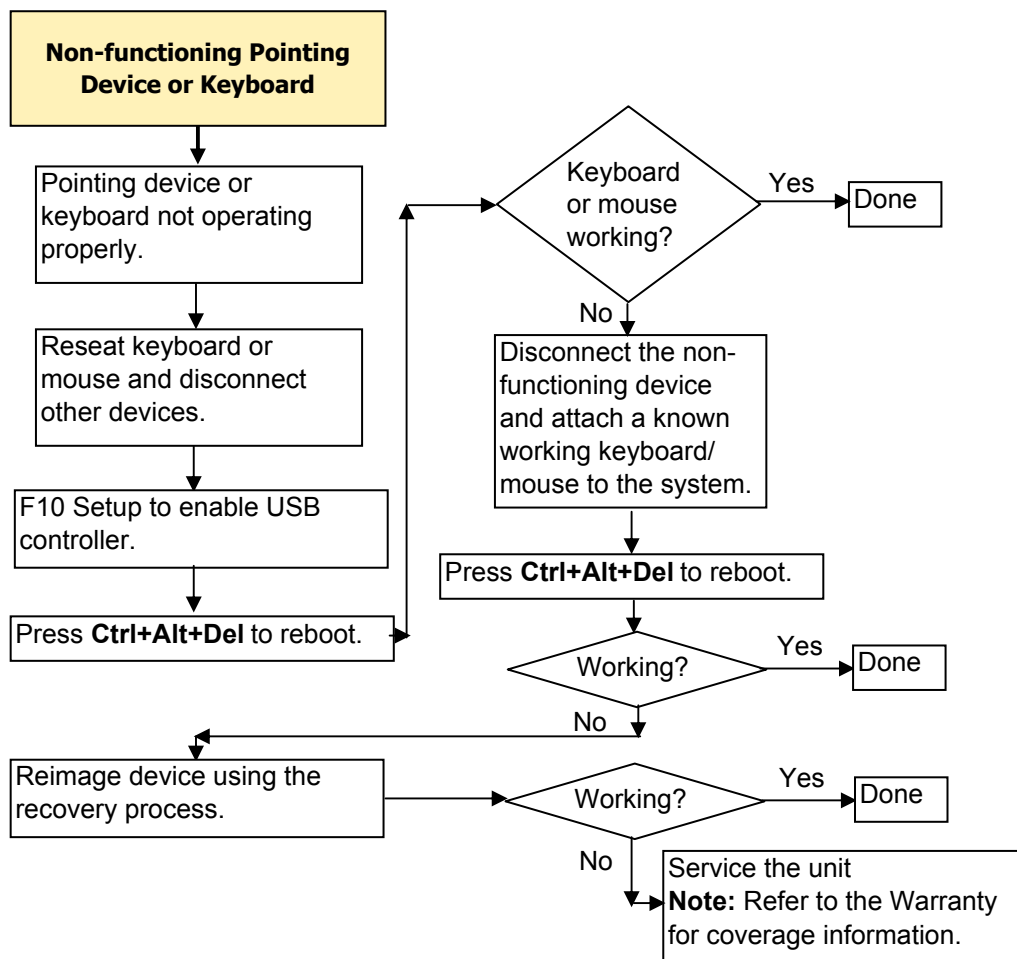


No Internal Network Connection

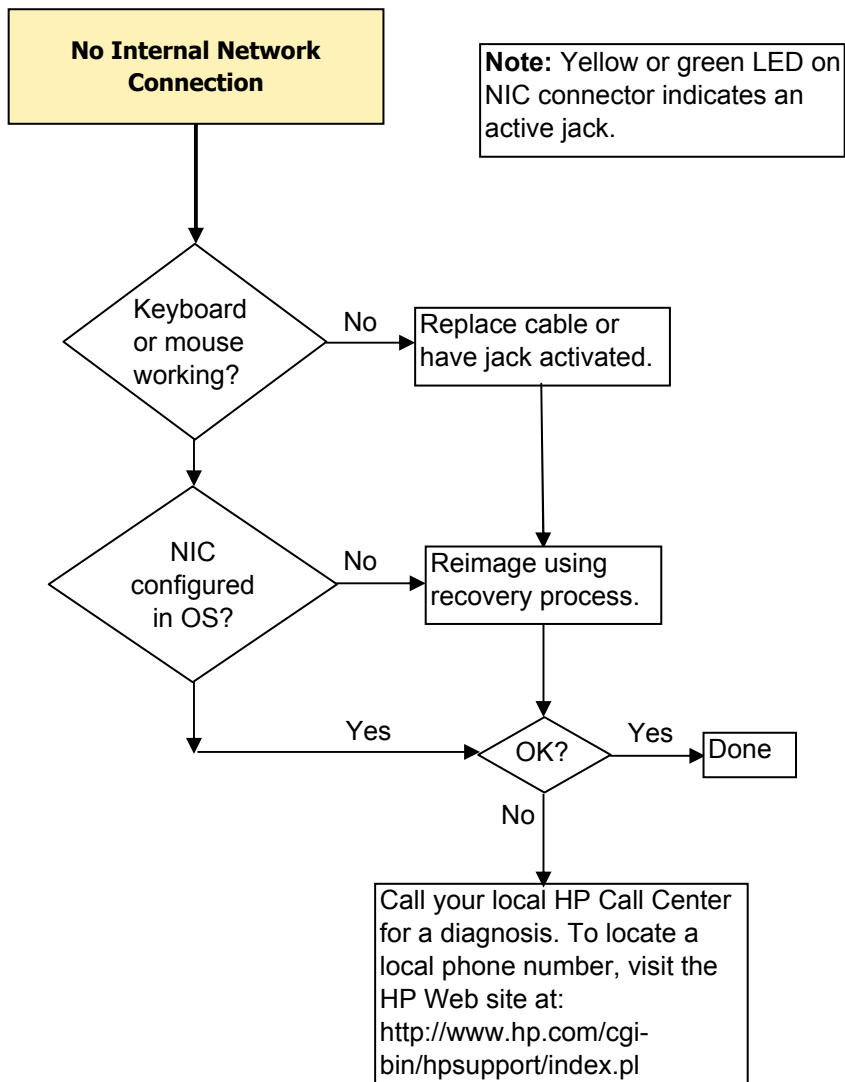


No Audio

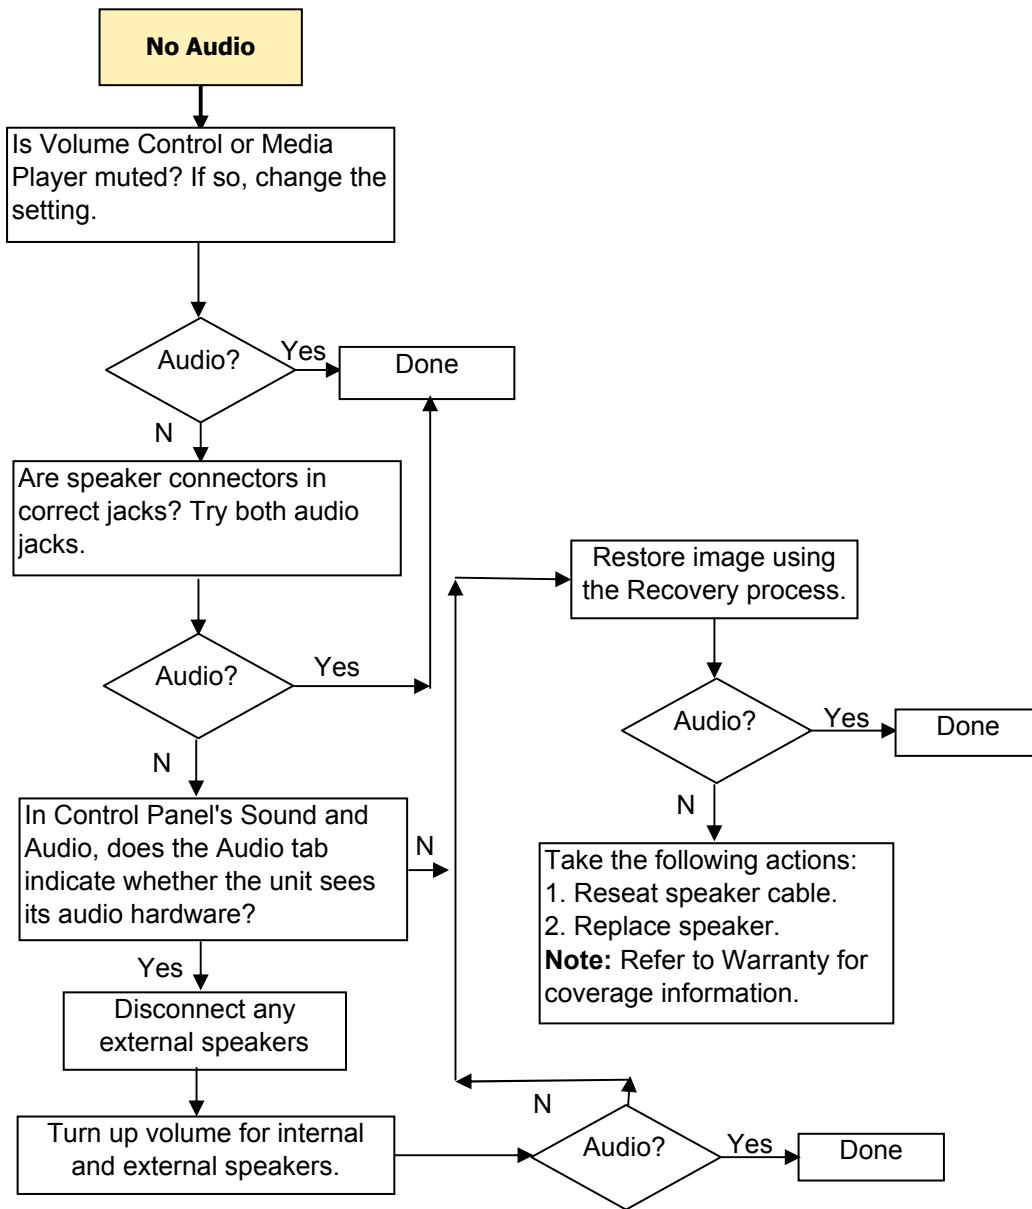

No IP Address

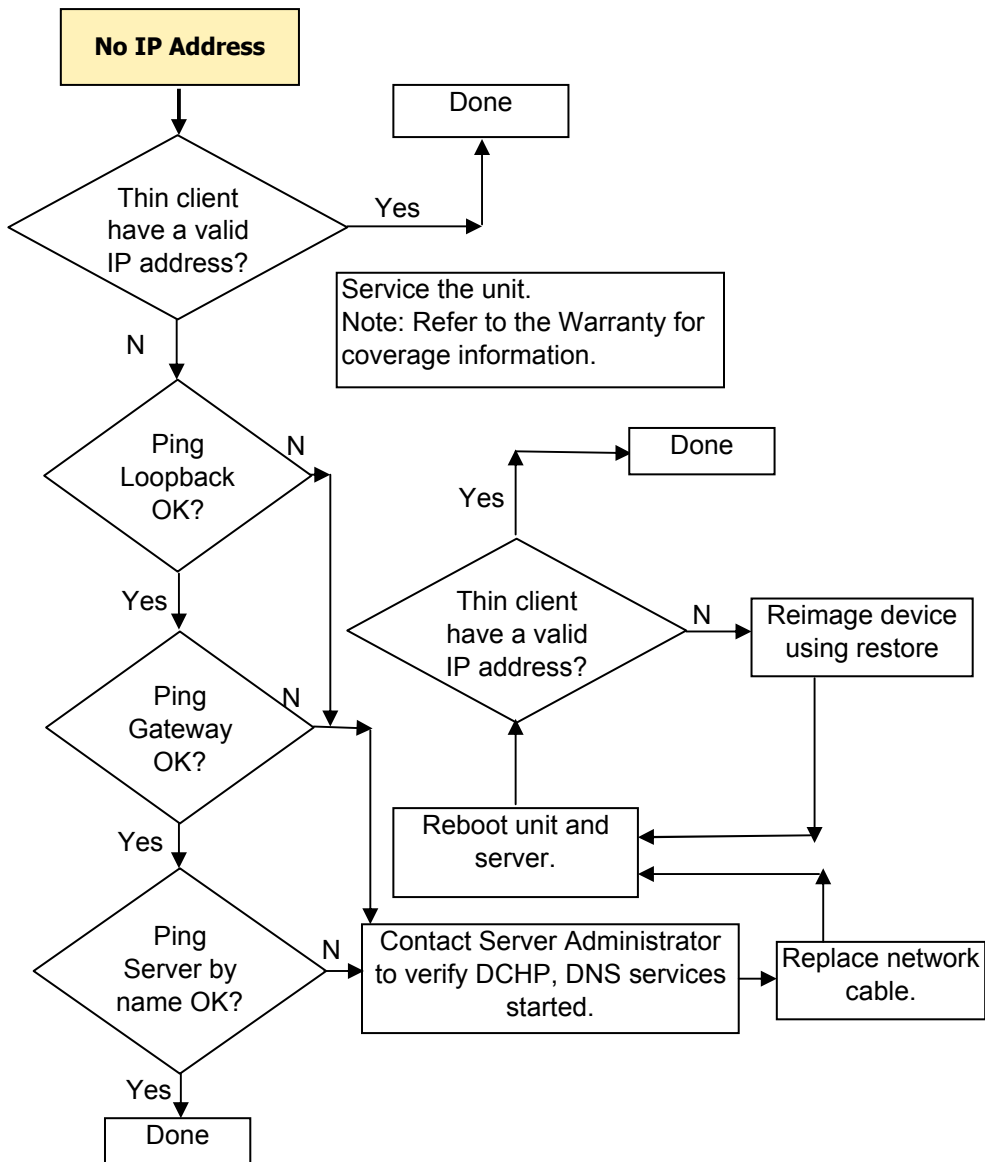

Booting in Continuous Loop

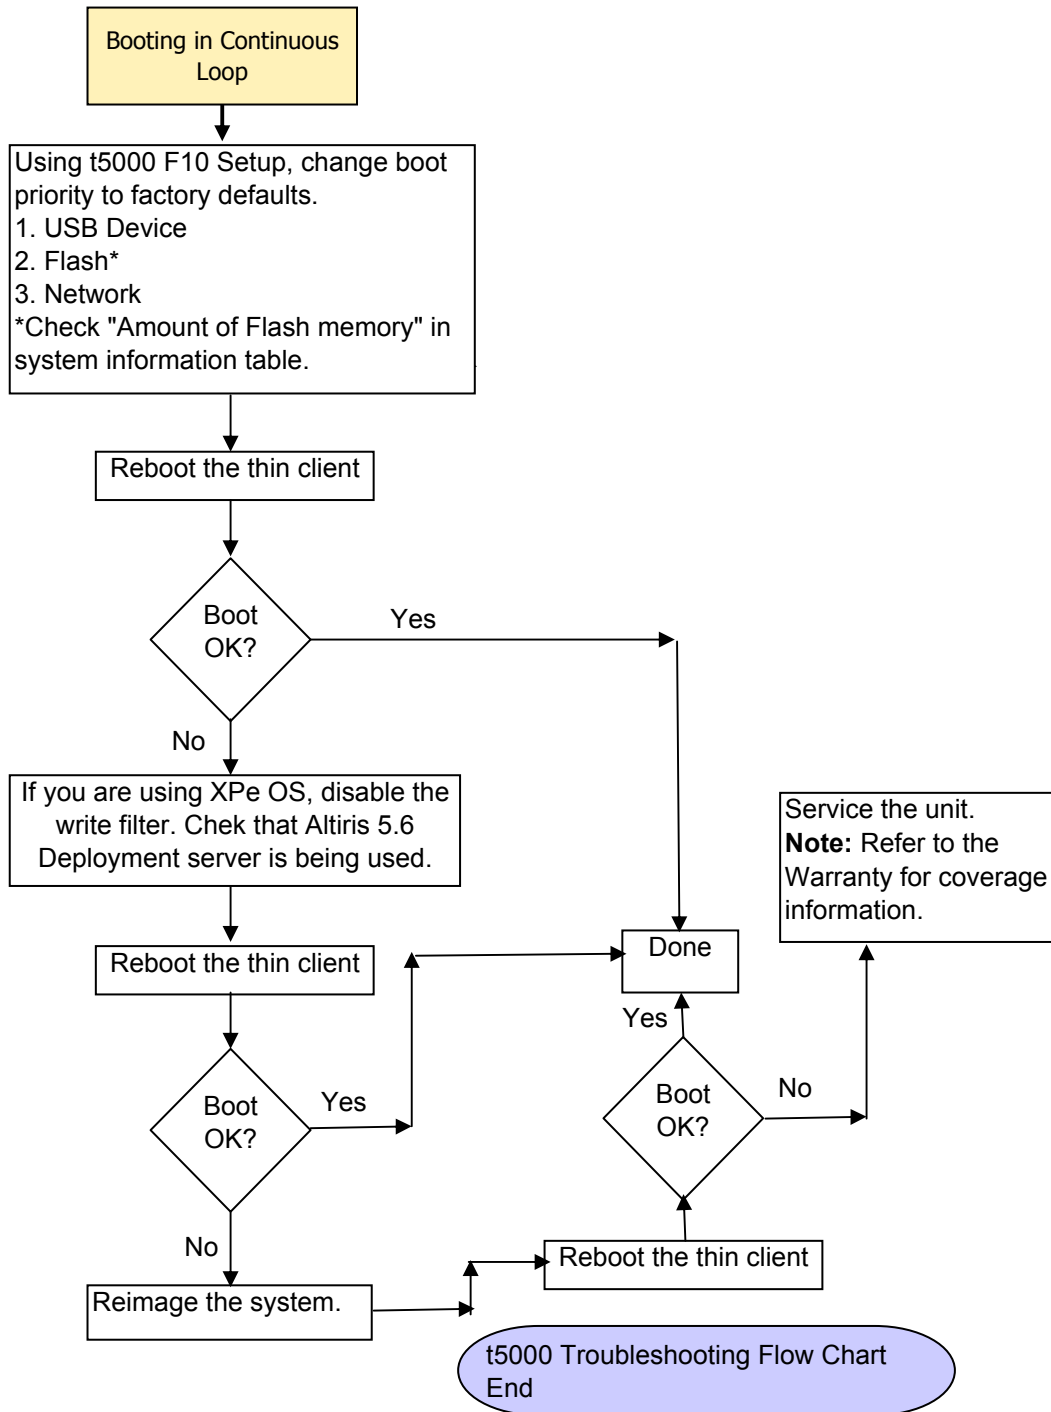

6 Restoring the Flash Image

System Requirements

To create a recovery device for the purpose of reflashing or restoring the software image on the DOM (Disk On Module or ATA Flash), you will need the following:

- A computer running Microsoft Windows 2000 Professional or Microsoft Windows XP Professional
- One or more HP Compaq t5000 Series Thin Clients
- CD-R or CD-RW drive (if using the ISO Image option)
- 512-MB USB flash device for Windows XP Embedded or Windows Embedded Standard (WES) (if using the USB format) or Linux.

This restore method will not work with all USB flash devices. USB flash devices with multiple partitions generally do not support this restore method. The range of USB flash devices available on the market is constantly changing. Not all USB flash devices have been tested with the HP Compaq Thin Client Imaging Tool.

- USB CD-ROM drive for thin client (if using the ISO Image option)

Before using the utility, you must download the appropriate image from <http://www.hp.com/sbso/bussupport.html>.

Getting Started

There are three deployment options supported by this utility. You can choose to do one or more of the following using your personal computer:

- Generate an ISO image to use with CD creation software to create a bootable CD for deployment using a USB CD-ROM drive.
- Create a bootable flash image on a USB flash device.
- Unbundle the image to a directory for use in a custom deployment scenario or PXE image.

Download and run the Package-for-the-Web deliverable (an .exe file) that contains the original factory image for the thin client. The HP Compaq Thin Client Imaging Tool (CRStart.exe) runs automatically.

Choose one of the deployment options: Each option is described in the following paragraphs.

- ISO Image
- USB Format
- Deployment

During the restore process, the thin client flash drive will be reformatted and all data on it will be erased before the system image is copied to it. To prevent loss of data, be sure that you have saved any user-created data from the flash drive. During the first restart of the thin client following the restore process, it may take approximately 15 minutes to unbundle the software before the Windows Desktop is displayed.

Creating an ISO Image

1. Click **ISO Image**.
2. When prompted, enter a file name for the generated ISO file.

Once this process is complete, use the generated ISO file to create a bootable restore CD with your CD creation software.
3. Connect a USB CD-ROM drive to the thin client. **Only one bootable USB device may be attached to the thin client during this process.**
4. Insert the bootable restore CD into the CD-ROM drive.
5. Restart the thin client.
6. When prompted **Do you want to continue? [Y/N]**, click **Y** to begin the image restore process on the thin client.

Formatting a USB Flash Drive

△ **CAUTION:** To prevent loss of data, be sure that you have saved any user-created data from the USB drive to another drive.

1. Connect your USB flash drive to your computer. Ensure that only one USB flash drive is connected to the system.
2. Click **USB Format**.
3. Select the USB drive from the list, using the up and down arrows to display the correct drive letter. (If the USB drive does not appear in the list, click **Update Drives**, then scroll through the list again.)


During the next step, the USB drive will be reformatted and all data on it will be erased before the bootable image is copied to it. To prevent loss of data, be sure that you have saved any data from the USB drive to another drive.
4. Click **Format**.

Connect the bootable USB flash device to the thin client. Only one bootable USB device may be attached to the thin client during this process.
5. Restart the thin client.
6. When prompted **Do you want to continue? [Y/N]** click **Y** to begin the image restore process on the thin client.

Unpacking the Image and Tools for Deployment

1. Click **Deployment**.
2. When prompted, select the destination directory for the imaging tools and image.

The components that comprise DSKIMG.BIN are then unbundled. When this process is complete, there are three new files: IBR.EXE (the image restoration utility), FLASH.xx (the OS image), and README.TXT

 **NOTE:** Linux uses the file name FLASH.DD while other operating system images use FLASH.IMG

Deploying with PXE

1. Ensure that IBR.exe and Flash.img are stored in the same directory on the server.
2. Add `[full path]\IBR.exe -y [full path]\Flash.img hd0` to the PXE command file, and then run it.

To view the IBR command line options: At the command prompt, type `IBR.EXE /?` and press [Enter](#).

Refer to [Configuring a PXE Server on page 54](#) for instructions about setting up a PXE Server using Microsoft RIS. See your documentation if using a different PXE server, such as Altiris Deployment Solution.

A Specifications


Table A-1 HP Compaq t5630/t5630w/t5545 Thin Client

Dimensions		
Width (front to back)	52.07 mm	2.05 in.
Height (with stand)	209.55 mm	8.25 in.
Height (without stand)	219.70 mm	8.65 in.
Depth	215.90 mm	8.50 in.
Approximate Weight		
	1.54 kg	3.40 lb
Temperature Range (fanless design)*		
Operating**	10° to 40° C	50° to 104° F
(max. rate of change is 10° C per hour or 18° F per hour)		
Nonoperating	-30° to 60° C	-22° to 140° F
(max. rate of change is 20° C per hour or 36° F per hour)		
*Specifications are at sea level with altitude derating of 1° C/ 300m (1.8° F/1000ft) to a maximum of 3Km (10,000ft), with no direct, sustained sunlight. Upper limit may be limited by the type and number of options installed.		
** The operating temperature range when the thin client is attached to a flat panel using the HP Quick Release is 50° to 95° F (10° to 35° C).		
Relative Humidity (non-condensing)		
Operating	10–90%	10–90%
(max. wet bulb temperature is 28° C or 84.2° F)		
Nonoperating	5–95%	5–95%
(max. wet bulb temperature is 38.7° C or 101.6° F)		
Maximum Altitude (unpressurized)		
Operating (max. allowed rate of change is 457m per minute or 1500 ft per minute)	3048 m	10,000 ft
Nonoperating (max. allowed rate of change is 457m per minute or 1500 ft per minute)	9144 m	30,000 ft
Power Supply		
Operating Voltage Range	100–240 VAC	100–240 VAC
Rated Line Frequency	50–60 Hz	50–60 Hz
Power Output (maximum)		
	50 W	50 W

Table A-1 HP Compaq t5630/t5630w/t5545 Thin Client (continued)

Rated Output Current (maximum)	4.16 A	4.16 A
Output Voltage	+12 V DC	+12 V DC

B Adding an Image Restore Tool

1. Ensure that the boot order is set to use the **Network** as the first boot device.
 2. Ensure that IBR.exe (Image Restore) and Flash.dd are stored in the same directory on the server.
(e.g., c:\program files\altiris\express\deployment server\images)
 3. From the Altiris Deployment Server Console, click **File > New > Job**.
 4. Enter a unique name for the job that you will use to deploy the original thin client image.
 5. Click the name of the new job.
 6. Near the upper right side of the screen, click **Add**.
 7. Select **Run Script** from the menu.
 8. Type [full path]: `images\ibr\exe-y\images\flash.xx hd0`
-
-  **NOTE:** Linux uses the file name FLASH.DD while other operating system images use FLASH.IMG
-
9. Under **In which OS would you like to run this script**, click **DOS**.
 10. Click **Finish**.
 11. You can now drag and drop the job onto the appropriate machine(s) or schedule it to run later, depending on your needs. Refer to the documentation for Altiris Deployment Solution (<http://www.altiris.com/support/documentation>) for more detailed information.

C Configuring a PXE Server

Prerequisites

The services listed below must be running, and they may be running on different servers:

- Domain Name Service (DNS)
- Active Directory DHCP
- Remote Installation Services (RIS) on Microsoft Windows 2000 Server

This documentation covers RIS setup, and assumes that servers 1, 2, and 3 (above) are already set up. The RIS PXE Server must be equipped with two or more hard drives. Remote Installation Services and Windows 2000 Server cannot be installed on the same drive; nor will RIS work on a double partition of Windows 2000 Server. You must first format the drive on which RIS is installed using NTFS.

Installing Remote Installation Services (RIS PXE Server)

1. From the Windows 2000 Server, log on to the domain using an account that has Administrator privileges on the server.
2. From the Windows Control Panel, double-click on **Add/Remove Programs**.
3. Double-click **Add/Remove Windows Components**.
4. Select **Remote Installation Services**, and then click **Next** (Insert Windows 2000 Server CD into the CD-ROM drive, if prompted).
5. Restart the computer after the wizard has finished installing the service.

Authorizing Remote Installation Services (RIS PXE Server)

If you have installed RIS on a server other than the server running DHCP, authorize PXE with DHCP as follows:

1. Record the IP address of the RIS PXE Server.
2. Log on to the DHCP Server as administrator.
3. From the Control Panel, double-click **Administrative Tools**.
4. Double-click **DHCP**.
5. Right-click **DHCP** (just above the domain name) and select **Manage Authorized Servers**.
6. Click **Authorize**.

7. Type the IP address of your RIS PXE server, and then click **OK**.
8. Click **OK**.
9. Log off from the DHCP Server.

Configuring Remote Installation Services

Use the default option to have RIS install on second hard drive (D:\ or E:\).

1. Click **Start > Run**.
2. Type `Rissetup.exe` and click **Next**.
3. Click **Next**.
4. Select **Respond to client computers requesting service**.
5. Click **Next**.
6. Insert the Windows 2000 Professional CD into the CD-ROM drive and enter the path to the CD-ROM drive (usually drive D:\ or E:\).
7. Click **Next**.
8. Click **Next**.
9. Click **Next**.
10. When the installation is complete, click **Finish**.

Set User Permissions on the Active Directory Server

On the active directory server:

1. Click **Start > Programs > Administrative Tools**.
2. Click **Active Directory Users and Computers**.
3. Right-click on the appropriate domain name.
4. Click **Delegate Control**.
5. Click **Next**.
6. Click **Add** to add users.
7. Highlight **Everyone** and click **Add**.
8. Click **OK**.
9. Click **Next**.
10. Select **Join a Computer to the Domain**.
11. Click **Next**.
12. Click **Finish**.

RIS Menu

1. Install the RIS menu of your choice.
2. Configure the RIS menu.
3. Refer to the help file provided by the RIS menu for instructions on creating a network bootable diskette and RIS menu for PXE.

Creating Network Bootable Disk to Map Drives

Create a network boot disk to map drives.

Refer to the Microsoft Web site for instructions about creating a network bootable diskette.

For More Information

HP Compaq t5000 Series Documentation (including white papers discussing software deployment methods):

<http://welcome.hp.com/country/us/en/support.html>. Type your model number into the **for product** box and navigate to the **Manuals** link.

Altiris Deployment Solution Documentation:

<http://www.altiris.com/support/documentation/>

D FTP Update

HP FTP Image Update Client is a utility that allows image update from an FTP share to an HP thin client system running the Windows XP Embedded or Windows Embedded Standard (WES) operating system.

FTP Image Update is only provided on the t5630/t5630w with the latest HP XPe or WES image.

For FTP Image Update to function properly, it requires the following available free space on the client:

- Approximately 200MB of flash
- Approximately 250MB of RAM

FTP Image Update over wireless is not supported

For greater usage flexibility and to take advantage of all the features provided in the latest image, HP recommends at least:

- 1 GB of flash
- 1 GB of RAM

Server Requirements

DCHP Server

Option 137 should contain a string value specifying an FTP share where the XPe images and WinPE image are stored.

For example, if the XPe images and WinPE image are stored in `ftp://ftpserver/ftpfolder`, then the option DHCP option 137 should contain the following string:


- `ftp://username:password@ftpserver/ftpfolder`, if the FTP share is protected
- or –
- `ftp://ftpserver/ftpfolder`, if the FTP share allows anonymous access

FTP Server

The XPe images (in .IBR format) and the WinPE image provided by HP must reside in the same folder on the FTP server.

Description

The HP FTP Image Update Client can only be run by an administrator on an HP thin client system which has license to run XP Embedded operating system.

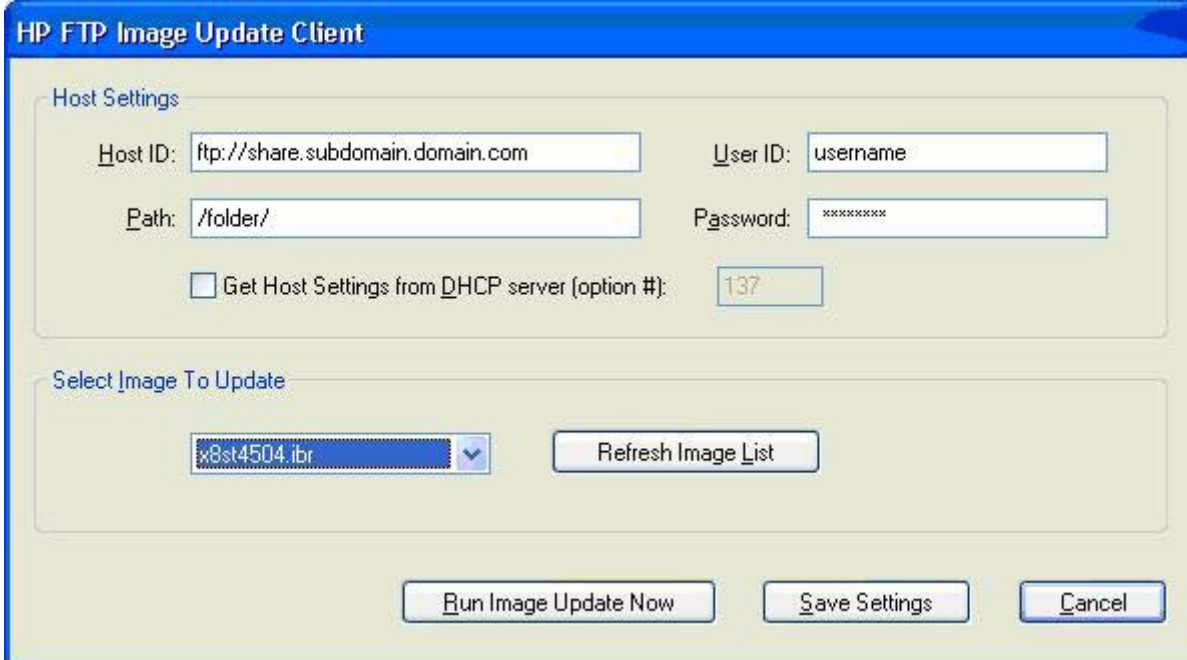

The screenshot shows the 'HP FTP Image Update Client' window. It is divided into two main sections: 'Host Settings' and 'Select Image To Update'.
In the 'Host Settings' section, there are four input fields: 'Host ID' (containing 'ftp://share.subdomain.domain.com'), 'User ID' (containing 'username'), 'Path' (containing '/folder/'), and 'Password' (containing '*****'). Below these is a checkbox labeled 'Get Host Settings from DHCP server (option #):' which is unchecked, and a text box containing '137'.
The 'Select Image To Update' section features a dropdown menu with 'x8st4504.ibr' selected and a 'Refresh Image List' button.
At the bottom of the window, there are three buttons: 'Run Image Update Now', 'Save Settings', and 'Cancel'.

Host Settings

There are two ways to specify host settings:

1. You can manually enter settings by clearing the **Get Host Settings from DHCP server** check box and filling in appropriate information to the **Host ID**, **Path**, **User ID**, and **Password** boxes.

If the FTP share allows anonymous read access, then you can leave the **User ID** and **Password** boxes empty.

If the XPe images and WinPE image are stored in the default (root) folder on the FTP server, then you can leave the **Path** box empty or fill the box with `/`.

2. Automatically through a DHCP option by selecting the **Get Host Settings from DHCP server** check box.

These host settings can be saved and committed by clicking on the **Save Settings** button. When the applet is invoked again, the settings will be retrieved and the corresponding controls are automatically populated.

Select Image to Update

Once the host settings are entered, either manually or automatically through DHCP, then click the **Refresh Image List** button to make the applet query the FTP share for all XPe images whose targeted BIOS families match the one of the current thin client system, and fill in the drop-list combo box to the left of the button. You can choose any of the listed images to update/image the system.

When ready, you can click the **Run Image Update Now** button to proceed with the image update using the selected image. A confirmation dialog similar to the following is displayed.



Click **No** to abort the operation. If you click **Yes**, the HP FTP Image Update Client confirms that the flash drive has at least 200MB free to host the WinPE image. If the flash drive does not, the following error message is displayed.



If the flash device has enough memory, the update client starts the download of the WinPE image, modifies the boot loader to boot to WinPE in the next system restart, and then restarts the system to continue to the WinPE phase.



Once WinPE is loaded, IBRPE is spawned to image the system's flash drive using the selected image from the FTP share. When the imaging completes, IBRPE automatically restarts the system to enter the FBA phase.

```
X:\Windows\System32\cmd.exe - \IBRPE\THINSTATE.CMD
HP Thin Client Imaging Tool, Version 6.00.2008.0519
Copyright (c) 2008 Hewlett-Packard Development Company, L.P.

This utility will FORMAT your flash disk and ERASE ALL DATA currently on the
disk. It will then RESTORE the original operating system software, device
drivers, and other HP-provided software that came with the computer.

Please do not power off your system during this process.


3% completed.
```

E System BIOS

Restoring a Corrupt BIOS


If the BIOS on the thin client is corrupt, the BIOS must be restored before the thin client will boot to the operating system. To restore the BIOS, you will need the following:

- An external USB diskette drive or USB flash drive connected to the thin client
- HP Compaq Thin Client t5000 Series System BIOS Softpaq (for the product being restored) on diskette or USB flash drive


 **NOTE:** The BIOS recovery procedure works the same from USB floppy diskette or USB flash drive. There will be no audio, video, or keyboard support during the recovery process. The BIOS softpaq requires that you add the `/r` option to the Flash.bat file. This change forces the flash utility (awdfash.exe) to automatically reboot the system after flashing the BIOS. When you see “Press F10 to enter Setup”, remove the USB media.

To restore a corrupt BIOS, complete the following instructions

1. On a working computer navigate to <http://www.hp.com/>

 **NOTE:** You can also perform a BIOS recovery using a USB flash drive. From the BIOS softpaq DOS Flash directory, add Autoexec.bat, flash.bat, Awdflash.exe, and BIN file on the flash drive or floppy diskette, boot to it, and then the Autoexec.bat will run Flash.bat.

2. Select **Software & Driver Downloads**.
3. In the **For Product** box, type the thin client model number, and then click the arrow.
4. Under **Select Operating System**, select the operating system for your thin client.
5. Under **BIOS**, click the **Download** button next to the BIOS you want to download.
6. Download to your hard drive. The downloaded file is an executable.
7. From your hard drive, open the Softpaq, then open the DOS Flash folder and copy the files mentioned above to a bootable floppy diskette or USB flash drive.
8. Power off the thin client with the corrupt BIOS.
9. Connect the external USB diskette drive to the thin client and insert the Flash diskette into USB diskette drive or insert the USB flash drive into USB port of the thin client.

 **NOTE:** Before powering on the thin client, check to make sure there are no other USB devices connected to the thin client. If there are, disconnect them.

10. Power on the thin client.
11. At power on, the BIOS is automatically restored from the diskette or USB flash drive.

⚠ WARNING! Do not turn off power or attempt to reboot the thin client during the recovery process.

While this procedure is primarily used to recover systems with corrupt BIOS, it can also be used to locally update a system BIOS.

Updating a BIOS

To update the system BIOS, download the Softpaq (for the product being updated) from the HP Web site at: <http://www.hp.com/>, select **Software and Driver Downloads**, and then enter the model number of your thin client.

The Softpaq contains utilities for restoring or updating the system BIOS. Included in the Softpaq are several methods for changing or updating the BIOS version on your computer. The tools and appropriate BIOS images are contained in the following Softpaq directories:

- DOS Flash – DOS utility that can be used locally or with a Preboot eXecution Environment (PXE) management application to update the system BIOS.
- WFlash – Windows-based utility used to locally update the system BIOS on individual PCs through the Windows environment.
- CEFlash – CE.net-based utility to locally update the system BIOS on individual PCs through the CE.net environment.
- LFlash – Linux-based utility to locally update the system BIOS on individual PCs through the Linux environment.

To determine the BIOS family, version, and date on the thin client, press **F10** during system power-on to run the F10 Setup utility, then select **System Information**.

To update the system BIOS, complete the following instructions:

1. Download the Softpaq to a directory on your hard drive. The downloaded file is a self-extracting executable.
2. From that drive and directory, execute the downloaded file and follow the on-screen instructions.
3. Copy the appropriate utility to a diskette or USB flash drive to transfer to the thin client.

⚠ WARNING! Do not turn off power or attempt to reboot the computer during the upgrade process

F Electrostatic Discharge

A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the device.

Preventing Electrostatic Damage

To prevent electrostatic damage, observe the following precautions:


- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly.

Grounding Methods

There are several methods for grounding. Use one or more of the following methods when handling or installing electrostatic-sensitive parts:

- Use a wrist strap connected by a ground cord to a grounded Thin Client chassis. Wrist straps are flexible straps of 1 megohm +/- 10 percent resistance in the ground cords. To provide proper grounding, wear the strap snug against the skin.
- Use heelstraps, toestraps, or bootstraps at standing workstations. Wear the straps on both feet when standing on conductive floors or dissipating floor mats.
- Use conductive field service tools.
- Use a portable field service kit with a folding static-dissipating work mat.

If you do not have any of the suggested equipment for proper grounding, contact an HP authorized dealer, reseller, or service provider.

 **NOTE:** For more information about static electricity, contact an HP authorized dealer, reseller, or service provider.

Index

- A**
 - access panel
 - removing 10
 - replacing 11
 - adding an image restore tool 53
 - altitude specifications 51
 - authorizing Remote Installation Services 54
- B**
 - basic troubleshooting 28
 - battery, replacing 13
 - beep codes 27
 - BIOS
 - restoring 61
 - updating 62
 - BIOS settings 20
- C**
 - cable lock slot location 3
 - cable routing slot 4
 - cautions
 - ambient temperature 8
 - HP Quick Release 17
 - mounting thin client 19
 - static electricity 7
 - changing BIOS settings
 - in the repset utility 20
 - using the F10 utility 21
 - components
 - front panel 2
 - rear panel 4
 - top 3
 - configuring a PXE server 54
 - configuring Remote Installation Services 55
- D**
 - description 1
- diagnostics and troubleshooting 25
- dimensions 51
- diskette drive 14
- diskless troubleshooting 29
- download hardware drivers 8
- DVI-D connector location 4
- E**
 - electrostatic discharge 63
 - Ethernet connector location 4
- F**
 - F10 setup 20
 - features 1
 - feet, installing 4
 - Flash activity LED location 2
 - formatting a flash drive 49
 - front panel components 2
- G**
 - grounding methods 63
- H**
 - hard drive 14
 - hardware drivers 8
 - hardware specifications 51
 - hardware, upgrades 7
 - headphone connector location 2
 - horizontal orientation 4
 - HP Quick Release 15
 - humidity specifications 51
- I**
 - image restore tool 53
 - installation sequence 7
 - installing
 - external drives 14
 - hardware 7
 - HP Quick Release 15
 - MultiBay diskette drive 14
 - rubber feet 4
 - stand 5
 - thin client onto HP Quick Release 15
 - USB devices 8, 12
 - installing Remote Installation Services 54
 - ISO image 49
- L**
 - LEDs 25
 - line-out audio location 4
 - lock, cable, slot location 3
- M**
 - metal side cover
 - removing 10
 - replacing 11
 - microphone connector location 2
 - mounting holes, VESA 4
 - mounting options
 - on back of monitor stand 17
 - on wall 17
 - under desk 17
 - with flat panel on wall 17
 - mounting thin client 15
- O**
 - operating systems 1
 - options
 - installing 7
 - supported 7
 - USB device 12
 - orientation
 - horizontal 4
 - vertical 5
- P**
 - parallel connector 4

- POST error messages 27
- power and IDE flash activity
 - LEDs 25
- power button location 2
- power connector location 4
- power LED location 2
- power output specifications 51
- power supply specifications 51
- power-on diagnostic tests 26
- power-on sequence 26
- preventing electrostatic damage 63
- product description 1
- PS/2 connectors location 4
- PXE 50, 54

Q

- Quick Release 15

R

- rated output current 52
- rear panel components 4
- recycling 13
- relative humidity
 - specifications 51
- removing
 - battery 13
 - metal side cover 10
 - secure USB compartment cover 8
 - side access panel 10
 - stand 6
- replacing
 - battery 13
 - metal side cover 11
 - secure USB compartment cover 9
 - side access panel 11
- restore 53
- restoring a corrupt BIOS 61
- restoring the flash image 48
- RIS menu 56
- RJ-45 connector location 4
- rubber feet, installing 4

S

- secure cable routing slot 4
- secure USB compartment
 - location 2, 3
 - ports 3

- removing cover 8
- replacing cover 9
- security
 - cable routing slot 12
 - USB devices 12
- serial connector location 4
- serial number location 2
- setting user permissions on the Active Directory Server 55
- Setup Utility
 - Advanced BIOS Features 22
 - Integrated Peripherals 23
 - Main Menu 21
 - Power Management Setup 24
 - Standard CMOS features 22
 - System Information 22
 - Utility Task Actions 24
- shutting down 7
- side access panel
 - removing 10
 - replacing 11
- side cover
 - removing 10
 - replacing 11
- specifications
 - altitude 51
 - dimensions 51
 - hardware 51
 - humidity 51
 - power output 51
 - power supply 51
 - rated output current 52
 - relative humidity 51
 - temperature 51
 - thin client 51
 - weight 51
- stand
 - installing 5
 - removing 6
- supported mounting options 17

T

- temperature specifications 51
- top components 3
- troubleshooting 28

U

- unsupported mounting option 19
- updating a BIOS 62
- USB devices, installing 8, 12

- USB drive options 14
- USB ports
 - location 2, 4
 - secure 3

V

- vertical orientation 5
- VESA mounting holes 4
- VGA connector location 4

W

- warnings
 - electric shock 7, 8, 10, 13
 - fire 7
- Web sites
 - QuickSpecs 1
- weight 51