

# Notebook Tour

## User Guide

© Copyright 2008 Hewlett-Packard  
Development Company, L.P.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: September 2008

Document Part Number: 493581-001

#### **Product notice**

This user guide describes features that are common to most models. Some features may not be available on your computer.

## Safety warning notice

- 
- ⚠ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
-



---

# Table of contents

## 1 Identifying hardware

## 2 Components

Top components .....	2
TouchPad .....	2
Lights .....	3
Buttons and fingerprint reader (select models only) .....	5
Keys .....	7
Front components .....	8
Right-side components .....	9
Left-side components .....	10
Bottom components .....	11
Display components .....	12
Wireless antennae .....	13
Additional hardware components .....	14

## 3 Labels

Index .....	16
-------------	----




---

# 1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:

1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.

 
You can also add hardware or modify device configurations using Device Manager.

 **NOTE:** Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

## 2 Components

### Top components

#### TouchPad

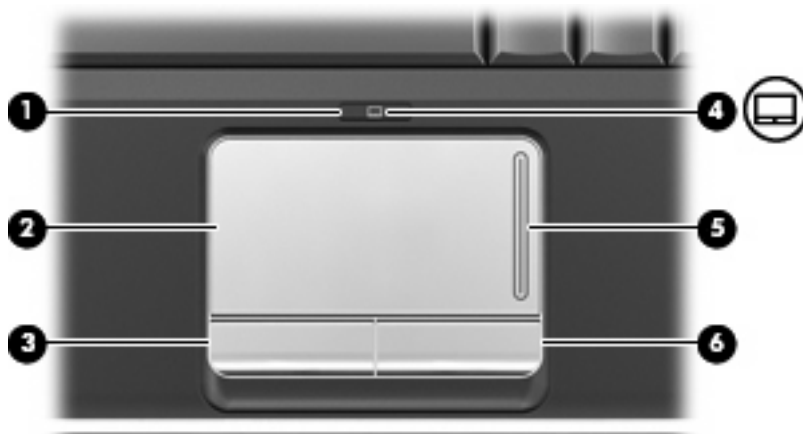


Component	Description
(1) TouchPad on/off button	Enables/disables the TouchPad.
(2) TouchPad*	Moves the pointer and selects or activates items on the screen.
(3) Left TouchPad button*	Functions like the left button on an external mouse.
(4) TouchPad light	<ul style="list-style-type: none"><li>• White: TouchPad is enabled.</li><li>• Amber: TouchPad is disabled.</li></ul>
(5) TouchPad scroll zone	Scrolls up or down.
(6) Right TouchPad button*	Functions like the right button on an external mouse.

\*This table describes factory settings. To view and change pointing device preferences, select **Start > Control Panel > Hardware and Sound > Mouse**.



## Lights

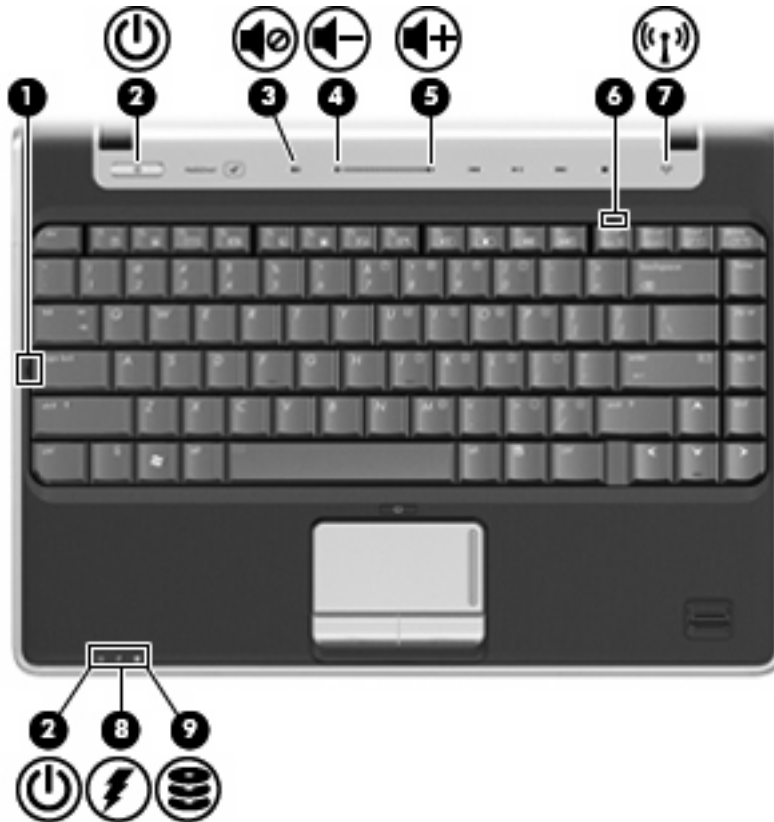 

Component	Description
(1) Caps lock light	On: Caps lock is on.
(2) Power lights (2)*	<ul style="list-style-type: none"> <li>On: The computer is on.</li> <li>Blinking: The computer is in the Sleep state.</li> <li>Off: The computer is off or in Hibernation.</li> </ul>
(3) Volume mute light	<ul style="list-style-type: none"> <li>White: Computer sound is on.</li> <li>Amber: Computer sound is off.</li> </ul>
(4) Volume down light	On: The volume scroll zone is being used to decrease speaker volume.
(5) Volume up light	On: The volume scroll zone is being used to increase speaker volume.
(6) Num lock light	On: Num lock is on or the embedded numeric keypad is enabled.
(7) Wireless light	<ul style="list-style-type: none"> <li>On: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is on.</li> <li>Off: All wireless devices are off.</li> </ul>

Component	Description
(8) Battery light	<ul style="list-style-type: none"><li>• On: A battery is charging.</li><li>• Blinking: A battery that is the only available power source has reached a low battery level or a critical battery level.</li><li>• Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.</li></ul>
(9) Drive light	Blinking: The hard drive or optical drive is being accessed.

\*The 2 power lights display the same information. The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.

## Buttons and fingerprint reader (select models only)

 


Component	Description
(1) Power button*	<ul style="list-style-type: none"> <li>When the computer is off, press the button to turn on the computer.</li> <li>When the computer is on, press the button to initiate Sleep.</li> <li>When the computer is in the Sleep state, press the button briefly to exit Sleep.</li> <li>When the computer is in Hibernation, press the button briefly to exit Hibernation.</li> </ul> <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select <b>Start &gt; Control Panel &gt; System and Maintenance &gt; Power Options</b>.</p>
(2) Media button	<p>Launches the MediaSmart DVD program.</p> <p><b>NOTE:</b> If the computer has been set up to require a logon password, you may be asked to log on to Windows. MediaSmart starts after you log on. For more information about MediaSmart, select <b>Start &gt; Help and Support</b>.</p>
(3) Volume mute button	Mutes and restores speaker sound.
(4) Volume scroll zone	Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the

Component	Description
	minus sign on the scroll zone to decrease volume, or tap the plus sign on the scroll zone to increase volume.
(5) Previous/rewind button	<ul style="list-style-type: none"> <li>Plays the previous track or chapter when the button is pressed once.</li> <li>Rewinds media when the button is pressed in combination with the <b>fn</b> key.</li> </ul>
(6) Play/pause button	Plays or pauses media.
(7) Next/fast forward button	<ul style="list-style-type: none"> <li>Plays the next track or chapter when the button is pressed once.</li> <li>Fast forwards media when pressed in combination with the <b>fn</b> key.</li> </ul>
(8) Stop button	Stops playback.
(9) Wireless button	<p>Turns the wireless feature on or off but does not create a wireless connection.</p> <p><b>NOTE:</b> To establish a wireless connection, a wireless network must already be set up.</p>
(10) Fingerprint reader (select models only)	Allows a fingerprint logon to Windows, instead of a password logon.


\*This table describes factory settings. For information about changing factory settings, refer to the user guides located in Help and Support.

## Keys

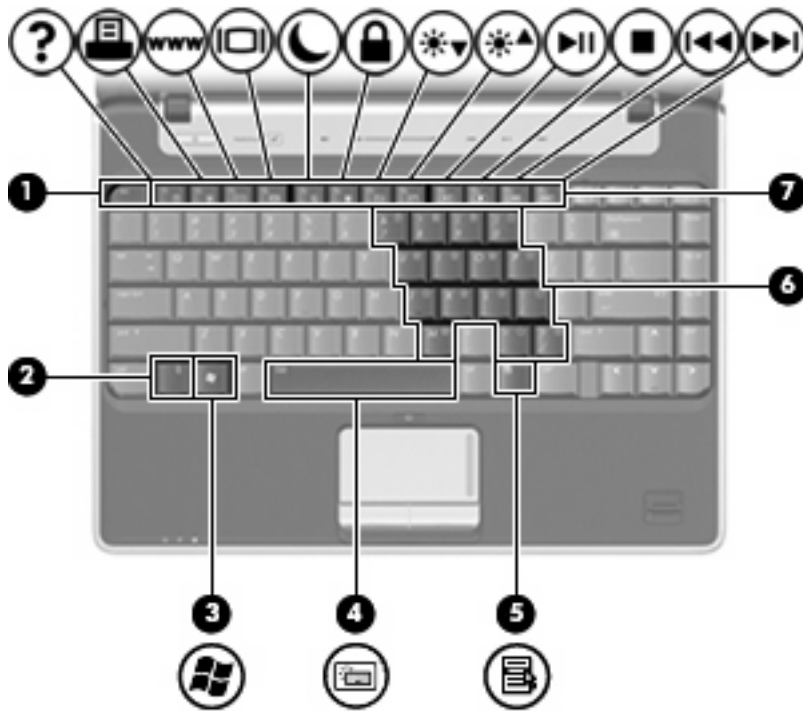


Component	Description
(1) <a href="#">esc</a> key	Displays system information when pressed in combination with the <a href="#">fn</a> key.
(2) <a href="#">fn</a> key	Executes frequently used system functions when pressed in combination with a function key or the <a href="#">esc</a> key.
(3) Windows logo key	Displays the Windows Start menu.
(4) Spacebar	Turns the keyboard lights on and off when pressed in combination with the <a href="#">fn</a> key (select models only).
(5) Windows applications key	Displays a shortcut menu for items beneath the pointer.
(6) Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad.
(7) Function keys	Execute frequently used system functions when pressed in combination with the <a href="#">fn</a> key.

## Front components

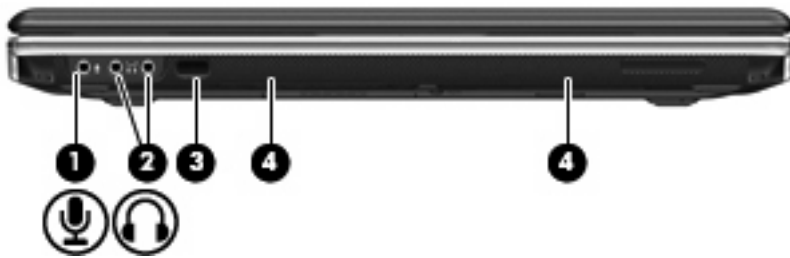 


Component	Description
(1) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(2) Audio-out (headphone) jacks (2)	Produce sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.
(3) Consumer infrared lens	Receives a signal from the HP Remote Control (provided with select models only).
(4) Speakers (2)	Produce sound.

## Right-side components

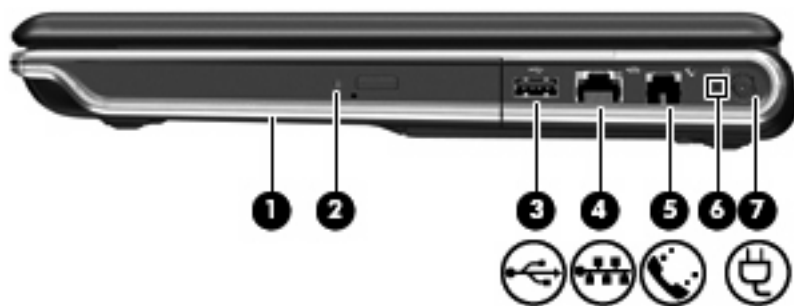 

Component	Description
(1) Optical drive	Reads optical discs and, on select models, also writes to optical discs.
(2) Optical drive light	Blinking: The optical drive is being accessed.
(3) USB port	Connects an optional USB device.
(4) RJ-45 (network) jack	Connects a network cable.
(5) RJ-11 (modem) jack	Connects a modem cable.
(6) AC adapter light	<ul style="list-style-type: none"><li>On: The computer is connected to external power.</li><li>Off: The computer is not connected to external power.</li></ul>
(7) Power connector	Connects an AC adapter.


## Left-side components

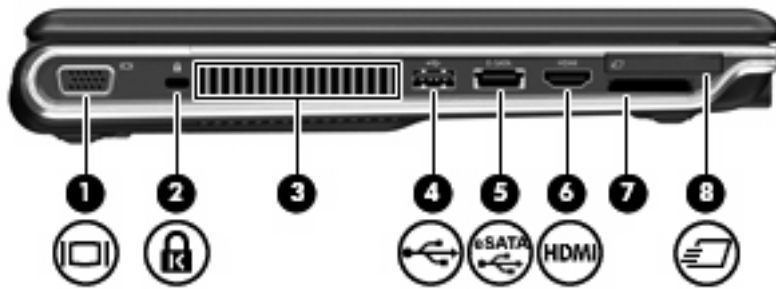 

Component	Description
(1) External monitor port	Connects an external VGA monitor or projector.
(2) Security cable slot	Attaches an optional security cable to the computer. <b>NOTE:</b> The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.
(3) Vent	Enables airflow to cool internal components. <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4) USB port	Connects an optional USB device.
(5) eSATA/USB port	Connects a high-performance eSATA component, such as an eSATA external hard drive, or connects an optional USB device.
(6) HDMI port (select models only)	Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio component. <b>NOTE:</b> Depending on your computer model, the computer may include an HDMI port or a USB port at this location.
(7) Digital Media Slot	Supports the following optional digital card formats: Secure Digital (SD) Memory Card, MultiMediaCard (MMC), Memory Stick (MS), Memory Stick Pro (MSP), xD-Picture Card (XD).
(8) ExpressCard slot	Supports an optional ExpressCard/34 module.



## Bottom components

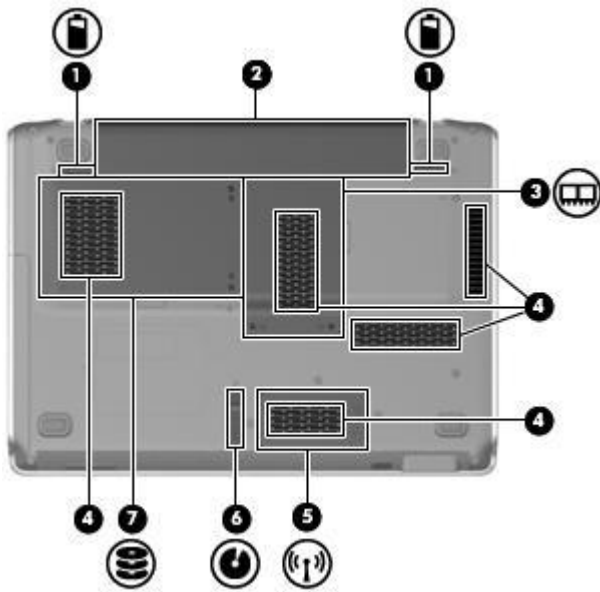 

Component	Description
(1) Battery release latches (2)	Release the battery from the battery bay.
(2) Battery bay	Holds the battery.
(3) Memory module compartment	Contains the memory module slots.
(4) Vents (5)	Enable airflow to cool internal components.
	<b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(5) Wireless module compartment	Holds a wireless LAN module.
	<b>NOTE:</b> To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.
(6) Optical drive release latch	Releases the optical drive.
(7) Hard drive bay	Holds the hard drive.

## Display components




Component	Description
(1) Internal display switch	Turns off the display and initiates Sleep if the display is closed while the power is on.
(2) Internal microphones (2) (select models only)	Record sound. <b>NOTE:</b> If there is a microphone icon next to each microphone opening, your computer has internal microphones.
(3) Webcam light	On: The webcam is in use.
(4) Webcam	Records audio and video and captures still photographs.

## Wireless antennae

On select computer models, at least 2 antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.



---

 **NOTE:** For optimal transmission, keep the areas immediately around the antennae free from obstructions.

---

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

## Additional hardware components



Component	Description
(1) Power cord*	Connects an AC adapter to an AC outlet.
(2) AC adapter	Converts AC power to DC power.
(3) Battery*	Powers the computer when the computer is not plugged into external power.

\*Batteries and power cords vary in appearance by region and country.

## 3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides important information including the following:



- Product name **(1)**. This is the product name affixed to the front of your notebook.
- Serial number (s/n) **(2)**. This is an alphanumeric identifier that is unique to each product.
- Part number/Product number (p/n) **(3)**. This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
- Model description **(4)**. This is the number you use to locate documents, drivers, and support for your notebook.
- Warranty period **(5)**. This number describes the duration (in years) of the warranty period for this computer.

Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.

- Microsoft® Certificate of Authenticity—Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label—Provides regulatory information about the modem and lists the agency approval markings required by some of the countries or regions in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the hard drive bay.

---

# Index

- A**
  - AC adapter light, identifying 9
  - AC adapter, identifying 14
  - antennae 13
  - applications key, Windows 7
  - audio-in (microphone) jack, identifying 8
  - audio-out (headphone) jacks, identifying 8
- B**
  - battery bay, identifying 11
  - battery light, identifying 4
  - battery release latches, identifying 11
  - battery, identifying 14
  - bays
    - battery 11, 15
    - hard drive 11
  - buttons
    - media 5
    - next/fast forward 6
    - play/pause 6
    - power 5
    - previous/rewind 6
    - stop 6
    - TouchPad 2
    - TouchPad on/off 2
    - volume mute 5
    - wireless 6
- C**
  - caps lock light, identifying 3
  - Certificate of Authenticity label 15
  - compartments
    - memory module 11
    - wireless module 11
  - components
    - additional hardware 14
    - bottom 11
    - display 12
    - front 8
    - left-side 10
    - right-side 9
    - top 2
  - connector, power 9
  - cord, power 14
- D**
  - Digital Media Slot, identifying 10
  - drive light, identifying 4
- E**
  - eSATA/USB port, identifying 10
  - esc key, identifying 7
  - ExpressCard slot, identifying 10
  - external monitor port, identifying 10
- F**
  - fingerprint reader, identifying 6
  - fn key, identifying 7
  - function keys, identifying 7
- H**
  - hard drive bay, identifying 11
  - HDMI port, identifying 10
  - headphone (audio-out) jacks 8
- I**
  - infrared lens, identifying 8
  - integrated webcam light, identifying 12
  - internal microphones, identifying 12
- J**
  - jacks
    - audio-in (microphone) 8
    - audio-out (headphone) 8
    - RJ-11 (modem) 9
    - RJ-45 (network) 9
- K**
  - keypad keys, identifying 7
  - keys
    - esc 7
    - fn 7
    - function 7
    - keypad 7
    - Windows applications 7
    - Windows logo 7
- L**
  - labels
    - Microsoft Certificate of Authenticity 15
    - modem approval 15
    - regulatory 15
    - service tag 15
  - latch, battery release 11
  - latches
    - optical drive release 11
  - lights
    - battery 4
    - caps lock 3
    - drive 4
    - mute 3
    - num lock 3
    - optical drive 9
    - power 3, 9
    - TouchPad 2
    - volume down 3
    - volume mute 3
    - volume up 3
    - webcam 12
    - wireless 3

## M

media activity buttons,  
identifying 6  
media button, identifying 5  
memory module compartment,  
identifying 11  
microphone (audio-in) jack 8  
Microsoft Certificate of Authenticity  
label 15  
modem approval label 15  
monitor port, external 10  
mute button, identifying 5  
mute light, identifying 3

## N

next/fast forward button,  
identifying 6  
num lock light, identifying 3

## O

operating system  
Microsoft Certificate of  
Authenticity label 15  
Product Key 15  
optical drive light, identifying 9  
optical drive release latch,  
identifying 11  
optical drive, identifying 9

## P

play/pause button, identifying 6  
ports  
eSATA/USB 10  
external monitor 10  
HDMI 10  
USB 9, 10  
power button, identifying 5  
power connector, identifying 9  
power cord, identifying 14  
power lights, identifying 3  
previous/rewind button,  
identifying 6  
Product Key 15  
product name and number,  
computer 15

## R

regulatory information  
modem approval label 15  
regulatory label 15

RJ-11 (modem) jack,  
identifying 9  
RJ-45 (network) jack,  
identifying 9

## S

scrolling regions, TouchPad 2  
security cable slot, identifying 10  
serial number, computer 15  
service tag 15  
slots  
Digital Media 10  
ExpressCard 10  
memory module 11  
security cable 10  
speakers, identifying 8  
stop button, identifying 6

## T

TouchPad  
buttons 2  
identifying 2  
scrolling regions 2  
TouchPad light, identifying 2  
TouchPad on/off button 2  
traveling with the computer  
modem approval label 15

## U

USB port, identifying 10  
USB ports, identifying 9

## V

vents, identifying 10, 11  
volume down light, identifying 3  
volume mute button, identifying 5  
volume mute light, identifying 3  
volume scroll zone, identifying 5  
volume up light, identifying 3

## W

webcam, identifying 12  
Windows applications key,  
identifying 7  
Windows logo key, identifying 7  
wireless antennae 13  
wireless button, identifying 6  
wireless light, identifying 3  
wireless module compartment,  
identifying 11

