

Notebook Tour

User Guide

© Copyright 2008 Hewlett-Packard
Development Company, L.P.

Microsoft and Windows are U.S. registered
trademarks of Microsoft Corporation.
Bluetooth is a trademark owned by its
proprietor and used by Hewlett-Packard
Company under license. SD Logo is a
trademark of its proprietor.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

First Edition: September 2008

Document Part Number: 489854-001

Product notice

This user guide describes features that are
common to most models. Some features
may not be available on your computer.

Safety warning notice

-
- ⚠ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
-

Table of contents

1 Identifying hardware

2 Components

Top components	3
Pointing devices	3
Lights	4
Buttons, switches and fingerprint reader	6
Keys	8
Display	9
Front components	10
Rear components	11
Right-side components	12
Left-side components	13
Bottom components	14
Wireless antennae	15
Additional hardware components	16

3 Labels

Index	19
-------------	----

1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:


1. Select **Start > My Computer**.
2. In the left pane of the System Tasks window, select **View system information**.
3. Select **Hardware** tab > **Device Manager**.

You can also add hardware or modify device configurations using Device Manager.

2 Components

Top components


Pointing devices

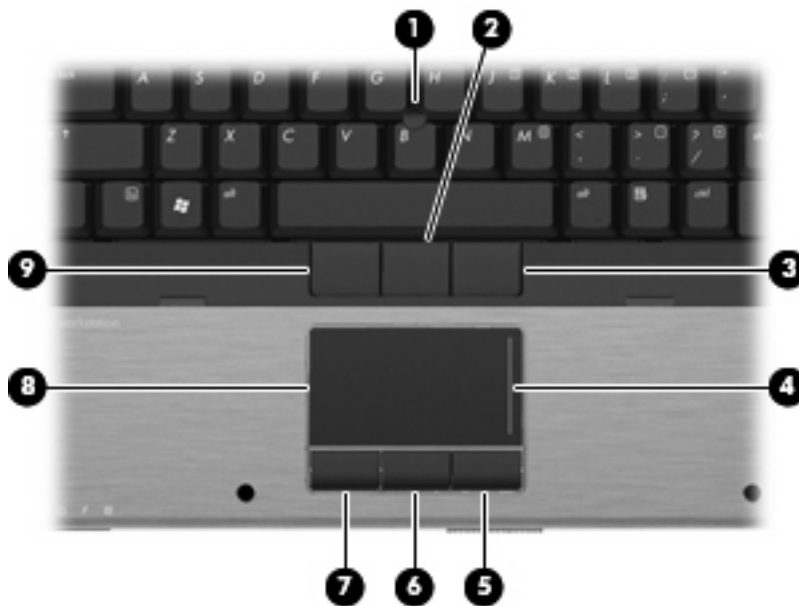

Component	Description
(1) Pointing stick	Moves the pointer and selects or activates items on the screen.
(2) Center pointing stick button	Functions like the center button on an external mouse.
(3) Right pointing stick button	Functions like the right button on an external mouse.
(4) TouchPad scroll zone	Scrolls up or down.
(5) Right TouchPad button	Functions like the right button on an external mouse.
(6) Center TouchPad button	Functions like the center button on an external mouse.
(7) Left TouchPad button	Functions like the left button on an external mouse.
(8) TouchPad	Moves the pointer and selects or activates items on the screen.
(9) Left pointing stick button	Functions like the left button on an external mouse.

This table describes factory settings. To view or change pointing device preferences, select **Start > Control Panel > Printers and Other Hardware > Mouse**.

Lights

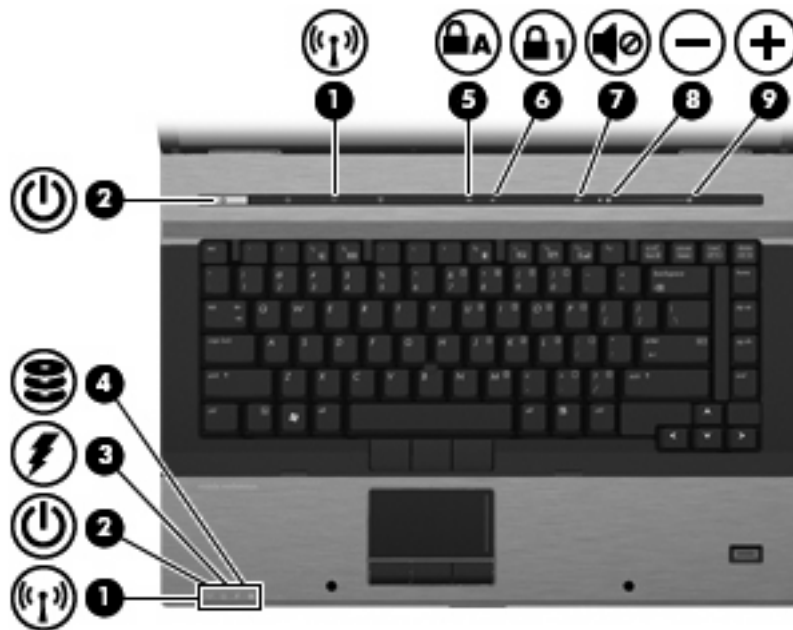


Component	Description
(1) Wireless lights (2)†	<ul style="list-style-type: none"> Turquoise: An integrated wireless device, such as a wireless local area network (WLAN) device, the HP Mobile Broadband, and/or a Bluetooth® device, is on. Amber: All wireless devices are off.
(2) Power lights (2)*	<ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Standby state. Off: The computer is off or in Hibernation.
(3) Battery light	<ul style="list-style-type: none"> Amber: A battery is charging. Aqua white: A battery is close to full charge capacity. Blinking amber: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly. Off: If the computer is plugged into an external power source, the light turns off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.
(4) Drive light	<ul style="list-style-type: none"> Turquoise: The hard drive or optical drive is being accessed. Amber: HP 3D DriveGuard has temporarily parked the internal hard drive.
(5) Caps lock light	On: Caps lock is on.
(6) Num lock light	On: Num lock is on or the embedded numeric keypad is enabled.

Component	Description
(7) Volume mute light	<ul style="list-style-type: none"> • Off: Computer sound is on. • On: Computer sound is off.
(8) Volume down light	Blinking: The volume scroll zone is being used to decrease speaker volume.
(9) Volume up light	Blinking: The volume scroll zone is being used to increase speaker volume.

*The 2 power lights display the same information. The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.

†The 2 wireless lights display the same information. The light on the wireless button is visible only when the computer is open. The wireless light on the front of the computer is visible whether the computer is open or closed.


Buttons, switches and fingerprint reader

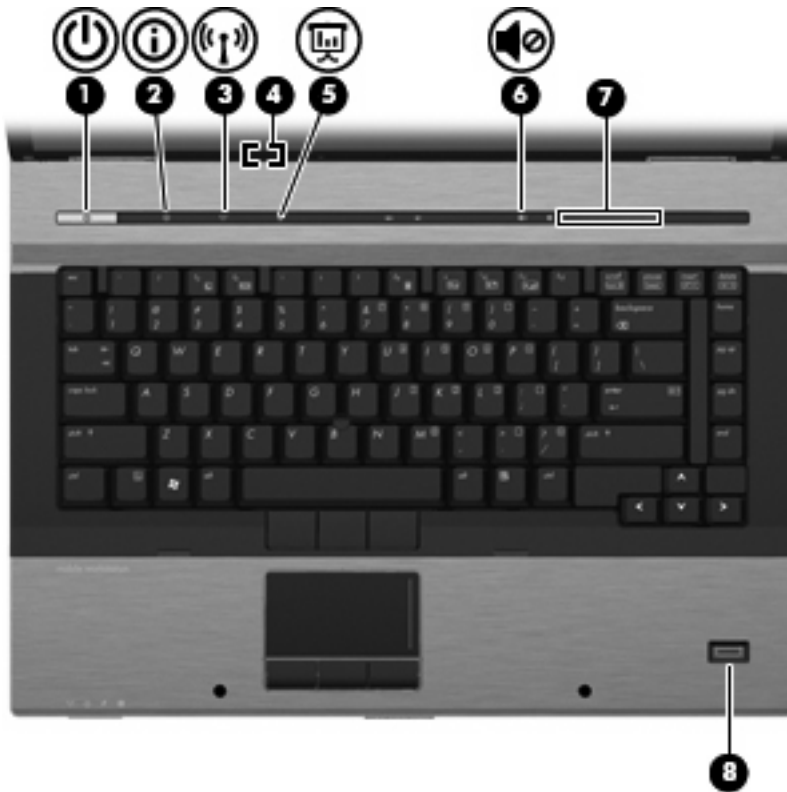


Component	Description
(1) Power button	<ul style="list-style-type: none"> When the computer is off, press the button to turn on the computer. When the computer is on, press the button to shut down the computer. When the computer is in the Standby state, press the button briefly to exit Standby. When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select Start > Control Panel > Performance and Maintenance > Power Options.</p>
(2) Info button	Launches Info Center, which enables you to open various software solutions.
(3) Wireless button	Turns the wireless feature on or off, but does not establish a wireless connection.
(4) Internal display switch	Turns off the display if the display is closed while the power is on.

Component	Description
(5) Presentation button	Starts the presentation feature.
(6) Volume mute button	Mutes and restores speaker sound.
(7) Volume scroll zone	Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also press the left side of the volume scroll zone to decrease volume, or press the right side of the volume scroll zone to increase volume.
(8) HP Fingerprint Sensor (fingerprint reader)	Allows a fingerprint logon to Windows, instead of a password logon.

Keys

 **NOTE:** Your computer may look slightly different from the illustration in this section.

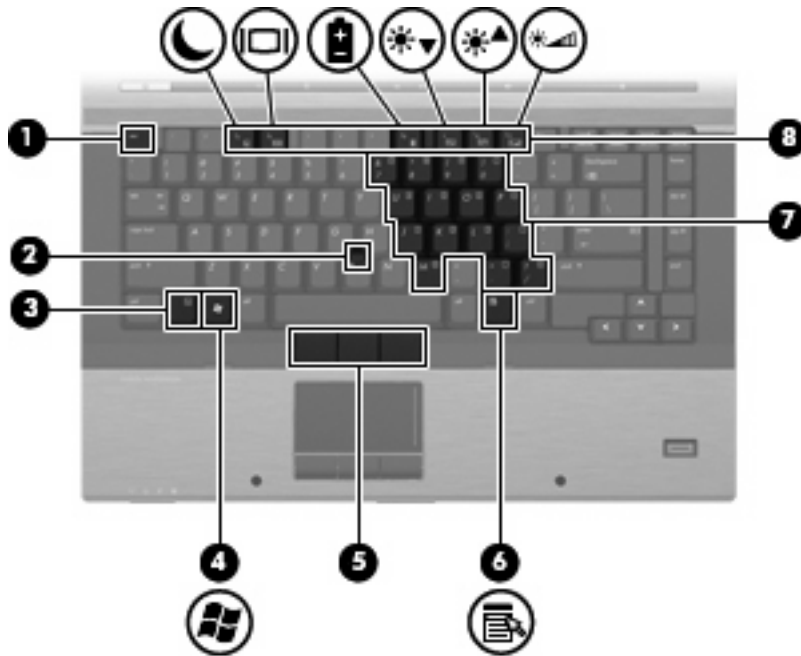


Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) Pointing stick	Moves the pointer and selects or activates items on the screen.
(3) <code>fn</code> key	Executes frequently used system functions when pressed in combination with a function key or the <code>esc</code> key.
(4) Windows logo key	Displays the Windows Start menu.
(5) Pointing stick buttons	Function like the buttons on an external mouse.
(6) Windows applications key	Displays a shortcut menu for items beneath the pointer.
(7) Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad.
(8) Function keys	Execute frequently used system functions when pressed in combination with the <code>fn</code> key.

Display



Component	Description
(1) Internal display switch	Turns off the display if the display is closed while the power is on.
(2) Internal microphones (2)	Records sound.
(3) Webcam	Records audio and video and captures still photographs.
(4) Webcam light	On: The integrated camera is in use.
(5) Keyboard light	Illuminates the keyboard in low-light conditions when the keyboard light button is pressed.
(6) Keyboard light button	Opens and turns on the keyboard light.
(7) Ambient light sensor	Automatically adjusts the display brightness based on the lighting conditions in your environment.

Front components

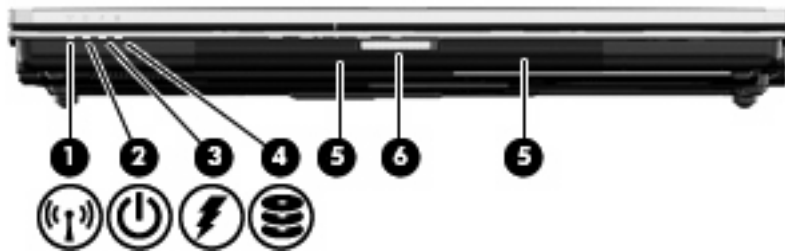


Component	Description
(1) Wireless light	<ul style="list-style-type: none"> Turquoise: An integrated wireless device, such as a wireless local area network (WLAN) device, the HP Mobile Broadband, and/or a Bluetooth device, is on. Amber: All wireless devices are off.
(2) Power light	<ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Standby state. Off: The computer is off or in Hibernation.
(3) Battery light	<ul style="list-style-type: none"> Amber: A battery is charging. Turquoise: A battery is close to full charge capacity. Blinking amber: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly. Off: If the computer is plugged into an external power source, the light turns off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.
(4) Drive light	<ul style="list-style-type: none"> Blinking turquoise: The hard drive or optical drive is being accessed. Amber (select models only): HP 3D DriveGuard has temporarily parked the hard drive.
(5) Speakers	Produce sound.
(6) Display release latch	Opens the computer.

Rear components



Component	Description
(1) Power connector	Connects an AC adapter.
(2) External monitor port	Connects an external VGA monitor or projector.


Right-side components

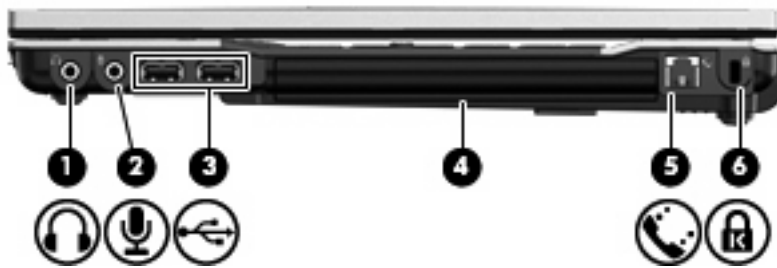

Component	Description
(1) Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.
(2) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(3) USB ports (2) (select models only)	Connect optional USB devices.
(4) Optical drive	Reads optical discs and, on select models, also writes to optical discs.
(5) RJ-11 (modem) jack	Connects a modem cable.
(6) Security cable slot	Attaches an optional security cable to the computer.


NOTE: The security cable is designed to act as a deterrent, but may not prevent the computer from being mishandled or stolen.

Left-side components

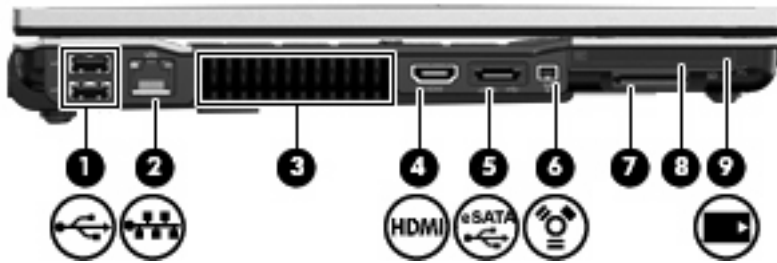

Component	Description
(1) USB ports (2)	Connect optional USB devices.
(2) RJ-45 (network) jack	Connects a network cable. NOTE: The RJ-45 (network) jack provides Gigabit Ethernet functionality.
(3) Vent	Enables airflow to cool internal components. CAUTION: To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4) HDMI port	Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio component.
(5) eSATA port	Connects an eSATA device.
(6) 1394 port	Connects an optional IEEE 1394 or 1394a device, such as a camcorder.
(7) Media Card Reader	Supports the following optional digital card formats: MultiMedia Card (MMC) and Secure Digital (SD) Memory Card. Memory Stick Duo (MS Duo), Memory Stick (MS), Memory Stick Pro (MSpro), and xD-Picture Card.
(8) Smart card reader	Supports optional smart cards.
(9) ExpressCard slot	Supports ExpressCards.

Bottom components

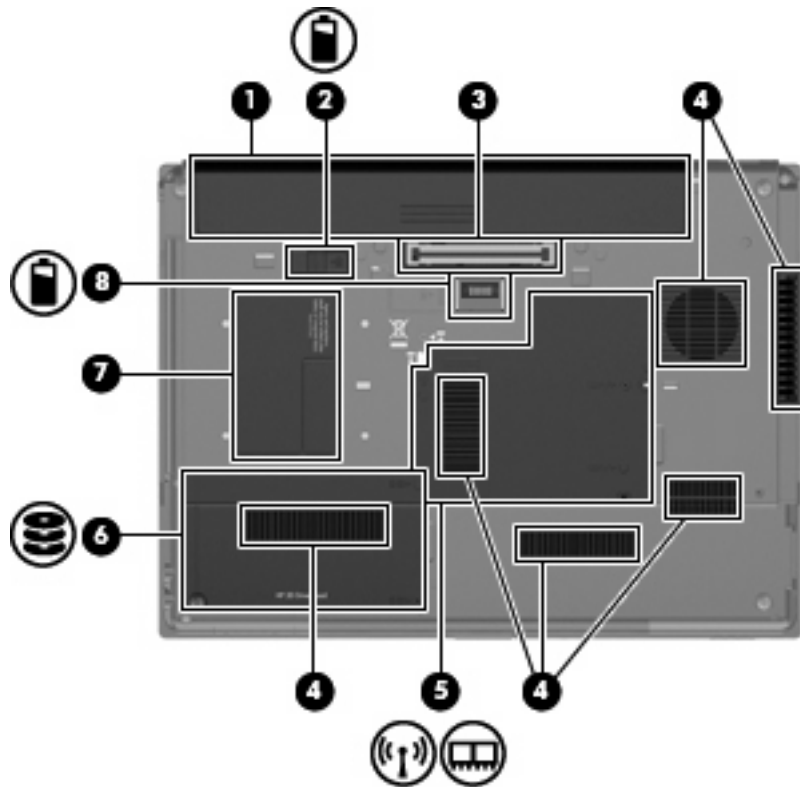

Component	Description
(1) Battery bay	Holds the battery and a subscriber identity module (SIM). The SIM slot is located inside the battery bay.
(2) Docking connector	Connects an optional docking device.
(3) Vents (6)	Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4) Memory module	Contains the primary and expansion memory module slots and an HP Mobile Broadband Module (select models only). CAUTION: To prevent an unresponsive system and the display of a warning message, replace the device with only a WLAN module authorized for use in the computer by the governmental agency that regulates wireless devices in your country. If you replace the device and then receive a warning message, remove the device to restore computer functionality, and then contact technical support through Help and Support.
(5) Hard drive bay	Holds the hard drive.
(6) Accessory battery connector	Connects an optional accessory battery.
(7) Business card holder	Holds an optional business card.
(8) Battery release latch	Releases the battery from the battery bay.

Wireless antennae



Component	Description
(1) WWAN antennae (2)*	Send and receive wireless signals to communicate with wireless wide-area networks (WWAN).
(2) WLAN antennae (3)*	Send and receive wireless signals to communicate with wireless local area networks (WLAN).

*The antennae are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennae free from obstructions.

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

Additional hardware components




Component	Description
(1) Power cord*	Connects an AC adapter to an AC outlet.
(2) Battery*	Powers the computer when the computer is not plugged into external power.
(3) AC adapter	Converts AC power to DC power.
(4) Modem cable (select models only)*	Connects the internal modem to an RJ-11 telephone jack or to a country- or region-specific modem cable adapter.
(5) Country- or region-specific modem cable adapter (select models only)	Adapts the modem cable to a non-RJ-11 telephone jack.

*Modem cables, batteries, and power cords vary in appearance by country or region.

3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides important information including:

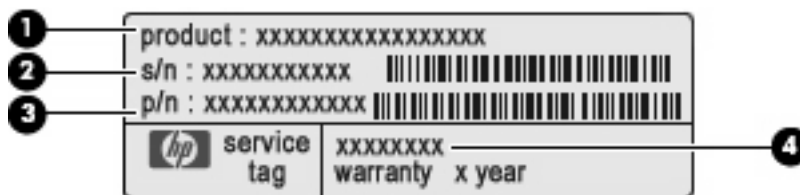

- Product Name **(1)**. This is the product name affixed to the front of your notebook.
- Serial Number (s/n) **(2)**. This is an alphanumeric number that is unique to each product.
- Part Number/Product Number (p/n) **(3)**. This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
- Model Description **(4)**. This is the number you need to locate documents, drivers, and support for your notebook.

Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.

- Microsoft® Certificate of Authenticity—Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label—Provides regulatory information about the modem and lists the agency approval markings required by some of the countries in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the memory module compartment.
- Wireless certification label(s) (select models only) - Provide information about optional wireless devices and the approval markings of some of the countries and regions in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device, an HP Mobile Broadband Module, or an optional Bluetooth® device. Wireless certification labels are affixed inside the memory module compartment.

- SIM (subscriber identity module) label (select models only)—Provides the ICCID (Integrated Circuit Card Identifier) of your SIM. This label is located inside the battery bay.
- HP Mobile Broadband serial number label (select models only)—Provides the serial number of your HP Mobile Broadband. This label is located inside the memory module compartment.

Index

Symbols/Numerics

1394 port, identifying 13

A

AC adapter, identifying 16
accessory battery connector,
identifying 14
ambient light sensor, identifying 9
applications key, Windows 8
audio-in (microphone) jack,
identifying 12
audio-out (headphone) jack,
identifying 12

B

battery bay 14, 17
battery light, identifying 4, 10
battery, identifying 16
bays
 battery 14, 17
 hard drive 14
Bluetooth label 17
business card holder,
identifying 14
buttons
 info 6
 keyboard light 9
 pointing stick 3, 8
 power 6
 presentation 7
 TouchPad 3
 volume mute 7
 wireless 6

C

caps lock light, identifying 4
Certificate of Authenticity label 17
compartment, memory
 module 14

components

 additional hardware 16
 bottom 14
 front 10
 left-side 13
 rear 11
 right-side 12
 top 3
 wireless antennae 15
cord, power 16
country-specific modem cable
 adapter, identifying 16

D

display release latch,
 identifying 10
display switch, identifying 6
docking connector, identifying 14
drive light, identifying 4, 10

E

eSATA port, identifying 13
esc key, identifying 8
external monitor port,
 identifying 11

F

fingerprint sensor, identifying 7
fn key, identifying 8
function keys, identifying 8

H

hard drive bay, identifying 14
HDMI port, identifying 13
headphone (audio-out) jack 12
HP Fingerprint sensor,
 identifying 7
HP Mobile Broadband serial
 number label 18

I

IEEE 1394 port, identifying 13
info button, identifying 6
internal display switch,
 identifying 6, 9
internal microphone, identifying 9

J

jacks
 audio-in (microphone) 12
 audio-out (headphone) 12
 RJ-11 (modem) 12
 RJ-45 (network) 13

K

keyboard light button,
 identifying 9
keyboard light, identifying 9
keypad keys, identifying 8
keys
 esc 8
 fn 8
 function 8
 keypad 8
 Windows applications 8
 Windows logo 8

L

labels
 Bluetooth 17
 HP Broadband 17
 Microsoft Certificate of
 Authenticity 17
 modem approval 17
 regulatory 17
 service tag 17
 SIM 18
 wireless certification 17
 WLAN 17

- lights
 - battery 4, 10
 - caps lock 4
 - drive 4, 10
 - mute 5
 - num lock 4
 - power 4, 10
 - volume down 5
 - volume mute 5
 - volume up 5
 - webcam 9
 - wireless 4, 10
- M**
 - memory module compartment, identifying 14
 - microphone (audio-in) jack 12
 - Microsoft Certificate of Authenticity label 17
 - modem approval label 17
 - modem cable adapter, identifying 16
 - modem cable, identifying 16
 - monitor port, external 11
 - mute button, identifying 7
 - mute light, identifying 5
- N**
 - num lock light, identifying 4
- O**
 - operating system
 - Microsoft Certificate of Authenticity label 17
 - Product Key 17
 - optical drive, identifying 12
- P**
 - pointing devices, identifying 3
 - pointing stick buttons, identifying 3, 8
 - pointing stick, identifying 3, 8
 - ports
 - 1394 13
 - eSATA 13
 - external monitor 11
 - HDMI 13
 - USB 12, 13
 - power button, identifying 6
 - power connector, identifying 11
 - power cord, identifying 16
 - power light, identifying 10
 - power lights, identifying 4
 - presentation button, identifying 7
 - Product Key 17
 - product name and number, computer 17
- R**
 - regulatory information
 - modem approval label 17
 - regulatory label 17
 - wireless certification labels 17
 - RJ-11 (modem) jack, identifying 12
 - RJ-45 (network) jack, identifying 13
- S**
 - scrolling regions, TouchPad 3
 - serial number, computer 17
 - service tag 17
 - SIM label 18
 - slots
 - ExpressCard 13
 - Media Card Reader 13
 - memory module 14
 - security cable 12
 - security cable slot, identifying 12
 - smart card reader 13
 - WWAN 14
 - speaker, identifying 10
- T**
 - TouchPad
 - scrolling regions 3
 - TouchPad buttons, identifying 3
 - TouchPad, identifying 3
 - traveling with the computer
 - modem approval label 17
 - wireless certification labels 17
- U**
 - USB ports, identifying 12, 13
- V**
 - vents, identifying 13, 14
 - volume down light, identifying 5
 - volume mute button, identifying 7
 - volume mute light, identifying 5
 - volume scroll zone, identifying 7
 - volume up light, identifying 5
- W**
 - webcam light, identifying 9
 - webcam, identifying 9
 - Windows applications key, identifying 8
 - Windows logo key, identifying 8
 - wireless button, identifying 6
 - wireless certification label 17
 - wireless light, identifying 4, 10
 - WLAN antennae, identifying 15
 - WLAN device 17
 - WLAN label 17
 - WWAN antenna, identifying 15

