

# HP Mobile Remote Control (Select Models Only) User Guide

© Copyright 2008 Hewlett-Packard  
Development Company, L.P.

Windows and Windows Vista are U.S.  
registered trademarks of Microsoft  
Corporation.

The information contained herein is subject  
to change without notice. The only  
warranties for HP products and services are  
set forth in the express warranty statements  
accompanying such products and services.  
Nothing herein should be construed as  
constituting an additional warranty. HP shall  
not be liable for technical or editorial errors  
or omissions contained herein.

First Edition: August 2008

Document Part Number: 492639-001

---

# Table of contents

1 Component functions

2 Button quick reference

3 Inserting or replacing the battery


4 Troubleshooting

Index ..... 8



---


# 1 Component functions

 **NOTE:** Your computer may include an updated remote control that functions differently than described in this guide. For the latest user guide for your remote control, go to the product support page for your computer at <http://www.hp.com/support/>.

The infrared lens on the remote control links the remote control to the computer. The link requires a line-of-sight path between the infrared lens on the remote control and the infrared lens on the computer.

Things to remember:

- The remote control operates within the Windows® operating system, within MediaSmart (select computer models only) and within QuickPlay (select computer models only). ScrollSmart dial and button functions may vary, depending on the active program.

 **NOTE:** For information on using MediaSmart, refer to the MediaSmart software Help.


- Some remote control buttons perform the same functions as computer buttons. For example, the power button on the remote control and the power button on the computer have the same functions and can be used interchangeably.
- Some remote control buttons perform the same functions as computer hotkeys. Refer to the computer user guides for information on supported hotkeys.







To access the user guides, select **Start > Help and Support > User Guides**.



- Other remote control buttons provide functions that are not duplicated by computer buttons or preset hotkeys.







## 2 Button quick reference

This section provides information on the button functions of the remote control.

 **NOTE:** The position of the buttons may vary, depending on your remote control model.

Button	Function
Power 	<ul style="list-style-type: none"><li>When the computer is on, press the button to emulate the computer power button. Refer to the computer user guides for information.</li></ul> <p>To access the user guides, select <b>Start &gt; Help and Support &gt; User Guides</b>.</p> <p><b>NOTE:</b> The remote control cannot be used when the computer is off.</p> <ul style="list-style-type: none"><li>When the computer is in the Sleep state, briefly press the button to exit Sleep.</li><li>When the computer is in Hibernation, briefly press the button to exit Hibernation.</li></ul>
DVD 	<ul style="list-style-type: none"><li>If a DVD is playing, press the button to open the DVD disc menu.</li><li>If a DVD is not playing, press the button to open the default DVD player.</li></ul> <p><b>NOTE:</b> If the computer has been set up to require a logon password, you may be asked to log on to Windows.</p> <p><b>NOTE:</b> The DVD button is included on select remote controls only.</p>
MediaSmart 	Press the button to launch MediaSmart (for models with MediaSmart preinstalled) or QuickPlay (for models with QuickPlay preinstalled).
Switch screens 	Press the button to switch the computer image between the computer display and an external display.
Windows Media Center 	If the computer uses Windows Vista® Premium or Windows Vista Ultimate, press the button to open the Windows Media Center main menu. The Windows Media Center button has no function with other operating systems.
Channel/page up 	<ul style="list-style-type: none"><li>Press to emulate the <b>pg up</b> key on a keyboard.</li><li>Press to change channels in ascending order.</li></ul>
Stop	Press the button to stop the current media activity.

Button	Function
	
Rewind	<ul style="list-style-type: none"> <li>Press the button to rewind the selected media.</li> </ul> <p><b>NOTE:</b> The button does not work with some media files.</p> <ul style="list-style-type: none"> <li>Press the rewind button and then press the play button to activate play.</li> </ul>
	
Play/pause	<ul style="list-style-type: none"> <li>When media is not playing, press the button to play the selected media.</li> <li>When media is playing, press the button to pause the media.</li> </ul>
	
Fast-forward	<ul style="list-style-type: none"> <li>Press the button to fast-forward the selected media.</li> </ul> <p><b>NOTE:</b> The button does not work with some media files.</p> <ul style="list-style-type: none"> <li>Press the fast-forward button and then press the play button to activate play.</li> </ul>
	
Channel/ page down	<ul style="list-style-type: none"> <li>Press to emulate the <code>pg dn</code> key on a keyboard.</li> <li>Press to change channels in descending order.</li> </ul>
	
Previous	Press the button to jump from one area, menu, or button to the previous one.
	
Up	Navigation. Press the button to move up between menus, windows, or activities.
	
Next	Press the button to jump from one area, menu, or button to the next one.
	
Left	Navigation. Press the button to move left between menus, windows, or activities.
	
OK	Navigation: Press the OK button to select the desired action. The OK button functions like the <code>enter</code> key on the computer keyboard.
	
Right	Navigation. Press the button to move right between menus, windows, or activities.
	
Back	Press the button to emulate the “back” function of the <code>backspace</code> key in the active program.

Button	Function
	
Down	Navigation. Press the button to move down between menus, windows, or activities.
	
Settings	Press to display system information. The button may also be used to display settings menus for some multimedia software.
	
Volume down	Press the button to decrease speaker volume.
	
Mute	<ul style="list-style-type: none"> <li>• Press the button to mute speaker volume.</li> <li>• If the volume is muted, press the button to restore speaker volume.</li> </ul>
	
Volume up	Press the button to increase speaker volume.
	




---

## 3 Inserting or replacing the battery

⚠ **WARNING!** Dispose of used batteries according to the instructions in the *Regulatory, Safety and Environmental Notices* located on a user guide disc or in Help and Support. To access the notices, select **Start > Help and Support > User Guides**.


To insert or replace the battery in the remote control, follow these instructions:

1. On the back of the remote control, lift the battery compartment cover (1) and remove it (2).

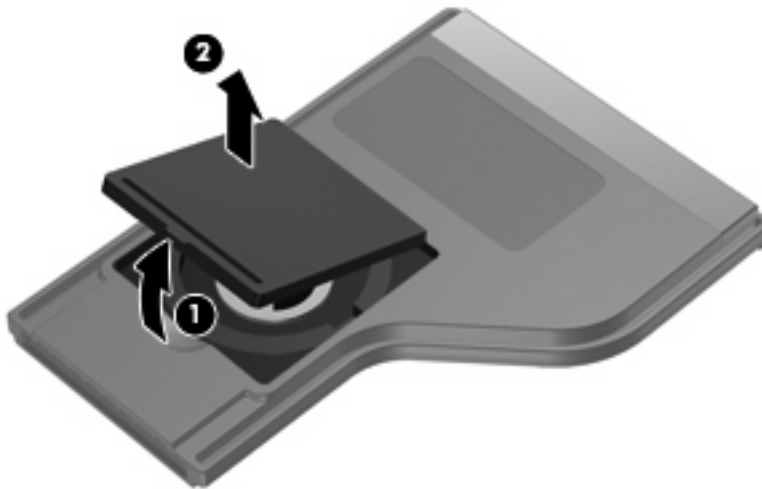

2. With the positive side of the battery facing up, insert the battery into the compartment (1).

3. Align the battery compartment cover (2) with the battery compartment and press down to close the cover (3).

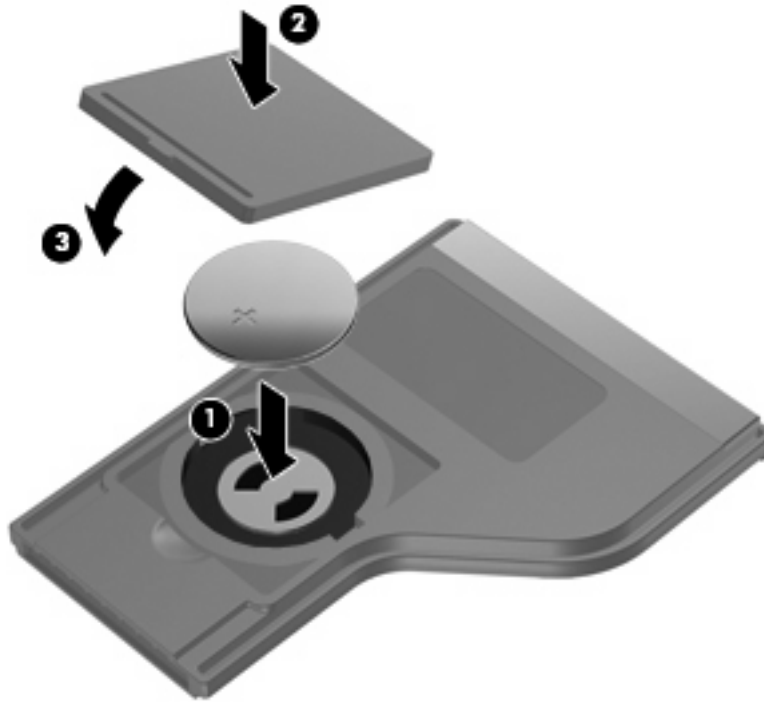

---

## 4 Troubleshooting

Try the following solutions if your remote control does not function properly:

- Be sure that you have a clear line of sight from the remote control to the infrared port on the computer or optional docking device.
- Be sure that you are within range of the infrared port on the computer or optional docking device.
- Be sure that the battery is properly installed and has a charge. Replace the battery if necessary.
- Be sure that you are using the remote control with a supported computer or optional docking device.

---

# Index

- B**
  - back button 3
  - battery, inserting 5
  - buttons
    - back 3
    - channel/page down 3
    - channel/page up 2
    - down 4
    - DVD 2
    - fast-forward 3
    - information 4
    - left 3
    - MediaSmart 2
    - mute 4
    - next 3
    - OK 3
    - play/pause 3
    - power 2
    - previous 3
    - quick reference 2
    - rewind 3
    - right 3
    - stop 2
    - switch screens 2
    - up 3
    - volume down 4
    - volume up 4
    - Windows Media Center 2
- C**
  - channel/page down button 3
  - channel/page up button 2
- D**
  - down button 4
  - DVD button 2
- F**
  - fast-forward button 3
- I**
  - information button 4
  - infrared lens 1
  - inserting battery 5
- L**
  - left button 3
- M**
  - MediaSmart 1
  - MediaSmart button 2
  - mute button 4
- N**
  - next button 3
- O**
  - Ok button 3
- P**
  - play/pause button 3
  - power button 2
  - previous button 3
- R**
  - rewind button 3
  - right button 3
- S**
  - stop button 2
  - switch screens button 2
- T**
  - troubleshooting 7
- U**
  - up button 3
- V**
  - volume down button 4
  - volume up button 4
- W**
  - Windows Media Center button 2

