

Notebook Tour

User Guide

© Copyright 2008 Hewlett-Packard
Development Company, L.P.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: November 2008

Document Part Number: 506019-001

Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.

Safety warning notice

-
- ⚠ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
-

Table of contents

1 Identifying hardware

2 Components

Top components	3
TouchPad	3
Lights	4
Buttons, speakers and fingerprint reader	5
Keys	7
Front components	8
Rear components	9
Right-side components	10
Left-side components	11
Bottom components	12
Display components	13
Cleaning the display	14
Wireless antennae (select models only)	15
Additional hardware components	16

3 Labels

Index	19
-------------	----

1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:


1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.

 **NOTE:** Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

2 Components

Top components


TouchPad



Component	Description
(1) TouchPad light	<ul style="list-style-type: none">• White: TouchPad is enabled.• Amber: TouchPad is disabled.
(2) TouchPad*	Moves the pointer and selects or activates items on the screen.
(3) Left TouchPad button*	Functions like the left button on an external mouse.
(4) TouchPad on/off button	Enables/disables the TouchPad.
(5) TouchPad scroll zone	Scrolls up or down.
(6) Right TouchPad button*	Functions like the right button on an external mouse.

*This table describes factory settings. To view and change TouchPad preferences, select **Start > Control Panel > Hardware and Sound > Mouse**.

Lights



Component	Description
(1) Power lights* (2)	<ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state. Off: The computer is off or in Hibernation.
(2) Battery light	<ul style="list-style-type: none"> On: A battery is charging. Blinking: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly. Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.
(3) Drive light	<ul style="list-style-type: none"> Blinking: The hard drive or optical drive is being accessed. Amber: HP ProtectSmart has temporarily parked the hard drive.
(4) Caps lock light	On: Caps lock is on.
(5) Volume mute light	<ul style="list-style-type: none"> White: Computer sound is turned on. Amber: Computer sound is turned off.
(6) Volume down light	On: The volume scroll zone is being used to decrease speaker volume.
(7) Volume up light	On: The volume scroll zone is being used to increase speaker volume.

Component	Description
(8) Wireless light	<ul style="list-style-type: none"> Blue: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is turned on. Amber: All wireless devices are turned off.
(9) Num lock light	On: Num lock is on or the integrated numeric keypad is enabled.

*The 2 power lights display the same information. The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.

Buttons, speakers and fingerprint reader



Component	Description
(1) Speakers (2)	Produce sound.
(2) Power button*	<ul style="list-style-type: none"> When the computer is off, press the button briefly to turn on the computer. When the computer is on, press the button briefly to initiate Sleep. When the computer is in the Sleep state, press the button briefly to exit Sleep. When the computer is in Hibernation, press the button briefly to exit Hibernation.

Component	Description
	<p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select Start > Control Panel > System and Maintenance > Power Options.</p>
(3) MediaSmart button	Launches the HP MediaSmart program when the computer is turned on.
(4) Volume mute button	Mutes and restores speaker sound.
(5) Volume scroll zone	Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the minus sign on the scroll zone to decrease volume, or tap the plus sign on the scroll zone to increase volume.
(6) Previous/rewind button	<ul style="list-style-type: none"> • Plays the previous track or chapter when the button is pressed once. • Rewinds media when the button is pressed simultaneously with the fn key.
(7) Play/pause button	Plays or pauses the disc.
(8) Next/fast forward button	<ul style="list-style-type: none"> • Plays the next track or chapter when the button is pressed once. • Fast forwards media when pressed simultaneously with the fn key.
(9) Stop button	Stops playback.
(10) Wireless button	<p>Turns the wireless feature on or off, but does not create a wireless connection.</p> <p>NOTE: A wireless network must be set up in order to establish a wireless connection.</p>
(11) Fingerprint reader (select models only)	Allows a fingerprint logon to Windows, instead of a password logon.

*This table describes factory settings. For information about changing factory settings, refer to the user guides located in Help and Support.

Keys



Component	Description
(1) <code>esc</code> key	Displays system information about your computer when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes frequently used system functions when pressed in combination with a function key or the <code>esc</code> key.
(3) Windows logo key	Displays the Windows Start menu.
(4) Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5) Integrated numeric keypad keys	Can be used like the keys on an external numeric keypad.
(6) Function keys	Execute frequently used system functions when pressed in combination with the <code>fn</code> key.

Front components



Component	Description
(1) Power light	<ul style="list-style-type: none">On: The computer is on.Blinking: The computer is in the Sleep state.Off: The computer is off or in Hibernation.
(2) Battery light	<ul style="list-style-type: none">On: A battery is charging.Blinking: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly.Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.
(3) Drive light	<ul style="list-style-type: none">Blinking: The hard drive or optical drive is being accessed.Amber: HP ProtectSmart has temporarily parked the hard drive.
(4) Consumer infrared lens	Receives a signal from the HP Remote Control.
(5) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(6) Audio-out (headphone) jacks (2)	Produce sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.


NOTE: This table describes factory settings. For information about changing factory settings, refer to the user guides located in Help and Support.

Rear components




Component	Description
Vents (2)	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Right-side components




Component	Description
(1) USB ports (2)	Connect optional USB devices.
(2) Optical drive light	Blinking: The optical drive is being accessed.
(3) Optical drive	Reads optical discs and, on select models, also writes to optical discs.
(4) TV antenna/cable jack (select models only)	Connects a TV antenna, a digital cable device, or a satellite device that receives standard or high-definition TV broadcasts.
(5) RJ-11 (modem) jack (select models only)	Connects a modem cable.
(6) Power connector	Connects an AC adapter.

Left-side components




Component	Description
(1) Security cable slot	Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.
(2) External monitor port	Connects an external VGA monitor or projector.
(3) Expansion port 3	Connects the computer to an optional docking device or an optional expansion product. NOTE: The computer has only one expansion port. The term <i>expansion port 3</i> describes the type of expansion port.
(4) RJ-45 (network) jack	Connects a network cable.
(5) HDMI port	Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio component.
(6) eSATA/USB port	Connects an optional high-performance eSATA component, such as an eSATA external hard drive, or an optional USB device.
(7) USB port	Connect optional USB devices.
(8) 1394 port (select models only)	Connects an optional IEEE 1394 or 1394a device, such as a camcorder.
(9) Digital Media Slot light	On: The Digital Media Slot is in use.
(10) Digital Media Slot	Supports the following optional digital card formats: Secure Digital (SD) Memory Card, MultiMediaCard (MMC), Memory Stick (MS), Memory Stick Pro (MSP), xD-Picture Card (XD), xD-Picture Card (XD) Type H, xD-Picture Card (XD) Type M.
(11) ExpressCard slot	Supports optional ExpressCard/54 cards.

Bottom components



Component	Description
(1) Battery bay	Holds the battery.
(2) Integrated Subwoofer	Contains the subwoofer speaker.
(3) Vents (4)	Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4) Hard drive, memory module, and WLAN module compartment	Holds the hard drive, the memory module slots, and the WLAN module (select models only). CAUTION: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.
(5) Battery release latch	Releases the battery from the battery bay.

Display components



Component	Description
(1) Internal display switch	Turns off the display and initiates Sleep if the display is closed while the power is on.
(2) Internal microphones (2)	Record sound.
(3) Integrated webcam light	On: The integrated webcam is in use.
(4) Integrated webcam	Records video and captures still photographs.

Cleaning the display

To remove smudges and lint, frequently clean the display with a soft, damp, lint-free cloth. If the screen requires additional cleaning, use premoistened antistatic wipes or an antistatic screen cleaner.

-
- △ **CAUTION:** To prevent permanent damage to the computer, never spray water, cleaning fluids, or chemicals on the display.
-

Wireless antennae (select models only)

On select computer models, at least 2 antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.



 **NOTE:** For optimal transmission, keep the areas immediately around the antennae free from obstructions.

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

Additional hardware components




Component	Description
(1) Power cord*	Connects an AC adapter to an AC outlet.
(2) Battery*	Powers the computer when the computer is not plugged into external power.
(3) AC adapter	Converts AC power to DC power.
(4) TV antenna/cable adapter (select models only)	Connects an RF coaxial cable to the TV antenna/cable jack.
(5) TV antenna (select models only)	Receives digital and analog broadcast signals.

*Batteries and power cords vary in appearance by region and country.

3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides important information:



- Product name **(1)**. This is the product name affixed to the front of your notebook.
- Serial number (s/n) **(2)**. This is an alphanumeric identifier that is unique to each product.
- Part number/product number (p/n) **(3)**. This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
- Model description **(4)**. This is the most important number you need to locate documents, drivers, and support for your notebook.
- Warranty period **(5)**. Describes the duration (in years) of the warranty period for this computer.

Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.

- Microsoft® Certificate of Authenticity—Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label—Provides regulatory information about the modem and lists the agency approval markings required by some of the countries or regions in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the hard drive, memory module, and WLAN module compartment.
- Wireless certification label(s) (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries or regions in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device or an optional Bluetooth® device. If your computer model includes one or more wireless devices,

one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the hard drive, memory module, and WLAN module compartment.

Index

Symbols/Numerics

1394 port, identifying 11

A

AC adapter, identifying 16
antennae 15
applications key, Windows 7
audio-in (microphone) jack,
identifying 8
audio-out (headphone) jack,
identifying 8

B

battery bay, identifying 12
battery light, identifying 4, 8
battery release latch,
identifying 12
battery, identifying 16
bays
 battery 12, 17
 hard drive 12
Bluetooth label 18
buttons
 MediaSmart 6
 next/fast forward 6
 play/pause 6
 power 5
 previous/rewind 6
 stop 6
 TouchPad 3
 TouchPad on/off 3
 volume mute 6

C

caps lock, lights 4
Certificate of Authenticity label 17
cleaning the display 14
compartments
 memory module 12
 WLAN module 12

components
 additional hardware 16
 bottom 12
 display 13
 front 8
 left-side 11
 rear 9
 right-side 10
 top 3
connectors, power 10
cord, power 16

D

Digital Media Slot, identifying 11
display switch, identifying 13
drive light, identifying 4, 8
drives, hard 12

E

eSATA port, identifying 11
esc key, identifying 7
expansion port, identifying 11
ExpressCard slot, identifying 11
external monitor port,
identifying 11

F

fingerprint reader, identifying 6
fn key, identifying 7
function keys, identifying 7

H

hard drive bay, identifying 12
HDMI port, identifying 11
headphone (audio-out) jack 8

I

IEEE 1394 port, identifying 11
infrared lens, identifying 8

integrated webcam,
identifying 13
internal display switch,
identifying 13
internal microphone,
identifying 13

J

jacks
 audio-in (microphone) 8
 audio-out (headphone) 8
 RJ-11 (modem) 10
 RJ-45 (network 11
 TV antenna/cable 10

K

keypad keys, identifying 7
keys
 esc 7
 fn 7
 function 7
 keypad 7
 Windows applications 7
 Windows logo 7

L

labels
 Bluetooth 18
 Microsoft Certificate of
 Authenticity 17
 modem approval 17
 regulatory 17
 service tag 17
 wireless certification 18
 WLAN 18
latches
 battery release 12
lights
 battery 4, 8
 caps lock 4

- drive 4, 8
- num lock 5
- power 4, 8
- TouchPad 3
- volume down 4
- volume mute 4
- volume up 4
- wireless 5

M

- media activity buttons, identifying 6
- MediaSmart button, identifying 6
- memory module compartment, identifying 12
- microphone (audio-in) jack 8
- microphone, internal 13
- Microsoft Certificate of Authenticity label 17
- modem approval label 17
- monitor port, external 11
- mute button, identifying 6

N

- next/fast forward button, identifying 6
- num lock light, identifying 5

O

- operating system
 - Microsoft Certificate of Authenticity label 17
 - Product Key 17
- optical drive, identifying 10

P

- play/pause button, identifying 6
- ports
 - 1394 11
 - eSATA 11
 - expansion 11
 - external monitor 11
 - HDMI 11
 - USB 10, 11
- power button, identifying 5
- power connector, identifying 10
- power cord, identifying 16
- power light, identifying 4, 8
- previous/rewind button, identifying 6
- Product Key 17

- product name and number, computer 17

R

- regulatory information
 - modem approval label 17
 - regulatory label 17
 - wireless certification labels 18
- RJ-11 (modem) jack, identifying 10
- RJ-45 (network) jack, identifying 11

S

- scrolling zones, TouchPad 3
- security cable slot, identifying 11
- serial number, computer 17
- service tag 17
- slots
 - Digital Media 11
 - ExpressCard 11
 - memory module 12
 - security cable 11
- speakers, identifying 5
- stop button, identifying 6

T

- TouchPad buttons, identifying 3
- TouchPad light, identifying 3
- TouchPad on/off button 3
- TouchPad scrolling zones, identifying 3
- TouchPad, identifying 3
- traveling with the computer
 - modem approval label 17
 - wireless certification labels 18
- TV antenna 16
- TV antenna/cable jack, identifying 10
- TV, cable adapter 16

U

- USB ports, identifying 10, 11

V

- vents, identifying 9, 12
- volume down light, identifying 4
- volume mute button, identifying 6
- volume mute light, identifying 4
- volume scroll zone, identifying 6
- volume up light, identifying 4

W

- webcam, identifying 13
- Windows applications key, identifying 7
- Windows logo key, identifying 7
- wireless antennae 15
- wireless certification label 18
- wireless light, identifying 5
- WLAN label 18
- WLAN module 18
- WLAN module compartment, identifying 12

