Notebook Tour User Guide

© Copyright 2008 Hewlett-Packard Development Company, L.P.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: July 2008

Document Part Number: 482394-001

Safety warning notice

⚠ WARNING! To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

Table of contents

1 Identifying hardware

| 2 | 2 Components | |
|----|--|----|
| | Product notice | 2 |
| | Top components | 3 |
| | TouchPad | 3 |
| | Lights | 4 |
| | Buttons | 5 |
| | Keys | 6 |
| | Front components | 7 |
| | Right-side components | 8 |
| | Left-side components | 9 |
| | Bottom components | 10 |
| | Display components | 11 |
| | Wireless antennae (select models only) | 12 |
| | Additional hardware components | 13 |
| 3 | 3 Labels | |
| In | ndex | 16 |

1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:

- 1. Select Start > Computer > System Properties.
- In the left pane, click Device Manager.

You can also add hardware or modify device configurations using Device Manager.

NOTE: Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

2 Components

Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.

Top components

TouchPad



| onent | Description |
|------------------------|---|
| TouchPad* | Moves the pointer and selects or activates items on the screen. |
| Left TouchPad button* | Functions like the left button on an external mouse. |
| TouchPad scroll zone | Scrolls up or down. |
| Right TouchPad button* | Functions like the right button on an external mouse. |
| | TouchPad* Left TouchPad button* TouchPad scroll zone |

^{*}This table describes factory settings. To view or change TouchPad preferences, select **Start > Control Panel > Hardware and Sound > Mouse**.

Lights




| Component | | Description | |
|-----------|-------------------|---|--|
| (1) | Caps lock light | On: Caps lock is on. | |
| (2) | Power light | On: The computer is on. | |
| | | Blinking: The computer is in the Sleep state. | |
| | | Blinking rapidly: An AC adapter with a higher power rating should be connected. | |
| | | Off: The computer is off or in Hibernation. | |
| (3) | QuickPlay light | On: The QuickPlay program is launched. | |
| (4) | Wireless light | Blue: An integrated wireless device, such as a wireless local area network (WLAN) device, an HP Broadband Wireless Module, or a Bluetooth® device, is on. | |
| | | Amber: All wireless devices are off. | |
| (5) | Volume mute light | Off: Computer sound is on. | |
| | | On: Computer sound is off. | |
| (6) | Volume down light | Blinking: The volume scroll zone is being used to decrease speaker volume. | |
| (7) | Volume up light | Blinking: The volume scroll zone is being used to increase speaker volume. | |

Buttons



| Component | | Description | |
|-----------|--------------------|-------------|--|
| (1) | Power button | • | When the computer is off, press the button to turn on the computer. |
| | | • | When the computer is on, press the button to shut down the system. |
| | | • | When the computer is in Hibernation, press the button briefly to exit Hibernation. |
| | | • | When the computer is in the Sleep state, press the button briefly to exit Sleep. |
| | | prod | e computer has stopped responding and Windows® shutdown cedures are ineffective, press and hold the power button for at st 5 seconds to turn off the computer. |
| | | | earn more about your power settings, select Start > Control el > System and Maintenance > Power Options . |
| (2) | Media button | Lau | nches the QuickPlay program. |
| (3) | Wireless button | | ns the wireless feature on or off but does not establish a eless connection. |
| | | | TE: You must set up or access a wireless network to establish reless connection. |
| (4) | Volume mute button | Mut | es and restores speaker sound. |
| (5) | Volume down button | Dec | ereases speaker sound. |
| (6) | Volume up button | Incr | eases speaker sound. |

Keys

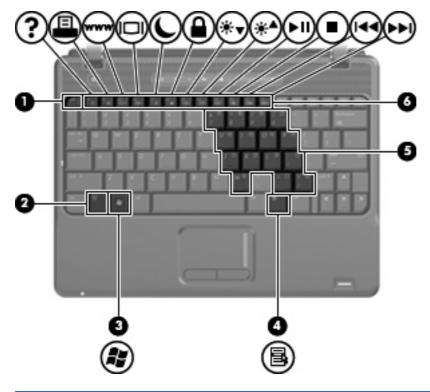


| Component | | Description | |
|-----------|------------------------------|---|--|
| (1) | esc key | Displays system information about your computer when pressed in combination with the fn key. | |
| (2) | fn key | Executes frequently used system functions when pressed in combination with a function key or the esc key. | |
| (3) | Windows logo key | Displays the Windows Start menu. | |
| (4) | Windows applications key | Displays a shortcut menu for items beneath the pointer. | |
| (5) | Embedded numeric keypad keys | Can be used like the keys on an external numeric keypad. | |
| (6) | Function keys | Execute frequently used system functions when pressed in combination with the fn key. | |

Front components




| Component | | Description |
|-----------|----------------------------|--|
| (1) | Drive light | Blinking green: The hard drive or optical drive is being accessed. |
| | | Amber (select models only): HP 3D DriveGuard has temporarily parked the hard drive. |
| (2) | Audio-in (microphone) jack | Connects an optional computer headset microphone, stereo array microphone, or monaural microphone. |
| (3) | Audio-out (headphone) jack | Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio. |

Right-side components

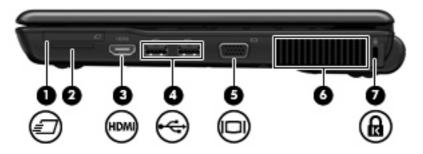


| Component | | Description | |
|-----------|---|--|--|
| (1) | ExpressCard slot | Supports optional ExpressCards. | |
| (2) | Digital Media Slot (select models only) | Supports the following optional digital card formats: | |
| | | MultiMediaCard | |
| | | MultiMedia Card Plus | |
| | | Secure Digital Memory Card | |
| | | Secure Digital High Capacity Memory Card | |
| (3) | HDMI port | Connects an optional video or audio device, such as a high-definition television or any compatible digital or audio component. | |
| (4) | USB ports (2) (select models only) | Connect optional USB devices. | |
| (5) | External monitor port | Connects an external VGA monitor or projector. | |
| (6) | Vent | Enables airflow to cool internal components. | |
| | | NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation. | |
| (7) | Security cable slot | Attaches an optional security cable to the computer. | |
| | | NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen. | |

Left-side components

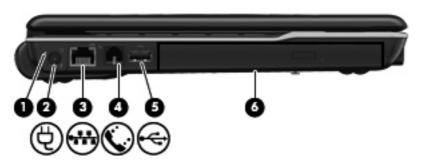

| Component | | Description | |
|-----------|----------------------|---|--|
| (1) | Battery light | Amber: A battery is charging. | |
| | | Turquoise: A battery is close to full charge capacity. | |
| | | Blinking amber: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly. | |
| | | Off: If the computer is plugged into an external power source, the light turns off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level. | |
| (2) | Power connector | Connects an AC adapter. | |
| (3) | RJ-45 (network) jack | Connects a network cable. | |
| (4) | RJ-11 (modem) jack | Connects a modem cable. | |
| (5) | USB port | Connects an optional USB device. | |
| (6) | Optical drive | Reads optical discs and, on select models, also writes to optical discs. | |

Bottom components

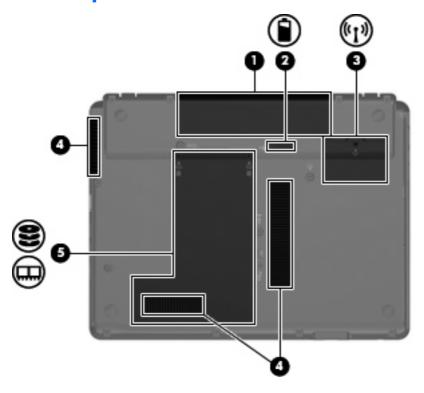

| Component | | Description |
|-----------|-----------------------------|--|
| (1) | Battery bay | Holds the battery. |
| (2) | Battery release latch | Releases the battery from the battery bay. |
| (3) | Wireless module compartment | Holds a WLAN module (select models only). |
| | | NOTE: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support. |
| (4) | Vents (2) | Enable airflow to cool internal components. |
| | | NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation. |
| (5) | Hard bay drive | Contains the hard drive and the memory module slot. |

Display components



| Component | | Description | |
|---|-----------------------------------|---|--|
| (1) Internal microphones (2) (select models only) | | Record sound. | |
| | | NOTE: All models have at least one internal microphone. | |
| (2) | Webcam light (select models only) | On: The webcam is in use. | |
| (3) | Webcam (select models only) | Records audio and video and captures still photographs. | |

Wireless antennae (select models only)

On select computer models, at least 2 antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.



NOTE: For optimal transmission, keep the areas immediately around the antennae free from obstructions.

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

Additional hardware components



| Component | | Description | |
|-----------|---|---|--|
| (1) | Power cord* | Connects an AC adapter to an AC outlet. | |
| (2) | Battery* | Powers the computer when the computer is not plugged into external power. | |
| (3) | AC adapter | Converts AC power to DC power. | |
| (4) | Modem cable (select models only)* | Connects the internal modem to an RJ-11 telephone jack or to a country- or region-specific modem cable adapter. | |
| (5) | Country- or region-specific modem cable adapter (select models only)* | Adapts the modem cable to a non-RJ-11 telephone jack. | |

3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer:

Service tag—Provides important information including the following:



- Product name (1). This is the product name affixed to the front of your notebook.
- Serial number (s/n) (2). This is an alphanumeric number that is unique to each product.
- Part number/Product number (p/n) (3). This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
- Model description (4). This is the number you use to locate documents, drivers, and support for your notebook.
- Warranty period (5). Describes the duration of the warranty period for this computer.

Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.

- Microsoft® Certificate of Authenticity—Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label—Provides regulatory information about the modem and lists the agency
 approval markings required by some of the countries in which the modem has been approved for
 use. You may need this information when traveling internationally. The modem approval label is
 affixed inside the hard drive bay.
- Wireless certification label(s) (select models only)—Provide information about optional wireless
 devices and the approval markings of some of the countries in which the devices have been
 approved for use. An optional device may be a wireless local area network (WLAN) device or an
 optional Bluetooth® device. If your computer model includes one or more wireless devices, one or
 more certification labels are included with your computer. You may need this information when

traveling internationally. Wireless certification labels are affixed inside the WLAN module compartment.

Index

| A | front 7 | keys |
|--------------------------------------|-----------------------------------|--|
| AC adapter, identifying 13 | left-side 9 | esc 6 |
| antennae 12 | right-side 8 | fn 6 |
| applications key, Windows 6 | top 3 | function 6 |
| audio-in (microphone) jack, | connectors, power 9 | keypad 6 |
| identifying 7 | cord, power 13 | Windows applications 6 |
| audio-out (headphone) jack, | cora, power 10 | Windows logo 6 |
| identifying 7 | D | Williadws logo 0 |
| identifying 7 | digital media slot, identifying 8 | L |
| В | drive light, identifying 7 | labels |
| battery bay 14 | drive light, identifying T | Bluetooth 15 |
| battery bay, identifying 10 | E | Microsoft Certificate of |
| battery light, identifying 9 | esc key, identifying 6 | Authenticity 14 |
| battery release latch, | ExpressCard slot, identifying 8 | modem approval 14 |
| • | external monitor port, | regulatory 14 |
| | identifying 8 | 9 |
| battery, identifying 13 | identifying 0 | service tag 14 wireless certification 15 |
| bays | F | |
| battery 10, 14 | fn key, identifying 6 | |
| Bluetooth label 15 | function keys, identifying 6 | latches |
| buttons | function keys, identifying | battery release 10 |
| power 5 | н | lights |
| QuickPlay 5 | hard bay drive, identifying 10 | battery 9 |
| TouchPad 3 | HDMI port, identifying 8 | caps lock 4 |
| volume down 5 | headphone (audio-out) jack 7 | drive 7 |
| volume mute 5 | ricadphone (addio-out) jack 7 | mute 4 |
| volume up 5 | 1 | power 4 |
| wireless 5 | internal microphones, | QuickPlay 4 |
| | identifying 11 | volume down 4 |
| C | identifying 11 | volume mute 4 |
| camera light, identifying 11 | J | volume up 4 |
| camera, identifying 11 | jacks | webcam 11 |
| caps lock light, identifying 4 | audio-in (microphone) 7 | wireless 4 |
| Certificate of Authenticity label 14 | audio-out (headphone) 7 | M |
| compartments | RJ-11 (modem) 9 | |
| memory module 10 | RJ-45 (network 9 | memory module compartment |
| wireless module 10 | | identifying 10 |
| components | K | microphone (audio-in) jack 7 |
| additional hardware 13 | keypad keys, identifying 6 | microphones, internal, |
| bottom 10 | ,, , - , , - | identifying 11 |
| display 11 | | |

Microsoft Certificate of Authenticity label 14 TouchPad buttons, identifying 3 modem approval label 14 TouchPad scrolling zones, modem cable, identifying 13 identifying 3 TouchPad, identifying 3 monitor port, external 8 mute button, identifying 5 traveling with the computer modem approval label 14 mute light, identifying 4 wireless certification labels 15 0 operating system U Microsoft Certificate of USB ports, identifying 8, 9 Authenticity label 14 V Product Key 14 vents, identifying 8, 10 P volume down button, identifying 5 ports external monitor 8 volume down light, identifying 4 HDMI 8 volume mute button, identifying 5 volume mute light, identifying 4 USB 8, 9 volume up button, identifying 5 power button, identifying 5 power connector, identifying volume up light, identifying 4 power cord, identifying 13 power lights, identifying 4 webcam light, identifying 11 Product Key 14 webcam, identifying 11 product name and number, Windows applications key, computer 14 identifying 6 Windows logo key, identifying 6 QuickPlay button, identifying 5 wireless antennae 12 wireless button, identifying 5 QuickPlay light, identifying 4 wireless certification label 15 R wireless light, identifying 4 regulatory information wireless module compartment, modem approval label 14 identifying 10 regulatory label 14 WLAN device 15 wireless certification labels 15 WLAN label 15 RJ-11 (modem) jack, identifying 9 RJ-45 (network) jack, identifying 9 S scrolling zones, TouchPad 3 security cable slot, identifying 8 serial number, computer 14 service tag 14 slots digital media 8 expansion memory module 10 ExpressCard 8 security cable 8

