Notebook Tour User Guide

© Copyright 2008 Hewlett-Packard Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Second Edition: August 2008

First Edition: July 2008

Document Part Number: 490896-002

Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.

Safety warning notice

⚠ WARNING! To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

Table of contents

1 Identifying hardware

2	2 Components	
	Display	3
	Top components	4
	Pointing devices	4
	Lights	5
	Buttons and fingerprint reader	
	Keys	8
	Front components	
	Right-side components	10
	Left-side components	11
	Bottom components	
	Wireless antennae (select models only)	13
	Additional hardware components	14
3	B Labels	
In	ndex	17

1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:

- 1. Select Start > My Computer.
- 2. In the left pane of the System Tasks window, select **View system information**.
- 3. Select Hardware tab > Device Manager.

You can also add hardware or modify device configurations using Device Manager.

2 Components

Display



Component		Description
(1)	Internal microphones (2)	Record sound.
(2)	HP Webcam	Records audio and video and captures still photographs.
(3)	HP Webcam light	On: The integrated camera is in use.

Top components

Pointing devices



Component		Description
(1)	TouchPad*	Moves the pointer and selects or activates items on the screen.
(2)	Left TouchPad button*	Functions like the left button on an external mouse.
(3)	Right TouchPad button*	Functions like the right button on an external mouse.
(4)	TouchPad scroll zone	Scrolls up or down.

^{*}This table describes factory settings. To view or change pointing device preferences, select **Start > Control Panel > Printers** and **Other Hardware > Mouse**.

Lights



Com	ponent	Description
(1)	Caps lock light	On: Caps lock is on.
(2)	Power light	On: The computer is on.
		Blinking: The computer is in Standby.
		 Blinking rapidly: An AC adapter with a higher power rating should be connected.
		Off: The computer is off or in Hibernation.
(3)	Info button light	On: The Info Center is launched.
(4)	Presentation button light	On: Presentation Options is on.
(5)	Wireless light	 Blue: An integrated wireless device, such as a wireless local area network (WLAN) device, an HP Broadband Wireless Module, or a Bluetooth® device, is on.
		Amber: All wireless devices are off.
(6)	Volume mute light	Off: Computer sound is on.
		On: Computer sound is off.
(7)	Volume down light	Blinking: The volume scroll zone is being used to decrease speaker volume.
(8)	Volume up light	Blinking: The volume scroll zone is being used to increase speaker volume.

Buttons and fingerprint reader




Compo	pnent	Description
(1)	Power button	 When the computer is off, press the button to turn on the computer.
		 When the computer is on, press the button to shut down the computer.
		 When the computer is in Standby, press the button briefly to exit Standby.
		• When the computer is in Hibernation, press the button briefly to exit Hibernation.
		If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.
		To learn more about your power settings, select Start > Control Panel > Performance and Maintenance > Power Options .
(2)	Info button	Launches Info Center, which enables you to open various software solutions.
(3)	Presentation button	Starts the presentation feature.
(4)	Wireless button	Turns the wireless feature on or off but does not establish a wireless connection.
		NOTE: A wireless network must be set up in order to establish a wireless connection.

(5)	Volume mute button	Mutes and restores speaker sound.
(6)	Volume down button	Decreases speaker volume.
(7)	Volume scroll zone	Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume.
(8)	Volume up button	Increases speaker volume.
(9)	Fingerprint reader	Allows a fingerprint logon to Windows, instead of a password logon.

Keys

NOTE: Your computer may look slightly different from the illustration in this section.

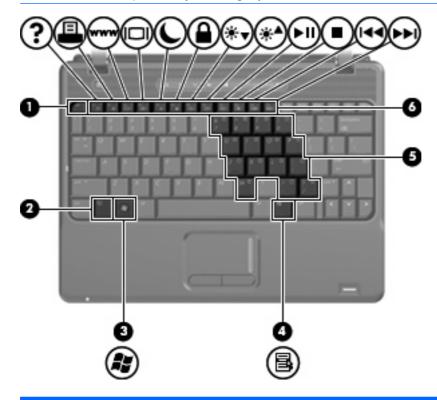


Displays system information when pressed in combination with the fin key. Executes frequently used system functions when pressed in combination with a function key or the esc key. Displays the Windows Start menu. Windows applications key Displays a shortcut menu for items beneath the pointer. Embedded numeric keypad keys Can be used like the keys on an external numeric keypad. Execute frequently used system functions when pressed in combination with the fin key.	Component		Description
combination with a function key or the esc key. (3) Windows logo key Displays the Windows Start menu. (4) Windows applications key Displays a shortcut menu for items beneath the pointer. (5) Embedded numeric keypad keys Can be used like the keys on an external numeric keypad. (6) Function keys Execute frequently used system functions when pressed in	(1)	esc key	Displays system information when pressed in combination with the fn key.
 (4) Windows applications key Displays a shortcut menu for items beneath the pointer. (5) Embedded numeric keypad keys Can be used like the keys on an external numeric keypad. (6) Function keys Execute frequently used system functions when pressed in 	(2)	fn key	' '
 (5) Embedded numeric keypad keys (6) Function keys Execute frequently used system functions when pressed in 	(3)	Windows logo key	Displays the Windows Start menu.
(6) Function keys Execute frequently used system functions when pressed in	(4)	Windows applications key	Displays a shortcut menu for items beneath the pointer.
	(5)	Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad.
	(6)	Function keys	, , , ,

Front components




Component		Description	
(1)	Drive light	 Blinking turquoise: The hard drive or optical drive is being accessed. Amber: HP 3D DriveGuard has temporarily parked the hard 	
(2)	Audio-in (microphone) jack	drive. Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.	
(3)	Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.	

Right-side components

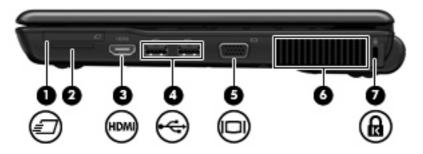


Comp	onent	Description
(1)	ExpressCard slot	Supports optional ExpressCards.
(2)	Media Card Reader (select models only)	Supports the following optional digital card formats:
		MultiMediaCard
		MultiMediaCard Plus
		Secure Digital Memory Card
		Secure Digital High Capacity Memory Card
(3)	HDMI port	Connects an optional video or audio device, such as a high-definition television or any compatible digital or audio component.
(4)	USB ports (2) (select models only)	Connect optional USB devices.
(5)	External monitor port	Connects an external VGA monitor or projector.
(6)	Vent	Enables airflow to cool internal components.
		NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(7)	Security cable slot	Attaches an optional security cable to the computer.
		NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.

Left-side components

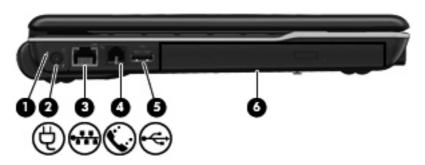

Component		Description	
(1)	Battery light	Amber: A battery is charging.	
		Turquoise: A battery is close to full charge capacity.	
		 Blinking amber: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly. 	
		 Off: If the computer is plugged into an external power source, the light turns off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level. 	
(2)	Power connector	Connects an AC adapter.	
(3)	RJ-45 (network) jack	Connects a network cable.	
(4)	RJ-11 (modem) jack	Connects a modem cable.	
(5)	USB port	Connects an optional USB device.	
(6)	Optical drive	Reads optical discs and, on select models, also writes to optical discs.	

Bottom components

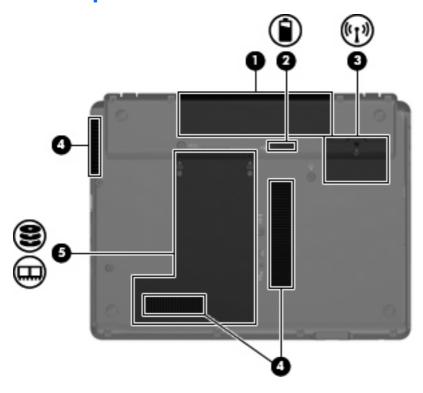

Component		Description
(1)	Battery bay	Holds the battery.
(2)	Battery release latch	Releases the battery from the battery bay.
(3)	Wireless module compartment	Contains a WLAN module.
		NOTE: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.
(4)	Vents (3)	Enable airflow to cool internal components.
		NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(5)	Hard drive bay	Holds the hard drive and memory module slot.

Wireless antennae (select models only)

On select computer models, at least 2 antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.



NOTE: For optimal transmission, keep the areas immediately around the antennae free from obstructions.

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

Additional hardware components



Component		Description	
(1)	Power cord*	Connects an AC adapter to an AC outlet.	
(2)	Battery*	Powers the computer when the computer is not plugged into external power.	
(3)	AC adapter	Converts AC power to DC power.	
(4)	Modem cable (select models only)*	Connects the internal modem to an RJ-11 telephone jack or to a country- or region-specific modem cable adapter.	
(5)	Country- or region-specific modem cable adapter (select models only)*	Adapts the modem cable to a non-RJ-11 telephone jack.	

3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer:

Service tag—Provides important information including the following:



- Product name (1). This is the product name affixed to the front of your notebook.
- Serial number (s/n) (2). This is an alphanumeric number that is unique to each product.
- Part number/Product number (p/n) (3). This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
- Model description (4). This is the number you use to locate documents, drivers, and support for your notebook.
- Warranty period (5). Describes the duration of the warranty period for this computer.

Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.

- Microsoft® Certificate of Authenticity—Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label—Provides regulatory information about the modem and lists the agency
 approval markings required by some of the countries in which the modem has been approved for
 use. You may need this information when traveling internationally. The modem approval label is
 affixed inside the hard drive bay.
- Wireless certification label(s) (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device, an HP Broadband Wireless Module, or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer.

You may need this information when traveling internationally. Wireless certification labels are affixed inside the hard drive bay.

Index

A AC adapter, identifying 14 antennae 13	left-side 11 right-side 10 top 4	RJ-11 (modem) 11 RJ-45 (network 11
applications key, Windows 8 audio-in (microphone) jack, identifying 9 audio-out (headphone) jack,	connector, power 11 cord, power 14	keypad keys, identifying 8 keys esc 8
identifying 9	drive light, identifying 9	fn 8 function 8
battery bay 12, 15 battery light, identifying 11 battery release latch,	earbuds 9 esc key, identifying 8 ExpressCard slot, identifying 10	keypad 8 Windows applications 8 Windows logo 8
identifying 12 battery, identifying 14	external monitor port, identifying 10	L labels
bays battery 12, 15	F	Bluetooth 16 Microsoft Certificate of
hard drive 12 Bluetooth label 16 buttons	fingerprint reader, identifying 7 fn key, identifying 8 function keys, identifying 8	Authenticity 15 modem approval 15 regulatory 15
info 6 power 6	н	service tag 15 wireless certification 16
Presentation 6 TouchPad 4 volume down 7	hard drive bay, identifying 12 HDMI port, identifying 10 headphone (audio-out) jack 9	WLAN 16 latch, battery release 12 lights
volume mute 7 volume up 7 wireless 6	headphones 9 HP Webcam light, identifying 3 HP Webcam, identifying 3	battery 11 caps lock 5 drive 9 info button 5
C	I info button light, identifying 5	mute 5
camera, identifying 3 caps lock light, identifying 5 Certificate of Authenticity label 15 compartment WLAN module 12 components	info button light, identifying 5 info button, identifying 6 internal microphones, identifying 3 J jacks	power 5 presentation button 5 volume down 5 volume mute 5 volume up 5 wireless 5
additional hardware 14 bottom 12 display 3 front 9	audio-in (microphone) 9 audio-out (headphone) 9	M Media Card Reader, identifying 10

microphone (audio-in) jack 9 microphones, internal, identifying 3 Microsoft Certificate of Authenticity label 15 modem approval label 15 modem cable 14 monitor port, external 10 mute button, identifying 7 mute light, identifying 5 O operating system Microsoft Certificate of Authenticity label 15 Product Key 15 optical drive, identifying 11	slots expansion memory module 12 ExpressCard 10 Media Card Reader 10 security cable 10 T TouchPad buttons 4 identifying 4 scrolling regions 4 traveling with the computer modem approval label 15 wireless certification labels 16 U USB ports, identifying 10, 11
ports external monitor 10 HDMI 10 USB 10, 11 power button, identifying 6 power connector, identifying 11 power light, identifying 5 presentation button light, identifying 5 presentation button, identifying 6 Product Key 15 product name and number, computer 15 R regulatory information modem approval label 15 regulatory label 15 wireless certification labels 16 release latch, battery 12 RJ-11 (modem) jack, identifying 11 RJ-45 (network) jack, identifying 11	vents, identifying 10, 12 volume down button, identifying 7 volume down light, identifying 5 volume mute button, identifying 5 volume mute light, identifying 5 volume scroll zone, identifying 7 volume up button, identifying 7 volume up light, identifying 5 W webcam light, identifying 3 webcam, identifying 3 Windows applications key, identifying 8 Windows logo key, identifying 8 wireless antennae 13 wireless button, identifying 6 wireless certification label 16 wireless light, identifying 5 WLAN device 16 WLAN module compartment, identifying 12
scrolling regions, TouchPad 4 security cable slot, identifying 10 serial number, computer 15 service tag 15	

