 
 
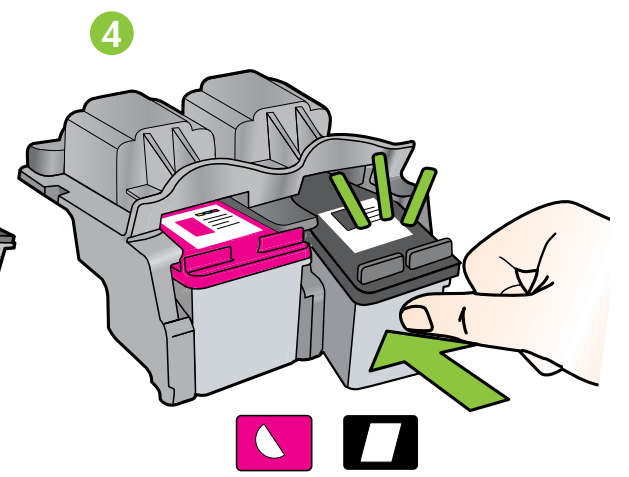 
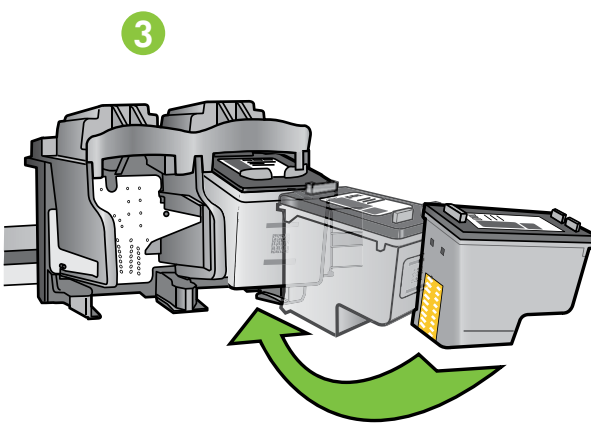 
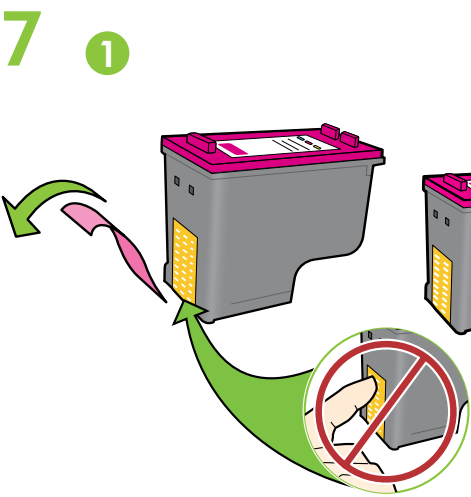 
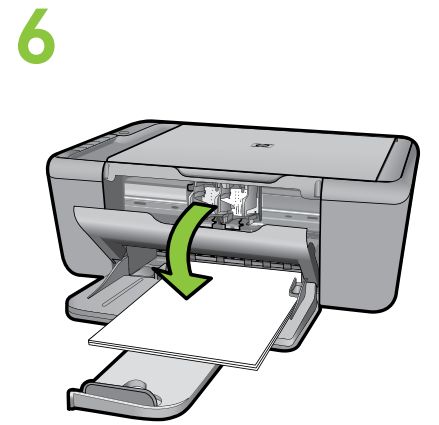 
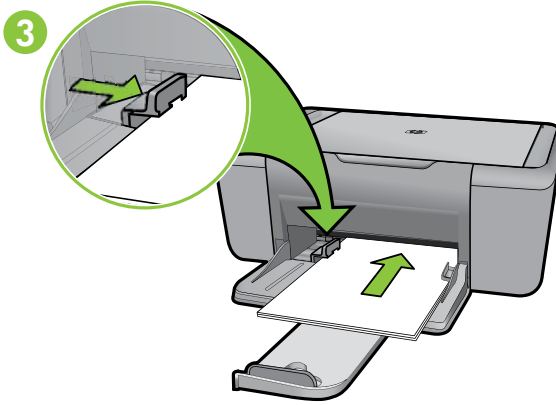 
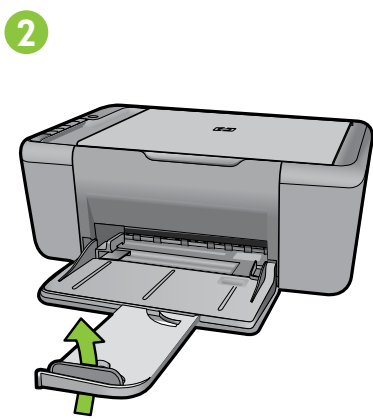 
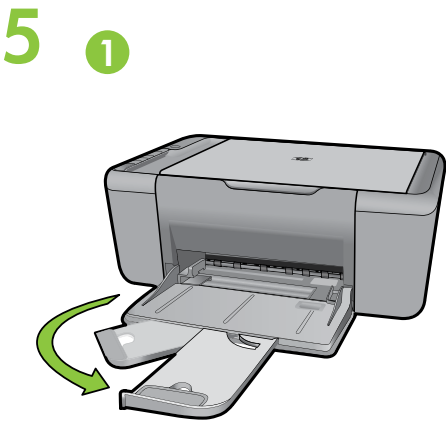 
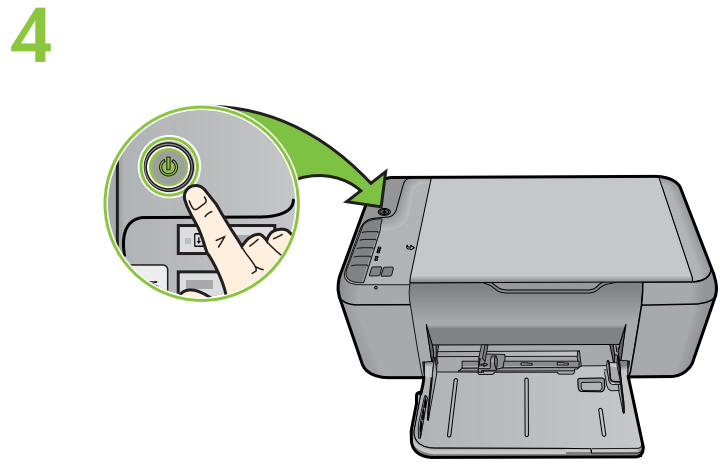 
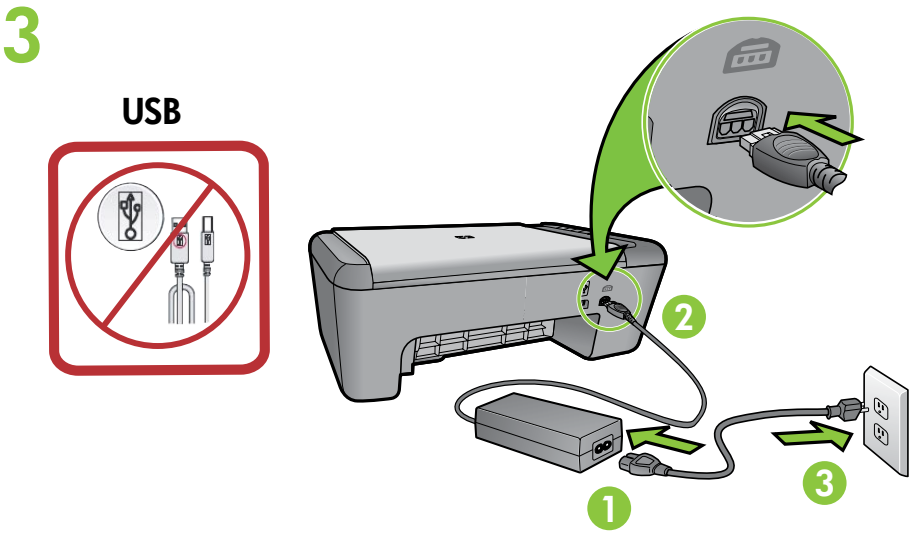 
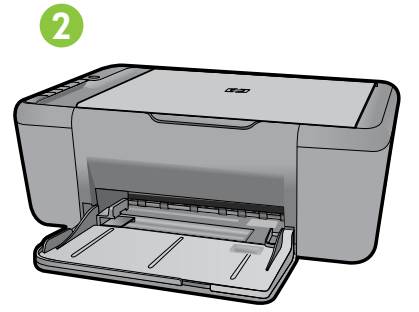 
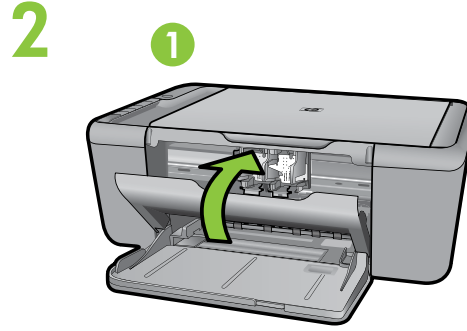 
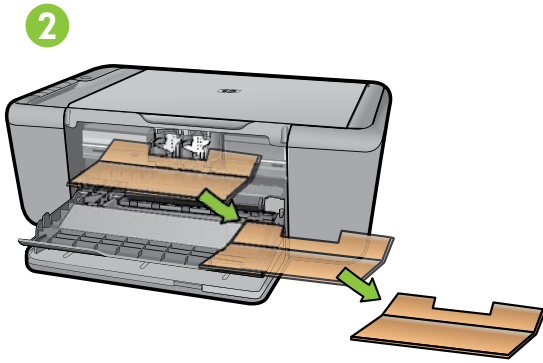 
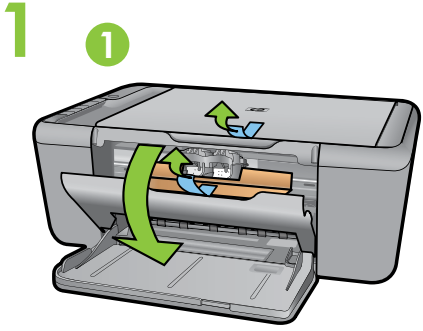 


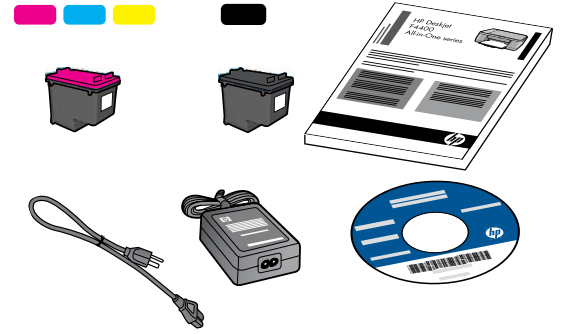


EN
EN
EN
EN

HP Deskjet F4400 All-in-One series

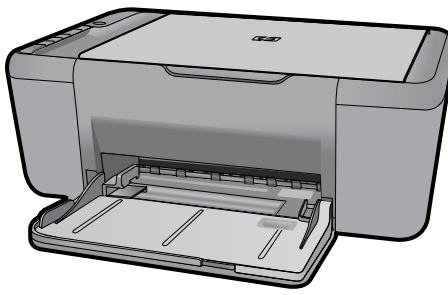


8

 
1

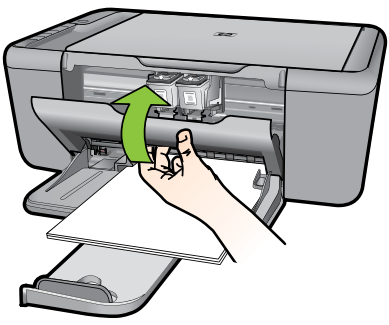


2

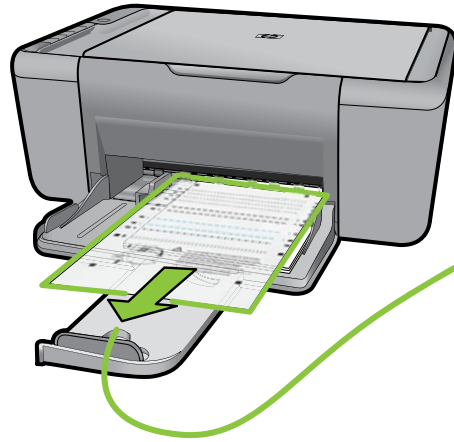 

3

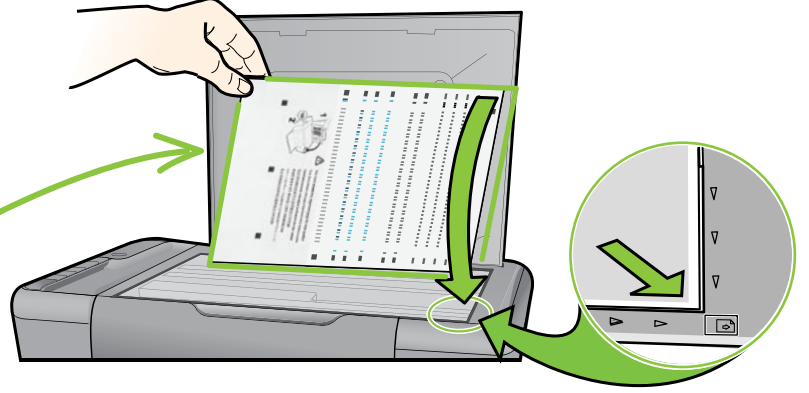 



9

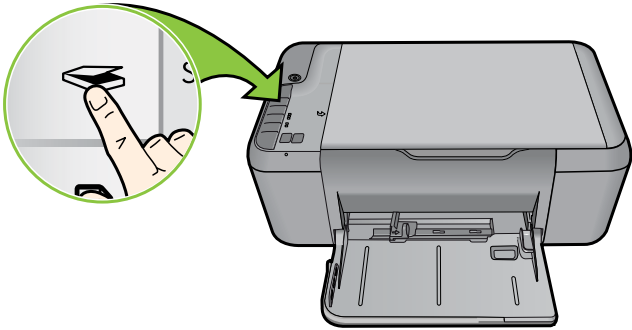 

10 1


Windows:

  USB

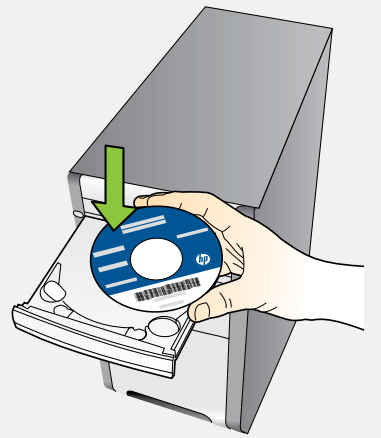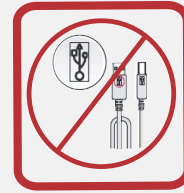


Windows:

 2

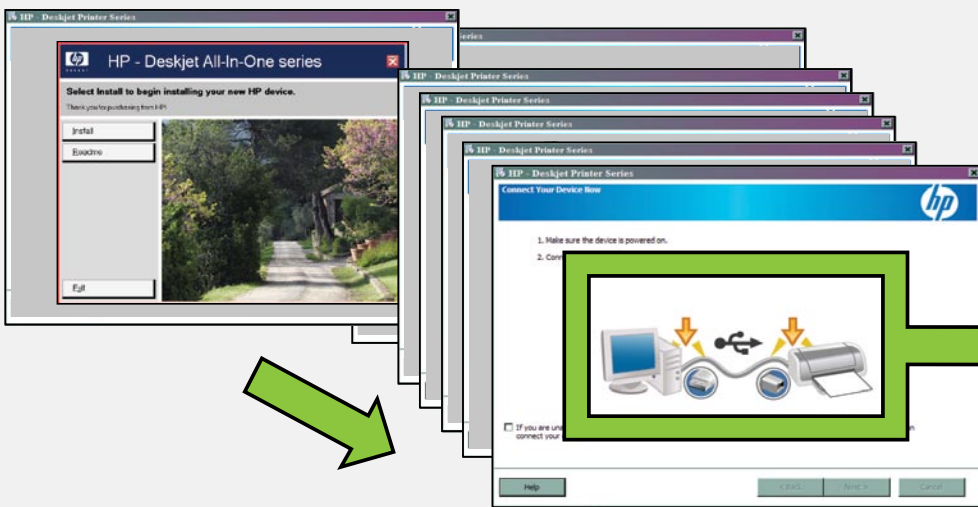

3

 
USB

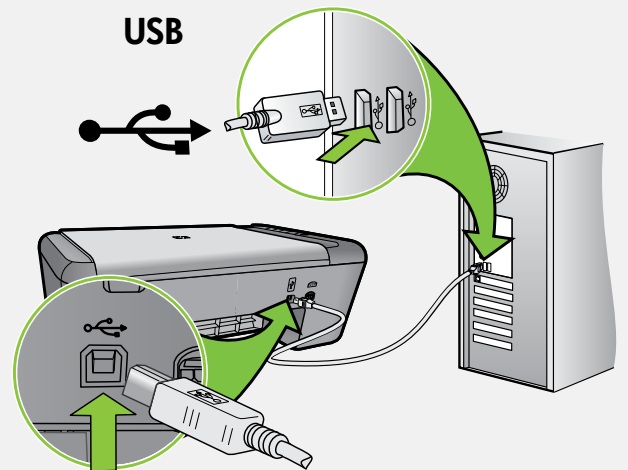


10 1

Mac:

 
USB

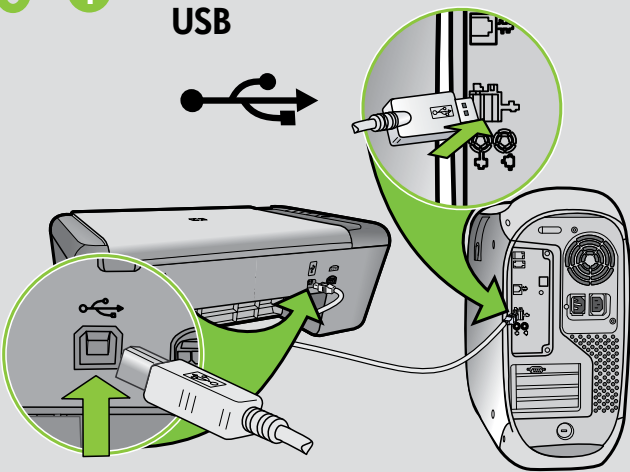

2

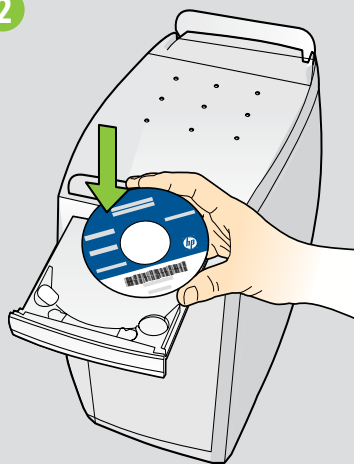 


3

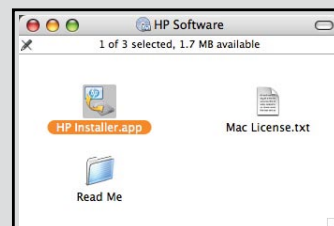 

© 2008 Hewlett-Packard Development Company, L.P.

Printed in Country
Printed in Country
Printed in Country
Printed in Country
Printed in Country

 www.hp.com



www.hp.com/support