

Notebook Tour

User Guide

© Copyright 2009 Hewlett-Packard
Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. SD Logo is a trademark of its proprietor. Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: June 2009

Document Part Number: 533485-001

Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.

Safety warning notice

-
- ⚠ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
-

Table of contents

1 Identifying hardware

2 Components

Display	3
Top components	5
Pointing devices	5
Lights	5
Buttons, switch, and speaker	7
Keys	9
Front components	10
Right-side components	11
Left-side components	12
Bottom components	14
Wireless antennas (select models only)	15
Additional hardware components	16

3 Labels


Index	19
-------------	----

1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:


1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.


You can also add hardware or modify device configurations using Device Manager.

 **NOTE:** Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

2 Components

Display

 **NOTE:** Refer to the illustration that most closely matches your computer.

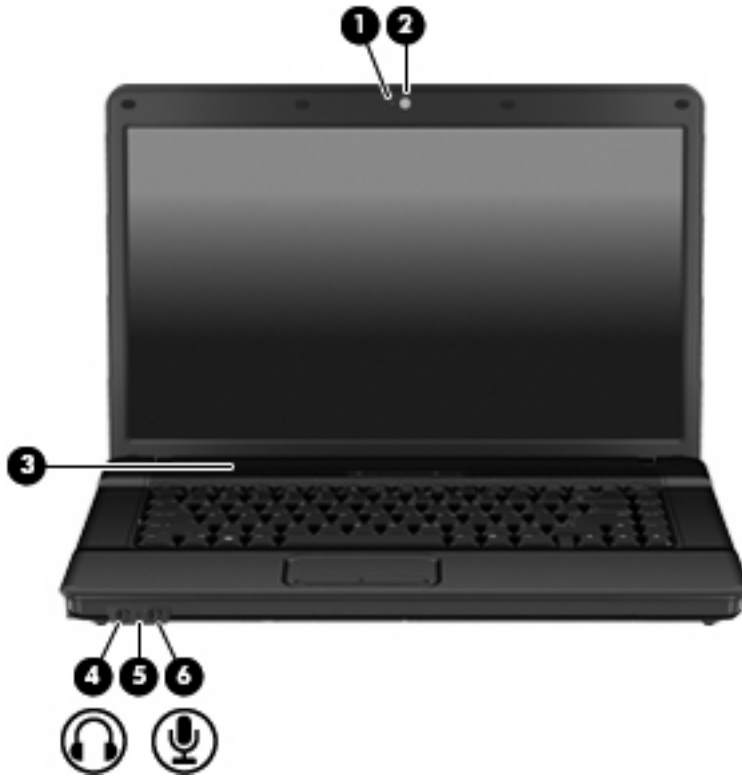

Component	Description
(1) Webcam light (select models only)	On: The webcam is in use.
(2) Webcam (select models only)	Records video and captures still photographs.
(3) Speaker	Produces sound.
(4) Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio. NOTE: When a device is connected to the headphone jack, the computer speakers are disabled.
(5) Internal microphone	Records sound.
(6) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.



Component	Description
(1) Webcam light (select models only)	On: The webcam is in use.
(2) Webcam (select models only)	Records video and captures still photographs.
(3) Speaker	Produces sound.
(4) Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio. NOTE: When a device is connected to the headphone jack, the computer speakers are disabled.
(5) Internal microphone	Records sound.
(6) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.

Top components

Pointing devices



Component	Description
(1) TouchPad*	Moves the pointer and selects or activates items on the screen.
(2) Left TouchPad button*	Functions like the left button on an external mouse.
(3) TouchPad scroll zone	Scrolls up or down.
(4) Right TouchPad button*	Functions like the right button on an external mouse.


*This table describes factory settings. To view or change pointing device preferences, select **Start > Control Panel > Hardware and Sound > Mouse**.


Lights



Component	Description
(1) Caps lock light	On: Caps lock is on.
(2) Wireless light	<ul style="list-style-type: none"><li data-bbox="815 268 1442 344">• Blue: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is on.<li data-bbox="815 367 1203 401">• Amber: All wireless devices are off.
(3) Power light	<ul style="list-style-type: none"><li data-bbox="815 424 1098 451">• On: The computer is on.<li data-bbox="815 474 1289 501">• Blinking: The computer is in the Sleep state.<li data-bbox="815 525 1262 556">• Off: The computer is off or in Hibernation.

Buttons, switch, and speaker

 **NOTE:** Refer to the illustration that most closely matches your computer.

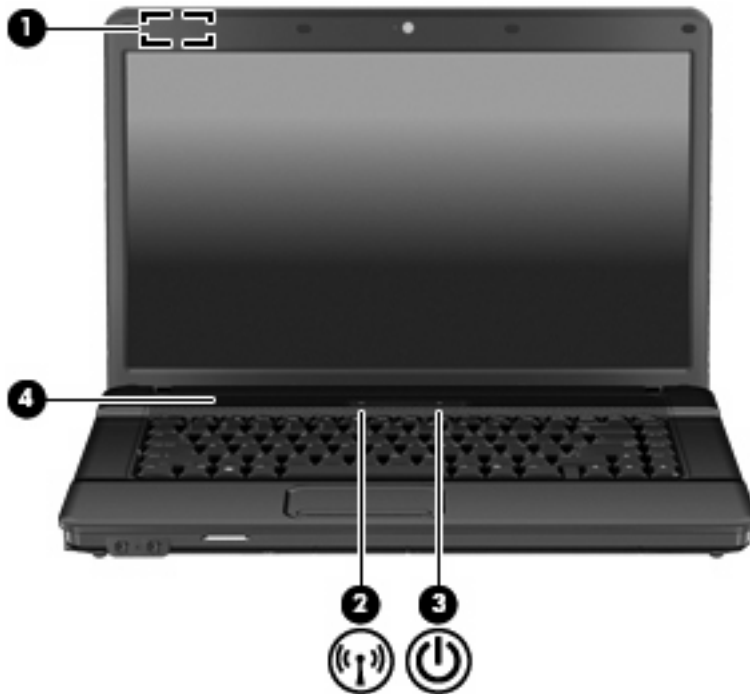


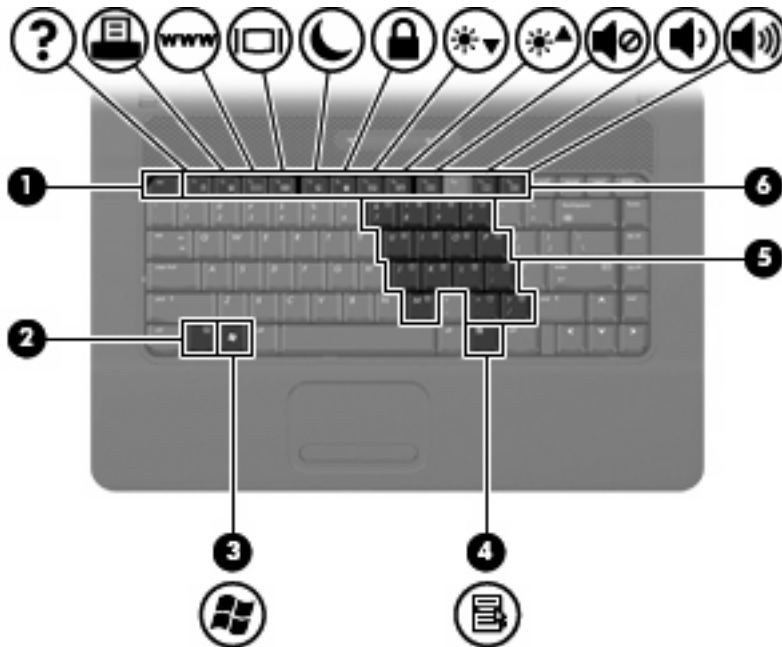
Component	Description
(1) Internal display switch	Turns off the display if the panel lid is closed while the power is on.
(2) Wireless button	Turns the wireless feature on or off but does not establish a wireless connection. NOTE: You must set up or access a wireless network to establish a wireless connection.
(3) Power button	<ul style="list-style-type: none">• When the computer is off, press the button to turn on the computer.• When the computer is on, press the button to shut down the computer.• When the computer is in the Sleep state, press the button briefly to exit Sleep.• When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>If the computer has stopped responding and Windows shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select Start > Control Panel > System and Maintenance > Power Options.</p>
(4) Speaker	Produces sound.



Component	Description
(1) Internal display switch	Turns off the display if the panel lid is closed while the power is on.
(2) Wireless button	Turns the wireless feature on or off but does not establish a wireless connection. NOTE: You must set up or access a wireless network to establish a wireless connection.
(3) Power button	<ul style="list-style-type: none"> • When the computer is off, press the button to turn on the computer. • When the computer is on, press the button to shut down the computer. • When the computer is in the Sleep state, press the button briefly to exit Sleep. • When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>To learn more about your power settings, select Start > Control Panel > System and Maintenance > Power Options.</p>
(4) Speaker	Produces sound.

Keys

 **NOTE:** Your computer may look slightly different from the illustration in this section.




Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes frequently used system functions when pressed in combination with a function key or the <code>esc</code> key.
(3) Windows logo key	Displays the Windows Start menu.
(4) Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5) Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad.
(6) Function keys	Execute frequently used system functions when pressed in combination with the <code>fn</code> key.


Front components



Component	Description
(1) Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio. NOTE: When a device is connected to the headphone jack, the computer speakers are disabled.
(2) Internal microphone	Records sound.
(3) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(4) SD Card Reader	Supports the following optional digital card formats: <ul style="list-style-type: none">• MultiMediaCard (MMC)• MultiMediaCard 4.2 (MMC Plus, including MMC Plus HC)• Secure Digital (SD) Memory Card• Secure Digital High Capacity (SDHC) Memory Card• Secure Digital High Speed (SDHS) Memory Card


Right-side components

 **NOTE:** Refer to the illustration that most closely matches your computer.

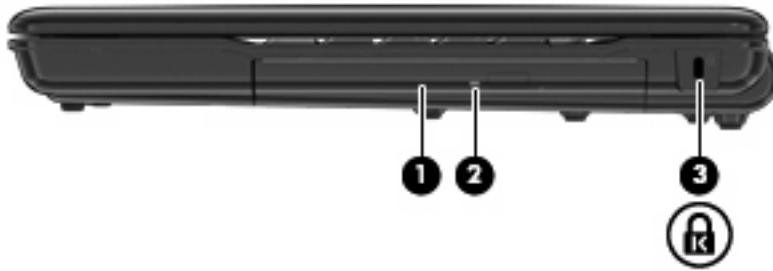


Component	Description
(1) Optical drive	Reads optical discs and, on select models, also writes to optical discs.
(2) Optical drive light	Blinking: The optical drive is being accessed.
(3) Security cable slot	Attaches an optional security cable to the computer.


NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.

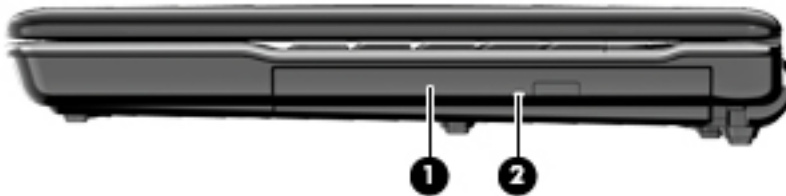


Component	Description
(1) Optical drive	Reads optical discs and, on select models, also writes to optical discs.
(2) Optical drive light	Blinking: The optical drive is being accessed.

Left-side components

 **NOTE:** Refer to the illustration that most closely matches your computer.

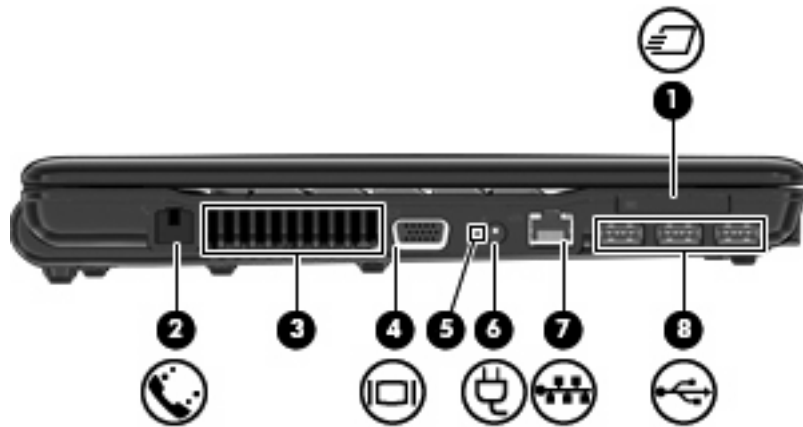


Component	Description
(1) ExpressCard slot	Supports optional ExpressCards.
(2) RJ-11 (modem) jack (select models only)	Connects a modem cable.
(3) Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4) External monitor port	Connects an external VGA monitor or projector.
(5) Battery light	<ul style="list-style-type: none">Amber: A battery is charging.Turquoise: A battery is close to full charge capacity.Blinking amber: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly.Off: If the computer is plugged into an external power source, the light turns off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source the light stays off until the battery reaches a low battery level.
(6) Power connector	Connects an AC adapter.
(7) RJ-45 (network) jack	Connects a network cable.
(8) USB ports (3)	Connect optional USB devices.

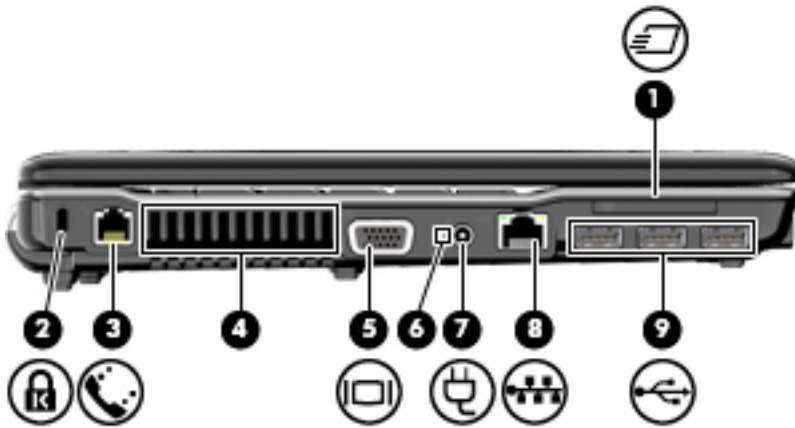

Component	Description
(1) ExpressCard slot	Supports optional ExpressCards.
(2) Security cable slot	Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.
(3) RJ-11 (modem) jack (select models only)	Connects a modem cable.
(4) Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(5) External monitor port	Connects an external VGA monitor or projector.
(6) Battery light	<ul style="list-style-type: none"> Amber: A battery is charging. Turquoise: A battery is close to full charge capacity. Blinking amber: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly. Off: If the computer is plugged into an external power source, the light turns off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source the light stays off until the battery reaches a low battery level.
(7) Power connector	Connects an AC adapter.
(8) RJ-45 (network) jack	Connects a network cable.
(9) USB ports (3)	Connect optional USB devices.

Bottom components

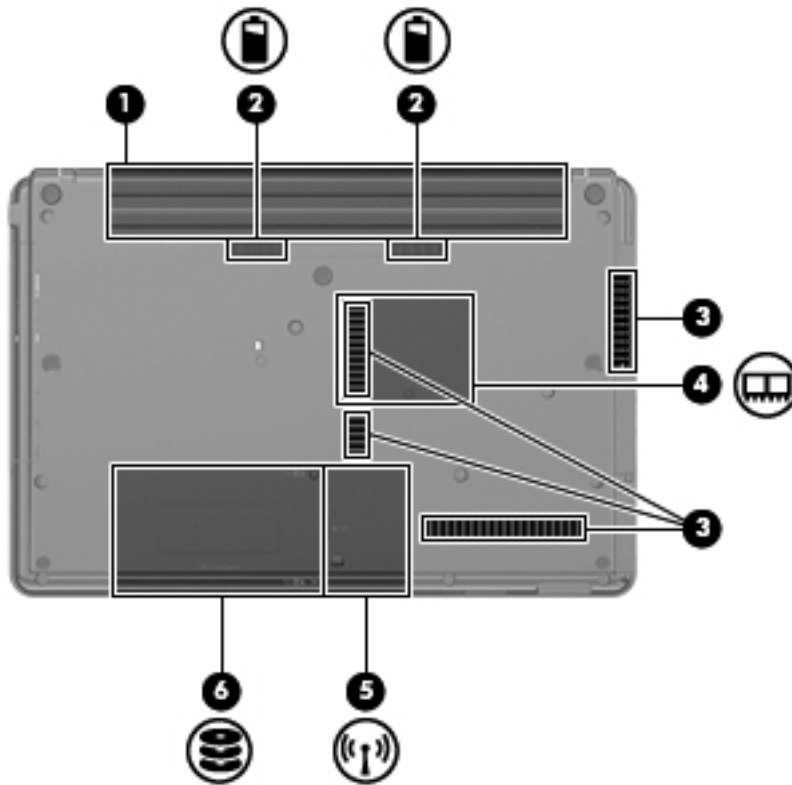


Component	Description
(1) Battery bay	Holds the battery.
(2) Battery release latches (2)	Release the battery from the battery bay.
(3) Vents (4)	Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4) Memory module compartment	Contains the memory module slots.
(5) WLAN module compartment	Contains the wireless LAN module slot. CAUTION: To prevent an unresponsive system and the display of a warning message, replace the WLAN module with only a module authorized for use in the computer by the governmental agency that regulates wireless devices in your country. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.
(6) Hard drive bay	Holds the hard drive and a Bluetooth device.

Wireless antennas (select models only)

On select computer models, at least 2 antennas send and receive signals from one or more wireless devices. These antennas are not visible from the outside of the computer.



 **NOTE:** For optimal transmission, keep the areas immediately around the antennas free from obstructions.

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

Additional hardware components



Component	Description
(1) Power cord*	Connects an AC adapter to an AC outlet.
(2) AC adapter	Converts AC power to DC power.
(3) Battery*	Powers the computer when the computer is not plugged into external power.
(4) Modem cable (select models only)*	Connects the internal modem to an RJ-11 telephone jack or to a country- or region-specific modem cable adapter.

*Modem cables, batteries, modem cable adapters, and power cords vary in appearance by country or region.

3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides the product brand and series name, serial number (s/n), and product number (p/n) of your computer.



- Product name **(1)**. This is the product name affixed to the front of your notebook.
- Serial number (s/n) **(2)**. This is an alphanumeric number that is unique to each product.
- Part number/Product number (p/n) **(3)**. This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
- Model description **(4)**. This is the alphanumeric identifier you use to locate documents, drivers, and support for your notebook.
- Warranty period **(5)**. This number describes the duration of the warranty period for this computer.

Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.

- Microsoft® Certificate of Authenticity—Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label—Provides regulatory information about the modem and lists the agency approval markings required by some of the countries or regions in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the memory module compartment.
- Wireless certification label(s) (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries or regions in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device

or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the memory module compartment.

- SIM (subscriber identity module) label (select models only)—Provides the ICCID (Integrated Circuit Card Identifier) of your SIM. This label is located inside the battery bay.
- HP Mobile Broadband Module serial number label (select models only)—Provides the serial number of your HP Mobile Broadband Module.

Index

A

AC adapter, identifying 16
antennas 15
applications key, Windows 9
audio-in (microphone) jack,
 identifying 3, 4, 10
audio-out (headphone) jack,
 identifying 3, 4, 10

B

battery bay 14, 17
battery light, identifying 12, 13
battery release latches,
 identifying 14
battery, identifying 16
bays
 battery 14, 17
 hard drive 14
Bluetooth label 18
buttons
 power 7, 8
 TouchPad 5
 wireless 7, 8

C

caps lock, identifying 6
Certificate of Authenticity label 17
compartments
 memory module 14
components
 additional hardware 16
 bottom 14
 display 3
 front 10
 left-side 12
 right-side 11
 top 5
connector, power 12, 13
cord, power 16

E

earbuds 3
esc key, identifying 9
ExpressCard slot, identifying 12,
 13
external monitor port,
 identifying 12, 13

F

fn key, identifying 9
function keys, identifying 9

H

hard drive bay, identifying 14
headphone (audio-out) jack 3,
 10
headphones 3
HP Mobile Broadband Module
 serial number label 18

I

internal display switch,
 identifying 7, 8
internal microphone 10
internal microphone,
 identifying 3, 4, 10

J

jacks
 audio-in (microphone) 10
 audio-out (headphone) 10
 RJ-11 (modem) 12, 13
 RJ-45 (network) 12, 13

K

keypad keys, identifying 9
keys
 esc 9
 fn 9
 function 9

keypad 9
Windows applications 9
Windows logo 9

L

labels
 Bluetooth 18
 HP Mobile Broadband 18
 Microsoft Certificate of
 Authenticity 17
 modem approval 17
 regulatory 17
 service tag 17
 SIM 18
 wireless certification 18
 WLAN 18
latches, battery release 14
lights
 battery 12, 13
 caps lock 6
 power 6
 wireless 6

M

memory module compartment,
 identifying 14
microphone (audio-in) jack 10
Microsoft Certificate of Authenticity
 label 17
modem approval label 17
modem cable, identifying 16
monitor port, external 12, 13

O

operating system
 Microsoft Certificate of
 Authenticity label 17
 Product Key 17
optical drive, identifying 11

P

ports
 external monitor 12, 13
 USB 12, 13
power button, identifying 7, 8
power connector, identifying 12, 13
power cord, identifying 16
power light, identifying 6
Product Key 17
product name and number, computer 17

R

regulatory information
 modem approval label 17
 regulatory label 17
 wireless certification labels 18
release latches, battery 14
RJ-11 (modem) jack, identifying 12, 13
RJ-45 (network) jack, identifying 12, 13

S

scroll zone, TouchPad 5
SD Card Reader, identifying 10
security cable slot, identifying 11, 13
serial number, computer 17
service tag 17
SIM label 18
slots
 ExpressCard 12, 13
 memory module 14
 security cable 11, 13
 WLAN 14
speaker, identifying 3, 4, 7, 8

T

TouchPad buttons, identifying 5
TouchPad scroll zone, identifying 5
TouchPad, identifying 5
traveling with the computer
 modem approval label 17
 wireless certification labels 18

U

USB ports, identifying 12, 13

V

vents, identifying 12, 13, 14

W

webcam light, identifying 3, 4
webcam, identifying 3, 4
Windows applications key, identifying 9
Windows logo key, identifying 9
wireless antennas 15
wireless button, identifying 7, 8
wireless certification label 18
wireless light, identifying 6
WLAN device 18
WLAN label 18
WLAN module compartment, identifying 14

