



HP CA350/CB350

Digital Camera

Quick Start Guide


For more details about the camera operation and troubleshooting, please read the User Manual located on the CDROM disc included with your camera or visit [**http://www.hp.com/support**](http://www.hp.com/support) and download it for the camera support page.

Getting Started


Inserting the Battery

Follow these instructions to insert the AA batteries into the battery compartment. If batteries are already installed, make sure to power off camera before inserting new batteries.


1. Make sure the power is off before inserting the batteries.
2. Open the battery compartment at the bottom of the camera.

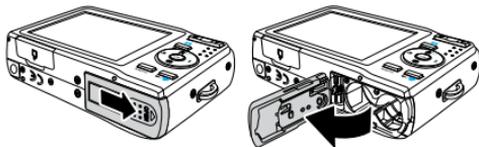

3. Insert the batteries into the compartment with the terminal facing inside the camera and the batteries indent next to the compartment door.

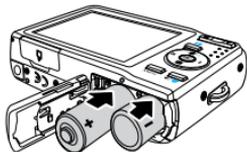


4. Close the battery compartment.

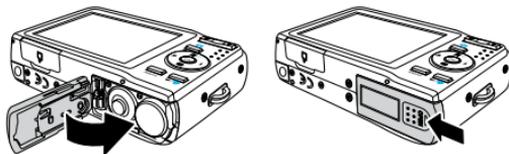


Camera Views

-Front View

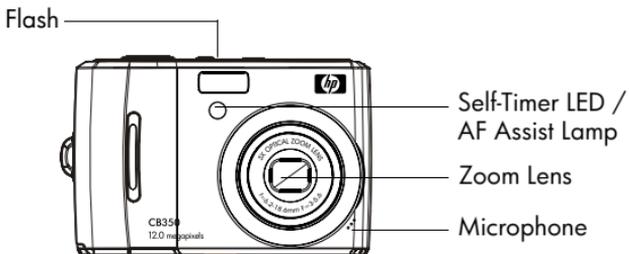


-Back View

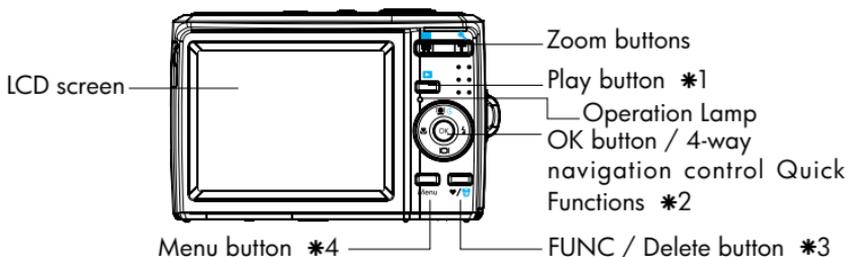


Please refer to the notes for marked item with * at page 4


-Top View

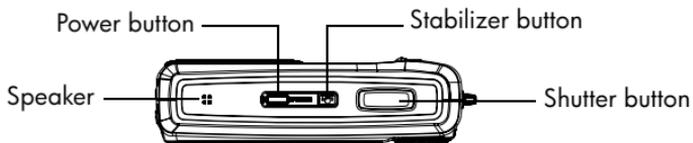

-Bottom View

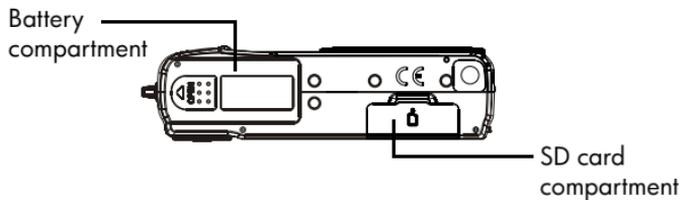

-Left/Right View

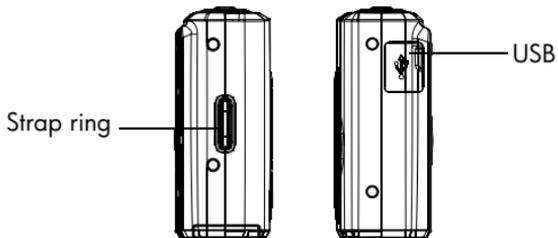

Button *1: Play

If the camera is turned off, press and hold to turn on camera in Playback mode.

If the camera is turned on, press to toggle camera to Playback or Shooting mode.

Button *2: FUNC/Delete

In Shooting mode, press to enter My Favor menu.

In Playback mode, press to delete an image, video or audio clip.

Button *3: Navigation Control

The 4-way **Navigation** Control and the **OK** button allows you to access the various menus available from the On Screen Display (OSD). Further functions of these buttons are as follows:



Button *4: Menu button

Press **Menu** button on camera exits if you've navigated into mode settings and don't want to make a selection

Initial Settings

You will be prompted to set up the language and the date and time when the camera is turned on for the first time.

-Setting the Language

1. Press , ,  or  to move through the selection.
2. Select a language, and then press OK to apply.

-Using Setup Menu

You can access the Setup menu whether you are in Shooting or Playback mode. The Setup menu allows you to configure general camera settings.

To go to Setup Menu:


1. Press  to launch the Shooting/ Playback Menu.
2. Use the  or  key to change the menu tab to Setup  menu.
3. Use the  or  key to move through the menu selections.
4. To select an item, press the OK button or .



5. Change the submenu settings using the 4-way navigation control.
6. Press the **OK** button to save and apply settings.

-Setting Battery Type

To ensure the camera displays the battery level correctly, be sure to set the battery type in Setup Menu to match the installed battery type: **Alkaline / NiMH / Lithium / Oxyride**.

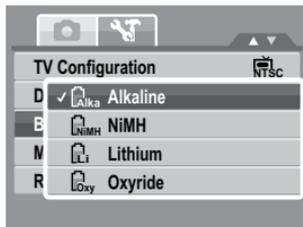

Modes

Your camera has two modes:

-Shooting mode

- Set to Shooting mode to capture images and record videos and audio clips.
- Shooting mode can be further set to many options such as auto, video and scene selection. "**Setting the Shooting Scene Mode on page 9**" below.

-Playback mode

- Set your camera to Playback mode so you can view and edit captured images as well as playback videos and audio clips. You can also attach a voice memo to any image in this mode.

Shooting mode is selected by default when using the Power button to turn on the camera. When you turn on your camera using the Power button, it will automatically set to shooting mode.

-Switching between Shooting mode and Playback Mode

In Shooting mode, press the **Play** button to switch to Playback mode.
In Playback mode, press the **Play** button to switch back to Shooting mode.

Using Shooting Functions

Shooting Menu

If you are in shooting mode, you can access the Shooting menu simply by pressing the  button on your camera.

When the menu is displayed, use the 4-way navigation control and the **OK** button to move through menu selections and apply your desired settings. To close the menu anytime, press the menu button again.

The Shooting menu allows you to change modes, and setup other capture settings.


1. Press  to launch the Shooting Menu.
2. Use the  or  key to move through the menu selections.
3. To select an item, press .
4. Change the submenu settings using the 4-way navigation control.
5. Press the **OK** button to save and apply settings.



-Setting the Shooting Scene Mode

Setting the Shooting Scene mode allows you to capture images with preset settings according to the scenes or environment.

For detailed explanations of the shooting scene modes, please read the user manual located on the Camera installation CDROM disc.

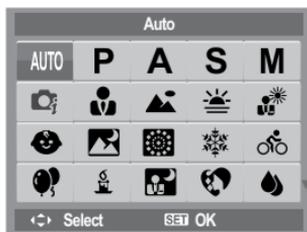


Using the Function Menu

The hot key of “heart” (FUNC button) is used for a quick setup of the latest six shooting modes and to adjust capturing settings in Shooting Mode.

-  • Press the **FUNC** of your camera to launch My Mode Menu.
-  • Press the **FUNC** again to close the menu.

- The Menu options bar displays the six latest used shooting modes.
- The available options for each item on the menu bar is shown in the Menu options.

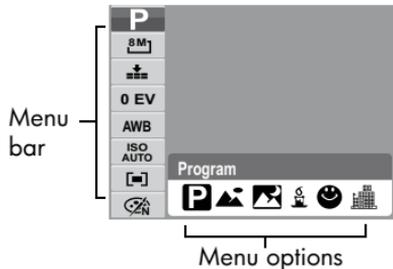

Getting Help

Should you have a technical support question or your HP Digital Camera require service within the warranty period, please contact the original point of purchase or an authorized HP reseller in your country. If service is not available at those locations, please contact an HP Branded Product warranty agent from the support contact list provided below. A service agent will work with you to troubleshoot your issue and if necessary, issue a Return Material Authorization (RMA) number in order to replace your HP Branded Product. For warranty claims, you will be required to provide a copy of your original dated sales receipt as proof of purchase and the issued RMA number. You will be responsible for shipping charges when shipping the product to the service center. The service agent will provide you with an address and you will also be responsible for any shipping charges to the warranty service center. Once your product is received by this service center, a replacement unit will be shipped back to you typically within 5 business days.

Contact/phone Support:	
Language	Contact/phone Support:
Chinese	simp.chinese@hpodd.com trad.chinese@hpodd.com
Deutsch	deutsch@hpodd.com
Dutch	hollands@hpodd.com
English	english@hpodd.com
Espanol	espanol@hpodd.com
Français	français@hpodd.com
Italiano	italiano@hpodd.com
Japanese	nippon@hpodd.com
Korean	korean@hpodd.com
Portuguese	portugues@hpodd.com
Svensk	svensk@hpodd.com

Contact/phone Support:		
Country	Language	Number
Europe Region (EMEA)		
België	Dutch and German	+ 32 2700 1724
Français	French	+ 33 171230454
Deutschland	German	+ 49 6950073896
Ireland	English	+ 353 1850882016
Italia	Italian	+ 39 269682189
Netherlands	Dutch	+ 31 202015093
España	Spanish	+ 34 914533458
Switzerland	German/French/Italian	+ 41 18009686
UK	English	+ 44 2073652400
North America		
United States	English	1.866.694.7633
Canada	English and French	1.866.694.7633

P/N: 7525C00076A