 







# HP Deskjet Ink Advantage Printer series K109

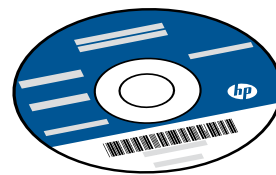


Start Here  
Comience aquí  
시작  
Lea esto

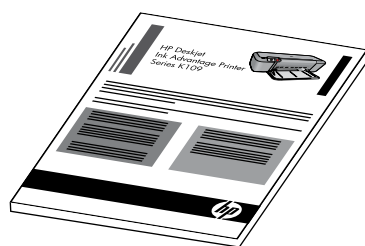

 
CH36790011

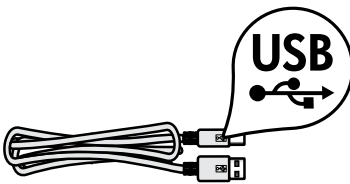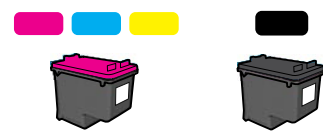


EN  
ES  
KO

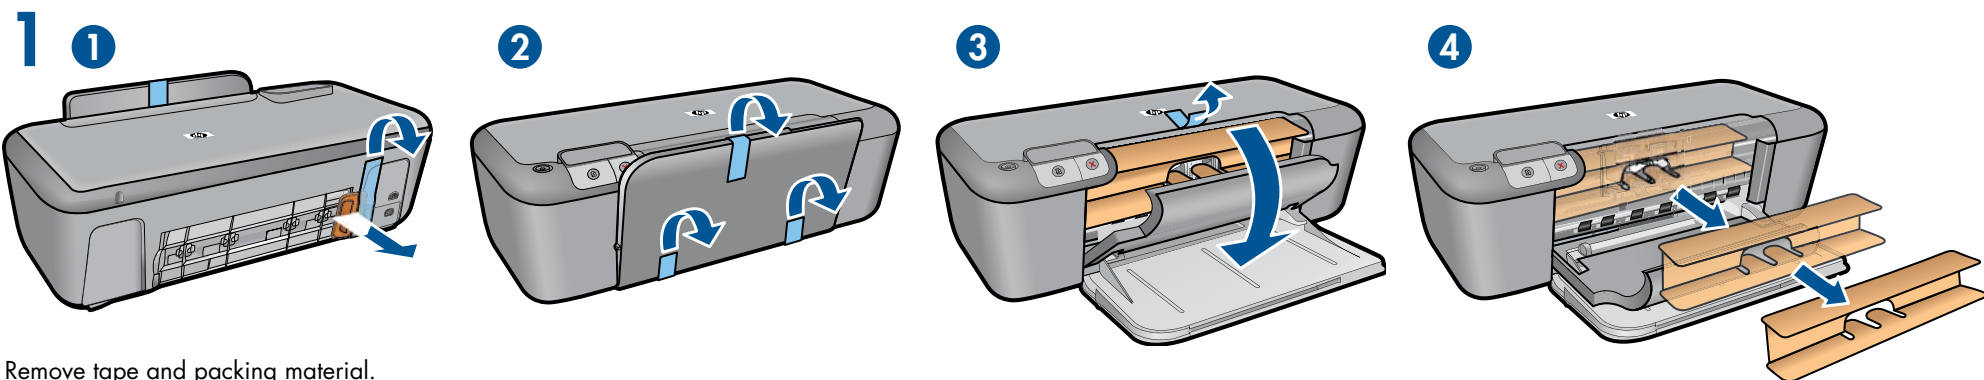


Remove tape and packing material.  
Extraiga la cinta y el material de embalaje.  
테이프 및 포장재를 제거합니다.

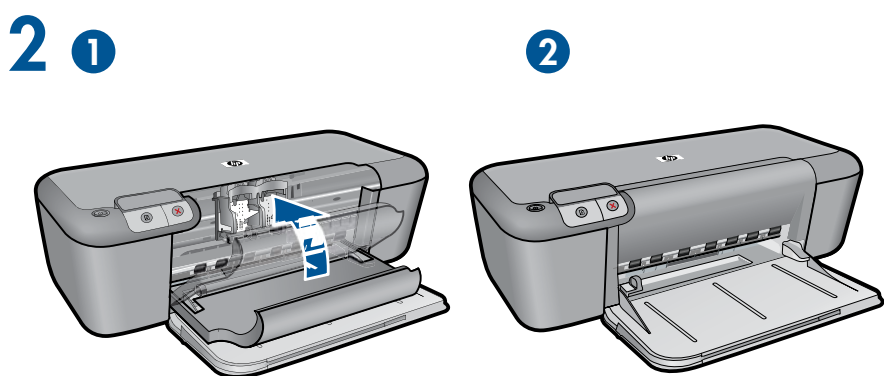


Close cartridge door.  
Cierre la puerta del cartucho.  
카트리지 덮개를 닫습니다.

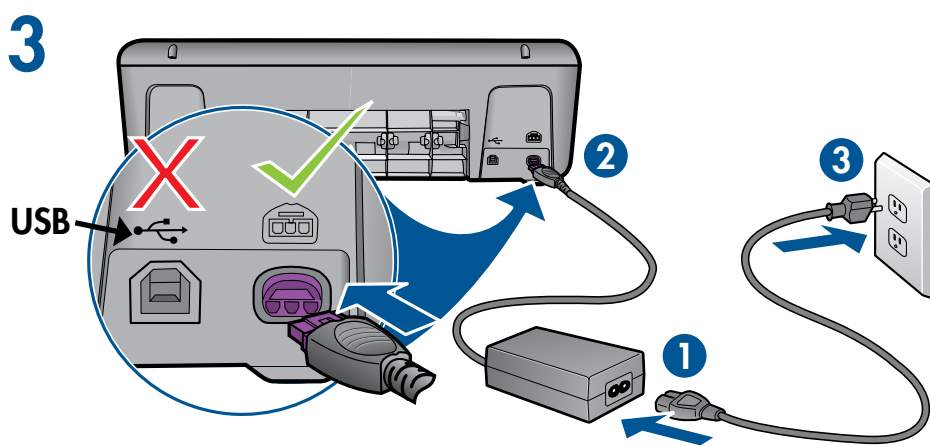


Connect power. Do not connect USB.  
Conecte la alimentación. No conecte el USB.  
전원을 연결합니다. USB는 연결하지 않습니다.

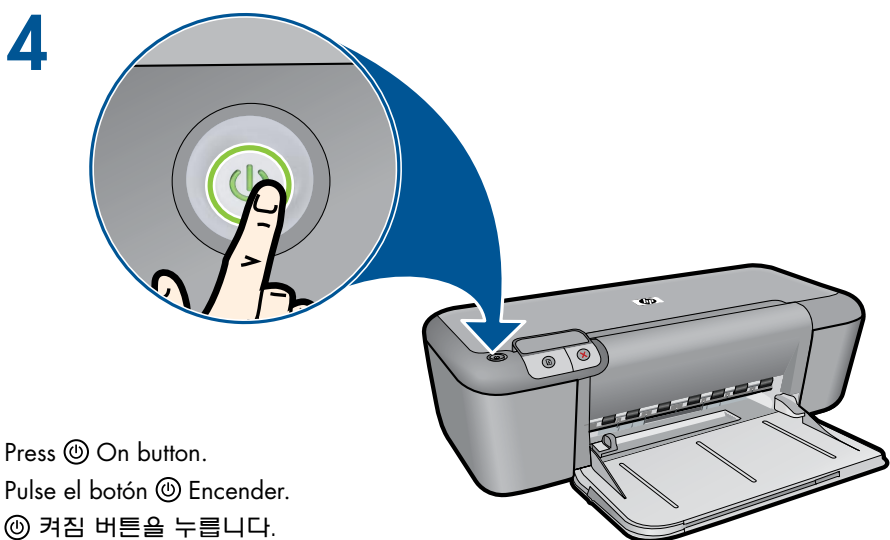


Press On button.  
Pulse el botón Encender.  
 켜짐 버튼을 누릅니다.

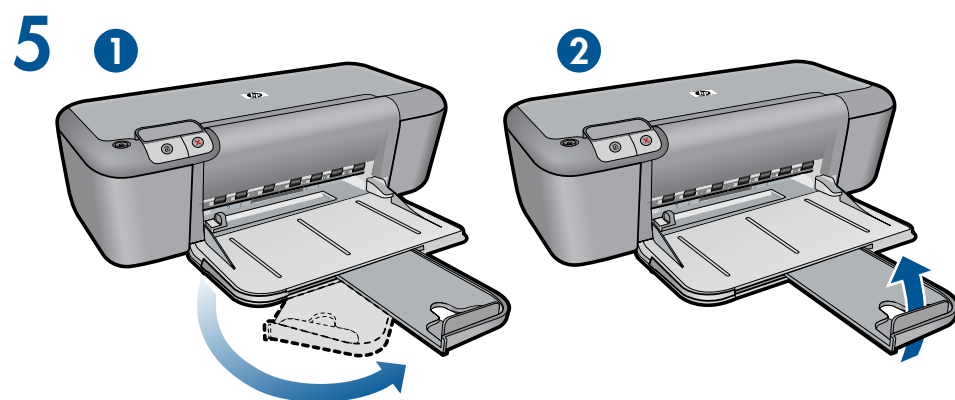


Pull out tray extension.  
Tire de la extensión de la bandeja.  
용지함 확장대를 뽑니다.

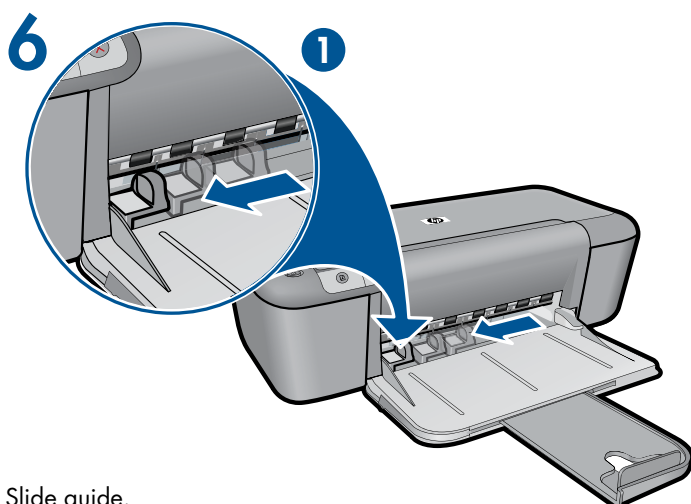

Slide guide.  
Deslice la guía.  
고정대를 모서리 끝까지 밀니다.

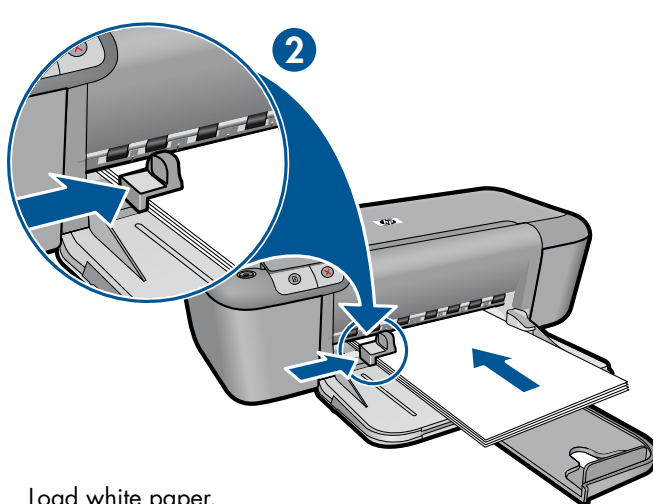


Load white paper.  
Coloque papel en blanco.  
흰색 용지를 넣습니다.

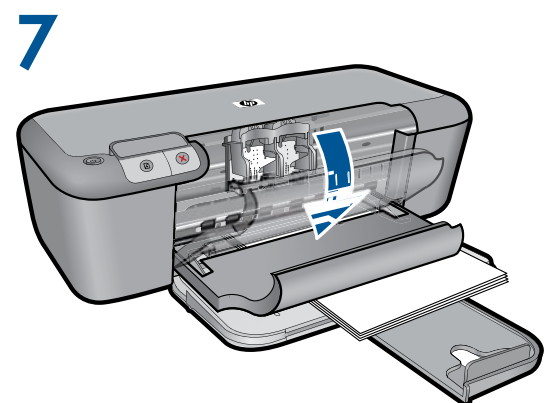

Open cartridge door.  
Abra la puerta de los cartuchos.  
카트리지 덮개를 엽니다.


8

8 1

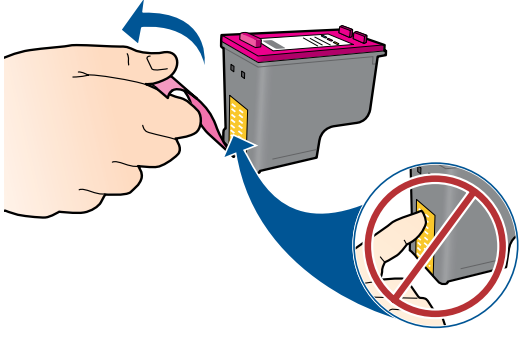


Pull pink tab to remove clear tape.  
Tire de la pestaña rosa para quitar la cinta transparente.  
분홍색 탭을 잡아당겨 투명 테이프를 제거합니다.

2

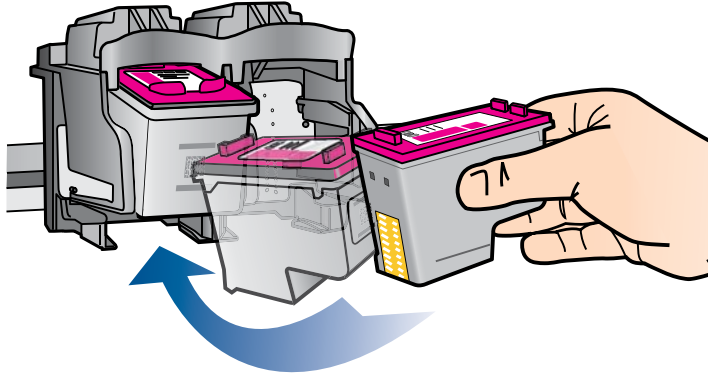


Push cartridges into carriage until they snap.  
Empuje los cartuchos en la guía hasta que encajen.  
카트리지가 고정될 때까지 캐리지 안으로 밀어 넣습니다.

3

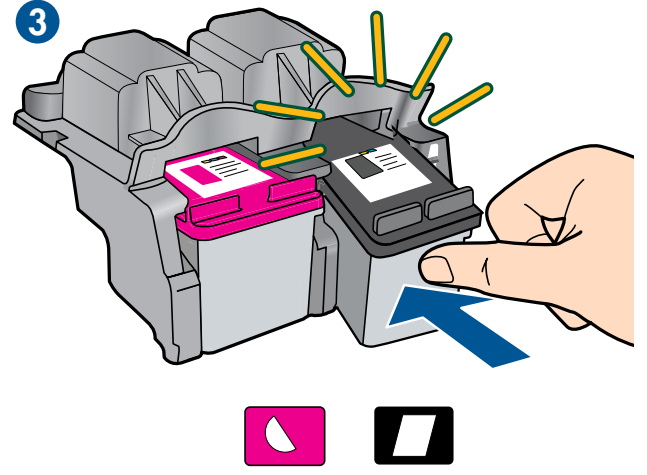

9

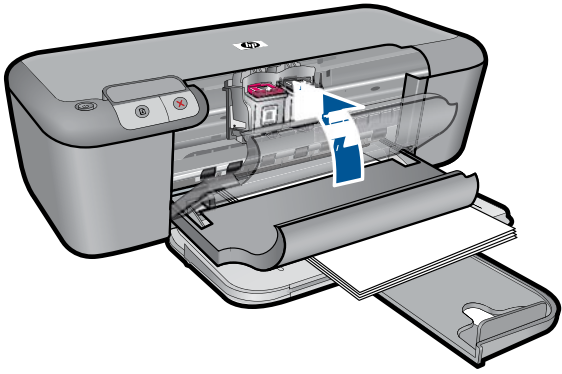


Close cartridge door.  
Cierre la puerta del cartucho.  
카트리지 덮개를 닫습니다.


10

Windows:

1

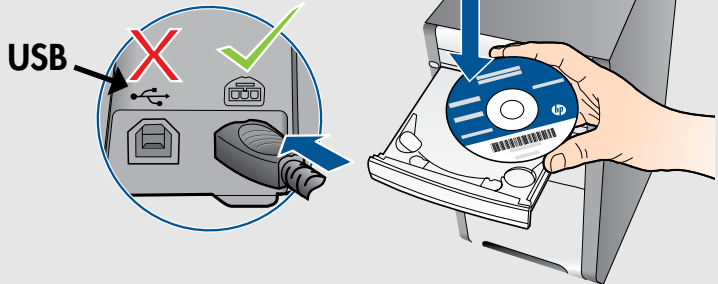

2

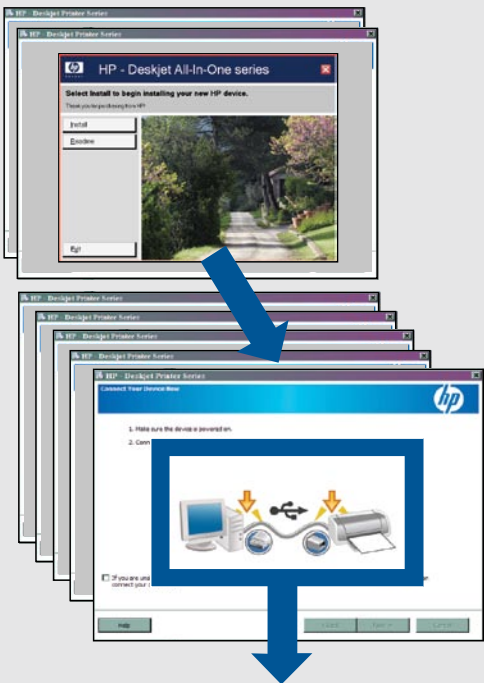


**IMPORTANT:** Do not connect USB until prompted on screen.

**IMPORTANT:** No conecte el USB hasta que se le solicite en la pantalla.


**중요:** 화면에 메시지가 나타날 때까지 USB를 연결하지 않습니다.

3

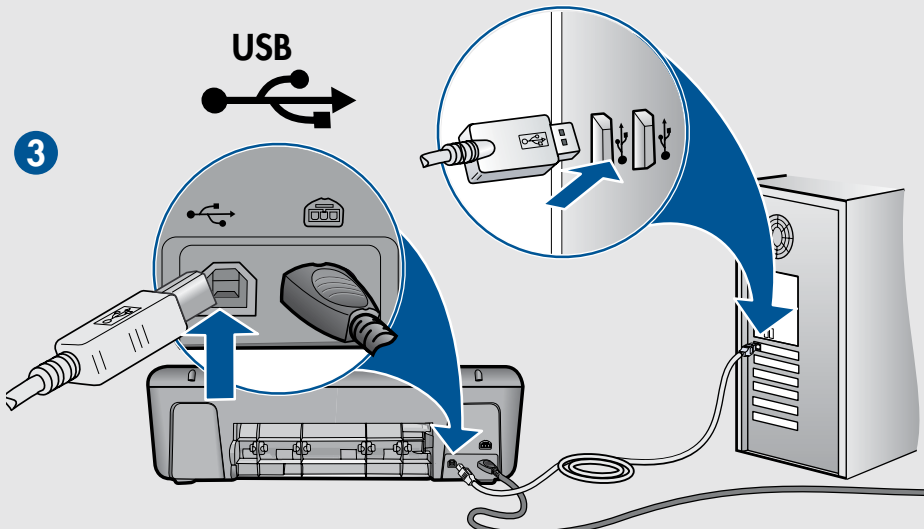


Mac:


1

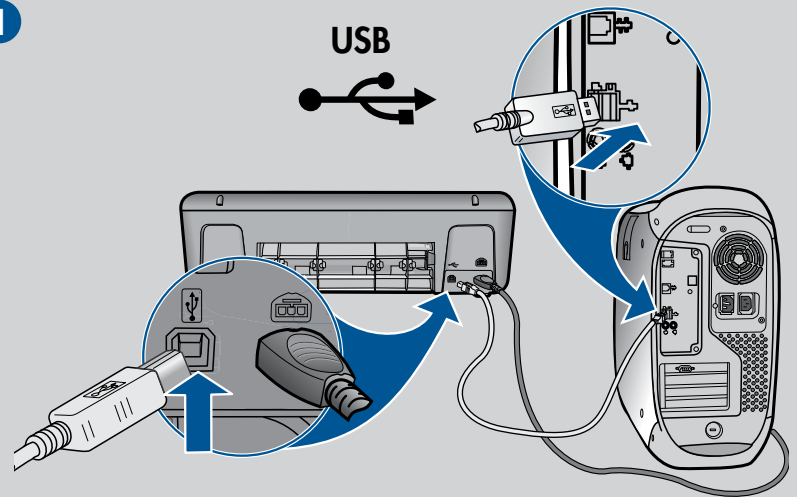

2

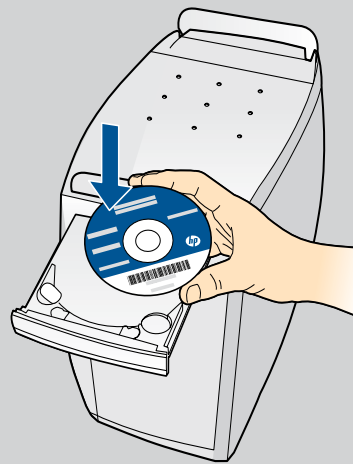


3

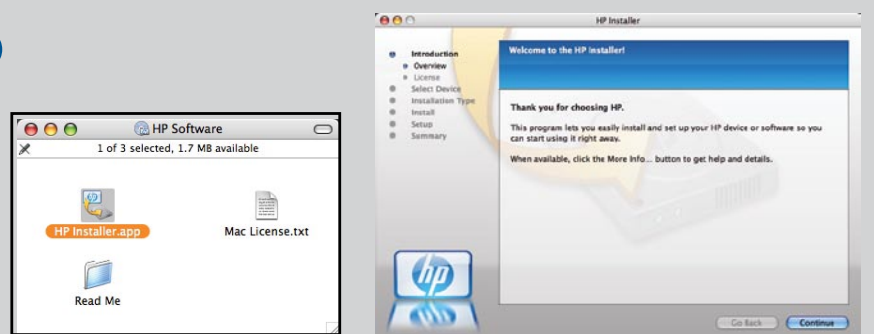

© 2009 Hewlett-Packard Development Company, L.P.

Printed in Korean  
Printed in Spanish  
Printed in English

 www.hp.com



www.hp.com/support