

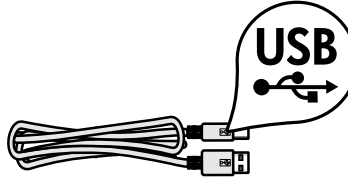
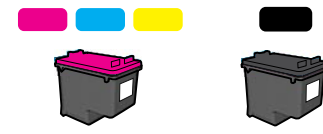


HP Deskjet Ink Advantage Printer series K109

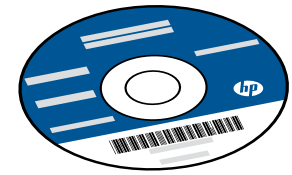


Mulai di Sini
เริ่มต้นที่นี่
Start Here
从这里开始

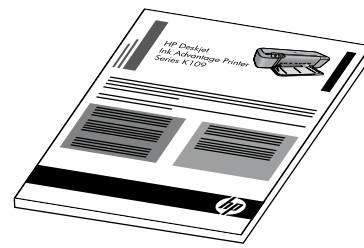

CH367-90012

ID
TH
EN
ZHCN




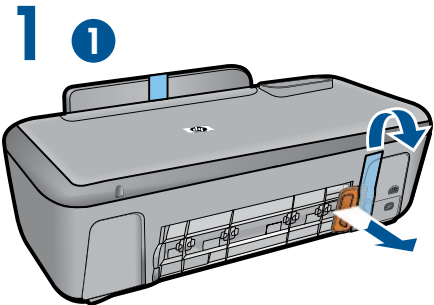


Lepas pita dan bahan kemasan.

นำเทปและวัสดุหีบห่อออก

Remove tape and packing material.

撕开胶带和包装材料。

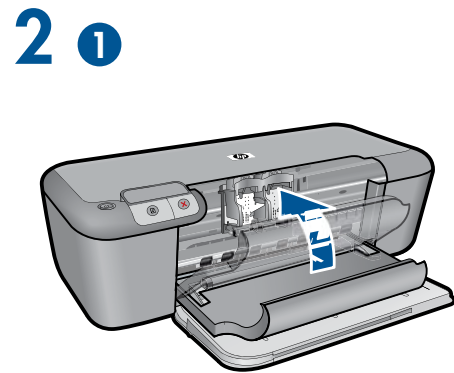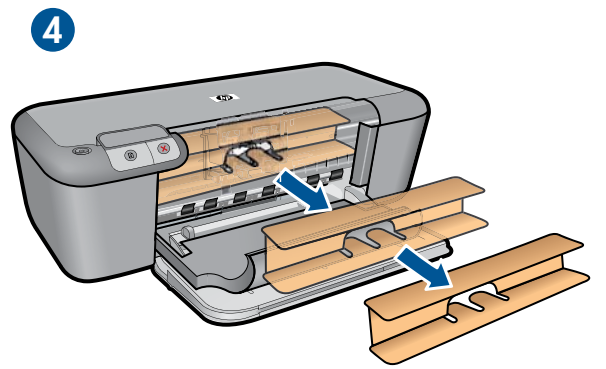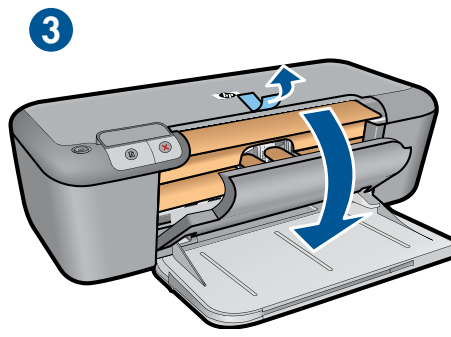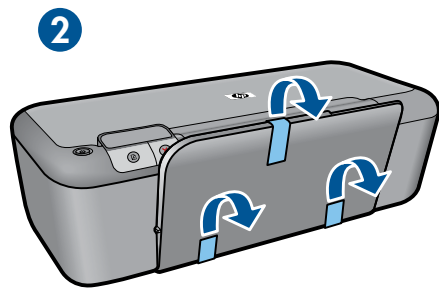


Tutup pintu kartrid.

ปิดฝาครอบตลับหมึกพิมพ์

Close cartridge door.

关闭墨盒门。

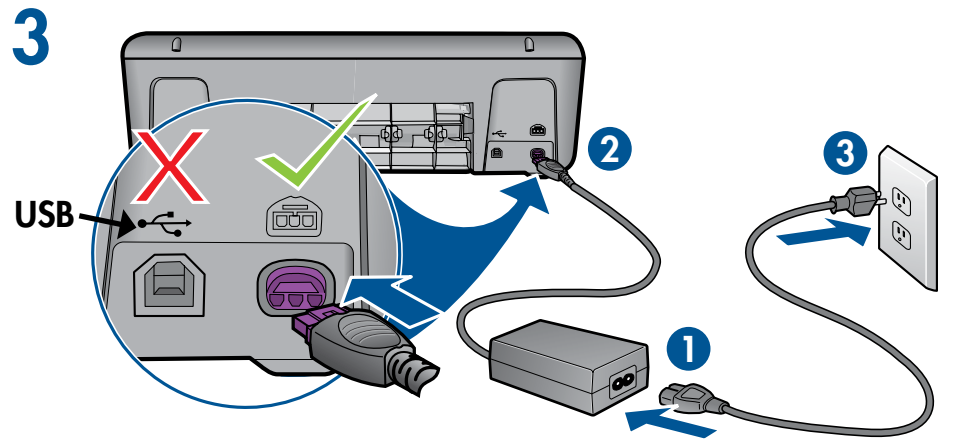


Hubungkan kabel daya. Jangan hubungkan kabel USB.

เสียบสายไฟ แต่อย่าต่อสาย USB

Connect power. Do not connect USB.

连接电源。请勿连接 USB 电缆。

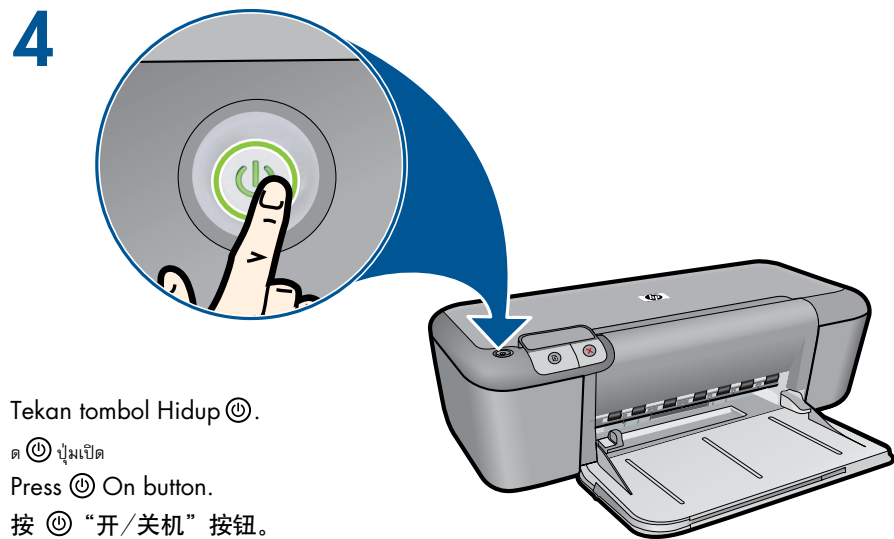


Tekan tombol Hidup

กดปุ่มเปิด

Press On button.

按 “开/关机” 按钮。

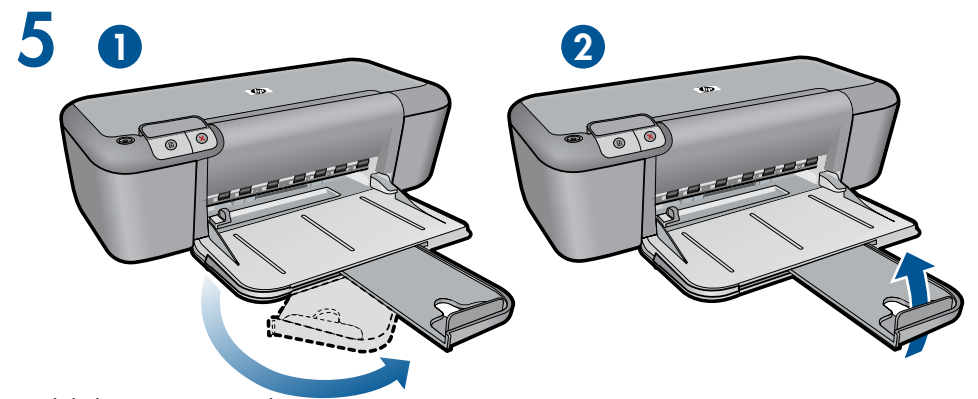


Tarik keluar penyangga baki.

งัดถาดรับกระดาษออกมา

Pull out tray extension.

拉出纸盒延长板。

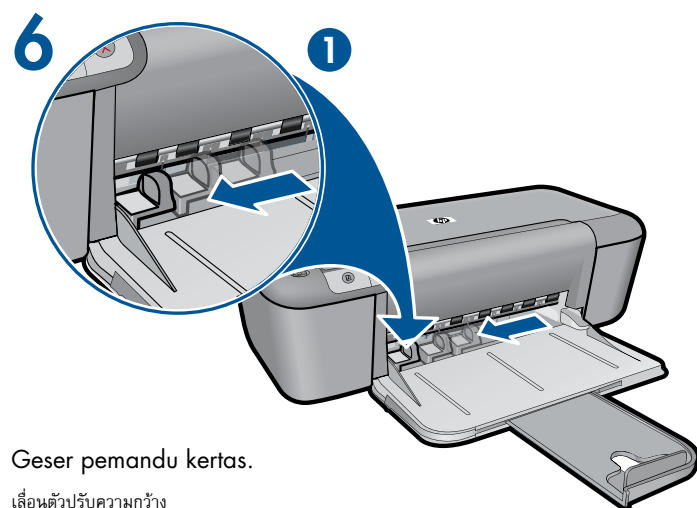


Geser pemandu kertas.

เลื่อนตัวปรับความกว้าง

Slide guide.

滑动导板。

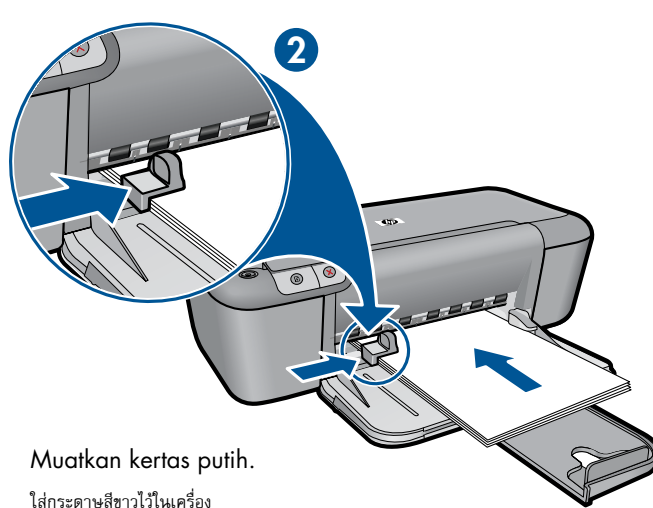


Muatkan kertas putih.

ใส่กระดาษสีขาวไว้ในเครื่อง

Load white paper.

放入白纸。

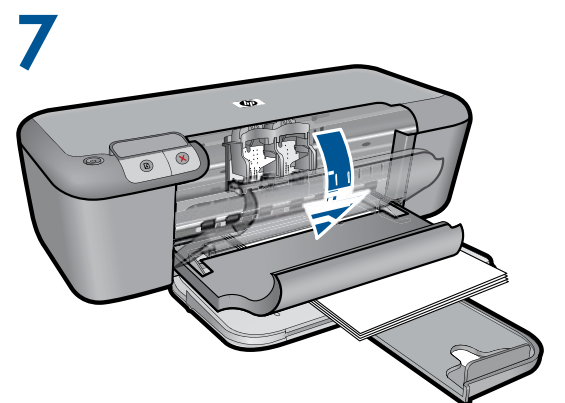

Buka pintu kartrid.

เปิดฝาครอบตลับหมึกพิมพ์

Open cartridge door.

打开墨盒门。

8

