

Pointing Devices and Keyboard User Guide

© Copyright 2009 Hewlett-Packard
Development Company, L.P.

Windows is a U.S. registered trademark of
Microsoft Corporation.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

First Edition: August 2009

Document Part Number: 539577-001

Product notice

This user guide describes features that are
common to most models. Some features
may not be available on your computer.

Table of contents

1 Using pointing devices

Setting pointing device preferences	1
Using the TouchPad	2
Connecting an external mouse	2

2 Using the keyboard

Using hotkeys	3
Displaying system information (fn+esc)	4
Opening Help and Support (fn+f1)	4
Opening the Print Options window (fn+f2)	4
Opening a Web browser (fn+f3)	5
Switching the screen image (fn+f4)	5
Initiating Sleep (fn+f5)	6
Initiating QuickLock (fn+f6)	6
Decreasing screen brightness (fn+f7)	6
Increasing screen brightness (fn+f8)	6
Playing, pausing or resuming an audio CD or a DVD (fn+f9)	6
Stopping an audio CD or a DVD (fn+f10)	7
Playing previous track or section of an audio CD or a DVD (fn+f11)	7
Playing next track or section of an audio CD or a DVD (fn+f12)	7

3 Using keypads

Using an integrated numeric keypad	9
Using an optional external numeric keypad	9

4 Cleaning the TouchPad and keyboard

Index	11
-------------	----

1 Using pointing devices



Component	Description
(1) TouchPad light	<ul style="list-style-type: none">• White: TouchPad is enabled.• Amber: TouchPad is disabled.
(2) TouchPad*	Moves the pointer and selects or activates items on the screen.
(3) Left TouchPad button*	Functions like the left button on an external mouse.
(4) TouchPad on/off button	Enables/disables the TouchPad.
(5) TouchPad vertical scroll zone	Scrolls up or down.
(6) Right TouchPad button*	Functions like the right button on an external mouse.

*This table describes factory settings. To view and change TouchPad preferences, select **Start > Devices and Printers**. Then, right-click the device representing your computer, and select **Mouse settings**.


Setting pointing device preferences

Use Mouse Properties in Windows® to customize settings for pointing devices, such as button configuration, click speed, and pointer options.

To access Mouse Properties, select **Start > Devices and Printers**. Then, right-click the device representing your computer, and select **Mouse settings**.

Using the TouchPad

To move the pointer, slide your finger across the TouchPad surface in the direction you want the pointer to go. Use the TouchPad buttons like the corresponding buttons on an external mouse. To scroll up and down using the TouchPad vertical scroll zone, slide your finger up or down over the lines.

 **NOTE:** If you are using the TouchPad to move the pointer, you must lift your finger off the TouchPad before moving it to the scroll zone. Simply sliding your finger from the TouchPad to the scroll zone will not activate the scrolling function.

Connecting an external mouse


You can connect an external USB mouse to the computer using one of the USB ports on the computer. A USB mouse can also be connected to the system using the ports on an optional docking device or expansion product.

2 Using the keyboard

Using hotkeys

Hotkeys are combinations of the **fn** key (1) and either the **esc** key (2) or one of the function keys (3).

The icons on the **f1** through **f12** keys represent the hotkey functions. Hotkey functions and procedures are discussed in the following sections.

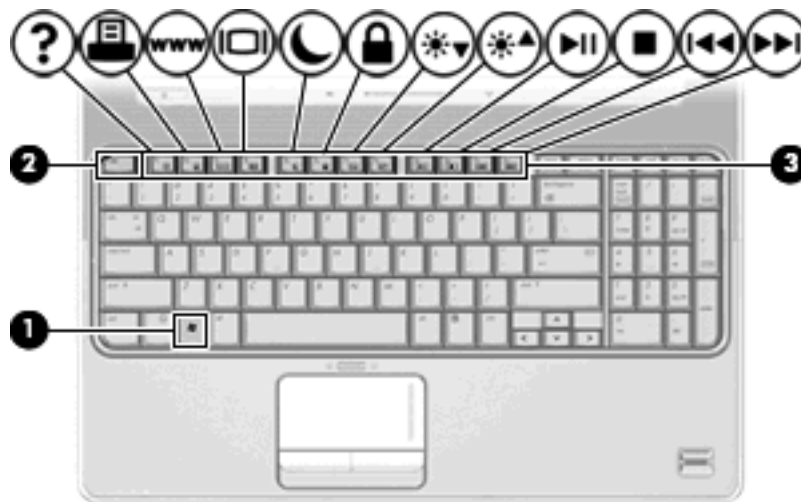

Function	Hotkey
Display system information.	fn+esc
Open Help and Support.	fn+f1
Open the Print Options window.	fn+f2
Open a Web browser.	fn+f3
Switch the screen image.	fn+f4
Initiate Sleep.	fn+f5
Initiate QuickLock.	fn+f6
Decrease screen brightness.	fn+f7
Increase screen brightness.	fn+f8
Play, pause, or resume an audio CD or a DVD.	fn+f9
Stop an audio CD or a DVD.	fn+f10

Function	Hotkey
Play the previous track or section on an audio CD or a DVD.	fn+f11
Play the next track on an audio CD or a DVD.	fn+f12

To use a hotkey command on the computer keyboard, follow either of these steps:

- Briefly press the **fn** key, and then briefly press the second key of the hotkey command.
– or –
- Press and hold down the **fn** key, briefly press the second key of the hotkey command, and then release both keys at the same time.

Displaying system information (fn+esc)

Press **fn+esc** to display information about system hardware components and the system BIOS version number.

In the Windows **fn+esc** display, the version of the system BIOS (basic input-output system) is displayed as the BIOS date. On some computer models, the BIOS date is displayed in decimal format. The BIOS date is sometimes called the system ROM version number.

Opening Help and Support (fn+f1)

Press **fn+f1** to open Help and Support.

In addition to providing information about your Windows operating system, Help and Support provides the following information and tools:

- Information about your computer, such as model and serial number, installed software, hardware components, and specifications
- Answers to questions about using your computer
- Tutorials to help you learn to use the computer and Windows features
- Updates for the Windows operating system, drivers, and the software provided on your computer
- Checkups for computer functionality
- Automated and interactive troubleshooting, repair solutions, and system recovery procedures
- Links to support specialists

Opening the Print Options window (fn+f2)

Press **fn+f2** to open the Print Options window of the active Windows application.

Opening a Web browser (fn+f3)

Press **fn+f3** to open your Web browser.

Until you have set up your Internet or network services, the **fn+f3** hotkey opens the Windows Connect to the Internet wizard.

After you have set up your Internet or network services and your Web browser home page, you can press **fn+f3** to quickly access your home page and the Internet.


Switching the screen image (fn+f4)

Press **fn+f4** to switch the screen image among display devices connected to the system. For example, if a monitor is connected to the computer, pressing **fn+f4** alternates the screen image from computer display to monitor display to simultaneous display on both the computer and the monitor.


Most external monitors receive video information from the computer using the external VGA video standard. The **fn+f4** hotkey can also alternate images among other devices receiving video information from the computer.

The following video transmission types, with examples of devices that use them, are supported by the **fn+f4** hotkey:

- LCD (computer display)
- External VGA (most external monitors)
- S-Video (televisions, camcorders, DVD players, VCRs, and video capture cards with S-Video-in jacks)
- HDMI (televisions, camcorders, DVD players, VCRs, and video capture cards with HDMI ports)
- Composite video (televisions, camcorders, DVD players, VCRs, and video capture cards with composite-video-in jacks)

 **NOTE:** Composite video devices can be connected to the system only by using an optional docking device or expansion product.


Initiating Sleep (fn+f5)

 **CAUTION:** To reduce the risk of information loss, save your work before initiating Sleep.

Press **fn+f5** to initiate Sleep.


When Sleep is initiated, your information is stored in system memory, the screen is cleared, and power is conserved. While the computer is in the Sleep state, the power lights blink.

The computer must be on before you can initiate Sleep.

 **NOTE:** If a critical battery level occurs while the computer is in the Sleep state, the computer initiates Hibernation and the information stored in memory is saved to the hard drive. The factory setting for critical battery action is Hibernate, but this setting can be changed using Power Options in Windows Control Panel.

To exit Sleep, briefly press the power button.


The function of the **fn+f5** hotkey can be changed. For example, you can set the **fn+f5** hotkey to initiate Hibernation instead of Sleep.

 **NOTE:** In all Windows operating system windows, references to the *sleep button* apply to the **fn+f5** hotkey.

Initiating QuickLock (fn+f6)

Press **fn+f6** to initiate the QuickLock security feature.

QuickLock protects your information by displaying the operating system Log On window. While the Log On window is displayed, the computer cannot be accessed until a Windows user password or a Windows administrator password is entered.

 **NOTE:** Before you can use QuickLock, you must set a Windows user password or a Windows administrator password. For instructions, refer to Help and Support.

To use QuickLock, press **fn+f6** to display the Log On window and lock the computer. Then follow the instructions on the screen to enter your Windows user password or your Windows administrator password and access the computer.

Decreasing screen brightness (fn+f7)

Press **fn+f7** to decrease screen brightness. Hold down the hotkey to decrease the brightness level incrementally.

Increasing screen brightness (fn+f8)

Press **fn+f8** to increase screen brightness. Hold down the hotkey to increase the brightness level incrementally.

Playing, pausing or resuming an audio CD or a DVD (fn+f9)

The **fn+f9** hotkey functions only when an audio CD or a DVD is inserted:

- If the audio CD or the DVD is not playing, press **fn+f9** to begin or resume the play.
- If the audio CD or the DVD is playing, press **fn+f9** to pause the play.

Stopping an audio CD or a DVD (fn+f10)

Press **fn+f10** to stop the play of an audio CD or a DVD.

Playing previous track or section of an audio CD or a DVD (fn+f11)

While an audio CD or a DVD is playing, press **fn+f11** to play the previous track of the CD or the previous section of the DVD.

Playing next track or section of an audio CD or a DVD (fn+f12)

While an audio CD or a DVD is playing, press **fn+f12** to play the next track of the CD or the next section of the DVD.

3 Using keypads

The computer has an integrated numeric keypad and also supports an optional external numeric keypad or an optional external keyboard that includes a numeric keypad.



Component	Description
(1) num lk key	<ul style="list-style-type: none">Enables/disables the integrated numeric keypad.– or –Enables/disables num lock for a connected optional numeric keypad.
(2) Num lock light	<ul style="list-style-type: none">The integrated numeric keypad is enabled.– or –Num lock is enabled on a connected optional numeric keypad.
(3) Integrated numeric keypad	Can be used like the keys on an external numeric keypad.

Using an integrated numeric keypad

Keys on the integrated numeric keypad function differently according to whether num lock is on or off. (Num lock is turned off at the factory.) For example:

- When num lock is on, keypad keys type numbers.
- When num lock is off, keypad keys function like the arrow, page up, or page down keys.

To turn num lock on or off as you work:

- ▲ Press the **num lk** key on the integrated keypad.

Using an optional external numeric keypad

Keys on most external numeric keypads function differently according to whether num lock is on or off. (Num lock is turned off at the factory.) For example:

- When num lock is on, most keypad keys type numbers.
- When num lock is off, most keypad keys function like the arrow, page up, or page down keys.

When num lock on an external keypad is turned on, the num lock light on the computer is turned on. When num lock on an external keypad is turned off, the num lock light on the computer is turned off.

To turn num lock on or off on an external keypad as you work:

- ▲ Press the **num lk** key on the external keypad, not on the computer.

4 Cleaning the TouchPad and keyboard

Dirt and grease on the TouchPad can cause the pointer to jump around on the screen. To avoid this, clean the TouchPad with a damp cloth, and wash your hands frequently when using the computer.

⚠ WARNING! To reduce the risk of electric shock or damage to internal components, do not use a vacuum cleaner attachment to clean the keyboard. A vacuum cleaner can deposit household debris on the keyboard surface.

Clean the keyboard regularly to prevent keys from sticking and to remove dust, lint, and particles that can become trapped beneath the keys. A can of compressed air with a straw extension can be used to blow air around and under the keys to loosen and remove debris.



Index

B

buttons

- TouchPad 1
- TouchPad on/off 1

C

composite video 5

D

display

- image, switching 5
- screen brightness hotkeys 6

F

fn key 3
function keys 3

H

HDMI 5
Help and Support hotkey 4
hotkeys

- audio CD or DVD controls 6
- decreasing screen brightness 6
- description 3
- displaying system information 4
- increasing screen brightness 6
- initiating QuickLock 6
- initiating Sleep 6
- opening Help and Support 4
- opening Print Options window 4
- opening Web browser 5
- switching screen image 5
- using 4

K

keyboard 3

keyboard hotkeys, identifying 3

keypad, external

- num lock 9
- using 9

keypad, integrated

- identifying 8
- num lock 9
- using 9

L

lights

- num lock 8
- TouchPad 1

M

media controls, hotkeys 6
mouse, external

- connecting 2
- setting preferences 1

N

num lock light, identifying 8
num lock, external keypad 9
num lock, integrated keypad 9

P

pointing devices

- identifying 1
- setting preferences 1

Print Options window hotkey 4

Q

QuickLock hotkey 6

S

S-Video 5
screen brightness hotkeys 6
screen image, switching 5
scrolling zones, TouchPad 1
Sleep hotkey 6

system information hotkey 4

T

TouchPad

using 2

TouchPad buttons, identifying 1
TouchPad light, identifying 1
TouchPad on/off button 1
TouchPad scrolling zones, identifying 1
TouchPad, identifying 1

V

video transmission types 5

W

Web browser hotkey 5

