




# CalcPad 200

## DESKTOP CALCULATOR

### User's Guide

HP Part Number: NW227-90001  
First Edition: Jan 2009

#### HP CalcPad 200 Keyboard Legend

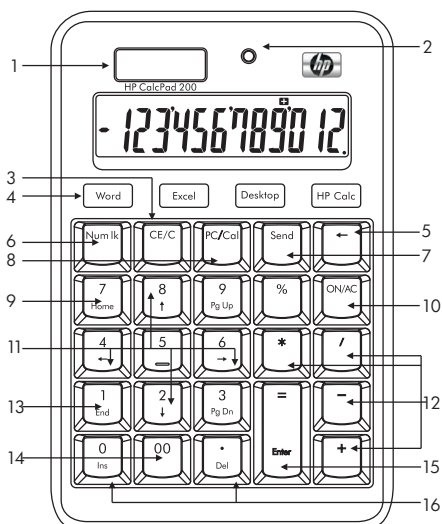

- |                                     |                                  |
|-------------------------------------|----------------------------------|
| 1. Solar panel                      | 2. Power indicator light         |
| 3. Clear key                        | 4. Application hot keys (launch) |
| 5. Backspace key                    | 6. Number lock key               |
| 7. Send key                         | 8. PC/CalcPad toggle key         |
| 9. Home key                         | 10. ON/All clear key             |
| 11. Directional arrow keys (cursor) | 12. Mathematical function keys   |
| 13. End key                         | 14. Double zero key              |
| 15. Enter key                       | 16. Insert and delete keys       |

### HP CalcPad 200

#### Features

- The keypad layout of the CalcPad 200 is similar to the standard PC 10-key numeric pad.
- The keypad includes basic mathematical functions: addition, subtraction, multiplication, division, and percent.
- The CalcPad 200 is compatible with many Microsoft Windows® applications: 98, 98 SE, NT, and ME, as well as 2000 Professional and XP.
- The CalcPad 200 has two additional USB ports and may be used as a hub for any USB-compatible PC peripherals.
- The CalcPad 200 can be used as a security keypad to enter pin numbers, or to enter menu options as long as your system is compatible with a standard PC 10-key numeric keypad.
- The CalcPad 200 supports plug and play.
- The CalcPad 200 also works with Apple computers®, Apple Macintosh® products, and most computers that support the USB protocol.

#### Installation

To install the CalcPad 200 onto your PC, simply download the driver for your product at <http://drivers.hpcalculating.com>. Once installed, this software permits you to:

- Launch commonly used applications on your PC from the CalcPad.
- Choose an HP calculator emulator for use with the CalcPad.
- Select and set a default calculator to load whenever your PC is turned on.

Once the initial install is complete, you may plug the CalcPad into any USB port on your PC. Insert the end of the enclosed cable with the small plug into the CalcPad and the large plug into a USB port on your PC.

#### Launching applications

Once the CalcPad has been installed, press the hot keys, **Word**, **Excel**, **Desktop**, **HP Calc**, to launch and toggle between the following applications installed on your PC: Microsoft Word®, Microsoft Excel®, the Desktop, and HP Calculator software. **Note:** the applications listed must be installed on your PC prior to using the hot keys on the CalcPad. Microsoft Word and Excel are registered trademarks of Microsoft Corporation. Microsoft software applications are not included with this product.

#### Basic Key Functions

1. Press the ON/AC key, **ON/AC**, to turn on the CalcPad 200.
2. Press the PC/Calculator key, **PC/Cal**, to toggle between the PC and CalcPad:
  - In PC mode, **PC USB** displays on the CalcPad's LCD screen, and keys pressed on the CalcPad are displayed on the selected emulator or application on the PC.
  - In **Cal** mode, keys pressed on the CalcPad are displayed on the CalcPad's LCD screen. Displayed data may be sent to the active PC application or emulator by pressing the send key, **Send**, on the CalcPad.
3. Press **CE/C** to clear the display.
4. Press the double zero key, **00**, to assist with numbers with multiple zeros.
5. Press the backspace key, **←**, to delete one number at a time, starting with the last number entered.

6. Press the directional arrow keys, **[4]**, **[6]**, **[8]**, **[2]** to position the cursor for deleting, editing and inserting numbers in PC mode.
7. Press the number lock key, **[Num Lk]**, to activate/deactivate the numbered keys and access the secondary key functions in PC mode. When number lock is active, **NumLock** is displayed on the CalcPad's LCD screen.
8. The CalcPad 200 turns off automatically after eight minutes if not in use.

#### Legal Notices

This manual and any examples contained herein are provided "as is" and are subject to change without notice. Hewlett-Packard Company makes no warranty of any kind with regard to this manual, including, but not limited to, the implied warranties of merchantability, non-infringement and fitness for a particular purpose. Hewlett-Packard Company shall not be liable for any errors or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual or the examples contained herein. Copyright © 2009 Hewlett-Packard Development Company, L.P. Reproduction, adaptation, or translation of this manual is prohibited without prior written permission of Hewlett-Packard Company, except as allowed under the copyright laws. Hewlett-Packard Company  
16399 West Bernardo Drive  
San Diego, CA 92127-1899  
USA

#### Warranty, Regulatory, and Contact Information

##### Changing the Battery

This product has two power sources:

- Solar energy
- AG 13 (1.5V battery)

When the LCD display becomes blurry or difficult to read, you may rely on solar power, or change the battery. Change the battery with the power turned off.

To change the battery:

1. Unscrew the battery compartment on the back of the CalcPad 200 with a small screwdriver.
2. Using the screwdriver, or other small, pointed object, carefully pry out the battery by inserting the tool into the slot next to the battery and lifting the bottom of the battery. **Note:** forcing the battery out may damage the unit.
3. Insert the new battery into edge of the compartment furthest from the slot, and then gently press it into the battery compartment with the positive polarity symbol facing outward. Do not use rechargeable batteries. Use only new batteries, and dispose of old batteries properly. **Warning!** Throwing old batteries into flame or fire may cause an explosion.
4. Replace the battery cover.

##### HP Limited Hardware Warranty and Customer Care

This HP Limited Warranty gives you, the end-user customer, express limited warranty rights from HP, the manufacturer. Please refer to HP's Web site for an extensive description of your limited warranty entitlements. In addition, you may also have other legal rights under applicable local law or special written agreement with HP.

##### Limited Hardware Warranty Period

Duration: 12 months total (may vary by region, please visit [www.hp.com/support](http://www.hp.com/support) for latest information).

**General Terms**

HP warrants to you, the end-user customer, that HP hardware, accessories and supplies will be free from defects in materials and workmanship after the date of purchase, for the period specified above. If HP receives notice of such defects during the warranty period, HP will, at its option, either repair or replace products which prove to be defective. Replacement products may be either new or like-new.

HP warrants to you that HP software will not fail to execute its programming instructions after the date of purchase, for the period specified above, due to defects in material and workmanship when properly installed and used. If HP receives notice of such defects during the warranty period, HP will replace software media which does not execute its programming instructions due to such defects.

HP does not warrant that the operation of HP products will be uninterrupted or error free. If HP is unable, within a reasonable time, to repair or replace any product to a condition as warranted, you will be entitled to a refund of the purchase price upon prompt return of the product with proof of purchase.

HP products may contain remanufactured parts equivalent to new in performance or may have been subject to incidental use. Warranty does not apply to defects resulting from (a) improper or inadequate maintenance or calibration, (b) software, interfacing, parts or supplies not supplied by HP, (c) unauthorized modification or misuse, (d) operation outside of the published environmental specifications for the product, or (e) improper site preparation or maintenance.

HP MAKES NO OTHER EXPRESS WARRANTY OR CONDITION WHETHER WRITTEN OR ORAL. TO THE EXTENT ALLOWED BY LOCAL LAW, ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY SET FORTH ABOVE. Some countries, states or provinces do not allow limitations on the duration of an implied warranty, so the above limitation or exclusion might not apply to you. This warranty gives you specific legal rights and you might also have other rights that vary from country to country, state to state, or province to province.

TO THE EXTENT ALLOWED BY LOCAL LAW, THE REMEDIES IN THIS WARRANTY STATEMENT ARE YOUR SOLE AND EXCLUSIVE REMEDIES. EXCEPT AS INDICATED ABOVE, IN NO EVENT WILL HP OR ITS SUPPLIERS BE LIABLE FOR LOSS OF DATA OR FOR DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFIT OR DATA), OR OTHER DAMAGE, WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. Some countries, States or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. HP shall not be liable for technical or editorial errors or omissions contained herein.

FOR CONSUMER TRANSACTIONS IN AUSTRALIA AND NEW ZEALAND: THE WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT TO THE EXTENT LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT OR MODIFY AND ARE IN ADDITION TO THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT TO YOU.

**Customer Care**

In addition to the one year hardware warranty your HP calculator also comes with one year of technical support. If you need assistance, HP customer care can be reached by either email or telephone. Before calling please locate the call center nearest you from the list below. Have your proof of purchase and calculator serial number ready when you call.

Telephone numbers are subject to change, and local and national telephone rates may apply. For more support information, please visit the web at: [www.hp.com/support](http://www.hp.com/support).

**Product Regulatory & Environment Information**

**Federal Communications Commission Notice**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

**Modifications**

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Hewlett-Packard Company may void the user's authority to operate the equipment.

**Cables**

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods in order to maintain compliance with FCC Rules and Regulations.

**Declaration of Conformity for Products Marked with the FCC Logo (United States only)**

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

For questions regarding the product, contact:

Hewlett-Packard Company  
P. O. Box 692000, Mail Stop 530113  
Houston, Texas 77269-2000  
Or, call 1-800-HP-INVENT (1-800-474-6836).

For questions regarding this FCC declaration, contact:

Hewlett-Packard Company  
P. O. Box 692000, Mail Stop 510101  
Houston, Texas 77269-2000  
Or, call (281) 514-3333.

To identify this product, refer to the part, series, or model number found on the product.

**Canadian Notice**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

**Avis Canadien**

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.


**European Union Regulatory Notice**

This product complies with the following EU Directives:

- Low Voltage Directive 2006/95/EC
- EMC Directive 2004/108/EC

Compliance with these directives implies conformity to applicable harmonized European standards (European Norms) which are listed on the EU Declaration of Conformity issued by Hewlett-Packard for this product or product family.

This compliance is indicated by the following conformity marking placed on the product:

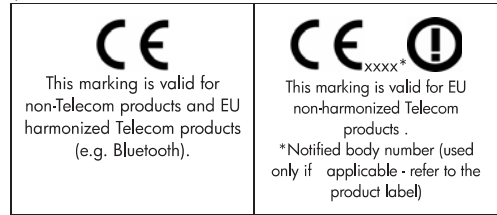

Hewlett-Packard GmbH, HQ-TRE, Herrenberger Strasse 140, 71034 Boeblingen, Germany

**Japanese Notice**

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としています。この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをして下さい。


**Korean Notice**

8급 기기 (가정용 방송통신기기)	이 기기는 가정용(8급)으로 전자파적합등록을 한 기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.
--------------------	--

**Perchlorate Material - special handling may apply**

This calculator's Memory Backup battery may contain perchlorate and may require special handling when recycled or disposed in California.

**Disposal of Waste Equipment by Users in Private Household in the European Union**



This symbol on the product or on its packaging indicates that this product just not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**Chemical Substances**

HP is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements such as REACH (Regulation EC No 1907/2006 of the European Parliament and the Council). A chemical information report for this product can be found at: <http://www.hp.com/go/reach>

产品中有毒有害物质或元素的名称及含量 根据中国《电子信息产品污染控制管理办法》					
部件名称	有毒有害物质或元素				
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴二苯醚 (PBDE)
PCA	X	O	O	O	O
外觀殼/字鍵	O	O	O	O	O

O :表示该有毒有害物质在该部件所有均质材料中含量均在SJ/T 11363-2006标准规定的限量要求以下。  
X :表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006标准规定的限量要求。  
表中标有“X”的所有部件都符合欧盟RoHS法规“欧洲议会和欧盟理事会2003年1月27日关于电器设备中限制使用某些有害物质的2002/95/EC号指令”  
注:环保使用期限的参考标识取决于产品正常工作的温度和湿度等条件