

Pointing Devices and Keyboard User Guide

© Copyright 2009 Hewlett-Packard
Development Company, L.P.

Windows is a U.S. registered trademark of
Microsoft Corporation.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

First Edition: August 2009

Document Part Number: 539912-001

Product notice

This user guide describes features that are
common to most models. Some features
may not be available on your computer.

Table of contents

1 Using pointing devices

Setting TouchPad preferences	1
Using the TouchPad	3
Connecting an external mouse	3

2 Using the digitizer and touch screen

Using the digitizer pen	5
Identifying the pen components	5
Holding the pen	5
Storing the pen	6
Using the touch screen	7
Setting touch screen preferences	10

3 Using the keyboard

Using hotkeys	11
Displaying system information (fn+esc)	12
Opening Help and Support (fn+f1)	12
Opening the Print Options window (fn+f2)	12
Opening a Web browser (fn+f3)	13
Switching the screen image (fn+f4)	13
Initiating Sleep (fn+f5)	14
Initiating QuickLock (fn+f6)	14
Decreasing screen brightness (fn+f7)	14
Increasing screen brightness (fn+f8)	14
Playing, pausing or resuming an audio CD or a DVD (fn+f9)	14
Stopping an audio CD or a DVD (fn+f10)	15
Playing previous track or section of an audio CD or a DVD (fn+f11)	15
Playing next track or section of an audio CD or a DVD (fn+f12)	15

4 Using keypads

Using the embedded numeric keypad	17
Enabling and disabling the embedded numeric keypad	17
Switching key functions on the embedded numeric keypad	17
Using an optional external numeric keypad	17

5 Cleaning the TouchPad and keyboard

Index	19
-------------	----

1 Using pointing devices

The following illustration and table describe the computer TouchPad.



Component		Description
(1)	TouchPad on/off button	Enables/disables the TouchPad.
(2)	TouchPad*	Moves the pointer and selects or activates items on the screen.
(3)	Left TouchPad button*	Functions like the left button on an external mouse.
(4)	TouchPad light	<ul style="list-style-type: none">• White: TouchPad is enabled.• Amber: TouchPad is disabled.
(5)	TouchPad scroll zone	Scrolls up or down.
(6)	Right TouchPad button*	Functions like the right button on an external mouse.

*This table describes factory settings. To view or change TouchPad preferences, select **Start > Devices and Printers**. Then, right-click the device representing your computer, and select **Mouse settings**.


Setting TouchPad preferences

Use Mouse Properties in Windows® to customize settings for pointing devices, such as button configuration, click speed, and pointer options.

To access Mouse Properties, select **Start > Devices and Printers**. Then, right-click the device representing your computer, and select **Mouse settings**.

Using the TouchPad

To move the pointer, slide your finger across the TouchPad surface in the direction you want the pointer to go. Use the left and right TouchPad buttons like the corresponding buttons on an external mouse. To scroll up and down using the TouchPad scroll zone, slide your finger up or down over the vertical line.

 **NOTE:** If you are using the TouchPad to move the pointer, you must lift your finger off the TouchPad before moving it to the scroll zone. Simply sliding your finger from the TouchPad to the scroll zone will not activate the scrolling function.

Connecting an external mouse

You can connect an external USB mouse to the computer using one of the USB ports on the computer. A USB mouse can also be connected to the system using the ports on an optional docking device or expansion product.

2 Using the digitizer and touch screen

You have two easy ways to make selections on the screen:

- The digitizer allows you to make selections or activate items on the screen using the digitizer pen included with your computer.
- The touch screen allows you to make selections or activate items on the screen using your finger.



NOTE: Everything you can do with your finger, you can also do with the digitizer pen.

Using the digitizer pen

You can write with the pen in pen-specific programs such as Tablet PC Input Panel, in all Microsoft® Office applications, and in most other Windows programs and utilities. The information you write on the screen with the pen can be filed, searched, and shared among most Windows programs.

Identifying the pen components

The pen interacts with the computer whenever the tip **(1)** of the pen is pressed against the screen.

The pen tether eyelet **(2)** allows you to connect a tether from the pen to the pen tether hole on the computer.

 


Holding the pen

Hold the pen as if you were writing with a standard pen or pencil.


Storing the pen

To store the pen when you are not using it, insert the pen, tip first, into the pen holder on the computer.

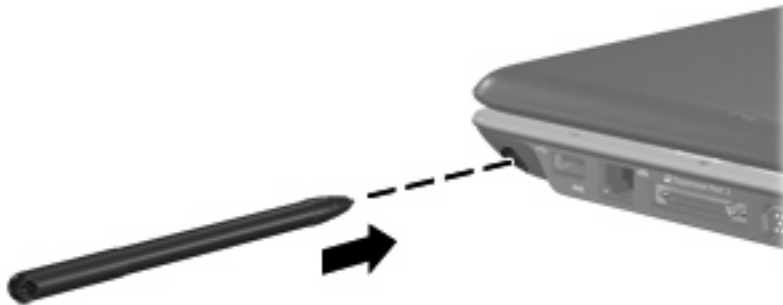


Using the touch screen

Your TouchSmart computer allows you to use your fingers or the digitizer pen to perform certain actions on the touch screen:


 **NOTE:** The instructions in this section are based on the preferences set at the factory. To modify settings for recognized clicks and flicks, select **Start > Control Panel > Hardware and Sound > Pen and Touch**.

 
NOTE: All movements may not be supported in all programs.

- Tap (or click)—Tap or double-tap an item on the screen as you would click or double-click with the TouchPad or an external mouse. Tap and hold an item to see the context menu as you would with the right TouchPad button.


 **NOTE:** You must tap and hold your finger until the operating system draws a circle around the area you are touching, and then the context menu appears.

- Flick—Touch the screen in a light, quick flicking motion up, down, left, or right to navigate through screens or quickly scroll through documents.


 **NOTE:** For the flick movement to work, a scrollbar must be present and in the active window.

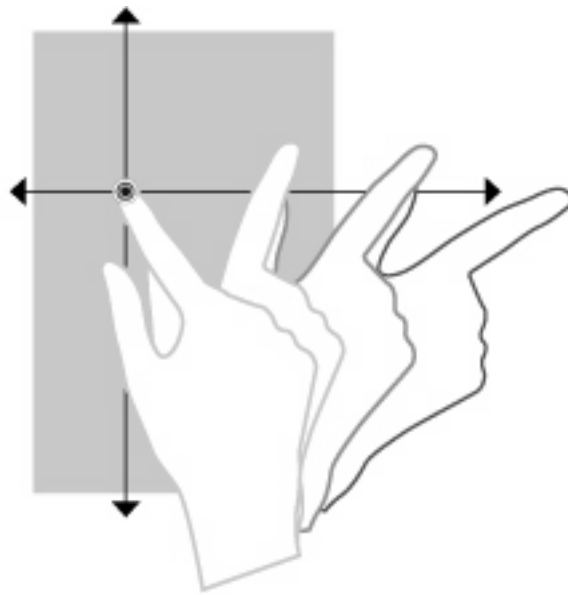

 
- Drag—Press your finger on an item on the screen and then move your finger to drag the item to a new location. You can also use this motion to slowly scroll through documents.

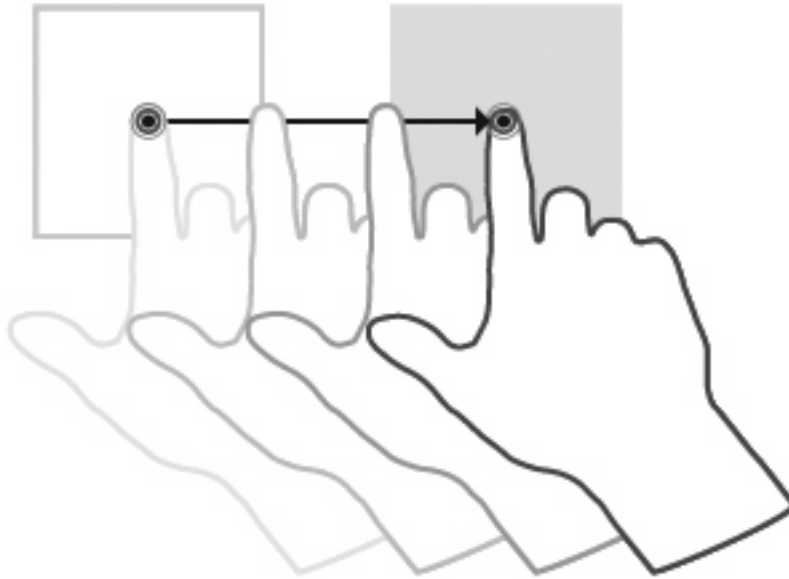

 - Pinch—Touch the screen with two fingers held apart over an area and pinch the fingers together to decrease an object's size (zoom out). Pull the fingers apart to increase an object's size (zoom in).

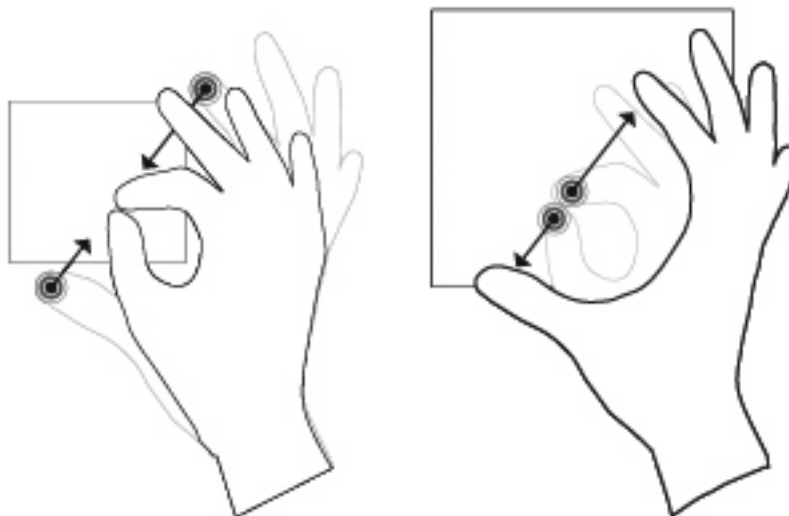

 - Rotate—Touch an image on the screen with your thumb and forefinger (placing both fingers on the screen at the same time). Then move your forefinger in a semi-circular motion.

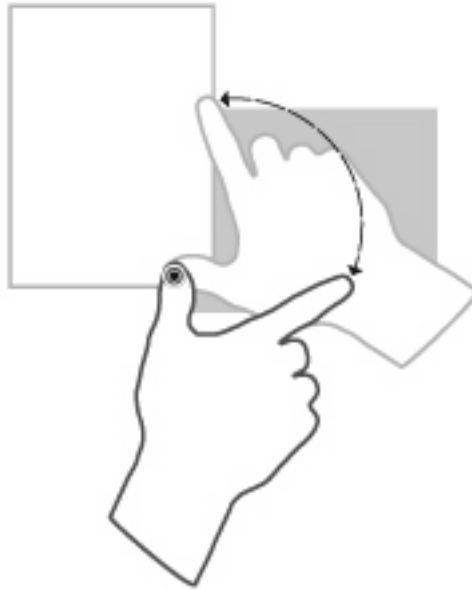

Setting touch screen preferences

- ▲ To set preferences for pen actions and visual feedback, select **Start > Control Panel > Hardware and Sound > Pen and Touch**. These preferences are specific to the touch screen and the computer.
- ▲ To set preferences for left-handed or right-handed users, select **Start > Control Panel > Hardware and Sound > Tablet PC Settings > Other** tab. These preferences are specific to the touch screen and the computer.
- ▲ To set pointing device preferences such as pointer speed, click speed, and mouse trails, select **Start > Devices and Printers**. Then, right-click the device representing your computer, and select **Mouse settings**. These preferences apply to any pointing device in the system.

To change or test click settings:

1. Select **Start > Control Panel > Hardware and Sound > Pen and Touch > Pen Options** tab.
2. Under **Pen actions**, select the action, and then click **Settings**.
3. After making any changes or testing the settings, click **OK**.

To change or create flick assignments:


1. Select **Start > Control Panel > Hardware and Sound > Pen and Touch > Flicks** tab.
2. Click **Navigational flicks and editing flicks**, and then click **Customize**.
3. Follow the on-screen instructions to change or create a flick assignment.
4. Click **OK**.


3 Using the keyboard

Using hotkeys

Hotkeys are combinations of the **fn** key (1) and either the **esc** key (2) or one of the function keys (3).

The icons on the **f1** through **f12** keys represent the hotkey functions. Hotkey functions and procedures are discussed in the following sections.

  **NOTE:** Your computer may look slightly different from the illustration in this section.

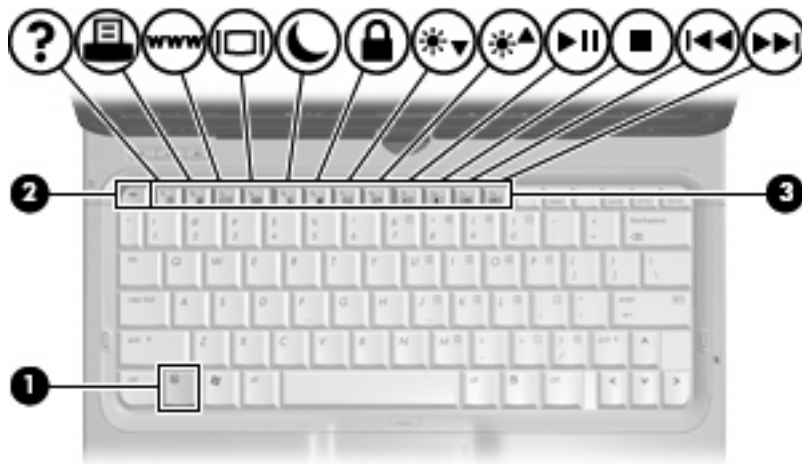

Function	Hotkey
Display system information.	fn+esc
Open Help and Support.	fn+f1
Open the Print Options window.	fn+f2
Open a Web browser.	fn+f3
Switch the screen image.	fn+f4
Initiate Sleep.	fn+f5
Initiate QuickLock.	fn+f6
Decrease screen brightness.	fn+f7
Increase screen brightness.	fn+f8
Play, pause, or resume an audio CD or a DVD.	fn+f9

Function	Hotkey
Stop an audio CD or a DVD.	fn+f10
Play the previous track or section on an audio CD or a DVD.	fn+f11
Play the next track on an audio CD or a DVD.	fn+f12

To use a hotkey command on the computer keyboard, follow either of these steps:

- Briefly press the [fn](#) key, and then briefly press the second key of the hotkey command.
– or –
- Press and hold down the [fn](#) key, briefly press the second key of the hotkey command, and then release both keys at the same time.

Displaying system information (fn+esc)

Press [fn+esc](#) to display information about system hardware components and the system BIOS version number.

In the Windows [fn+esc](#) display, the version of the system BIOS (basic input-output system) is displayed as the BIOS date. On some computer models, the BIOS date is displayed in decimal format. The BIOS date is sometimes called the system ROM version number.

Opening Help and Support (fn+f1)

Press [fn+f1](#) to open Help and Support.

In addition to providing information about your Windows operating system, Help and Support provides the following information and tools:

- Information about your computer, such as model and serial number, installed software, hardware components, and specifications
- Answers to questions about using your computer
- Tutorials to help you learn to use the computer and Windows features
- Updates for the Windows operating system, drivers, and the software provided on your computer
- Checkups for computer functionality
- Automated and interactive troubleshooting, repair solutions, and system recovery procedures
- Links to support specialists

Opening the Print Options window (fn+f2)

Press [fn+f2](#) to open the Print Options window of the active Windows program.

Opening a Web browser (fn+f3)

Press **fn+f3** to open your Web browser.

Until you have set up your Internet or network services, the **fn+f3** hotkey opens the Windows Internet Connection Wizard.

After you have set up your Internet or network services and your Web browser home page, you can press **fn+f3** to quickly access your home page and the Internet.


Switching the screen image (fn+f4)

Press **fn+f4** to switch the screen image among display devices connected to the system. For example, if a monitor is connected to the computer, pressing **fn+f4** alternates the screen image from computer display to monitor display to simultaneous display on both the computer and the monitor.

Most external monitors receive video information from the computer using the external VGA video standard. The **fn+f4** hotkey can also alternate images among other devices receiving video information from the computer.

The following video transmission types, with examples of devices that use them, are supported by the **fn+f4** hotkey:

- LCD (computer display)
- External VGA (most external monitors)
- S-Video (televisions, camcorders, DVD players, VCRs, and video capture cards with S-Video-in jacks)
- Composite video (televisions, camcorders, DVD players, VCRs, and video capture cards with composite-video-in jacks)

 **NOTE:** Composite video devices can be connected to the system only by using an optional docking device or expansion product.

Initiating Sleep (fn+f5)

△ **CAUTION:** To reduce the risk of information loss, save your work before initiating Sleep.

Press **fn+f5** to initiate Sleep.

When Sleep is initiated, your information is stored in system memory, the screen is cleared, and power is conserved. While the computer is in the Sleep state, the power lights blink.

The computer must be on before you can initiate Sleep.

📝 **NOTE:** If a critical battery level occurs while the computer is in the Sleep state, the computer initiates Hibernation and the information stored in memory is saved to the hard drive. The factory setting for critical battery action is Hibernate, but this setting can be changed using Power Options in Windows Control Panel.

To exit Sleep, briefly slide the power switch to the right.

The function of the **fn+f5** hotkey can be changed. For example, you can set the **fn+f5** hotkey to initiate Hibernation instead of Sleep.

📝 **NOTE:** In all Windows operating system windows, references to the *sleep button* apply to the **fn+f5** hotkey.

Initiating QuickLock (fn+f6)

Press **fn+f6** to initiate the QuickLock security feature.

QuickLock protects your information by displaying the operating system Log On window. While the Log On window is displayed, the computer cannot be accessed until a Windows user password or a Windows administrator password is entered.

📝 **NOTE:** Before you can use QuickLock, you must set a Windows user password or a Windows administrator password. For instructions, refer to Help and Support.

To use QuickLock, press **fn+f6** to display the Log On window and lock the computer. Then follow the instructions on the screen to enter your Windows user password or your Windows administrator password and access the computer.

Decreasing screen brightness (fn+f7)

Press **fn+f7** to decrease screen brightness. Hold down the hotkey to decrease the brightness level incrementally.

Increasing screen brightness (fn+f8)

Press **fn+f8** to increase screen brightness. Hold down the hotkey to increase the brightness level incrementally.

Playing, pausing or resuming an audio CD or a DVD (fn+f9)

The **fn+f9** hotkey functions only when an audio CD or a DVD is inserted:

- If the audio CD or the DVD is not playing, press **fn+f9** to begin or resume the play.
- If the audio CD or the DVD is playing, press **fn+f9** to pause the play.

Stopping an audio CD or a DVD (fn+f10)

Press **fn+f10** to stop the play of an audio CD or a DVD.

Playing previous track or section of an audio CD or a DVD (fn+f11)

While an audio CD or a DVD is playing, press **fn+f11** to play the previous track of the CD or the previous section of the DVD.

Playing next track or section of an audio CD or a DVD (fn+f12)

While an audio CD or a DVD is playing, press **fn+f12** to play the next track of the CD or the next section of the DVD.

4 Using keypads

The computer has an embedded numeric keypad and also supports an optional external numeric keypad or an optional external keyboard that includes a numeric keypad.



Component	Description
(1) <code>fn</code> key	<ul style="list-style-type: none">Enables/disables the embedded numeric keypad when pressed in combination with the <code>num lk</code> key.When pressed in combination with a specific embedded keypad key, the <code>fn</code> key alternates the function of the key between its standard keyboard function and its keypad function.
(2) Num lock light	The embedded numeric keypad is enabled. - or - Num lock is enabled on a connected optional numeric keypad.
(3) <code>num lk</code> key	<ul style="list-style-type: none">Enables/disables the embedded numeric keypad when pressed in combination with the <code>fn</code> key.Enables/disables num lock for a connected optional numeric keypad.
(4) Embedded numeric keypad	Can be used like the keys on an external numeric keypad.

Using the embedded numeric keypad

The 15 keys of the embedded numeric keypad can be used like the keys on an external keypad. When the embedded numeric keypad is turned on, each key on the keypad performs the function indicated by the icon in the upper-right corner of the key.

Enabling and disabling the embedded numeric keypad

Press **fn+num lk** to enable the embedded numeric keypad. The num lock light is turned on. Press **fn+num lk** again to return the keys to their standard keyboard functions.



NOTE: The embedded numeric keypad will not function while an external keyboard or numeric keypad is connected to the computer or to an optional docking device or expansion product.

Switching key functions on the embedded numeric keypad

You can temporarily alternate the functions of keys on the embedded numeric keypad between their standard keyboard functions and their keypad functions by using the **fn** key or the **fn+shift** key combination.

- To change the function of a keypad key to keypad functions while the keypad is off, press and hold the **fn** key while pressing the keypad key.
- To use the keypad keys temporarily as standard keys while the keypad is on:
 - Press and hold the **fn** key to type in lowercase.
 - Press and hold **fn+shift** to type in uppercase.

Using an optional external numeric keypad

Keys on most external numeric keypads function differently according to whether num lock is on or off. (Num lock is turned off at the factory.) For example:

- When num lock is on, most keypad keys type numbers.
- When num lock is off, most keypad keys function like the arrow, page up, or page down keys.

When num lock on an external keypad is turned on, the num lock light on the computer is turned on. When num lock on an external keypad is turned off, the num lock light on the computer is turned off.

To turn num lock on or off on an external keypad as you work:

- ▲ Press the **num lk** key on the external keypad, not on the computer.

5 Cleaning the TouchPad and keyboard

Dirt and grease on the TouchPad can cause the pointer to jump around on the screen. To avoid this, clean the TouchPad with a damp cloth, and wash your hands frequently when using the computer.

⚠ **WARNING!** To reduce the risk of electric shock or damage to internal components, do not use a vacuum cleaner attachment to clean the keyboard. A vacuum cleaner can deposit household debris on the keyboard surface.

Clean the keyboard regularly to prevent keys from sticking and to remove dust, lint, and particles that can become trapped beneath the keys. A can of compressed air with a straw extension can be used to blow air around and under the keys to loosen and remove debris.



Index

B

buttons
 TouchPad 1
 TouchPad on/off 1

C

clicks
 changing settings 10
 testing 10
composite video 13

D

digitizer, using 4
display
 image, switching 13
 screen brightness hotkeys 14

F

flicks
 changing assignments 10
 creating assignments 10
fn key, identifying 11, 16
function keys 11

H

Help and Support hotkey 12
hotkeys
 audio CD or DVD controls 14
 decreasing screen
 brightness 14
 description 11
 displaying system
 information 12
 increasing screen
 brightness 14
 initiating QuickLock 14
 initiating Sleep 14
 opening Help and Support 12
 opening Print Options
 window 12

opening Web browser 13
switching screen image 13
using 12

K

keyboard 11
keyboard hotkeys, identifying 11
keypad, embedded
 enabling and disabling 17
 identifying 16
 switching key functions 17
 using 17
keypad, external
 num lock 17
 using 17

L

light, num lock 16
lights
 num lock 16
 TouchPad on/off 1

M

media controls, hotkeys 14
mouse, external
 connecting 3
 setting preferences 2

N

num lock key, identifying 16
num lock light, identifying 16
num lock, external keypad 17

P

pen
 identifying 5
 storing 6
 using 5
pen holder 6
pen tether eyelet 5

pointing device
 identifying 1
Print Options window hotkey 12

Q

QuickLock hotkey 14

S

S-Video 13
screen brightness hotkeys 14
screen image, switching 13
scroll zone, TouchPad 1
Sleep hotkey 14
system information hotkey 12

T

touch screen
 performing screen actions 7
 preferences 10
 using 4, 7
TouchPad
 setting preferences 1
 using 3
TouchPad buttons, identifying 1
TouchPad light, identifying 1
TouchPad scroll zone,
 identifying 1

V

video transmission types 13

W

Web browser hotkey 13

