


HP Notebook Projection Companion Service Manual

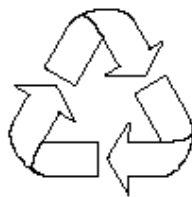

100% Recycled Paper

Version: A

Date: 2009/12/14

Update History

Revision	Chapter	Changes	Date
Rev. A		Initial version	14 th Dec.2009



DLP and DLP® logo are trademarks of TEXAS INSTRUMENTS INCORPORATED.

© Copyright 2009 Hewlett-Packard Development Company, L.P.

Microsoft, Windows, and Windows Vista are U.S. registered trademarks of Microsoft Corporation. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. DisplayLink Logo is a trademark.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services.

Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: December 2009

Document Part Number: 611379-001

Conventions

The following conventions are used in this manual .

Screen Messages	Denote actual messages that appear on screen.
Note	Give bits and pieces of additional information related to the current topic.
Warning	Alert you any damage that might result form doing or not doing specific actions.
Caution	Give precautionary measures to avoid possible hardware or software problems.
Important	Remind you doing specific actions relevant to the accomplishment of procedures.

Table of Contents

1	System Introduction	1
1.1	Technical Specification	1
1.2	Location of features, Controls, and I/O	2
1.3	System Block Diagram	5
2	Firmware Upgraded Flow	6
2.1	Setup Tool/Equipment	6
2.2	Upgrading Procedure	6
3	Machine Disassembly and Replacement	10
3.1	Tools	10
3.2	Disassembly Procedure	10
3.3	Mechanical Drawing	14
4	Troubleshooting and Verifying the Repair	15
4.1	Troubleshooting	15
4.2	Verifying the Repair	19
5	Color Temperature Calibration	23
5.1	Setup Tool/Equipment	23
5.2	Upgrading Procedure	23
6	Connector Information	26
6.1	Main Board	26
7	Spare Parts list	27
7.1	Board/Module	27
7.2	Case/Cover/Bracket Assembly	27
7.3	Optical Device	27
7.4	Fans	27
7.5	Wire	27
	Appendix A: Computer Compatibility	28
	Appendix B: Video Compatibility	28

1 System Introduction

1.1 Technical Specification


The following tables list the specifications for the projector.

	Metric
Dimensions	
Height	4.0 cm
Width	11.1 cm
Depth	9.3 cm
Weight	<1lb(390g)
Contrast ratio	800:1
Brightness	100 lumens
Light source	Red/green/blue LED module
Resolution	SVGA(858×600)
Zoom focus	Fixed zoom/manual focus
Display technology	0.45-inch DLP
Projection screen	15.0 to 60-inch
Projection distance	8.5 feet (2.6m)
Noise	32dB
Power consumption	58 W
I/O connectors	30-pin CEA connector

Designs and specifications are subject to change without notice.

1.2 Location of features, Controls, and I/O

Top components

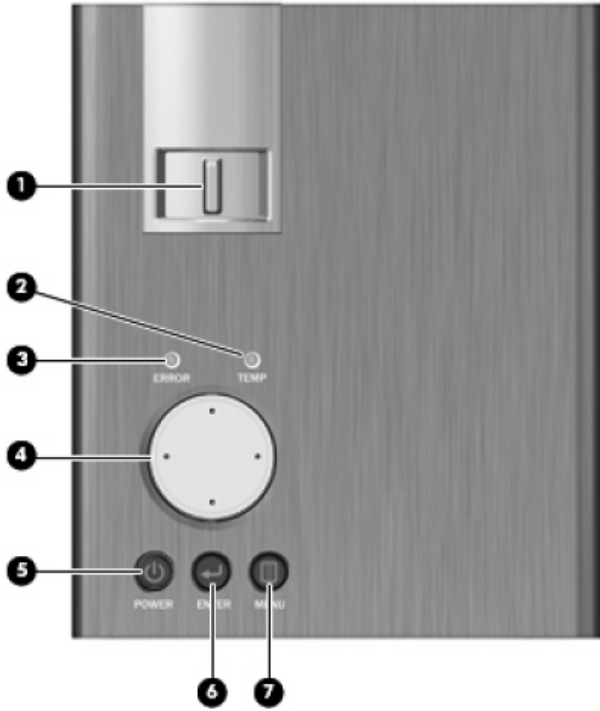


Component	Description
(1) Focus ring	Move the ring to the left or right to adjust the focus of the projector.
(2) Temperature light	When the light is on, Indicates that temperature is over 47.5 °C and that the projector will automatically shut down. NOTE: Excessive temperature may indicate that the vents are blocked. To maintain optimal temperature, be sure the vents are not blocked. Also, allow the projector to cool down after it turns off.
(3) Status light	Blinks when the projector is powering on or if one of the projector's fans has failed. NOTE: Once the projector is on, the status light stops blinking and remains on while the projector is in use.
(4) 4-way	Press to select and adjust on-screen settings.
(5) Power button	Press to turn the projector on and off.
(6) Enter button	Allows you to select a function in the on-screen display.
(7) Menu button	Press to activate and navigate through the on-screen display.

Front components




Component	Description
(1) Vent	Enables airflow to cool internal components.
(2) Lens	Projects images onto screen.

Left components

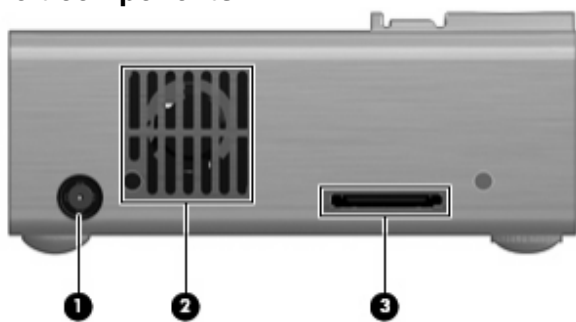

Component	Description
(1) Power connector	Connects an AC adapter.
(2) Vents	Enables airflow to cool internal components.
(3) Video cable connector	Connects the video cable.

Back components

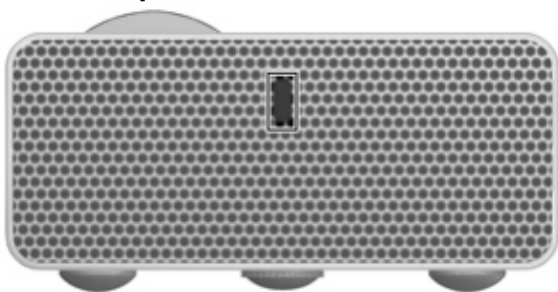

Component	Description
Security cable slot	Attaches an optional security cable to the projector.


NOTE: The security cable is designed to act as a deterrent, but it may not prevent the projector from being mishandled or stolen.

Right components




Component	Description
Vents	Enables airflow to cool internal components.

Bottom components

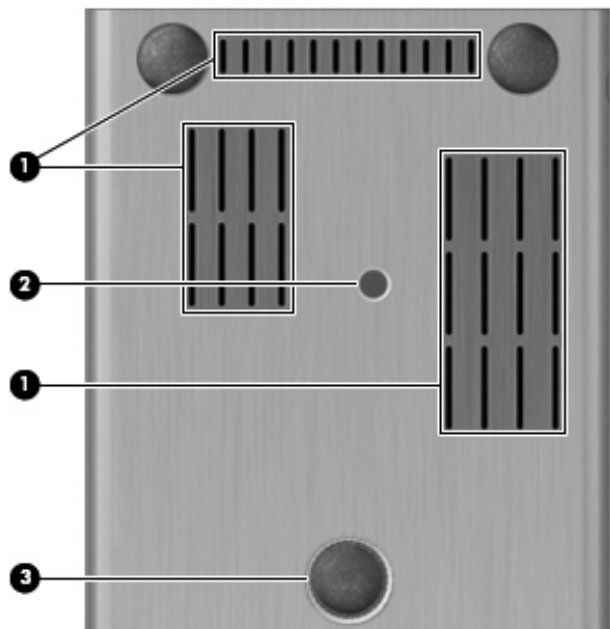

Component	Description
(1) Vents	Enable airflow to cool internal components.
(2) Tripod connector	Connects the tripod to the projector.
(3) Adjustable foot	Allows you to adjust the height of the projector for optimum viewing.

1.3 System Block Diagram

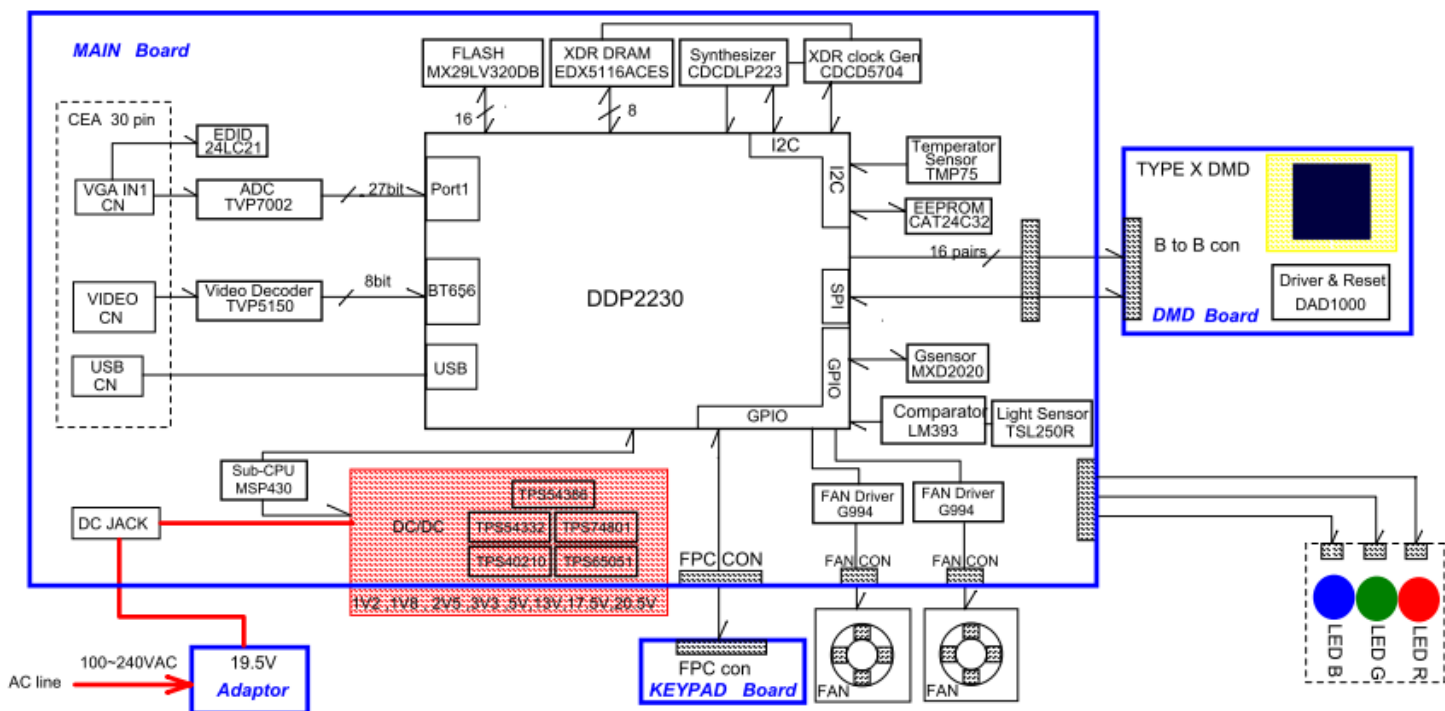

2 Firmware Upgraded Flow

This chapter provides the information regarding relevant equipments and upgrading procedure for firmware upgrade.

Note:

Firmware upgrade process is not necessary. Please check the firmware and composer version before any procedures. During firmware download period, please do not shut down PC or projector, this will cause flash memory's damage. And need to return the unit to manufacturer for flash memory recovery.


2.1 Setup Tool/Equipment

1. Computer
2. USB upgrading cable
3. Power Cord and AC Adaptor
4. DLP Composer Lite


2.2 Upgrading Procedure

Installing [DLP Composer (TM) Lite]

1. Double-click **[DLP Composer Lite v7.1 Setup.exe]**.
2. Installation starts. Click **[Next]** to continue the installation process.
3. On the **[License Agreement]** screen, move the scroll bar on the right to the bottom, select **[I accept and agree to be bound by all the terms and conditions of this License Agreement]**, and click Next to continue the installation process.

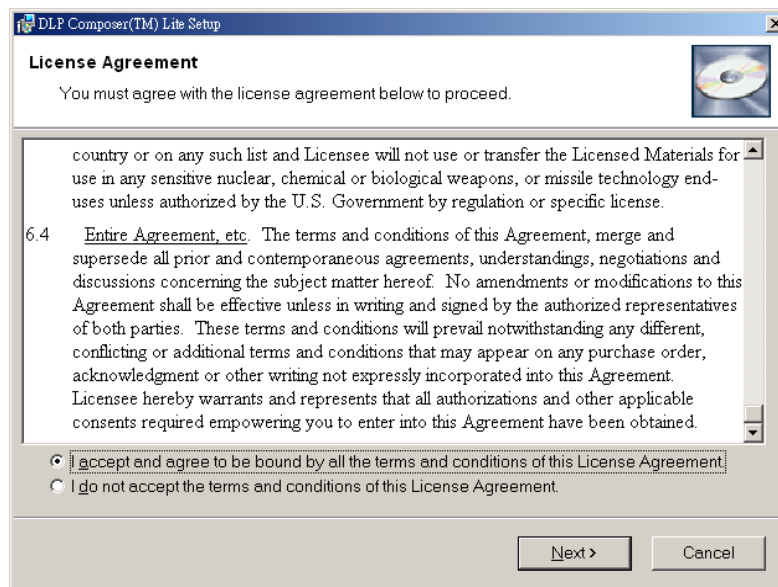


4. On the Select **[Installation Type]** screen, select **[ALL]** and click **[Next]** to continue the installation process.
5. When the installation is finished, click **[Finish]** and reboot the PC. (A shortcut to DLP Composer(TM) Lite is created on the desktop.)

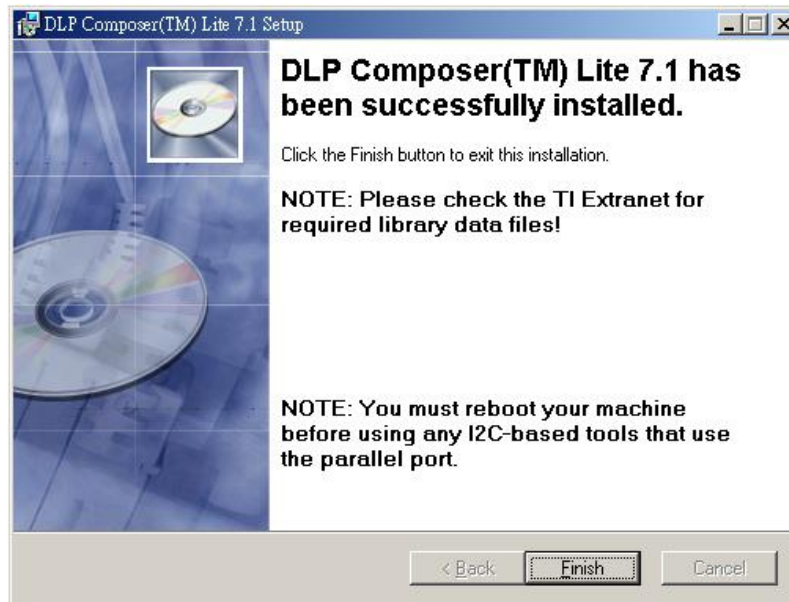


USB Support - Installation (All Platforms)

This release includes support for a USB communications interface to DDP2000-based projectors. The setup program includes the files needed to install USB support (for Windows 98/Me/2000/XP only --- Win95 and WinNT are not supported). After DLP Composer™ Lite is installed, to install the USB support, choose the "Install DDP2000 USB Driver" icon under "DLP Composer™ Lite" in your Start menu.

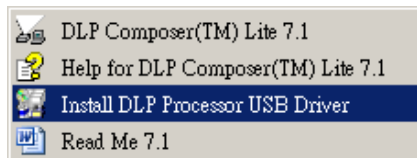

Follow the instruction on the screen to press any key and wait for the installation done.

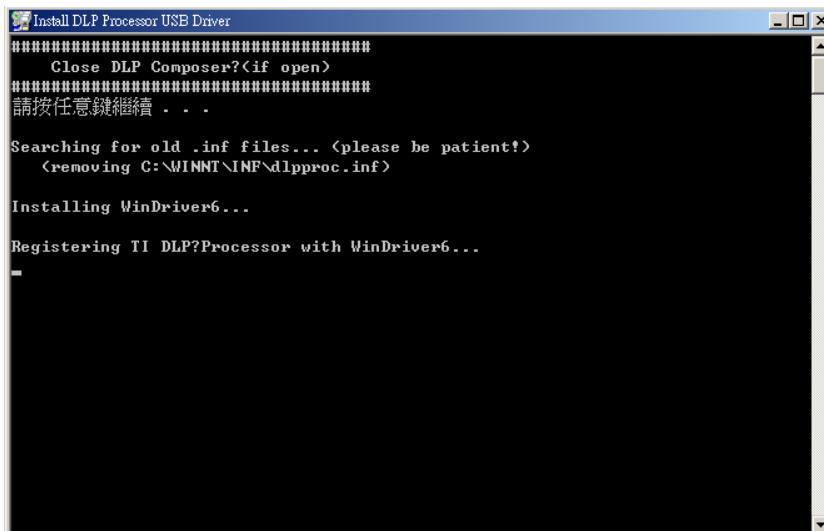


And copy the file "FlashDeviceParameters.txt" into the C:\Program Files\DLP Composer Lite X.X

Operating procedure



1. Connect the Projector and PC via USB cable.
2. Double-click **[DLP Composer (TM) Lite]**. The following screen will appear.




3. Select **[Edit]/[Preferences]/[Communications]** to check **USB** in **[Projector Interface]**.

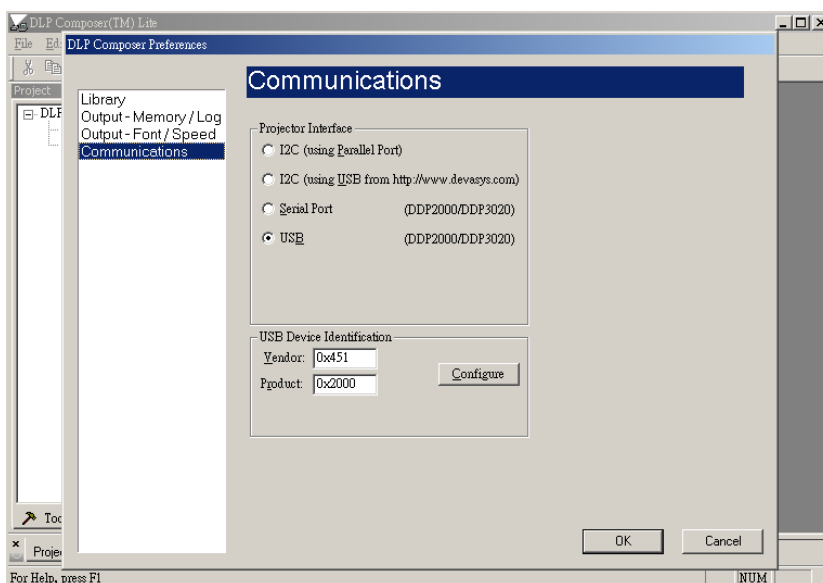

4. Click **[USB Device Identification]**.
5. Set the items on the **[Vendor 0x451, Product 0x2000]**.
6. Click **[OK]**
7. Move the cursor to **[Flash Loader]** on the Project window of **[DLP Composer Lite]**. (The **[Flash Loader]** screen will appear.)
8. Click **[Browse]** and select where the firmware **[xxxxxxx.img]** is for download.
9. Make sure **[Skip Boot Loader Area]** is with a check.
10. Press Menu and Power buttons constantly within ten seconds after insert the USB Burning Cable and power Cord. TEMP LED will become Red. That indicates the projector is in the download mode. At this moment, you can release these two buttons.
11. Click **[Reset Bus]** firstly to check if USB connects well.
12. Click **[Start Download]**. When the dialog box is displayed, click **[Yes]**.

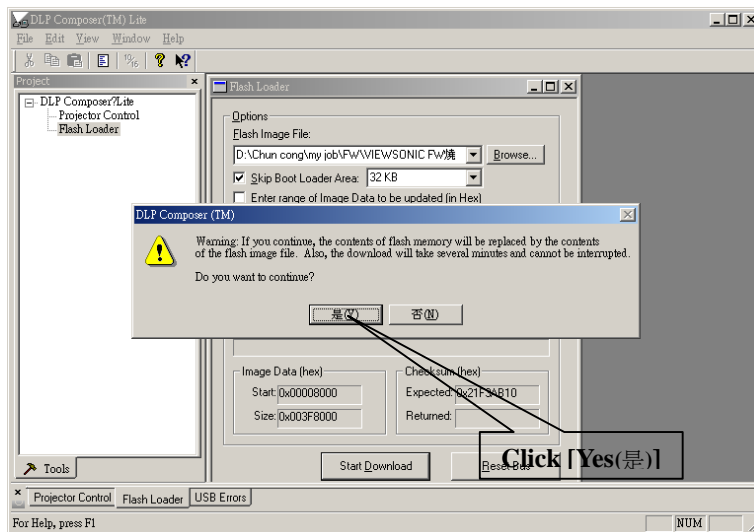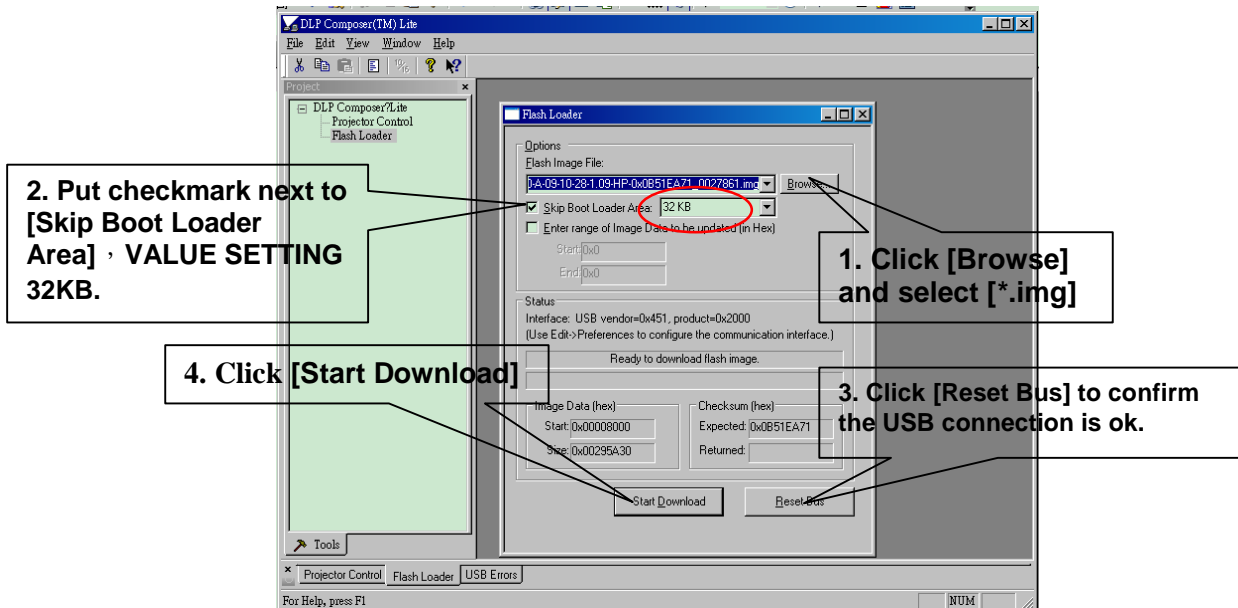
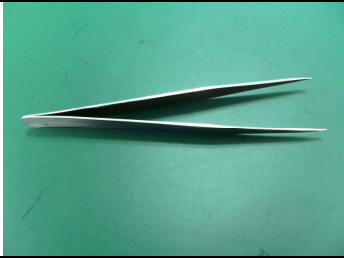


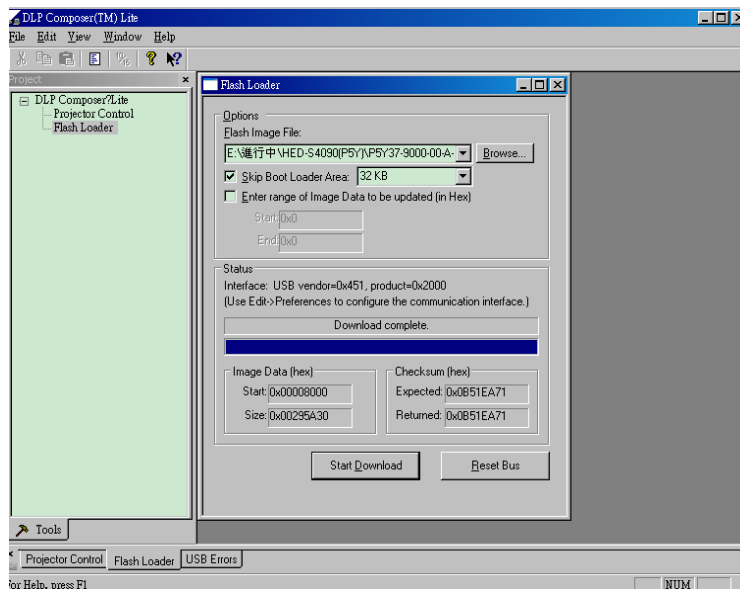


12. Wait for the Completion of upgrading, and then remove AC Adapter, Power Cord and upgrading cable.



3 Machine Disassembly and Replacement




3.1 Tools


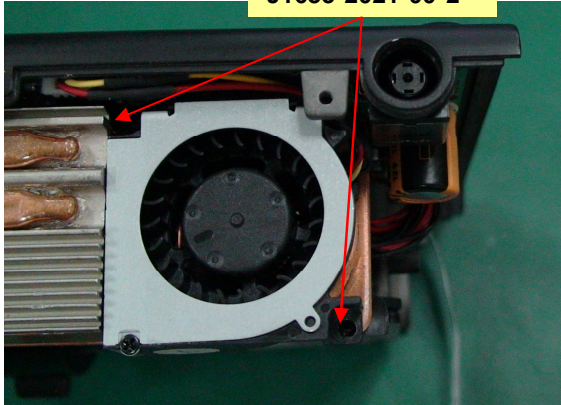
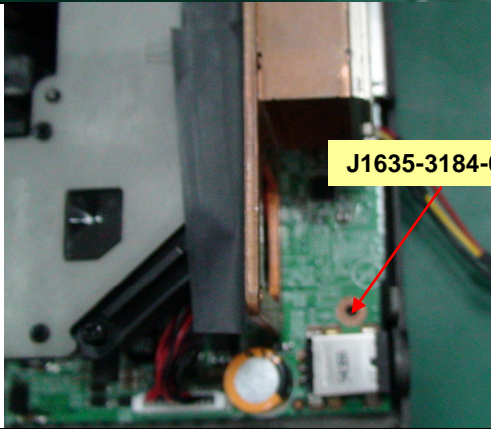
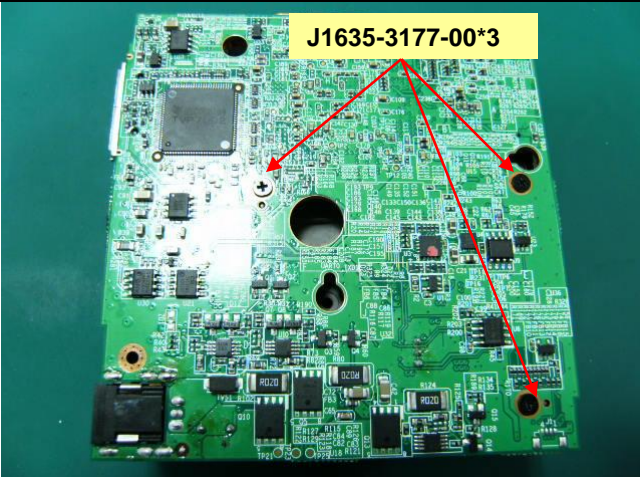
Item	Photo
Long Nose Nipper	
Nipper	
Screw Bit(+):2*5*40 Screw Bit(+):2*4*60	
Anti-static wrist strap	
Anti-static wrist gloves	


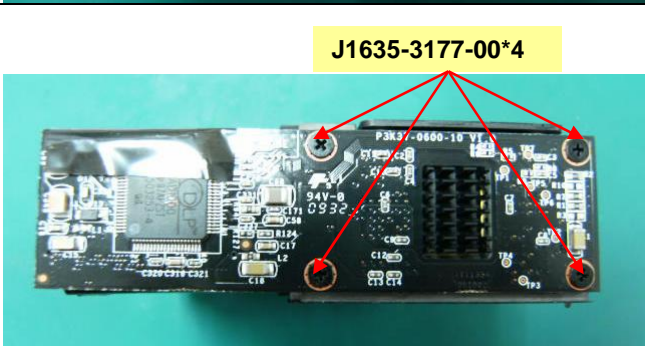
3.2 Disassembly Procedure

Warning


- ◆ Put on the Static Electricity Ring when starting for repair.
- ◆ Repair Environment suggest in Clean-room class 10000. Do not remove Optical Engine or DMD panel outside the clean room.
- ◆ While screwing or unscrewing screws, please keep the screwdriver straight. Keeping screwdriver inclined will damage the screw holes.
- ◆ Please turn off the power before replacing any parts.
- ◆

Step	Figure	Description
1		<p>1. Press the power button to shutdown the projector and disconnect the AC Adapter and power cord.</p>
2		<p>Loosen the screws J1635-2684-00*4 as shown.</p>
3		<p>Raise the top cover gently and disconnect the keypad FFC between the top cover and main board.</p>

4		Loosen the three screws J1635-3177-00*3 for moving Bottom Cover.
5		Loosen the three screws J1635-2021-00*2 to remove the DC Fan J2394-0103-00.
6		Loosen J1635-3184-00*1.
7		<ol style="list-style-type: none"> 1. Loosen J1635-3177-00*3. 2. Remove all the wires on the Main board. 3. Remove Main board.

8		Loosen screws J1635-2687-00*2 to remove the Focus-ring.
9		Loosen the four screws J1635-3177-00*4 to remove the DMD board.

3.3 Mechanical Drawing

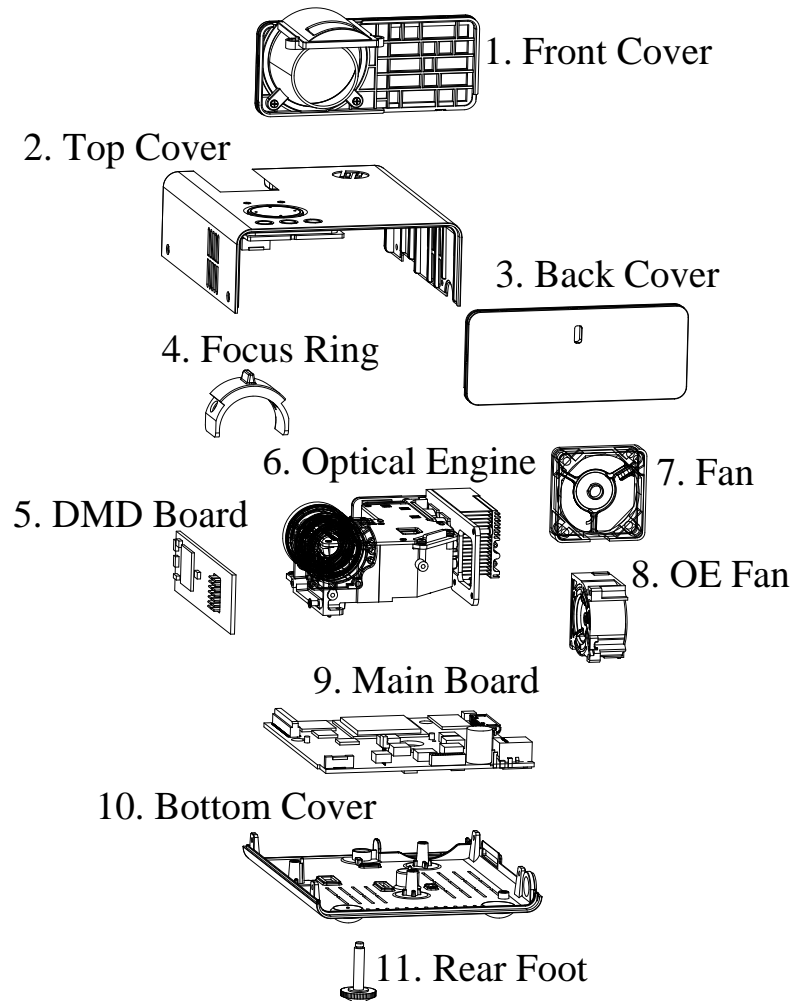

4 Troubleshooting and Verifying the Repair

This chapter provides technicians and people who have an electronic background a primary description about maintaining the product. Moreover, you can get the appropriate operation to solve some complicated problems of component repairing and professional problems.

4.1 Troubleshooting


Warning:

Do not directly look into the lens to avoid eyesight damages.

The projector is equipped with ventilation holes (intake) and ventilation holes (exhaust). Do not block or place anything near these slots. Or internal heat build-up may cause picture degradation or damaging the projector.

Confirm Software and hardware

(1) Confirm FW version.

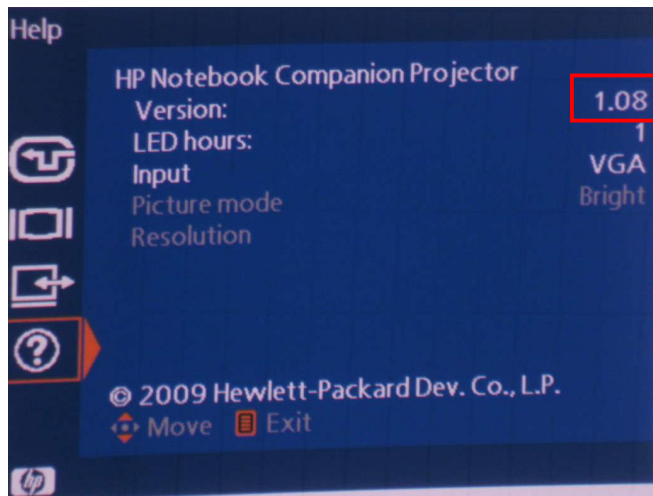



Note: This FW version is just for reference.

(2) Confirm LED indicator.



Status / Problems	LED indicators	
	STATUS	TEMP
Standby	Green flash	Off
Power on	Green	Off
Cooling	Green flash	Off
Fan 1 error	Green flash	Red flash
Fan 2 error	Green flash	Red flash
Over Temperature error	Green flash	Red



(3) Confirm cable connection well.

Power Source Troubleshooting

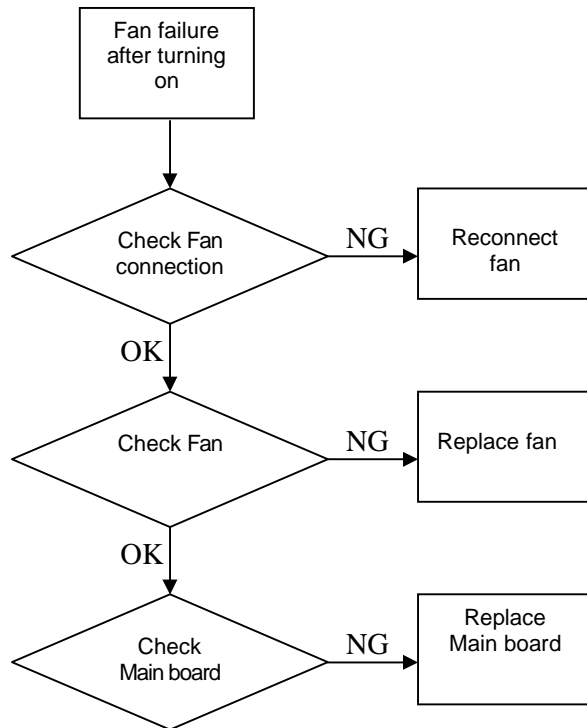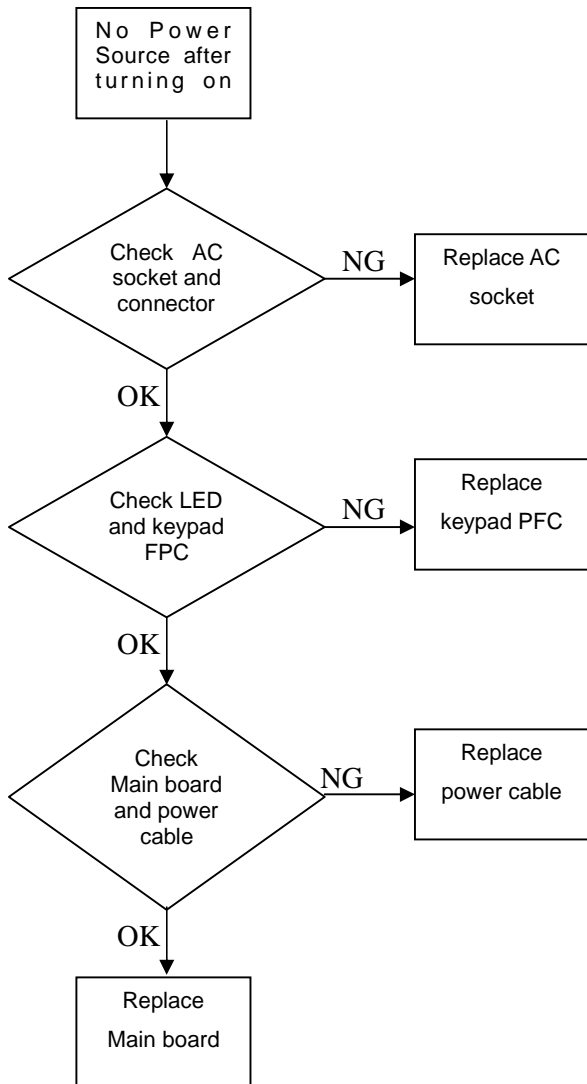


Video Signal Troubleshooting

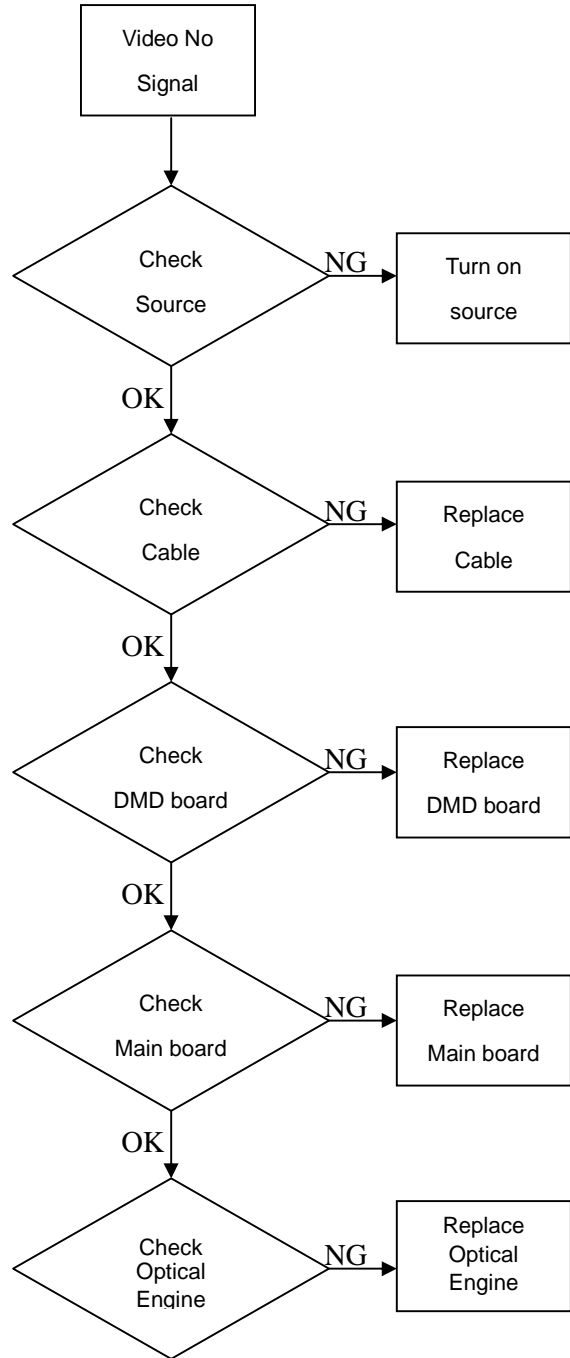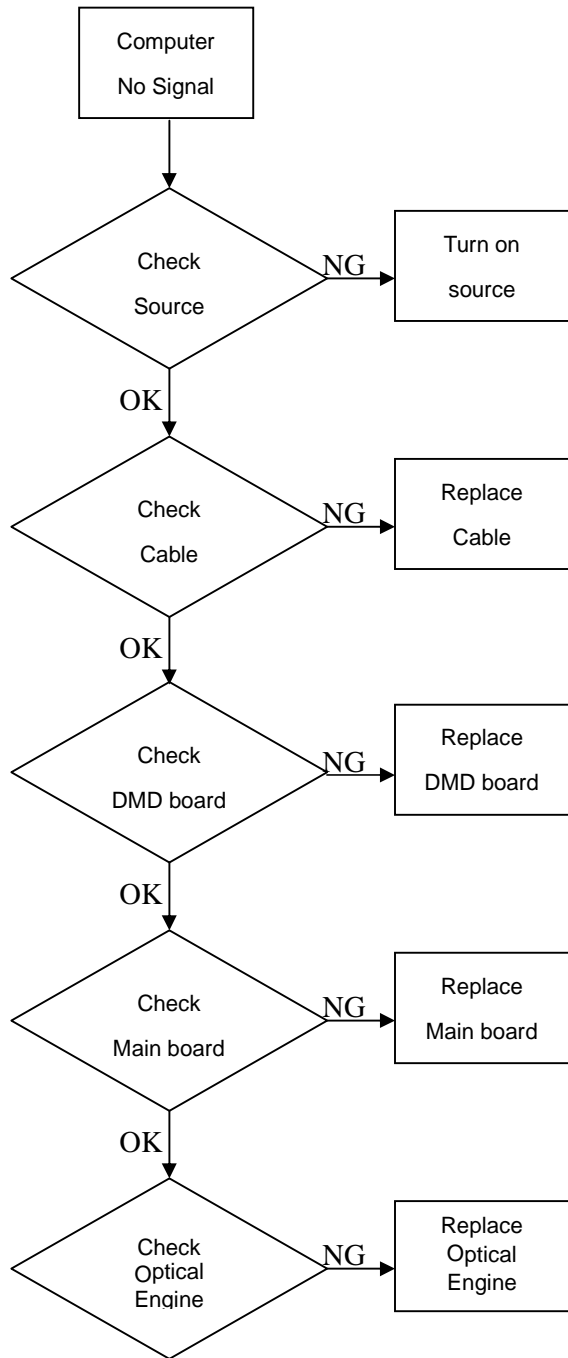

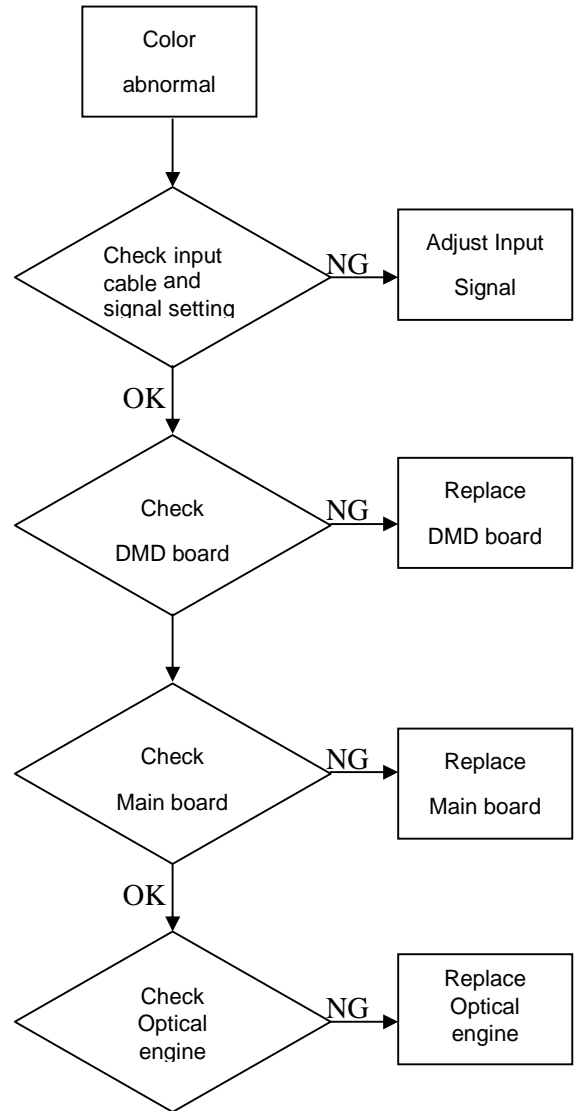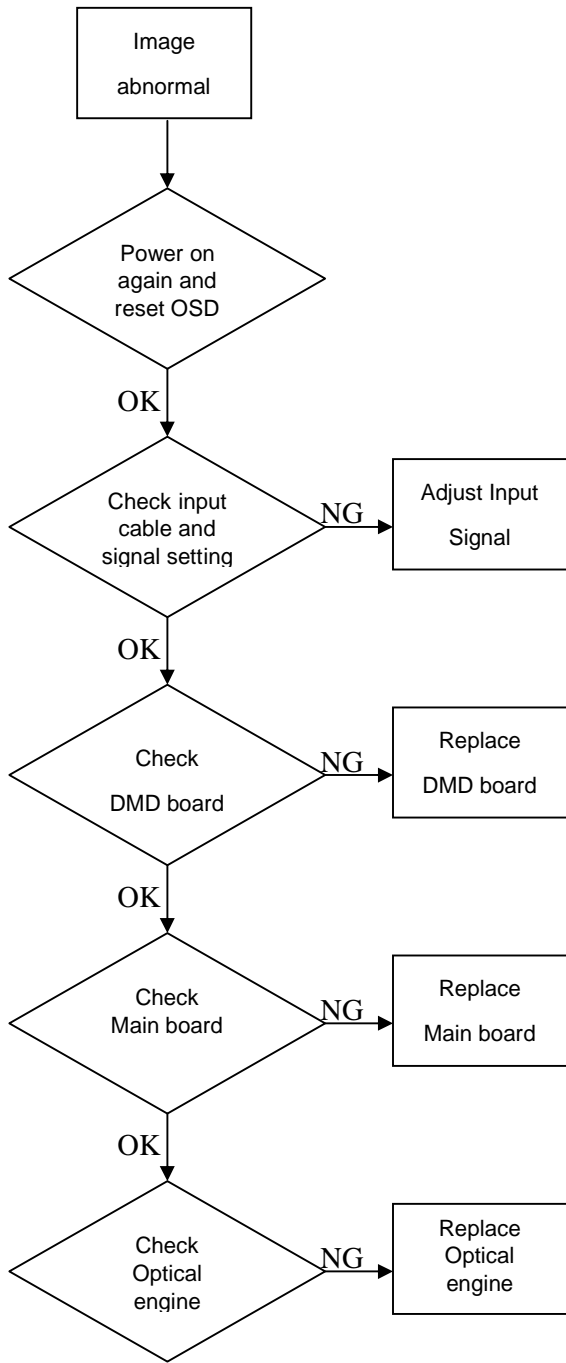

Operation Function Troubleshooting

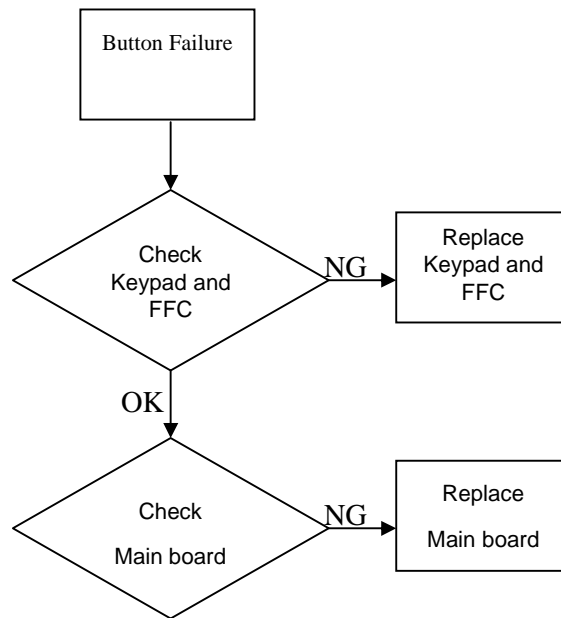

4.2 Verifying the Repair

After repairing projector (Disassembling and assembling projector), Repair center should verify the quality of repaired unit. Here is a general guide for all repaired model. That means if the projector is without S-Video port, repair center can skip the portion of S-Video verification.

(1) Signal test (Each I/O can function normally)

Connect all connector to the jacks one after the other to check whether each channel can project normally.

I/O port	Monitor In (VGA)
Test Equipment	Standard Pattern generator (Ex. Quantum data)
Signal format	800*600 60Hz

I/O port	Video
Test Equipment	Standard Pattern generator (Ex. Quantum data) or DVD player
Signal format	NTSC

(2) Operation test

Buttons operation

Button description	Test criteria
Power	<ol style="list-style-type: none"> Mechanical motion (Up & Down) should be free from getting stuck when pressing the button. Press "power" button and projector will switch on.
Menu &Enter	<ol style="list-style-type: none"> Mechanical motion (Up & Down) should be free from getting stuck when pressing the button. Press Menu &Enter button can make projector function normally.
4-way button (Auto/Source)	<ol style="list-style-type: none"> Mechanical motion (Up & Down) should be free from getting stuck when pressing the 4-way button. Press Menu/Enter button can make projector function normally.

Focus ring

Ring	Test criteria
Focus ring	The feeling of rotating Focus ring to the end of right and left by hand should free from seizing.

(3) Image Quality





Operate in a dark room (don't allow any impurity light.) < 0.5lux.


Set Keystone to "0" (OFF)

VGA

I/O port	Monitor In (VGA)
Test Equipment	Standard Pattern generator (Ex. Quantum data)
Signal format	800*600 60Hz
Projected image size	30" in diagonal length

Test Pattern	Test criteria
	<p>Full white</p> <p>Apparent color strip, bend and streak corner on the projected image are not allowable.</p>

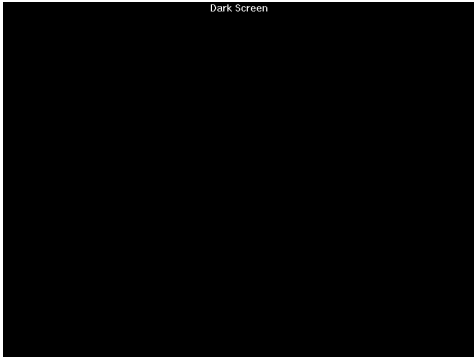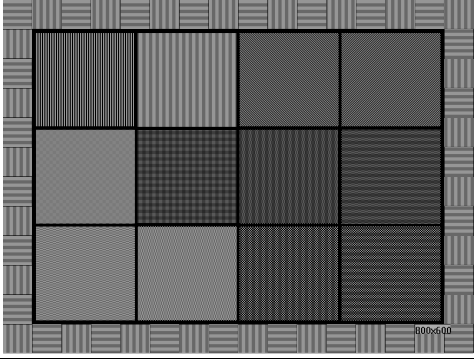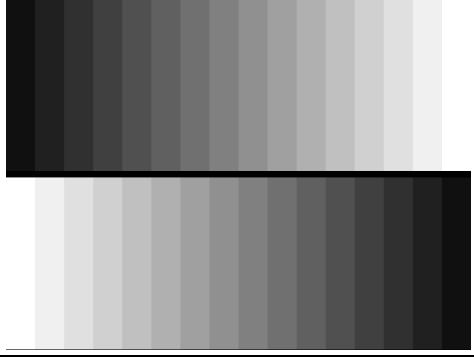 <p>Dark Screen</p>	<p>Full darkness</p> <p>Light leak in active area and colorific light leak in inactive area are not allowable.</p>
	<p>Twelve Grids</p> <p>Press "AUTO" button, more than three twinkling grids are not allowable.</p> <p>(It allows to press "AUTO" less than four times.)</p>
	<p>16 Gray Level</p> <p>16 level of gray level color should be distinguishable and no defection.</p>
	<p>Gray 10</p> <ol style="list-style-type: none"> 1. The quantity of blemish in the active area should be less than four pieces and the diameter of it should be less than 1.5"(about 3.81cm). 2. Any bright pixel is not allowable in the active area, but one bright pixel in the POM(Pond of Mirror) area is acceptable. 3. Can't see any leak pixel in the active area.

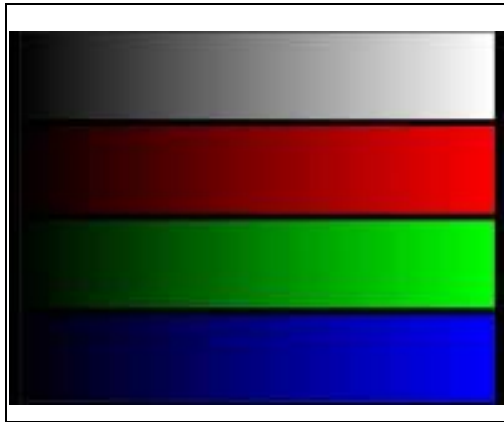

256 level RGB
 --256 level of RGB color should be distinguishable, at least Red color scales should be.
 -- For each RGB 256 levels, Noise or color deviation in R, G, and B single level respectively are acceptable.

Video	Video
I/O port	Video
Test Equipment	Standard Pattern generator (Ex. Quantum data)&DVD player
Criteria	No apparent color deviation on the projected image

(4) Resolution

I/O port	VGA
Test Equipment	PC
Test Method	<ol style="list-style-type: none"> 1. Rotate Zoom ring to wide mode (Maximum projected image) 2. Fix projector to set diagonal length of projected image to 25". 3. Adjust focus ring to make resolution of 4 corners and center are balanced. 4. Check he characters should be recognized easily. 5. Rotate Zoom ring to tele mode (Minimum projected image) 6. Adjust focus ring to make resolution of 4 corners and center are balanced. 7. Check the characters should be recognized easily.

When in the course of human events it becomes necessary for one people to dissolve the political bands which have connected them with another, the most solemn and sacred of duties is to declare the causes which impel them to the separation. We hold these truths to be self-evident, that all men are created equal, that they are endowed by their Creator with certain unalienable Rights, that among these are Life, Liberty and the pursuit of Happiness. That to secure these rights, Governments are instituted among Men, deriving their just powers from the consent of the governed. That whenever any Form of Government becomes destructive of these ends, it is the Right of the People to alter or to abolish it, and to institute new Government, laying its foundation on such principles and organizing its powers in such form, as to them shall seem most likely to effect their Safety and Happiness. Prudence in the course of human events has not allowed us to separate from the Kingdom of Great Britain, but in the course of the Revolution we have found it necessary to dissolve the political bands which have connected us with the same, and to assume among the Powers of the earth, the separate and equal station to which the Laws of Nature and of Nature's God entitle us. We declare that these United Colonies are, and of right ought to be, free and independent States, that they are absolved from all allegiance to the British Crown, and that all future intercourses with the same shall be on equal terms of friendship and commerce. In the name of the Great God of Heaven, we do hereby solemnly protest, that if our Hearts are ever joined to another Power that would subvert the Liberty here proclaimed, we will defend the same to the death, and with our lives and the last drop of our blood.

5 Color Temperature Calibration

Warning:

- ① Operate LED Calibration in a dark room (don't allow any light.)<0.5lux
- ② Projected image size: 30 inches.
- ③ The CL-200 is $1.2\pm 0.1m$ far from projector. And the drop for measurement is the center of projected screen.
- ④ Computer for operation must be Window XP or more advanced.

5.1 Setup Tool/Equipment

- 1. Computer
- 2. USB upgrading cable and extended USB cable
- 3. Power Cord and AC Adaptor
- 4. CL-200


5.2 Upgrading Procedure

- 1. Turn on Projector more than 10minutes.
- 2. Connect the Projector and Computer via USB upgrading cable. Connect CL-200 and Computer via RS-232 cable.
- 3. Double-click [LED Calibration]. The following screen will appear.




- 4. Press [Open] to set the saving path and saving file for calibration data.


The screenshot shows the LED Calibration V1.08 software window. It has a blue title bar and a light beige background. At the top, there are three sections for color measurements: "Color Measurement(X Y Z)", "Color Measurement(Ev x y)", and "Color Measurement(Ev u v)". Each section has input fields for its respective variables and a "Get" button. Below these is a section for "LED Calibration Data" with a table for Red, Green, and Blue channels, each with columns for x, y, Y, and S. To the right of this table is a dropdown menu showing "COM1". At the bottom, there are fields for "File Name" (with a default path of "C:\") and "BarCode Number", each with an "Open" or "Save" button. A callout box with a white background and black border points to the "Open" button, containing the text "Click Open".

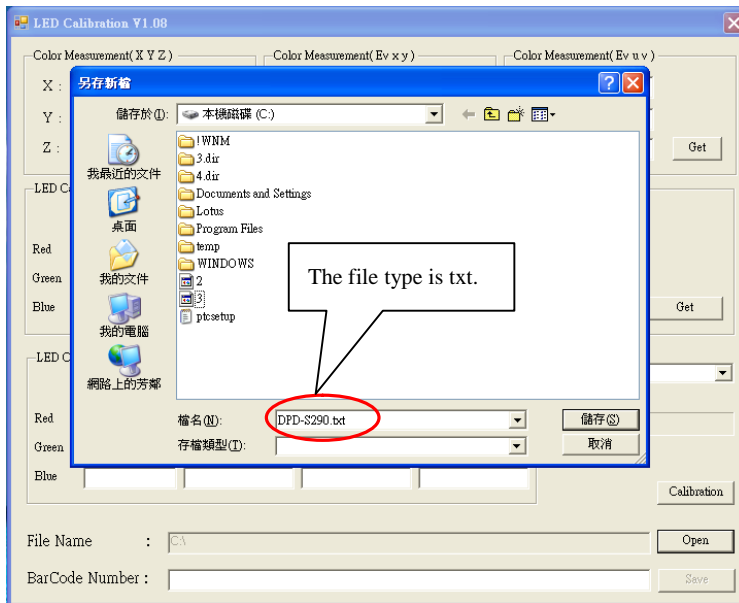

5. Input the Bar Code number of projector, then click **[Calibration]** to start Color Temperature Calibration automatically.

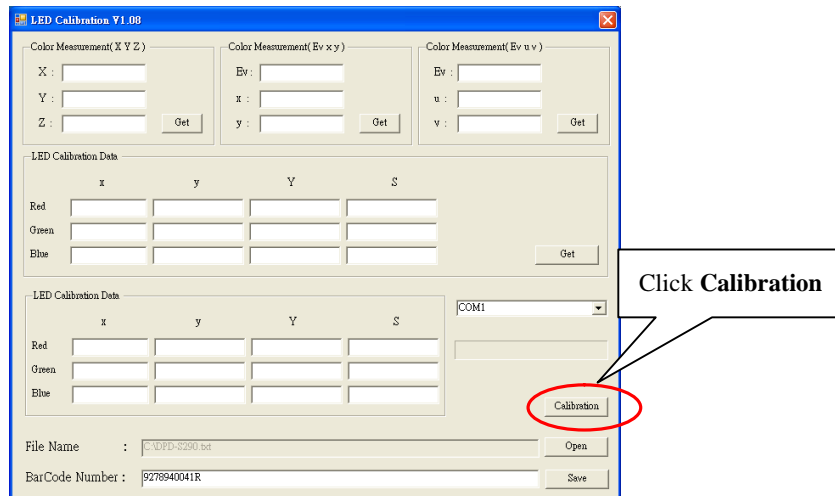


6. The dialog box as below indicates calibration has completed.

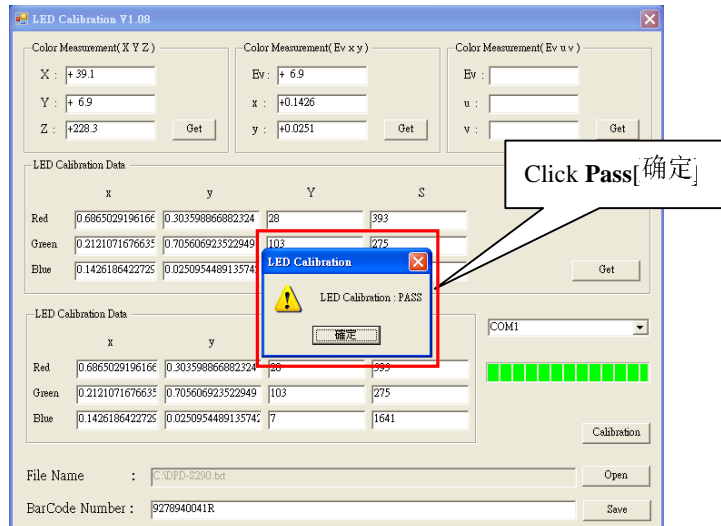

7. Click **Pass**[确定].

8. Ensure the data of calibration is as same as the projector 's. If not, please calibrate again.

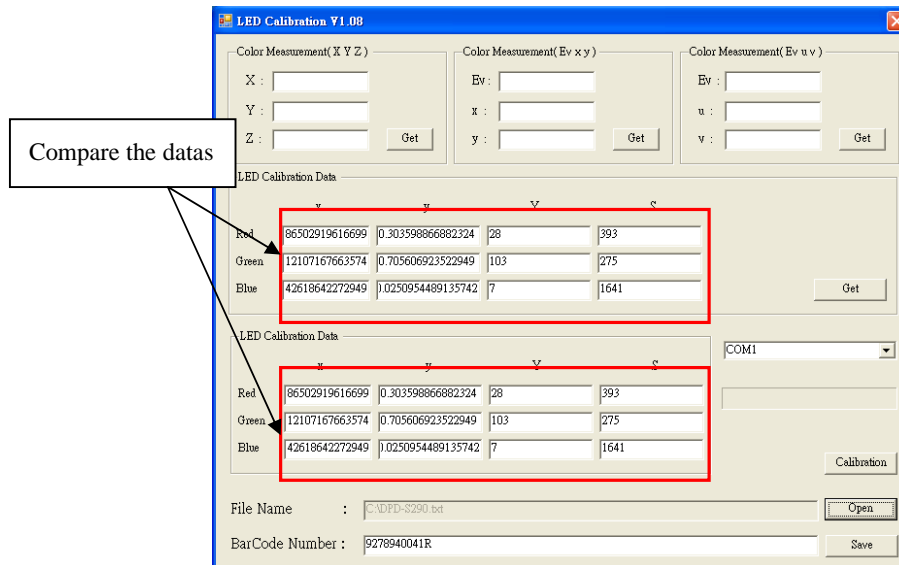


9. Turn off the projector normally. Don't cut off the power until it goes out.

6 Connector Information

This section provides each connector location on boards and function of each board. They will be useful for your detecting the defective boards.

6.1 Main Board

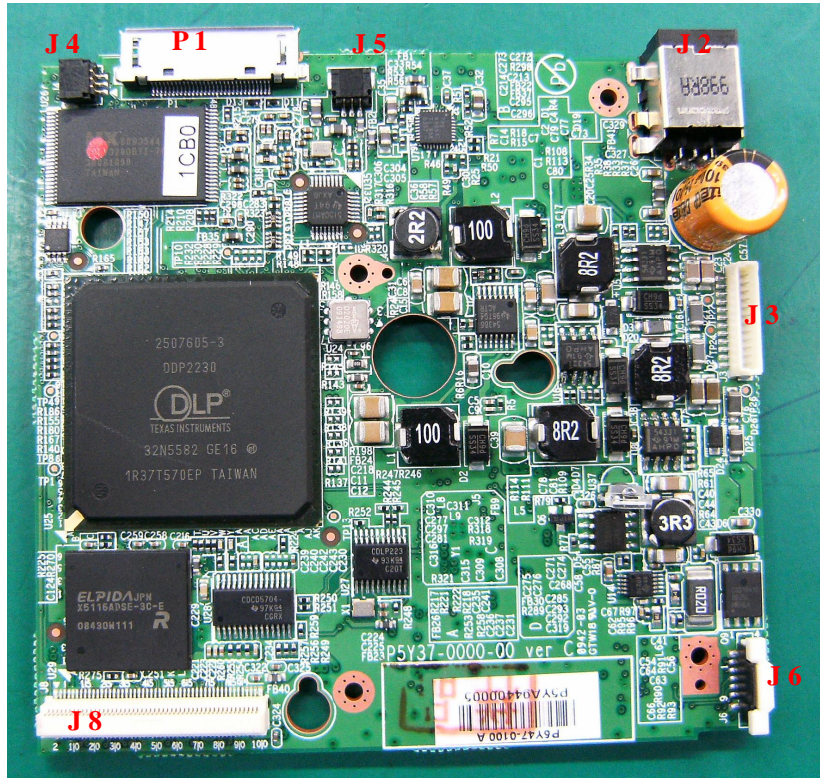

Connector	Description
J2	DC-IN
J4	Fan 2
J5	Fan 1
J6	FFC Cable (to keypad)
J8	DMD board
P1	I/O port

7 Spare Parts list

Introduction

This section is a list of all the FRU removal. Following the FRU table of contents is an enlarged view of the entire projector, which shows the primary FRUs in the projector.

When working on the projector, use appropriate anti-static precautions such as anti-static mats, wrist straps and grounded work surfaces. Failure to do this can destroy static-sensitive components and make the product inoperable.

7.1 Board/Module

P/N	Desc.
P5Y84-7100	MAIN_DIP_PCB_ASY_SPARE PARTS_HED-S4090_ROHS
P5Y84-7200	DMD BOARD_DIP_PCB_ASY_SPARE PARTS_HED -S4090_ROHS
P5Y84-7400	KEYPAD BOARD_DIP_PCB_ASY_SPARE PARTS_HED -S4090_ROHS

7.2 Case/Cover/Bracket Assembly

P/N	Desc.
P5Y84-4500	TOP COVER SPARE PARTS_HED-S4090_ROHS
P5Y84-4510	BOTTOM COVER SPARE PARTS_HED-S4090_ROHS
P5Y84-4520	FRONT COVER SPARE PARTS_HED-S4090_ROHS
P5Y84-4530	BACK COVER SPARE PARTS_HED-S4090_ROHS
P5Y34-4520-00	FOCUS-RING_HED-S4090_DEFAULT_NO PAINTING_ROHS

7.3 Optical Device

P/N	Desc.
P5Y84-2200	OPTICAL ENGINE MODULE_WITH LED_SPARE PARTS_HED -S4090_ROHS
P5Y84-6200	LENS ASY_SPARE PARTS_HED-S4090_ROHS

7.4 Fans

P/N	Desc.
J2394-0133-00	DC FAN_1004KL-04W-BX0-B50 (L=30MM)_NMB_ROHS
J2394-0134-00	DC FAN_BFB0312HB-8A89(R00)(L=45MM)_DELTA_ROHS

7.5 Wire

P/N	Desc.
J2591-0094-00	FFC CABLE_A10110C3344NB_ENTERY_0.5PITCH_10PIN_L110MM_ROHS
J2595-0455-00	WIRE ASSY_CON-CON_1102003-275_MSK_ROHS

Appendix A: Computer Compatibility

Mode	Resolution	fH (kHz)	fV (Hz)
VGA	640 x 480	31.47 kHz	59.94 Hz
VGA	640 x 480	37.86 kHz	72.81 Hz
VGA	640 x 480	37.50 kHz	75.00 Hz
VGA	640 x 480	43.27 kHz	85.01 Hz
SVGA	800 x 600	35.16 kHz	56.25 Hz
SVGA	800 x 600	37.88 kHz	60.32 Hz
SVGA	800 x 600	48.08 kHz	72.19 Hz
SVGA	800 x 600	46.88 kHz	75.00 Hz
SVGA	800 x 600	53.67 kHz	85.06 Hz
XGA	1024 x 768	48.36 kHz	60.00 Hz
XGA	1024 x 768	56.48 kHz	70.07 Hz
XGA	1024 x 768	60.02 kHz	75.03 Hz
XGA	1024 x 768	68.68 kHz	85.00 Hz
SXGA	1152 x 864	63.85 kHz	70.01 Hz
SXGA	1152 x 864	67.50 kHz	75.00 Hz
SXGA	1280 x 960	60.00 kHz	60.00 Hz
SXGA	1280 x 1024	63.98 kHz	60.02 Hz

Appendix B: Video Compatibility

NTSC-M, NTSC-4.43

- PAL-M,N,B,D,G,H,I
- SECAM

Signal	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
480i	15.734 kHz	60 Hz
480p	31.469 kHz	60 Hz
576i	15.625 kHz	50 Hz
576p	31.25 kHz	50 Hz
720p	45.0 kHz	60 Hz
720p	37.5 kHz	50 Hz
1080i	33.75 kHz	60 Hz
1080i	28.125 kHz	50 Hz