Illustrated Parts & Service Map

HP Elite 7100 Series Microtower PC



© 2010 Hewlett-Packard Development Company, L.P. The information con-tained herein is subject to change without notice. HP shall not be liable for technical or editorial errors or omissions contained herein.

Document Number 606037-001. 1st Edition February 2010.



Key Specifications

Processor Type	Intel® Core TM i3, Intel Core i5, Intel Core i7	
Maximum RAM	16 GB; PC-3-10600 (1333MHz) DDR3 SDRAM	
Expansion Slots	1 PCI x16 3 PCI x1	
Integrated Graphics	Integrated Intel HD graphics	
Chipset	Intel H57 Express	
Drive Support	 External: (2) 5.25-inch and (1) 3.5-inch drive bays Internal: (2) 3.5-inch drive bays 	
I/O Interfaces	Front: (3) USB ports, 1394, microphone, headphone Rear: (6) USB ports, (1) RJ-45, (1) 1394, (1) audio in, (1) audio out, (1) microphone, (1) surround center, (1) surround right, (1) surround left, (1) optical out, (1) VGA, (1) DVI	
Operating Systems	 Windows® 7 Windows XP Professional (downgrade from Windows 7) Windows Vista® Business Novell SUSE Linux Enterprise Desktop 11 FreeDOS 	

Spare Parts



System Unit

1	Access panel	586372-001
2	Power supply, 300W, PFC	604611-001
2	Power supply, 300W, 85% efficient	575437-002
3	Chassis	not spared
4	Front bezel	586373-001
*	5.25-inch bezel blank	536306-001
*	3.5-inch bezel blank	583094-001

* Not shown

HP Elite 7100 MT Series

Mass Storage Devices (not illustrated)

22-in-1 media card reader, 3.5-inch	480032-001
16X SATA DVD±RW and CD-RW drive with LightScribe	581600-001
16X SATA DVD-ROM drive	581599-001
Blu-ray ROM DVD±R/RW SuperMulti DL Drive with LightScribe	581601-001
1 TB (1000 GB) SATA hard drive	585465-001
500 GB SATA hard drive	586720-001
320 GB SATA hard drive	586969-001
250 GB, 7200-RPM SATA hard drive	586719-001
160 GB, 7200-RPM SATA hard drive	586718-001
64 GB solid state drive (SSD)	581057-001
250-GB hard drive, USB	586383-001 500019-001



Cables

1	Front I/O with USB	487744-001
2	Power switch/LED cable assembly	464574-001
3	SATA HDD cable, 4 inch (10 cm)	449283-001
*	SATA cable, 6.5 inch (16.5 cm)	448670-001
*	DMS-59 to dual VGA	463023-001
*	DMS-59 to dual DVI	463024-001

*Not shown

Keyboards (not illustrated)

USB, Standard USB, Smart card* USB, Washable USB, Mini		537746-xxx 537747-xxx 577495-xxx 535873-xxx		
Brazil*	-201	Latin America*	-161	
French Canada	-121	U.S.	-001	

*537747-xxx only





Standard and Optional Boards

1	System board, includes heat sink backplate	601312-001		
Memory modules (DDR3, PC3-10600)**				
*	4 GB	585157-001		
*	2 GB	576110-001		
2	1 GB	576109-001		
Oth	her boards			
3	ATI Radeon HD 4550 256-MB Dual Head graphics adapter (PCIe x16), includes bracket	538051-001 584217-001		
*	ATI Radeon HD 4650 1-GB Dual Head graphics adapter (PCIe x16), includes bracket	578174-001		
*	nVidia GeForce GT230 1.5-GB graphics adapter, includes bracket	586381-001		
*	nVidia GeForce G210 512-MB graphics adapter, includes bracket	586382-001		
*	Intel Pro 1000 PT Gb Ethernet PCIe NIC, includes bracket	490367-001		
*	LSI PCIe x1 56K International SoftModem, includes bracket	490689-001		
*	802.11b/g/n WLAN PCIe adapter	538048-001		
Inte	el Core processors (8-MB L3 cache, 1333-MHz FSB, quad core)			
*	i7-870, 2.93-GHz processor	586378-001		
*	i7-860, 2.80-GHz processor	586377-001		
*	i5-750, 2.66-GHz processor	586376-001		
Intel Core processors (4-MB L3 cache, 1333-MHz FSB, dual core)				
*	i5-670, 3.46-GHz processor	604616-001		
*	i5-660, 3.33-GHz processor	604615-001		
*	i5-650, 3.2-GHz processor	604614-001		
*	i3-540, 3.06-GHz processor	604613-001		
*	i3-530, 2.93-GHz processor	604612-001		

* Not shown



Miscellaneous Parts

1	Chassis fan	449207-001
2	Heat sink with alcohol pad and factory-applied thermal grease	586374-001
*	Rubber feet	530593-001
*	Mouse, optical, black	537749-001
*	Mouse, USB laser	570580-001
*	USB-powered speakers	466618-001

*Not shown LP = Low profile

System Board



System Board Connectors and Jumpers (position of some untitled components may vary in location)

CPU1	Processor	JUSB1	Front USB
CPU_FAN1	Primary CPU fan	BAT	Real-time-clock battery
DIMM4	DIMM 4 (Channel A)	CON1	Internal connector
DIMM3	DIMM 3 (Channel B)	J1394_1	Front 1394 port connector
DIMM2	DIMM 2 (Channel A)	JAUD1	Front audio connector
DIMM1	DIMM 1 (Channel B)	PCI_E4	PCIe X1, slot 3
ATX1	Main power	PCI_E3	PCIe X1, slot 2
SATA1	Primary HDD connector	PCI_E2	PCIe X1, slot 1
SATA2	Primary ODD connector	PCI_E1	PCIe X16 slot
SATA3	Secondary HDD connector	AUDIO1	External audio connector
SATA4	Secondary ODD connector	SYS_FAN1	Primary chassis fan
JFP1	Power button/LED	JVGA_DVI1	Display/DVI connector
JUSB6	USB connector	PWR1	CPU power
JUSB5	USB connector	LAN_USB1	RJ-45/USB connector
JUSB4	USB connector	I1394_USB1	1394 port/USB connector
JUSB3	Front I/O connector	SPDIF	SP/DIF connector
JUSB2	Media card reader connector	USB1	USB connector

Setup Utility

Basic system information is in the Setup Utility held in the system ROM, accessed by pressing **F10** when prompted (on screen) during the boot sequence.

Computer Setup Menu

Heading	Option / Description		
Main	System Time	Allows you to set system time.	
	System Date	Allows you to set system date.	
	Language	Allows you to select the language.	
	1st Drive 2nd Drive 3rd Drive 4th Drive	Allow you to: view capacity (HDD only). Also allows you to run HDD self-test for selected channel: SMART status check, SMART short self test, SMART extended self test.	
	System Information	Allows you to view installed memory, memory banks 1- 4, BIOS revision, core version.	
	Model Number	Allows you to modify the model number.	
	Serial Number	Allows you to manually enter the serial number.	
	Asset Tag	Allows you to manually enter the Asset Tag.	
	Product Number	View only. Allows you to view the product number.	
Advanced	CPU Type	View only.	
	CPU Speed	View only.	
	Cache RAM(L2)	View only.	
	Primary Video Adapter	Allows you to select boot display device when more than 2 video options are offered by system: PCIe x1 and PCIe x16.	
	SATA Controller Mode	If SATA controller is enabled, allows you to set the mode to: IDE, AHCI, RAID.	
	SATA Controller	Allows you to disable/enable the SATA controller.	
	Onboard LAN	Disable/enable onboard LAN controller.	
	Onboard LAN Boot ROM	Disable/enable the boot ROM of the onboard LAN chip.	
	USB Ports	Allows you to individually enable/disable available USB ports.	
	Onboard 1394	Allows you to enable/disable all 1394 ports.	
	Supervisor Password	Allows you to view the supervisor password.	
	Orboard Audio	Allows you to view the user password.	
	ESC: Boot Menu	Allows you to enable/disable the option to press the Esc	
	Liber Boot menu	key to access the Boot menu during computer startup.	
	F9:Diagnostics	Allows you to enable/disable the option to press the F9 key to access the Diagnostics menu during computer startup.	
	F10:Setup	Allows you to enable/disable the option to press the F10 key to access the Setup menu during computer startup.	
	F11:Recovery	Allows you to enable/disable the option to press the F11 key to access the Recovery menu during computer star- tup.	
	F12:Boot from LAN	Allows you to enable/disable the option to press the F12 key to access the Boot from LAN option during computer startup.	
Power	After AC Power Fail- ure	Allows you to select system restart behavior after power loss: Stay off, Power on, Auto.	
	Hyper-threading	Disable/enable.	
	XD (Execute Disable)	Disable/enable XD bit.	
	Virtualization Tech- nology	Disable/enable.	
	WOL from S5	Allows you to enable/disable Limited (normal shut- down) WOL from S5 support.	
Boot	Boot-time Diagnostic Screen	Disable/enable POST diagnostic messages display.	
	Boot Device Priority: 1st Boot Device, 2nd Boot Device, 3rd Boot Device, 4th Boot Device	Allows you to specify which device groups will boot first, second, third, and fourth or to disable any of the four: Floppy group, CD-ROM group, Hard drive group, Network boot group. MS-DOS drive lettering assignments maybe apply after a non-MS-DOS operat- ing system has started.	
	Floppy Group Boot Priority	Specifies boot device priority within removable devices.	
	CD-ROM Boot Prior- ity	Specifies boot device priority within CD/DVD drives.	
	Hard Drive Boot Pri- ority	Specifies boot device priority within hard drives.	
P-i:	Network Group Boot Priority	Specifies boot device priority within bootable network devices.	
Exit	Exit Saving Changes	Press Enter to exit saving changes.	
	Exit Discarding Changes	Press Enter to exit discarding changes.	
	Load Setup Defaults	Press Enter to load setup defaults.	
	Discard Changes	Press Enter to discard changes.	
1	Save Changes	Press Enter to save changes	

Recovering the Configuration Settings

To reset all BIOS Setup options to their default values (including options for Ctrl+F10), you must enter F10 Setup mode and press F5.

This does not include updates to system date, system time, supervisor password, user password, and CPU frequency multiplier.

Password Security

This computer supports security password features, which can be established through the Computer Setup Utilities menu.

This computer supports two security password features that are established through the Computer Setup Utilities menu: setup password and power-on password. When you establish only a setup password, any user can access all the information on the computer except Computer Setup. When you establish only a power-on password, the power-on password is required to access Computer Setup and any other information on the computer. When you establish both passwords, only the setup password will give you access to Computer Setup. When both passwords are set, the setup password can also be used in place of the power-on password as an override to log in to the computer. This is a useful feature for a network administrator.

If you forget the password for the computer, you can clear that password so you can gain access to the information on the computer by resetting the password jumper.

Resetting the password jumper

- Shut down the computer. With the power cord disconnected, press the power button again to drain the system of any residual power.
- 2. Remove the access panel.
- 3. Locate the header and jumper labeled JPD1.
- 4. Remove the jumper from pins 1 and 2. Place the jumper on pins 2 and 3.
- 5. Replace the access panel.
- 6. Plug in and turn on power. Allow the operating system to start. This clears the current passwords and disables the password features.
- 7. To establish new passwords, repeat steps 1 4, replace the password jumper on pins 1 and 2, then repeat steps 5 6. Establish new passwords in Computer Setup.

Resetting the CMOS jumper

- The CMOS button resets CMOS but does not clear the power-on and setup passwords.
- 1. Turn off the computer and any external devices, and disconnect power.
- 2. Remove the access panel.
- 3. Locate the header and jumper labeled JBAT1.
- 4. Remove the CMOS jumper from pins 1 and 2 and put the jumper on pins 2 and 3. This clears the CMOS.
- 5. Put the jumper back on pins 1 and 2.
- 6. Replace the access panel, external devices, and reconnect the power cord.
- 7. Turn on the computer.
- Use Computer Setup to reset any special system setups along with the date and time.

HP Vision Diagnostics

The Hewlett-Packard Vision Diagnostics utility allows you to view information about the hardware configuration of the computer and perform hardware diagnostic tests on the subsystems of the computer. The utility simplifies the process of effectively identifying, diagnosing, and isolating hardware issues. The Survey tab is displayed when you invoke HP Vision Diagnostics. This tab shows the current

The Survey tab is displayed when you invoke HP Vision Diagnostics. This tab shows the current configuration of the computer. From the Survey tab, there is access to several categories of information about the computer. Other tabs provide additional information, including diagnostic test options and test results. The information in each screen of the utility can be saved as an html file and stored on a USB flash drive.

Use HP Vision Diagnostics to determine if all the devices installed on the computer are recognized by the system and functioning properly. Running tests is optional but recommended after installing or connecting a new device.

installing or connecting a new device. Vision Diagnostics may be found on the CD that shipped with some computer models. The tool may also be downloaded from the HP Web site using the following procedure:

- 1. Go to <u>www.hp.com</u>
- 2. Click the Software & Drivers link.
- 3. Select Download drivers and software (and firmware).
- 4. Enter the product number in the text box and press Enter.
- 5. Select the specific product.
- 6. Select the OS.
- 7. Click the **Diagnostic** link.
- 8. Click Hewlett-Packard Vision Diagnostics.
- 9. Click Download.

NOTE: The download includes instructions on how to create a bootable CD or USB flash drive.

POST Front Panel LEDs and Audible Codes

Beeps/ Activity	Meaning	Recommended Action
1 short, 1 long, 3 sec pause	Bad memory or memory configuration error.	Check that the memory modules have been installed correctly and that proper modules are used.
2 short, 1 long, 3 sec pause	No graphics card installed or graphics card initializa- tion failed.	For systems with a graphics card:1. Reseat graphics card. Power on system.2. Replace the graphics card.3. Replace the system board.For systems with integrated graphics, replace the system board.
3 short, 1 long, 3 sec pause	CPU configuration error or invalid CPU detected before graphics card ini- tialized.	 Upgrade the BIOS to proper version. Change the processor.
1 short, 1 sec pause	No optical drive found.	 Check cable connections. Run the Computer Setup utility and ensure the device port is enabled.
2 short, 1 sec pause	No CD found.	 Check the type of drive and use the correct media type. Replace the CD with a new one.
3 short, 1 sec pause	Flashing not ready (miss- ing utility or BIOS image file, etc.)	Upgrade the BIOS to proper version.
4 short, 1 sec pause	Flashing operation has failed (checksum error, corrupted image, etc.)	 Verify the correct ROM. Flash the ROM if needed. If an expansion board recently added, remove to see if the problem remains. Clear CMOS. If the message disappears, there may be a problem with the expansion card. Replace the system board.
5 short, 1 sec pause	BIOS recovery was suc- cessful.	No action required.