
Use the Control Panel

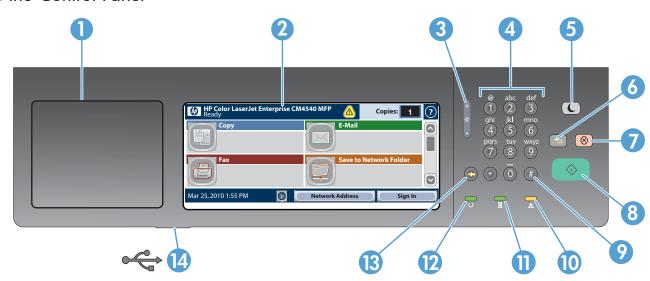

- Hardware integration pocket for adding third-party devices
- Touch screen graphical display
- Brightness-adjustment button to adjust the display brightness
- Numeric keypad
- Sleep button. Puts the product into or out of Sleep mode
- Reset button. Restores settings or returns to the Home screen
- Stop 🔞 button. Stops the active job and opens the job status screen
- Start button. Begins copying, scanning, faxing, or resumes printing a job
- Pause # button. Inserts a required pause for a fax number
- Attention 🛆 light. Indicates the product has a condition that requires attention
- Data Ξ light. Indicates the product is receiving or processing data
- Ready O light. Indicates the product is ready for a new job
- Backspace button. Clears the active text or number field and returns values to the default settings
- USB port for printing documents directly or saving scanned documents to a USB flash drive Supported file types:

Digital Send: PDF, JPEG, TIFF, MTIFF, XPS, PDF/A

Scan to walk-up USB: PDF, JPEG, TIFF, MTIFF, XPS, PDF/A

Print from walk-up USB: PDF, PS, print-ready files (.prn, .pcl)



Make copies from an original document

- 1. Place the original document face-up in the document feeder, or face-down on the upper left corner of the glass. 2. Use the numeric keypad to change the number of copies.
- 3. Copies are color by default. For black and white copies
- touch Copy [3]. Touch Color/Black. Touch Black. Touch OK. 4. To customize settings, touch Copy and then touch the individual options. Touch **More Options** vo set other
- options. 5. Touch **Start**
- 6. To return to the Home screen, touch the Home 🚳 button in the upper left corner of the screen.



E-mail (if configured)

Send a document as an attachment to an e-mail.

- 2. Touch **E-mail**
- 3. Touch the **From:** text box to open the keyboard. Type your
- 5. Touch the **Subject:** text box to open the keyboard. Type



- feeder, or face-down on the upper left corner of the glass.
- e-mail address
- Touch More Options on to set other options. 6. Touch Start 🚳 .



- 1. Place the original document face-up in the document
- 4. Touch the **To:** text box to open the keyboard. Type the
- 7. To return to the Home screen, touch the Home 🚳 button in the upper left corner of the screen.



Product status

Open product

functions with these buttons.

Current date

and time

Fax (if available and configured)

Send a document to one or more fax numbers.

- 1. Place the original document face-up in the document feeder, or face-down on the upper left corner of the glass.
- 2. Touch Fax
- 3. Use the numeric keypad to enter fax numbers, or touch to select recipients.
 - Touch 🗇 to delete numbers. Touch ℚ to transfer a fax number to the Fax Recipients list.
- 4. Touch More Options of to set other options.
- 5. Touch **Start**
- 6. To return to the Home screen, touch the Home 🚳 button in the upper left corner of the screen.



If an error occurs, touch this button

to open a helpful message.

HP Color LaserJet Enterprise CM4540 MFP

MMM/DD/YYYY 00:00 AM

If available, touch this

button to change the

control-panel language.

Check on active and completed jobs.

Touch this button for

Copies:

Sign In

E-Mail

Network Address

If available, touch this button to

display the network address

for the product.

Save to Network Folder

assistance on any screen.

Use the

numeric keypad to

change

Touch this button to

to secured features.

sign in for access

quantities.

- 1. To view all current jobs, touch **Job Status 3**. The active tab displays all current Jobs/Users/Status information.
- 2. To view a specific job, touch the job name and touch
- 3. To cancel a specific job, touch the job name and touch
- Cancel Job. 4. To view completed jobs, touch the **Job Log** tab.
- 5. To view a specific completed job, touch the job name and
- 6. For a copy of the Job Log, touch **Print Log**.
- 7. To return to the Home screen, touch the Home 🐧 button in the upper left corner of the screen.



Save To Network Folder

Scan and save a document for future use.



Save To USB

Scan and save a document for future use.



Save To Device Memory

Scan and save a document for future use.

- 1. Place the original document face-up in the document feeder, or face-down on the upper left corner of the glass.
- 2. Touch Save To Network Folder , Save To USB , or
- Save To Device Memory
- 3. Select a folder for the file, and touch **OK**.
- 4. Touch **File Name** to open the keyboard, and then type the file name. Touch **OK**.
- 5. Touch Start .6. To return to the Home screen, touch the Home .button in the upper left corner of the screen.



Open From USB

Select and print a document from a portable USB



Open From Device Memory

Select and print a stored job from the device

- 1. Touch Open From USB or Open From Device
- 2. Select the folder where the document is saved, and touch OK.

3. If the job is private, enter the PIN.


the upper left corner of the screen.

4. Touch Start 🚳 5. To return to the Home screen, touch the Home 🚳 button in



Supplies

Check on the status of supplies.

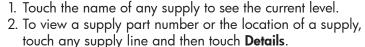

3. To return to the Home screen, touch the Home 🚮 button in the upper left corner.



More Help

Trays

Check the status of the trays and configure the paper type and size.

- 1. Touch the tray number to view the current level. 2. To change the paper type or size, touch **Modify**.
- 3. To return to the Home screen, touch the Home 🚮 button in the upper left corner.



Administration

Manage the product.

- 1. Touch Administration 📵 to open a group of menus where you can perform the following tasks:
 - Set default product behavior for most features.
 - Configure network settings.
 - View and print product reports.
 - Set the date and time.
- Print pages that help you troubleshoot problems. 2. To return to the Home screen, touch the Home 🐧 button in the upper left corner of the screen.



Device Maintenance

Maintain the product.

- 1. Touch **Device Maintenance** to open up a group of menus where you can perform the following tasks:
- Calibrate and clean the product.
- Back up and restore product information.
- 2. To return to the Home screen, touch the Home 🚳 button in the upper left corner of the screen.

© 2011 Hewlett-Packard Development Company, L.P.



 "Use My MFP" animations: www.hp.com/go/usemyMFP Print-quality diagnostics: www.hp.com/go/printquality/CLJCM4540MFP

Product support: www.hp.com/support/CLJCM4540mfp

• Fax information: www.hp.com/go/MFPFaxAccessory500