

# Getting Started



For more information about HP products and services, see the HP Web site at <http://www.hp.com>.

© Copyright 2010 Hewlett-Packard Development Company, L.P.

Windows and Windows Vista are U.S. registered trademarks of Microsoft Corporation.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: 595289-001

## User Guides

HP is committed to reducing the environmental impact of our products. As part of this effort, we provide user guides and learning centers on your computer hard drive in Help and Support. Additional support and updates to the user guides are available on the Web.

## Windows Users



Looking for more user guides? They are on your computer. Click: **Start > Help and Support > User Guides**

---

## Linux Users



Looking for more user guides? You can find them on the *User Guides* disc that came with your computer.

---

## Subscription Services for Business Notebook



E-mail Alert

Keep this product up to date with the latest drivers, patches, and notifications. Sign up now at [www.hp.com/go/alerts](http://www.hp.com/go/alerts) to receive e-mail alert notifications.

---

# End User License Agreement (EULA)

BY INSTALLING, COPYING, DOWNLOADING, OR OTHERWISE USING ANY SOFTWARE PRODUCT PRE-INSTALLED ON THIS PC, YOU AGREE TO BE BOUND BY THE TERMS OF THE HP EULA. IF YOU DO NOT ACCEPT THESE LICENSE TERMS, YOUR SOLE REMEDY IS TO RETURN THE ENTIRE UNUSED PRODUCT (HARDWARE AND SOFTWARE) WITHIN 14 DAYS FOR A REFUND SUBJECT TO THE REFUND POLICY OF YOUR PLACE OF PURCHASE. For any further information or for requesting a full refund of the PC, please contact your local point of sale (the seller).

## Contacting Customer Support

If the information provided in your User Guide or Learning Center does not address your questions, you can contact HP Customer Support at:

[www.hp.com/go/contactHP](http://www.hp.com/go/contactHP)

Here you can:

- Chat online with an HP technician.



When technical support chat is not available in a particular language, it is available in English.

- E-mail HP Customer Support.
- Find HP Customer Support worldwide telephone numbers.
- Locate an HP service center.

## Serial Number Label Information

The serial number label, located on the bottom of the computer, provides important information that you may need when contacting technical support.



①	Product name	④	Warranty period
②	Serial number	⑤	Model description (select models)
③	Product number		

## Warranty Information

You may find the expressly provided HP Limited Warranty applicable to your product in the start menu on your PC and/or in the CD/DVD provided in the box. Some countries/regions may provide a printed HP Limited Warranty in the box. In countries/regions where the warranty is not provided in printed format, you may request a printed copy from [www.hp.com/go/orderdocuments](http://www.hp.com/go/orderdocuments) or write to:

North America:

Hewlett Packard, MS POD, 11311 Chinden Blvd, Boise, ID 83714, USA

Europe, Middle East, Africa:

Hewlett-Packard, POD, Via G. Di Vittorio, 9, 20063, Cernusco s/Naviglio (MI), Italy

Asia Pacific:


Hewlett-Packard, POD, P.O. Box 200, Alexandra Post Office, Singapore 911507

Please include your product number, warranty period (found on your serial number label), name and postal address.

---

# Basic Setup

## 1 Unpack the box

 Computer color, features, and options may vary by computer model. The illustrations in this guide may look slightly different from your computer.




Component	Component
❶ AC adapter	❸ Battery*
❷ Computer	❹ Power cord*

\*Batteries and power cords vary in appearance by country or region.

## 2 Insert the battery

**WARNING:** To reduce potential safety issues, use only the AC adapter or battery provided with the computer, or a replacement AC adapter or battery provided by HP.

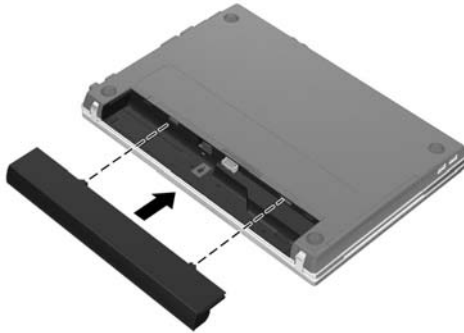


## 3 Connect the computer to external power

**WARNING:** To reduce the risk of electric shock or damage to your equipment, observe these practices:

- Plug the power cord into an AC outlet that is easily accessible at all times.
- Disconnect power from the computer by unplugging the power cord from the AC outlet (not by unplugging the power cord from the computer).
- If provided with a 3-pin attachment plug on your power cord, plug the cord into a grounded (earthed) 3-pin outlet. Do not disable the power cord grounding pin, for example, by attaching a 2-pin adapter. The grounding pin is an important safety feature.



 A partially charged new battery can run the computer after software setup is complete, but battery charge displays are not accurate until the new battery has been fully charged.


## 4 Open the computer



## 5 Turn on the computer



---

 If the computer does not start up, be sure that the power cord and AC adapter connections are secure.

---

## 6 Set up the software

After the computer is turned on, the software setup process begins. The on-screen instructions guide you through setting up and registering your computer. After you respond to the setup prompt, you must complete the entire setup process without interruption.



**CAUTION:** Please select your language carefully. On some models, the languages you do not choose are deleted from the system and cannot be restored during software setup.

---



Registering your operating system gives you access to operating system and other software updates, and is highly recommended.

---




# What's Next?

This guide provides information for the following operating systems:

- Windows® 7
- Windows Vista®
- Windows® XP
- Linux

---


 The information in this chapter is common to all the listed operating systems unless otherwise noted.

---

## Locating the electronic manuals (Windows)

For detailed information about your computer, such as power management, drives, memory, security, and other features, click **Start**, click **Help and Support**, and then click **User Guides**. You do not need to connect to the Internet to access the user guides in Help and Support.

---

 A *User Guides* disc may have also been included with your computer.

---


## Locating the electronic manuals (Linux)

For detailed information about your computer, such as power management, drives, memory, security, and other features, refer to the *User Guides* disc that is included with this computer.

## Finding more information (Windows)

In Help and Support in Windows, you can find information about technical support and about the operating system, drivers, and troubleshooting tools. To access Help and Support, click **Start**, and then click **Help and Support**. For country- or region-specific support, go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.

---

 **WARNING:** To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. To access this document, click **Start**, click **Help and Support**, and then click **User Guides**, or refer to the *User Guides* disc included with some models. The *Safety & Comfort Guide* is also available on the Web at <http://www.hp.com/ergo>.

---

For more safety and regulatory information, and for battery disposal information, refer to the *Regulatory, Safety and Environmental Notices*. To access the notices in Windows, click **Start**, click **Help and Support**, and then click **User Guides**, or refer to the *User Guides* disc included with some models.

## Finding more information (Linux)

For country- or region-specific support, go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.



**WARNING:** To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. To access this document, refer to the *User Guides* disc, included with the computer. The *Safety & Comfort Guide* is also available on the Web at <http://www.hp.com/ergo>.

---

For more safety and regulatory information, and for battery disposal information, refer to the *Regulatory, Safety and Environmental Notices* located on the *User Guides* disc, included with the computer.

## Backing up and recovering (Windows 7)

To protect your information, use Windows Backup and Restore to back up individual files and folders, back up your entire hard drive (select models only), create a system repair disc (select models only), or create system restore points. In case of system failure, you can use the backup files to restore the contents of your computer.

Windows Backup and Restore provides the following advanced backup and recovery options:

- Creating a system repair disc (select models only)
- Backing up individual files and folders
- Creating a system image (select models only)
- Scheduling automatic backups (select models only)
- Creating system restore points
- Recovering individual files
- Restoring the computer to a previous state
- Recovering information using recovery tools



For instructions on these procedures, go to Help and Support.

---



For additional information, go to the *User Guide* in Help and Support.

---


## Backing up


Recovery after a system failure is as complete as your most current backup. You should create system repair discs (select models only) and your initial backup immediately after software setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.


Use Backup and Restore to create a backup. Click **Start**, click **All Programs**, click **Maintenance**, and then click **Backup and Restore**. Follow the on-screen instructions to set up your backup, create a system image (select models only), or create a system repair disc (select models only).


## Recovering


In case of system failure, use the **f11** recovery tool to recover your original hard drive image.

 The image includes the Windows operating system and software programs installed at the factory.

 **CAUTION:** Using **f11** completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The **f11** recovery tool reinstalls the operating system and HP programs and drivers that were installed at the factory. Software, drivers, and updates not installed at the factory must be reinstalled. Personal files must be restored from a backup.

1. If possible, back up all personal files.
2. If possible, check for the presence of the HP Recovery partition. To find the partition, click **Start**, right-click **Computer**, click **Manage**, and then click **Disk Management**.
  -  If the HP Recovery partition is not listed, you must recover your operating system and programs using the Windows 7 operating system DVD and the *Driver Recovery* disc. To purchase these discs, contact customer support. Refer to the “Contacting Customer Support” section in the back of this guide.
3. If the HP Recovery partition is listed, restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
4. Press **f11** while the “Press <F11> for recovery” message is displayed on the screen.
5. Follow the on-screen instructions.

 Windows provides additional recovery tools through the operating system. For additional information, go to Help and Support.

 If you are unable to boot (start up) your computer, you must purchase a Windows 7 operating system DVD to reboot the computer and repair the operating system. For additional information, contact customer support. Refer to the “Contacting Customer Support” section in the back of this guide.

## Backing up and recovering (Windows Vista)


To protect your information, use the Backup and Restore Center to back up individual files and folders, back up your entire hard drive (select models only), or create system restore points. In case of system failure, you can use the backup files to restore the contents of your computer.

Backup and Restore Center provides the following advanced backup and recovery options:


- Backing up individual files and folders
- Backing up the entire hard drive (select models only)
- Scheduling automatic backups (select models only)
- Creating system restore points
- Recovering individual files

- Restoring the computer to a previous state
- Recovering information using recovery tools

---

 For instructions on these procedures, go to Help and Support.

---

 For additional information, go to the *User Guide* in Help and Support.

---

## Backing up


Recovery after a system failure is as complete as your most current backup. You should create your initial backup immediately after software setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

Use Backup and Restore Center to create a backup. Click **Start**, click **All Programs**, click **Maintenance**, and then click **Backup and Restore Center**. Follow the on-screen instructions to back up your entire computer (select models only) or your files.


## Recovering

In case of system failure, use the **f11** recovery tool to recover your original hard drive image.

---


 The image includes the Windows® operating system and software programs installed at the factory.

---

 **CAUTION:** Using **f11** completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The **f11** recovery tool reinstalls the operating system and HP programs and drivers that were installed at the factory. Software, drivers, and updates not installed at the factory must be reinstalled. Personal files must be restored from a backup.


---

1. If possible, back up all personal files.
2. If possible, check for the presence of the HP Recovery partition. To find the partition, click **Start**, and then click **Computer**.

 If the HP Recovery partition has been deleted, you must recover your operating system and programs using the Windows Vista operating system DVD and the *Driver Recovery* disc. To purchase these discs, contact customer support. Refer to the “Contacting Customer Support” section in the back of this guide.

3. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
4. Press **f11** while the “Press <F11> for recovery” message is displayed on the screen.
5. Follow the on-screen instructions.

---

 Windows Vista provides additional recovery tools through the operating system. For additional information, go to Help and Support.

---

If you are unable to boot (start up) your computer, you must purchase a Windows Vista operating system DVD to reboot the computer and repair the operating system. For additional information, contact customer support. Refer to the “Contacting Customer Support” section in the back of this guide.


## Backing up and recovering (Windows XP)

To protect your information, use the Windows Backup utility (select models only) to back up files and folders or create recovery points. In case of system failure, you can use the backup files to restore your computer.


Windows provides the following advanced backup and recovery options:

- Backing up individual files and folders
- Backing up the entire hard drive (select models only)
- Scheduling automatic backups (select models only)
- Creating recovery points
- Recovering information

---

 For instructions on these procedures, go to Help and Support.

---

 For additional information, go to the *User Guide* in Help and Support.

---

## Backing up


Recovery after a system failure is as complete as your most current backup. You should create your initial backup immediately after software setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

Use the Windows Backup utility (select models only) to create a backup. Click **Start**, click **All Programs**, click **Accessories**, click **System Tools**, and then click **Backup**. Follow the on-screen instructions to back up your files.

## Recovering

In case of system failure, use the *Operating System* disc and the *Driver Recovery* disc that are included with the computer to recover your operating system and programs.


---

 **CAUTION:** The recovery process completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The recovery process reinstalls the operating system and HP programs and drivers that were installed at the factory. Software, drivers, and updates not installed at the factory must be reinstalled. Personal files must be restored from a backup.

---

1. If possible, back up all personal files.
2. Insert the *Operating System* disc into the optical drive.
3. Shut down the computer.
4. Turn on the computer.
5. Follow the on-screen instructions.


---

 Windows provides additional recovery tools through the operating system. For additional information, go to Help and Support.

---

## Performing an image recovery (Linux)

---


 **CAUTION:** The **f11** recovery tool reinstalls the operating system and drivers which were installed at the factory. Software not installed at the factory must be reinstalled. The partition containing the user's home folders **WILL NOT** be erased. It is recommended that all personal files be backed up before proceeding.

---

To recover the original hard drive image using **f11**, follow these steps:

1. If possible, back up all personal files.
2. Restart the computer, and then press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.
3. Press **f11** while the "Press <F11> for recovery" message is displayed on the screen.
4. Follow the on-screen instructions.

---

 If you are unable to boot (start up) your computer using the primary operating system or the **f11** recovery method, you must use the *System Recovery DVD SLED 11 Linux* operating system DVD to repair the operating system. Refer to the *Worldwide Telephone Numbers* booklet, included with the computer, for contact information.

---

## Turning off the computer (Windows 7)

To turn off the computer:

1. Save your work and close all programs.
2. Click **Start**, and then click **Shut down**.

## Turning off the computer (Windows Vista)

To turn off the computer:


1. Save your work and close all programs.
2. Click **Start**, click the arrow next to the Lock button, and then click **Shut down**.

## Turning off the computer (Windows XP)

To turn off the computer:

1. Save your work and close all programs.
2. Click **Start**, click **Turn Off Computer**, and then click **Turn Off**.

---

 If you have been registered to a network domain, the button you click is called **Shut Down** instead of **Turn Off Computer**.

---

## Turning off the computer (Linux)

To turn off the computer, use either one of the following methods:

1. Save your work and close all programs.
  2. Briefly press the Power button. A menu appears.
  3. Click **Shutdown**, and then click **Shutdown** again.
- or –
1. Save your work and close all programs.
  2. Click **Computer**, click **Shutdown**, and then click **Shutdown** again.

# Product Information and Troubleshooting


## Input power


The power information in this section may be helpful if you plan to travel internationally with the computer.

The computer operates on DC power, which can be supplied by an AC or a DC power source. Although the computer can be powered from a standalone DC power source, it should be powered only with an AC adapter or a DC power source supplied and approved by HP for use with this computer.

The computer can operate on DC power within the following specifications.

Input power	Rating
Operating voltage	18.5 V dc @ 3.5 A - 65 W or 19 V dc @ 4.74 A - 90 W
Operating current	3.5 A or 4.74 A

 This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.

 The computer operating voltage and current can be found on the system regulatory label on the bottom of the computer.

## Operating environment

Factor	Metric	U.S.
<b>Temperature</b>		
Operating (not writing to optical disc)	0°C to 35°C	32°F to 95°F
Operating (writing to optical disc)	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
<b>Relative humidity (noncondensing)</b>		
Operating	10% to 90%	10% to 90%
Nonoperating	5% to 95%	5% to 95%
<b>Maximum altitude (unpressurized)</b>		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft

## Traveling with the computer

For best results, follow these traveling and shipping tips:


- Prepare the computer for traveling or shipping:
  1. Back up your information.
  2. Remove all discs and all external media cards, such as digital cards and ExpressCards.
    - △ **CAUTION:** To reduce the risk of damage to the computer, damage to a drive, or loss of information, remove the media from a drive before removing the drive from a drive bay, and before shipping, storing, or traveling with a drive.
  3. Turn off and then disconnect all external devices.
  4. Shut down the computer.
- Take along a backup of your information. Keep the backup separate from the computer.
- When traveling by air, carry the computer as hand luggage, and do not check it in with the rest of your bags.
  - △ **CAUTION:** Avoid exposing a drive to magnetic fields. Security devices with magnetic fields include airport walk-through devices and security wands. The airport security devices that check carry-on luggage, such as conveyor belts, use X-rays instead of magnetism and does not damage a drive.
- In-flight computer use is at the discretion of the airline. If you plan to use the computer during a flight, check with the airline in advance.
- If the computer is to be unused and disconnected from external power for more than 2 weeks, remove the battery and store it separately.
- If you are shipping the computer or a drive, use suitable protective packaging and label the package “FRAGILE.”
- If the computer has a wireless device or a cell phone device installed, such as an 802.11b/g device, a Global System for Mobile Communications (GSM) device, or a General Packet Radio Service (GPRS) device, the use of these devices may be restricted in some environments. Such restrictions may apply onboard aircraft, in hospitals, near explosives, and in hazardous locations. If you are uncertain of the policy that applies to the use of a particular device, ask for authorization to use it before you turn it on.
- If you are traveling internationally, follow these suggestions:
  - Check the computer-related customs regulations for each country or region on your itinerary.
  - Check the power cord and adapter requirements for each location in which you plan to use the computer. Voltage, frequency, and plug configurations vary.
    - △ **WARNING:** To reduce the risk of electric shock, fire, or damage to the equipment, do not attempt to power the computer with a voltage converter kit sold for appliances.



## Routine care

### Cleaning the display

---

 **CAUTION:** To prevent permanent damage to the computer, never spray water, cleaning fluids, or chemicals on the display.


---

To remove smudges and lint, frequently clean the display with a soft, damp, lint-free cloth. If the screen requires additional cleaning, use premoistened antistatic wipes or an antistatic screen cleaner.

### Cleaning the TouchPad and keyboard

Dirt and grease on the TouchPad can cause the pointer to jump around on the screen. To avoid this, clean the TouchPad with a damp cloth, and wash your hands frequently when using the computer.

---

 **WARNING:** To reduce the risk of electric shock or damage to internal components, do not use a vacuum cleaner attachment to clean the keyboard. A vacuum cleaner can deposit household debris on the keyboard surface.

---


Clean the keyboard regularly to prevent keys from sticking and to remove dust, lint, and particles that can become trapped beneath the keys. A can of compressed air with a straw extension can be used to blow air around and under the keys to loosen and remove debris.

## Troubleshooting resources (Windows)

If you experience computer problems, perform these troubleshooting steps in the sequence provided until the problem is resolved:

1. Refer to the section “Quick troubleshooting” in this chapter.
2. In Windows, access Web site links and additional information about the computer through Help and Support. Click **Start**, and then click **Help and Support**.

---

 Although many checkup and repair tools require an Internet connection, other tools, like Help and Support, can help you fix a problem when the computer is offline.

---

## Troubleshooting resources (Linux)

If you experience computer problems, perform these troubleshooting steps in the sequence provided until the problem is resolved:

1. Refer to the section “Quick troubleshooting” in this chapter.
2. Refer to the *Worldwide Telephone Numbers* booklet, included with the computer, to contact technical support.

## Quick troubleshooting

### The computer is unable to start up

If the computer does not turn on when you press the power button, the following suggestions may help you resolve the problem:

- If the computer is plugged into an AC outlet, unplug the computer and then plug another electrical device into the outlet to be sure that the outlet is providing adequate power.
  - ✎ Use only the AC adapter provided with the computer or one approved by HP for this computer.
- If the computer is running on battery power or is plugged into an external power source other than an AC outlet, plug the computer into an AC outlet using the AC adapter. Be sure that the power cord and AC adapter connections are secure.

### The computer screen is blank

If the screen is blank, but the computer is on and the power light is on, the computer may not be set to display the image on the computer screen. To transfer the image to the computer screen, press **fn+f4**.

### Software is functioning abnormally (Windows)

If the software is unresponsive or responds abnormally, follow these suggestions:

- In Windows 7, restart the computer. Click **Start**, click the arrow next to the Shut down button, and then click **Restart**.
- In Windows Vista, restart the computer. Click **Start**, click the arrow next to the Lock button, and then click **Restart**.
- In Windows XP, restart the computer. Click **Start**, click **Turn Off Computer**, and then click **Restart**.
  - ✎ If you have been registered to a domain, the button you click is called **Shut Down** instead of **Turn Off Computer**.

If you cannot restart the computer using this procedure, refer to the section, “The computer is on but is not responding.”

- Run a virus scan. For information about using the antivirus resources on the computer, refer to the antivirus software Help for more details.

### Software is functioning abnormally (Linux)

If the software is unresponsive or responds abnormally, follow these suggestions:

- Restart the computer. Click **Computer**, click **Shutdown**, and then click **Restart**.


If you cannot restart the computer using this procedure, refer to the next section, “The computer is on but is not responding.”
- Run a virus scan. For information about using the antivirus resources on the computer, refer to the antivirus software Help for more details.

---

## The computer is on but is not responding

If the computer is on but is not responding to software or keyboard commands, try the following emergency shutdown procedures, in the sequence provided, until shutdown occurs:

---

 **CAUTION:** Emergency shutdown procedures will result in the loss of unsaved information.

---


- Press and hold the power button on the computer for at least 5 seconds.
- Disconnect the computer from external power and remove the battery.

## The computer is unusually warm


It is normal for the computer to feel warm to the touch while it is in use. But if the computer feels unusually warm, it may be overheating because a vent is blocked.

If you suspect that the computer is overheating, turn off the computer to allow the computer to cool to room temperature. Then be sure to keep all vents free from obstructions while you are using the computer.

---

 **WARNING:** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

---

 The fan in the computer starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

---

## An external device is not working (Windows)

Follow these suggestions if an external device does not function as expected:

- Turn on the device according to the manufacturer's instructions.
- Be sure that all device connections are secure.
- Be sure that the device is receiving electrical power.
- Be sure that the device, especially if it is older, is compatible with the operating system.
- Be sure that the correct drivers are installed and updated.

## An external device is not working (Linux)

Follow these suggestions if an external device does not function as expected:

- Turn on the device according to the manufacturer's instructions.
- Be sure that all device connections are secure.
- Be sure that the device is receiving electrical power.
- Be sure that the device is properly connected. Click **Computer**, and then look under **Status** for a list of connected external devices.
- Be sure that the device, especially if it is older, is compatible with the operating system.
- Be sure that the correct drivers are installed and updated.

## The wireless network connection is not working (Windows 7 and Windows Vista)

If a wireless network connection is not working as expected, follow these suggestions:



---

If you are connecting to a corporate network, contact the IT administrator.

---

- In Windows 7, click **Start**, click **Control Panel**, click **Network and Internet**, click **Network and Sharing Center**, and then click **Troubleshoot problems**. Follow the on-screen instructions.
- In Windows Vista, click **Start**, click **Network**, click **Network and Sharing Center**, click **Diagnose and repair**, and then follow the on-screen instructions.
- Be sure that the wireless device is turned on and the wireless light on the computer is blue. If the light is amber, push the wireless button to turn on the wireless device.
- Be sure that the computer wireless antennas are free from obstructions.
- Be sure that the cable or DSL modem and its power cord are properly connected and that the lights are on.
- Be sure that the wireless router or access point is properly connected to its power adapter and the cable or DSL modem, and that the lights are on.
- Disconnect and then reconnect all cables, and turn the power off and then back on.



---

For more information on wireless technology, refer to the relevant Help topics and Web site links in Help and Support.

---



---

For information on activating mobile broadband service, refer to the mobile network operator information included with your computer.

---

## The wireless network connection is not working (Windows XP, and Linux)

If a wireless network connection is not working as expected, follow these suggestions:



---

If you are connecting to a corporate network, contact the IT administrator.

---

- Be sure that the wireless device is turned on and the wireless light on the computer is blue. If the light is amber, push the wireless button to turn on the wireless device.
- Be sure that the computer wireless antennas are free from obstructions.
- Be sure that the cable or DSL modem and its power cord are properly connected and that the lights are on.
- Be sure that the wireless router or access point is properly connected to its power adapter and the cable or DSL modem, and that the lights are on.
- Disconnect and then reconnect all cables, and turn the power off and then back on.



---

For information on activating mobile broadband service, refer to the mobile network operator information included with your computer.

---