




hp DESKJET 2000 PRINTER J210 SERIES

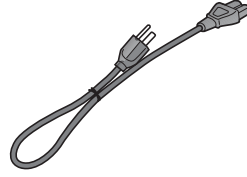

Start Here
Comience aquí
Commencez ici
Comece aqui
Lea Esto

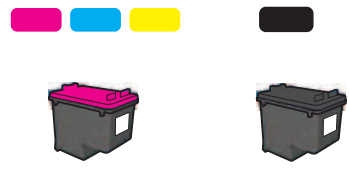


CH3990-90003

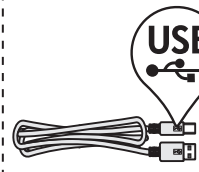

You might need to purchase a USB cable separately.
Quizá tenga que adquirir un cable USB por separado.
Il se peut que vous deviez acheter un câble USB séparément.
É preciso adquirir um cabo USB separadamente.


EN
ES
FR
PT

1 1

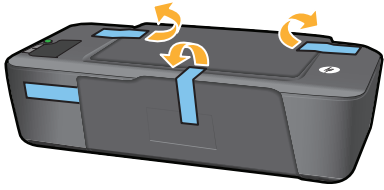

Remove tape and cardboard.
Retire la cinta y el cartón.

2

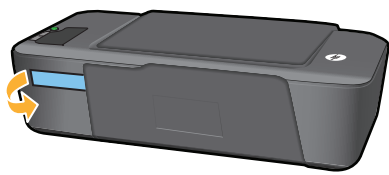


Retirez le carton et le ruban adhésif.
Remova a fita adesiva e os pedaços de papelão.

3




2

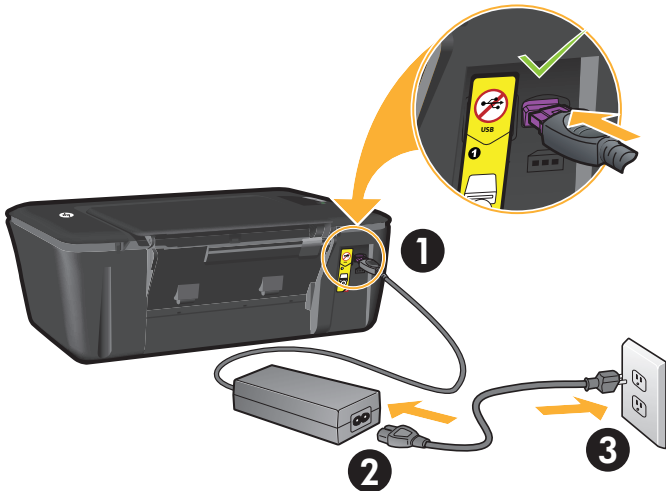

Connect power. **Do not connect USB.**
Conecte la alimentación. **No conecte el USB.**
Connectez l'alimentation. **Ne connectez pas le câble USB.**
Conecte o cabo de alimentação. **Não conecte o cabo USB.**

3

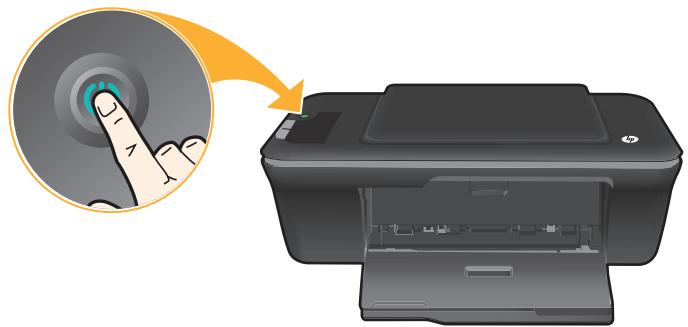

Press On button.
Pulse el botón Encender .
Appuyez sur le bouton Marche/arrêt .
Pressione o botão Liga/Desliga .

4 1




Raise input tray.
Levante la bandeja de entrada.
Soulevez le bac d'alimentation.
Levante a bandeja de entrada.

2



Pull out tray extender.
Tire del extensor de la bandeja.
Déployez l'extension du bac.
Puxe o extensor da bandeja.

3

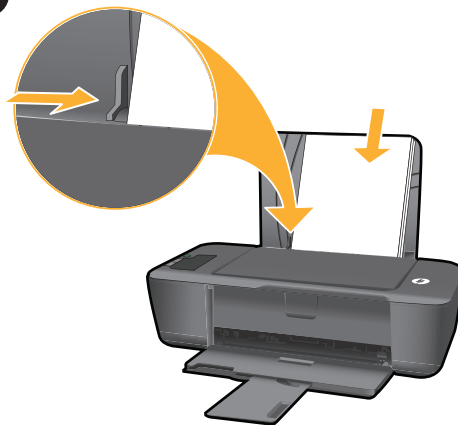

Slide guide. Load white paper.
Deslice la guía. Cargue papel en blanco.
Faites glisser le guide. Chargez du papier blanc.
Deslize a guia. Coloque papel branco.


5



Open cartridge door.
Abra la puerta de los cartuchos.
Ouvrez la trappe d'accès aux cartouches.
Abra a porta de acesso aos cartuchos.


6

6 1

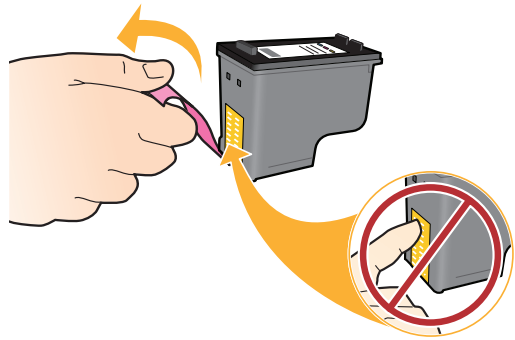


Pull pink tab to remove clear tape.
Tire de la pestaña rosa para quitar la cinta transparente.
Tirez sur la languette rose pour retirer l'adhésif.
Puxe a tira rosa e remova a fita adesiva transparente.

2

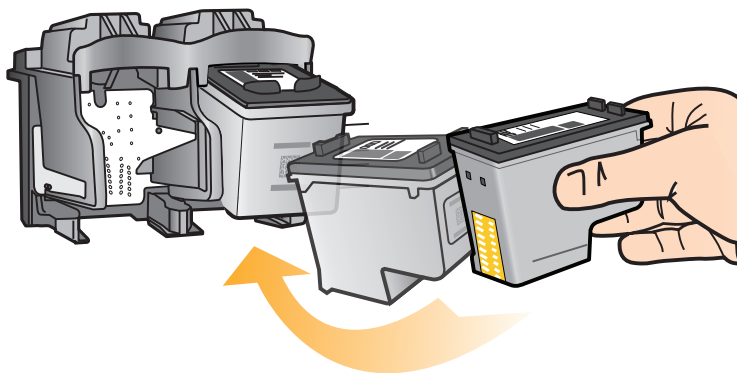

Push both cartridges into carriage until they snap.
Empuje los cartuchos en la guía hasta que encajen.
Mettez les deux cartouches en place sur le chariot jusqu'à ce qu'elles s'enclenchent.
Empurre ambos os cartuchos para dentro do compartimento no carro até eles se encaixarem.

3

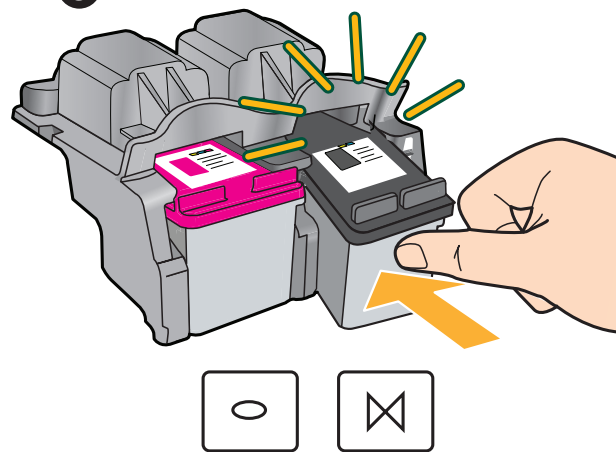

7




Close cartridge door.
Cierre la puerta del cartucho.
Refermez la porte d'accès aux cartouches.
Feche a porta de acesso aos cartuchos.


8

Windows:

1

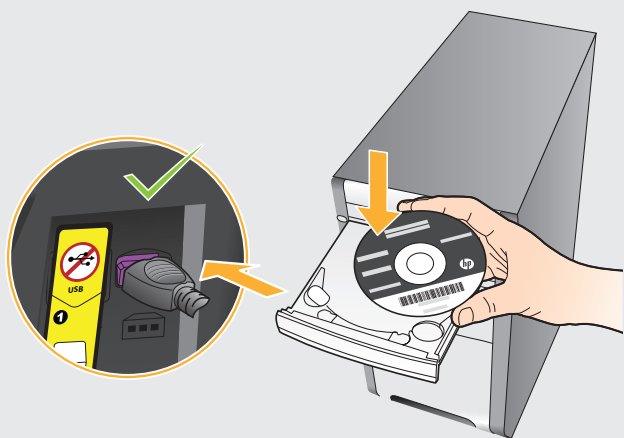


2

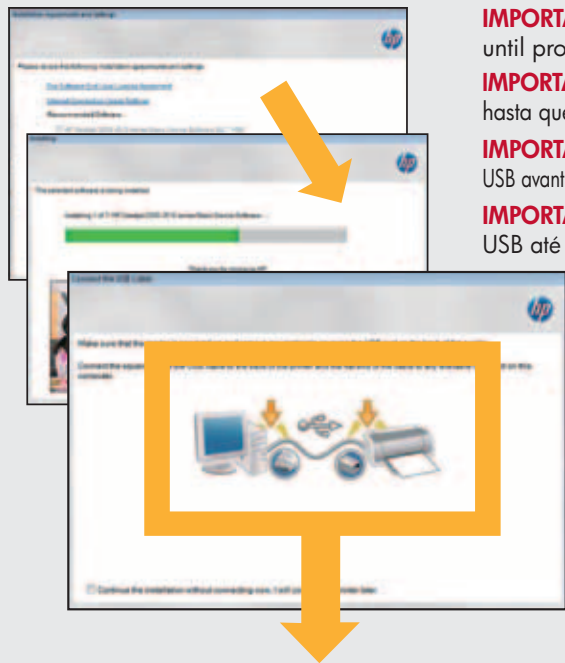


IMPORTANT: Do not connect USB until prompted on screen.
IMPORTANT: No conecte el USB hasta que se le solicite en la pantalla.
IMPORTANT: Ne branchez pas le câble USB avant d'y avoir été invité à l'écran.
IMPORTANT: Não conecte o cabo USB até isso ser solicitado na tela.

3

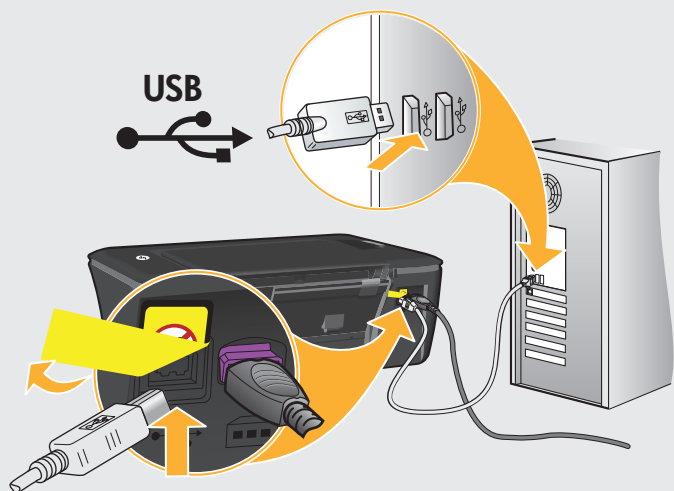


Mac:


1

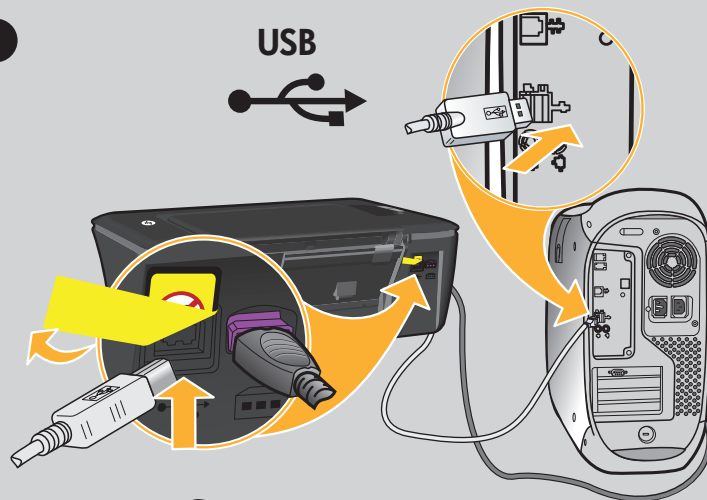

2

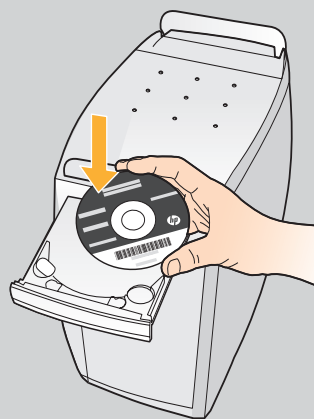

3

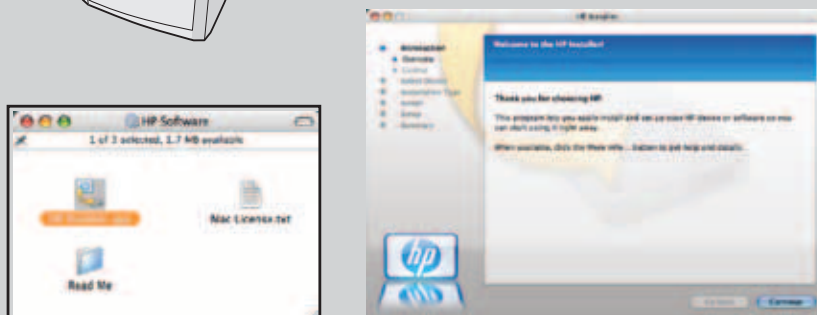

For computers without a CD/DVD drive, please go to www.hp.com/support to download and install the printer software.

Si no dispone de una unidad de CD/DVD, visite www.hp.com/support para descargar e instalar el software de la impresora.

Sur les ordinateurs non équipés d'un lecteur de CD/DVD, visitez le site www.hp.com/support pour télécharger et installer le logiciel d'imprimante.

Para computadores sem uma unidade de CD/DVD, acesse www.hp.com/support para baixar e instalar o software da impressora.

© 2010 Hewlett-Packard Development Company, L.P.

Printed in English
Printed in French
Printed in Spanish
Printed in Portuguese
www.hp.com

