






DESKJET INK ADVANTAGE 2060 ALL-IN-ONE K110 SERIES




从这里开始

Start Here

Mulai Dari Sini

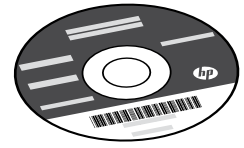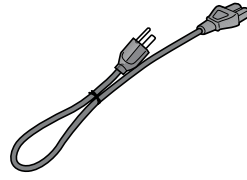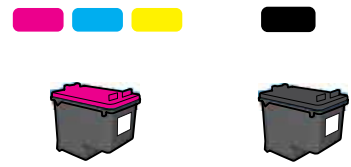

CG750-90007

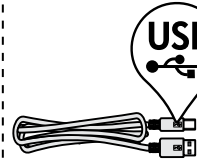

可能需要单独购买 USB 连接线。

You might need to purchase a USB cable separately.


Anda mungkin perlu membeli kabel USB secara terpisah.

ZH-CN

EN

ID

1 ①

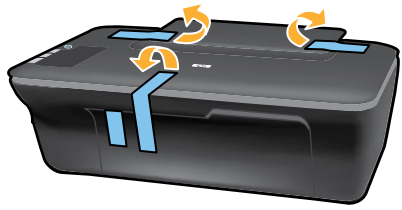


撕开胶带和纸板。
Remove tape and cardboard.

②




Lepas pita dan papan kardus.

③

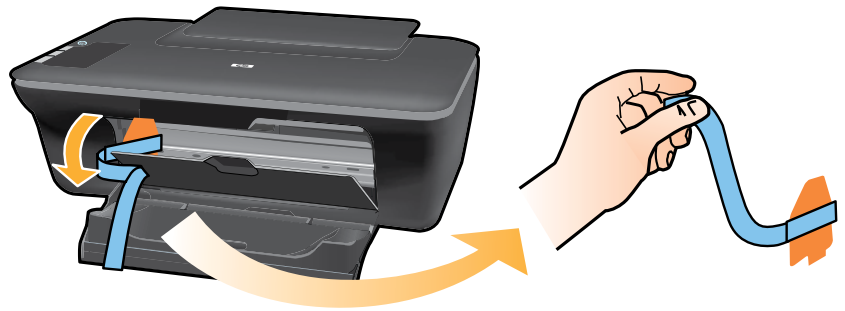

2

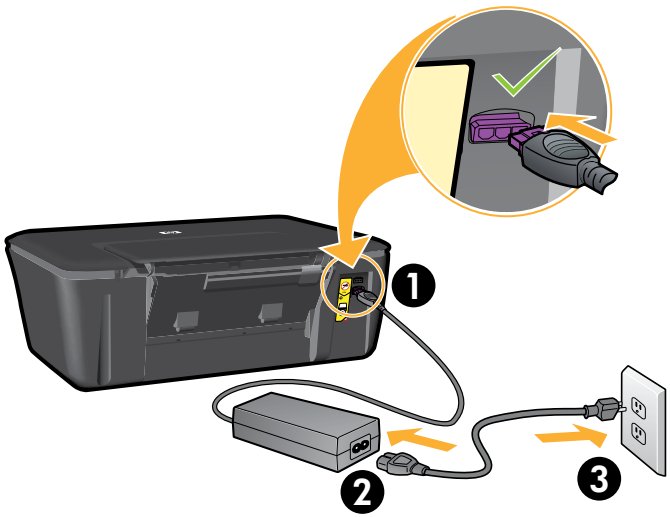

连接电源。

请勿连接 USB 电缆，除非出现提示。


Connect power.

Do not connect USB until prompted.

Hubungkan kabel daya.

Jangan hubungkan kabel USB sampai diperintahkan pada layar.

3

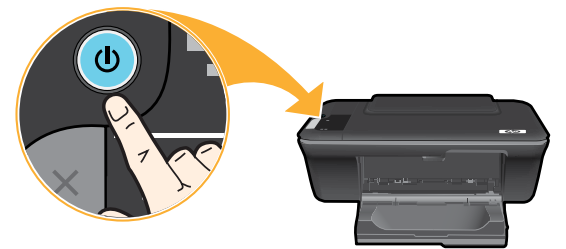

按 “开/关机” 按钮。

Press On button.


Tekan tombol Hidup.

4 ①




抬起进纸盒。
Raise input tray.
Angkat baki masukan.

②

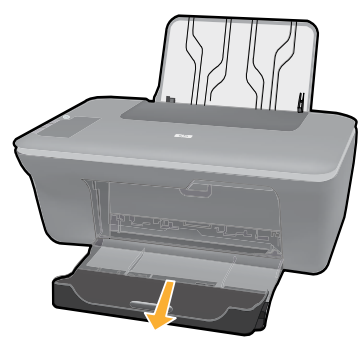

拉出出纸盒延长板。
Pull out tray extender.
Tarik keluar pemanjang baki.

③

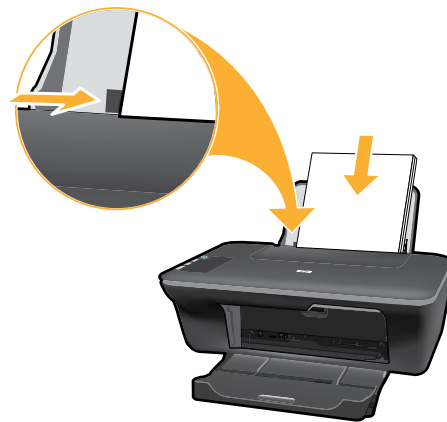


滑动导轨。放入白纸。
Slide guide. Load white paper.
Geser pemandu kertas. Muatkan kertas putih.

5




打开墨盒门。
Open cartridge door.
Buka pintu kartrid.

6 ①

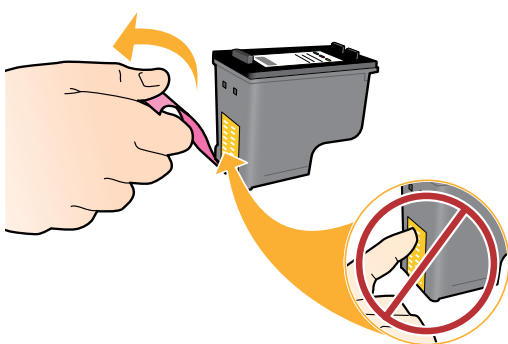


拉住粉色小片，撕掉透明胶带。
Pull pink tab to remove clear tape.
Tarik tab merah muda untuk melepaskan pita bening.

②

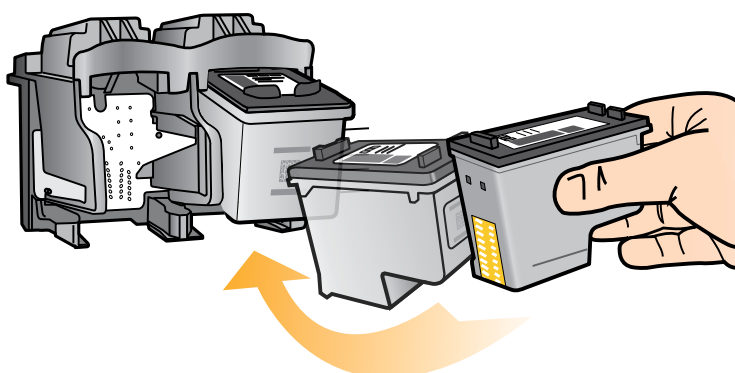


将墨盒推入托架，直到卡入就位。
Push both cartridges into carriage until they snap.
Dorong kartrid ke dalam kereta sampai terkunci.

③

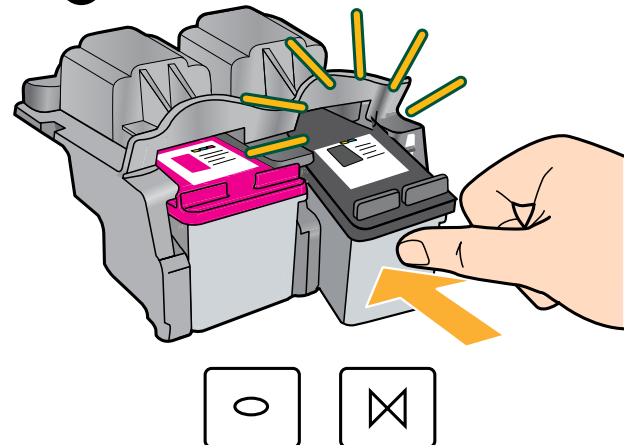

7

7 ①

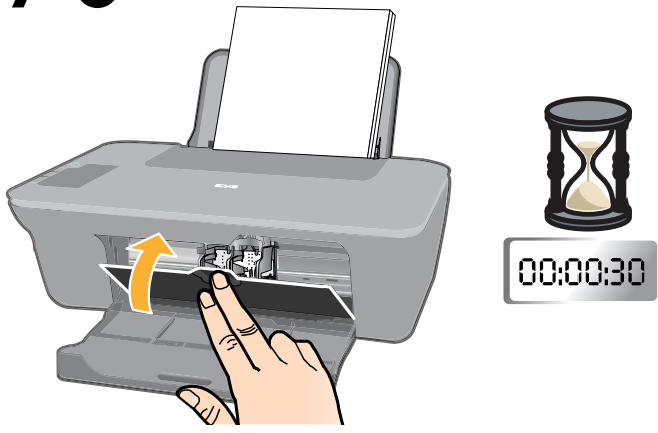

关闭墨盒门。等待 30 秒，校准页将自动打印。


Close cartridge door. Wait 30 seconds for alignment page to automatically print.

Tutup pintu kartrid. Tunggu selama 30 detik untuk mencetak halaman penyalarsan secara otomatis.

②



③

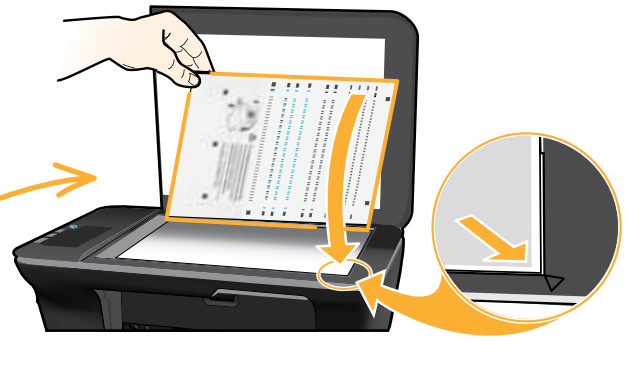


打开盖子。将校准页正面朝下放入。

Open lid. Place alignment page face down.

Buka sungkup. Letakkan muka cetak halaman penyalarsan menghadap ke bawah.

8

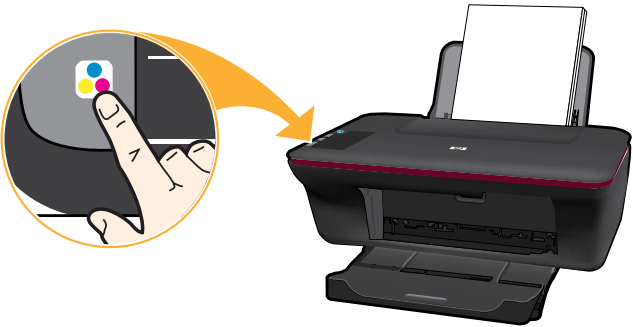

关闭盖子。按 “开始彩色复印” 按钮。

等待 “开/关机” 按钮指示灯停止闪烁，表示校准已完成。完成校准可确保更高的打印质量。

Close lid. Press Start Copy Color button.

Wait until On button light stops blinking, this means the alignment has been completed. Completing the alignment ensures better print quality.


Tutup sungkup. Tekan tombol Mulai Salin Warna.

Tunggu sampai lampu tombol Hidup berhenti berkedip, ini artinya proses penyalarsan sudah selesai. Menyelesaikan proses penyalarsan akan memastikan kualitas cetak yang lebih baik.

9

Windows:

①

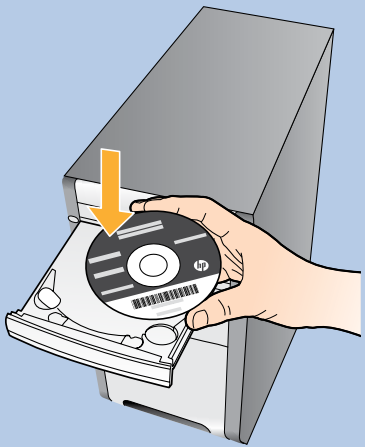


重要信息: 在屏幕上没有出现提示之前，请勿连接 USB 连接线。


IMPORTANT: Do not connect USB until prompted on screen.

PENTING: Jangan hubungkan kabel USB sampai diperintahkan pada layar.

②

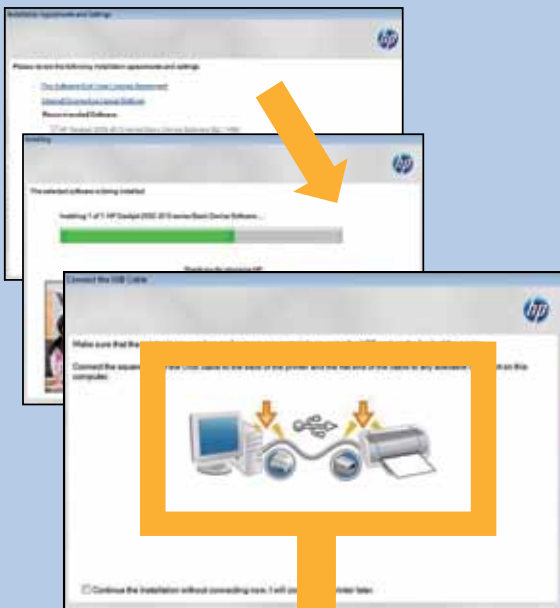


③

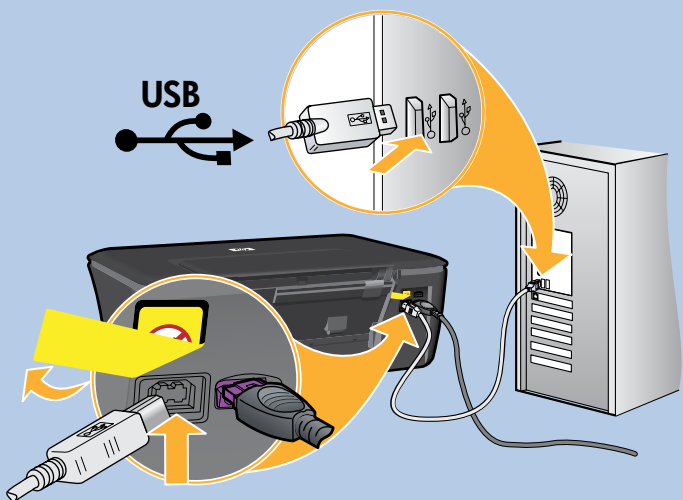


Mac:

①

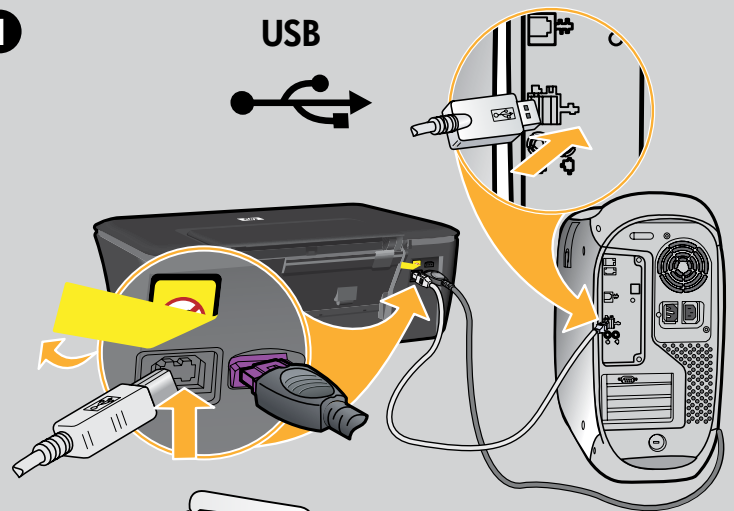

②

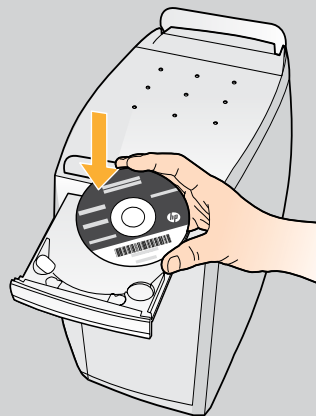

③



如果计算机没有 CD/DVD 驱动器，请转至 www.hp.com/support 以下载和安装该打印机软件。

For computers without a CD/DVD drive, please go to www.hp.com/support to download and install the printer software.


Untuk komputer yang tidak dilengkapi kandar CD/DVD, kunjungi www.hp.com/support untuk mengunduh dan menginstal perangkat lunak printer.

© 2010 Hewlett-Packard Development Company, L.P.

Printed in [English]

Printed in [Simplified Chinese]

www.hp.com

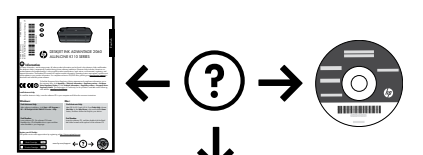

www.hp.com/support