

Compaq 325 and 326 Notebook
PCs
HP 425 and 625 Notebook PCs
Maintenance and Service Guide

© Copyright 2009 Hewlett-Packard
Development Company, L.P.

AMD Athlon, AMD Sempron, and AMD
Turion are trademarks of Advanced
Micro Devices, Inc. Bluetooth is a
trademark owned by its proprietor and used
by Hewlett-
Packard Company under license. Microsoft,
Windows, and Windows Vista are
U.S. registered trademarks of
Microsoft Corporation. SD Logo is a
trademark of its proprietor.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

First Edition: May 2009

Document Part Number: 601870-001

MSG revision history

| Revision | Publication date | Description |
|----------|------------------|---|
| A | October 2010 | Updated AC adapter part numbers: <ul style="list-style-type: none">• 613149-001-65-W AC adapter for use with computers with UMA graphics• 613150-001-90-W AC adapter for use with computers with discrete graphics |

Safety warning notice

-
- ⚠ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
-

Table of contents

| | |
|---|-----------|
| 1 Product description | 1 |
| 2 External component identification | 8 |
| Top components | 8 |
| TouchPad | 8 |
| Lights | 9 |
| Buttons, switch, and speaker | 11 |
| Keys | 12 |
| Front components | 14 |
| Right-side components | 15 |
| Left-side components | 16 |
| Bottom components | 17 |
| Multimedia components | 19 |
| Wireless antennas (select models only) | 20 |
| Additional hardware components | 21 |
| 3 Illustrated parts catalog | 22 |
| Service tag | 22 |
| Computer major components | 23 |
| Display assembly components | 29 |
| Plastics Kit | 30 |
| Cables | 31 |
| Mass storage devices | 33 |
| Miscellaneous parts | 34 |
| Sequential part number listing | 35 |
| 4 Removal and replacement procedures | 41 |
| Preliminary replacement requirements | 41 |
| Tools required | 41 |
| Service considerations | 41 |
| Plastic parts | 41 |
| Cables and connectors | 42 |
| Drive handling | 42 |

| | |
|--|------------|
| Grounding guidelines | 43 |
| Electrostatic discharge damage | 43 |
| Packaging and transporting guidelines | 44 |
| Workstation guidelines | 44 |
| Equipment guidelines | 45 |
| Component replacement procedures | 46 |
| Service tag | 46 |
| Computer feet | 47 |
| Battery | 48 |
| Service door | 49 |
| Hard drive | 51 |
| Memory module | 54 |
| WLAN module | 55 |
| Optical drive | 57 |
| Fan | 59 |
| Heat sink | 60 |
| Processor | 62 |
| Palm rest | 64 |
| Keyboard | 67 |
| Top cover | 71 |
| Power switch board | 76 |
| Bluetooth module | 78 |
| USB connector assembly | 79 |
| Speaker | 81 |
| Display assembly | 82 |
| System board | 90 |
| Main battery connector | 94 |
| RTC battery | 96 |
| Modem module | 97 |
| Audio board | 99 |
| 5 Computer Setup | 101 |
| Computer Setup in Windows | 101 |
| Starting Computer Setup | 101 |
| Using Computer Setup | 101 |
| Navigating and selecting in Computer Setup | 101 |
| Restoring factory settings in Computer Setup | 102 |
| Computer Setup menus | 103 |
| File menu | 103 |
| Security menu | 104 |
| System Configuration menu | 105 |
| Computer Setup in Linux | 109 |
| Starting Computer Setup | 109 |

| | |
|---|------------|
| Using Computer Setup | 110 |
| Navigating and selecting in Computer Setup | 110 |
| Restoring factory settings in Computer Setup | 110 |
| Computer Setup menus | 111 |
| File menu | 111 |
| Security menu | 112 |
| Diagnostics menu | 112 |
| System Configuration menu | 113 |
| 6 Specifications | 115 |
| Computer specifications | 115 |
| 39.6-cm (15.6-in) display specifications | 116 |
| 35.6-cm (14.0-in) display specifications | 117 |
| 33.8-cm (13.3-in) display specifications | 118 |
| Hard drive specifications | 119 |
| DVD-ROM Drive specifications | 120 |
| DVD±RW Double-Layer Combo Drive specifications | 121 |
| 7 Backup and recovery | 122 |
| Backup and recovery in Windows 7 | 122 |
| Overview | 122 |
| Backing up your information | 122 |
| Performing a recovery | 124 |
| Using the Windows recovery tools | 124 |
| Using f11 | 125 |
| Using a Windows 7 operating system DVD (purchased separately) | 125 |
| Backup and recovery in Windows Vista | 126 |
| Overview | 126 |
| Backing up your information | 126 |
| Performing a recovery | 127 |
| Using the Windows recovery tools | 128 |
| Using f11 | 128 |
| Using a Windows Vista operating system DVD (purchased separately) | 129 |
| Backup and recovery in Windows XP | 130 |
| Overview | 130 |
| Backing up your information | 130 |
| Performing a recovery | 131 |
| Recovering your information | 131 |
| Recovering the operating system and programs | 131 |
| 8 Connector pin assignments | 132 |
| Audio-in (microphone) | 132 |
| Audio-out (headphone) | 132 |

| | |
|---|------------|
| External monitor | 133 |
| HDMI | 134 |
| RJ-11 (modem) | 135 |
| RJ-45 (network) | 136 |
| Universal Serial Bus | 136 |
| 9 Power cord set requirements | 137 |
| Requirements for all countries and regions | 137 |
| Requirements for specific countries and regions | 138 |
| 10 Recycling | 139 |
| Battery | 139 |
| Display | 139 |
| Index | 145 |

1 Product description

| Category | Description | Compaq 325 model, UMA graphics, RS880M chipset | Compaq 326 model, Discrete graphics, RS880MD chipset | HP 425/625 models, UMA graphics, RS880M chipset |
|---------------------|--|--|--|---|
| Product Name | Compaq 325 Notebook PC | √ | | |
| | Compaq 326 Notebook PC | | √ | |
| | HP 425 Notebook PC | | | √ |
| | HP 625 Notebook PC | | | √ |
| Processors | AMD processors | | | |
| | AMD Turion™ II Dual-Core P520 2.30-GHz with 2-MB L2 cache | √ | √ | √ |
| | AMD Athlon™ II Dual-Core P320 2.1-GHz with 2-MB L2 cache | √ | √ | √ |
| | AMD Phenom II Champlain P820 25-W | √ | √ | √ |
| | AMD V-Series Single-Core V120 2.2-GHz with 2-MB L2 cache | √ | √ | √ |
| Chipsets | AMD RS880M, UMA | √ | | √ |
| | AMD RS880MD, Discrete | | √ | |
| | AMD SB820, Southbridge | √ | √ | √ |
| Graphics | AMD Universal Memory Architecture (UMA) graphics subsystem integrated with shared video memory (dynamically allocated) | √ | | √ |
| | Discrete graphics AMD M93S3-LP with Hypermemory support, 512MB (64MX16) x 4 | | √ | |
| | ATI Mobility Radeon HD 4200 | √ | | √ |
| | ATI Mobility Radeon HD 4350 with 512-MB memory | | √ | |
| Panels | All display assemblies support privacy filter | √ | √ | √ |

| Category | Description | Compaq 325 model, UMA graphics, RS880M chipset | Compaq 326 model, Discrete graphics, RS880MD chipset | HP 425/625 models, UMA graphics, RS880M chipset |
|---------------|---|--|--|---|
| | 33.8-cm (13.3-in) HD LED backlight panel: <ul style="list-style-type: none"> 1366×768 AntiGlare 1366×768 AntiGlare with webcam 1366×768 BrightView 1366×768 BrightView with Webcam | √ | √ | √ |
| | 35.6-cm (14.0-in) HD LED backlight panel: <ul style="list-style-type: none"> 1366×768 AntiGlare 1366×768 AntiGlare with webcam 1366×768 BrightView 1366×768 BrightView with Webcam | √ | √ | √ |
| | 39.6-cm (15.6-in) HD LED backlight panel: <ul style="list-style-type: none"> 1366×768 AntiGlare 1366×768 AntiGlare with webcam 1366×768 BrightView 1366×768 BrightView with Webcam | √ | √ | √ |
| Memory | 2 customer-accessible/upgradable memory module slots | √ | √ | √ |
| | Supports dual-channel memory | √ | √ | √ |
| | Supports up to 8 GB of system RAM | √ | √ | √ |
| | PC3-10600, 1333-MHz, DDR3 | √ | √ | √ |
| | Supports the following configurations in all countries and regions: | √ | √ | √ |
| | <ul style="list-style-type: none"> 8192-MB total system memory (4096-MB x 2, dual-channel) 4096-MB total system memory (4096-MB x 1) 4096-MB total system memory (2048-MB x 2, dual-channel) 3072-MB total system memory (2048-MB + 1024-MB, dual-channel) 2048-MB total system memory (2048-MB x 1) 2048-MB total system memory (1024-MB x 2, dual-channel) 1024-MB total system memory (1024-MB x 1) | | | |

| Category | Description | Compaq 325 model, UMA graphics, RS880M chipset | Compaq 326 model, Discrete graphics, RS880MD chipset | HP 425/625 models, UMA graphics, RS880M chipset |
|---------------------------------|---|--|--|---|
| Hard drives | Supports 9.5-mm, 6.35-cm (2.50-in) hard drives | √ | √ | √ |
| | Customer-accessible | √ | √ | √ |
| | Serial ATA | √ | √ | √ |
| | Supports the following drives: | √ | √ | √ |
| | • 500-GB, 7200-rpm | | | |
| | • 500-GB, 5400-rpm | | | |
| | • 320-GB, 7200-rpm | | | |
| | • 320-GB, 5400-rpm | | | |
| | • 250-GB, 7200-rpm | | | |
| | • 250-GB, 5400-rpm | | | |
| • 160-GB, 7200-rpm | | | | |
| • 160-GB, 5400-rpm | | | | |
| | HP DriveGuard (not available on Linux) | √ | √ | √ |
| Optical drives | Fixed, no modular requirements | √ | √ | √ |
| | SATA 12.7-mm tray load | √ | √ | √ |
| | Supports option of no optical drive | √ | √ | √ |
| | Supports the following drives: | √ | √ | √ |
| | • DVD-ROM Drive | | | |
| • DVD±RW Drive with Lightscribe | | | | |
| Diskette drive | Supports external USB diskette drive only | √ | √ | √ |
| Audio/Visual | IDT 92HD88 | √ | √ | √ |
| | Integrated microphone | √ | √ | √ |
| | Single speaker | √ | √ | √ |
| | Headphone and microphone jacks | √ | √ | √ |
| | Integrated 2MP camera with fixed focus (select models only) | √ | √ | √ |
| Modem | 56K V.92 3.8 cm (1.5-in) data/fax modem | √ | √ | √ |
| | Supports no modem option | √ | √ | √ |
| | For use in all countries and regions except APJ | √ | | √ |
| | For use in APJ only | √ | √ | √ |
| | Modem cable not included | √ | √ | √ |

| Category | Description | Compaq 325 model, UMA graphics, RS880M chipset | Compaq 326 model, Discrete graphics, RS880MD chipset | HP 425/625 models, UMA graphics, RS880M chipset |
|---|--|--|--|---|
| Ethernet | 10/100 Ethernet network interface card (NIC) | √ | √ | √ |
| | S3/S4/S5 wake on LAN: AC only mode | √ | √ | √ |
| | Ethernet cable not included | √ | √ | √ |
| Wireless | Integrated WLAN options by way of MiniPCI card: | | | |
| | 2 WLAN antennas built into display assembly | √ | √ | √ |
| | Supports option for no-WLAN | √ | √ | √ |
| | Ethernet cable not included | √ | √ | √ |
| | Support for the following WLAN formats: | √ | √ | √ |
| | <ul style="list-style-type: none"> • Broadcom 802.11b/g • Broadcom 802.11b/g/n (1 x 1) • Atheros 802.11 b/g/n (1 x 1) • Realtek 802.11 b/g/n (1 x 1) | | | |
| | Integrated wireless personal area network (WPAN) options by way of Bluetooth® module: | | | |
| | Support option for no-WPAN | √ | √ | √ |
| | Bluetooth 2.1 | √ | √ | √ |
| | External media cards | One ExpressCard/34-mm | √ | √ |
| Media Card Reader supporting Secure Digital (SD) Memory Card, Secure Digital High Capacity (SDHC) Memory Card, MultiMediaCard (MMC) formats | | √ | √ | √ |
| Ports | Audio-in (microphone) | √ | √ | √ |
| | Audio-out (stereo headphone) | √ | √ | √ |
| | RJ-11 (modem) | √ | √ | √ |
| | RJ-45 (Ethernet, includes link and activity lights) | √ | √ | √ |
| | USB 2.0 (3) | √ | √ | √ |
| | HP non-Smart adapter | √ | √ | √ |
| | VGA (Dsub 15-pin) supporting 1600 × 1200 external resolution at 75-GHz (hot plug/unplug with auto-detect) | √ | √ | √ |
| | Power adapter jack (2-pin non-smart adapter) | √ | √ | √ |
| | HDMI | √ | √ | √ |

| Category | Description | Compaq 325 model, UMA graphics, RS880M chipset | Compaq 326 model, Discrete graphics, RS880MD chipset | HP 425/625 models, UMA graphics, RS880M chipset |
|---|--|--|--|---|
| Keyboard/pointing devices | 39.6-cm (15.6-in) keyboard with TouchPad | √ | √ | √ |
| | 35.6-cm (14.0-in)/ 33.8-cm (13.3-in) keyboard with TouchPad | √ | √ | √ |
| | Supports 2-way scroll with legend and gestures (taps enabled as default) | √ | √ | √ |
| Power requirements | 65-W non-Smart AC adapter | √ | | √ |
| | 90-W non-Smart AC adapter | | √ | |
| | 6-cell, 47-Wh Li-ion battery | √ | √ | √ |
| | 9-cell, 93-Wh Li-ion battery | √ | √ | √ |
| Security | Supports Kensington security lock | √ | √ | √ |
| Operating system | Preinstalled with Microsoft Office: | √ | √ | √ |
| | Windows 7 Home Premium 32 with Office 2007 Ready (excludes Japan) | √ | √ | √ |
| | Windows 7 Home Premium with Office 2007 Ready — EDGI | √ | √ | √ |
| | Windows 7 Home Premium 32 with Office 2007 Personal (Japan only) | √ | √ | √ |
| | Windows 7 Home Premium 32 with Office 2007 Personal with PowerPoint (Japan only) | √ | √ | √ |
| | Windows 7 Home Premium 32 with Office 2007 Professional (Japan only) | √ | √ | √ |
| | Windows 7 Professional 32 with Office 2007 Ready (excludes Japan) | √ | √ | √ |
| | Windows 7 Professional with Office 2007 Ready – EDGI | √ | √ | √ |
| | Windows 7 Professional 32 with Office 2007 Personal (Japan only) | √ | √ | √ |
| | Windows 7 Professional 32 with Office 2007 Personal with PowerPoint (Japan only) | √ | √ | √ |
| | Windows 7 Professional 32 with Office 2007 Professional (Japan only) | √ | √ | √ |
| | Windows 7 Professional 32 with XP Pro images with Office 2007 Ready (excludes Japan) | √ | √ | √ |
| | Windows 7 Professional 32 with XP Pro images with Office 2007 Ready – EDGI | √ | √ | √ |
| Windows 7 Professional 32 with XP Pro images with Office 2007 Personal (Japan only) | √ | √ | √ | |

| Category | Description | Compaq 325 model, UMA graphics, RS880M chipset | Compaq 326 model, Discrete graphics, RS880MD chipset | HP 425/625 models, UMA graphics, RS880M chipset |
|----------|---|--|--|---|
| | Windows 7 Professional 32 with XP Pro images with Office 2007 Personal with PowerPoint (Japan only) | √ | √ | √ |
| | Windows 7 Professional 32 with XP Pro images with Office 2007 Professional (Japan only) | √ | √ | √ |
| | Windows Vista Home Basic 32 with Office 2007 Ready (excludes Japan) | √ | √ | √ |
| | Windows Vista Home Basic 32 with Office 2007 Personal (Japan only) | √ | √ | √ |
| | Windows Vista Home Basic 32 with Office 2007 Personal and PowerPoint (Japan only) | √ | √ | √ |
| | Windows Vista Home Basic 32 with Office 2007 Professional (Japan only) | √ | √ | √ |
| | Windows 7 Starter with Office 2007 Ready | √ | √ | √ |
| | Windows 7 Starter 32 with Office 2007 Ready – EDGI | √ | √ | √ |
| | Windows 7 Home Basic 32 with Office 2007 Ready (excludes Japan) | √ | √ | √ |
| | Windows 7 Home Basic 32 with Office 2007 Ready and 1 year McAfee (People's Republic of China only) | √ | √ | √ |
| | Windows 7 Home Basic with Office 2007 Ready – EDGI | √ | √ | √ |
| | Preinstalled with Microsoft Basics: | | | |
| | Windows 7 Professional 32 (Japan only) | √ | √ | √ |
| | Windows 7 Home Premium 32 (Japan only) | √ | √ | √ |
| | Windows Vista Home Basic 32 (Japan only) | √ | √ | √ |
| | Windows 7 Professional 32 (with XP Pro images) (Japan only) | √ | √ | √ |
| | Preinstalled: | | | |
| | FreeDOS | √ | √ | √ |
| | RedFlag Linux (People's Republic of China only) | √ | √ | √ |
| | SuSE Linux | √ | √ | √ |
| | Restore media: | | | |
| | Windows 7 Home Basic 32 | √ | √ | √ |
| | Windows 7 Home Premium 32 | √ | √ | √ |
| | Windows 7 Home Premium 64 | √ | √ | √ |

| Category | Description | Compaq 325 model, UMA graphics, RS880M chipset | Compaq 326 model, Discrete graphics, RS880MD chipset | HP 425/625 models, UMA graphics, RS880M chipset |
|-----------------------|--|--|--|---|
| | Windows XP Pro | √ | √ | √ |
| | Windows 7 Starter | √ | √ | √ |
| | Windows Vista Basic 32 | √ | √ | √ |
| | Windows 7 Professional 32 | √ | √ | √ |
| | Windows 7 Professional 64 | √ | √ | √ |
| | DRDVD Windows 7 – Home Premium/Pro | √ | √ | √ |
| | DRDVD Windows 7 – Starter/Home Basic | √ | √ | √ |
| | Windows XP Professional | √ | √ | √ |
| | SRDVD SuSE Linux | √ | √ | √ |
| | Red Flag Linux (People's Republic of China only) | √ | √ | √ |
| | DRDVD Windows XP Pro | √ | √ | √ |
| | Windows Vista Office Ready DVD | √ | √ | √ |
| | Certified: | | | |
| | Microsoft® WHQL | √ | √ | √ |
| | SuSE Linux | √ | √ | √ |
| | Web Support: | | | |
| | All Windows Vista 64 versions | √ | √ | √ |
| | Windows 7 Professional 64 versions | √ | √ | √ |
| | SuSE Linux | √ | √ | √ |
| Serviceability | End-user replaceable parts: | | | |
| | AC adapter | √ | √ | √ |
| | Battery (system) | √ | √ | √ |
| | Hard drive | √ | √ | √ |
| | Memory module | √ | √ | √ |
| | Keyboard | √ | √ | √ |
| | Optical drive | √ | √ | √ |
| | WLAN module | √ | √ | √ |

2 External component identification

Top components

TouchPad



| Component | Description |
|--------------------------|--|
| (1) TouchPad | Moves the pointer and selects or activates items on the screen. |
| (2) TouchPad button | The left and right sides of the single button function like the left and right buttons on an external mouse. |
| (3) TouchPad scroll zone | Scrolls up or down. |

Lights

 **NOTE:** Refer to the illustration that most closely matches your computer.



| Component | Description |
|---------------------|----------------------|
| (1) Caps lock light | On: Caps lock is on. |

| Component | Description |
|--------------------|---|
| (2) Power light | <ul style="list-style-type: none"><li data-bbox="815 222 1098 254">• On: The computer is on.<li data-bbox="815 275 1422 327">• Blinking: The computer is in the Sleep state in Windows 7 or Windows Vista, or in Standby in Windows XP.<li data-bbox="815 348 1262 380">• Off: The computer is off or in Hibernation. |
| (3) Wireless light | <ul style="list-style-type: none"><li data-bbox="815 401 1406 453">• White: An integrated wireless device, such as a wireless local area network (WLAN) device is on.<li data-bbox="815 474 1198 506">• Amber: All wireless devices are off. |


Buttons, switch, and speaker




| Component | Description |
|-----------------------------|---|
| (1) Speaker | Produces sound. |
| (2) Internal display switch | Turns off the display if the panel lid is closed while the power is on. |
| (3) Power button | <ul style="list-style-type: none">• When the computer is off, press the button to turn on the computer.• When the computer is on, press the button to shut down the computer.• When the computer is in the Sleep state or in Standby, press the button briefly to exit Sleep or Standby.• When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>If the computer has stopped responding and Windows shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> |

Keys

 **NOTE:** Refer to the illustration and table that most closely matches your computer.

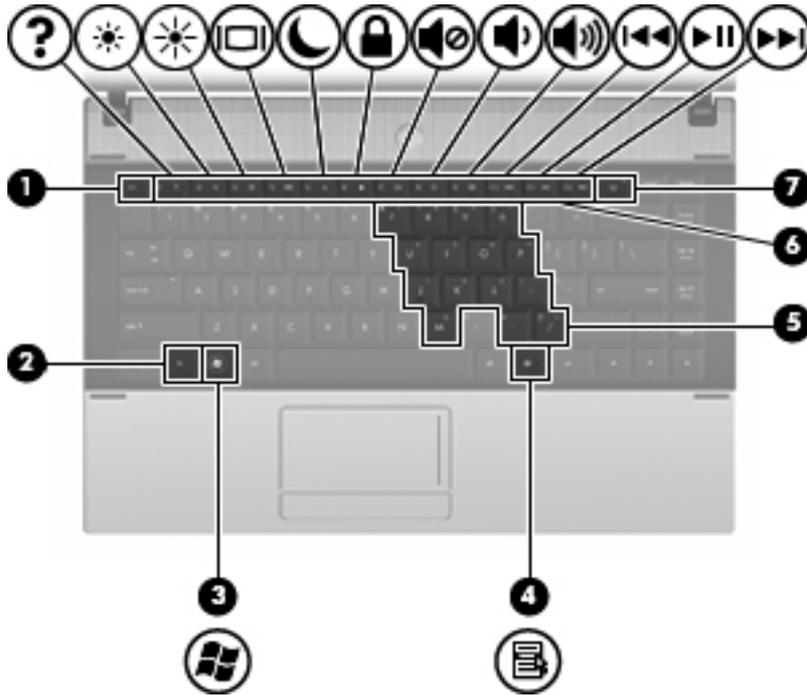


| Component | Description |
|----------------------------------|--|
| (1) <code>esc</code> key | Displays system information when pressed in combination with the <code>fn</code> key. |
| (2) <code>fn</code> key | Executes frequently used system functions when pressed in combination with a function key or the <code>esc</code> key. |
| (3) Windows logo key | Displays the Windows Start menu. |
| (4) Windows applications key | Displays a shortcut menu for items beneath the cursor. |
| (5) Embedded numeric keypad keys | Can be used like the keys on an external numeric keypad when pressed in combination with the <code>fn</code> and <code>num lk</code> keys. |
| (6) Function keys | Execute frequently used system functions when pressed in combination with the <code>fn</code> key. |
| (7) Wireless key | Because the wireless devices are enabled at the factory, use the wireless key to turn on or turn off the wireless devices simultaneously. |

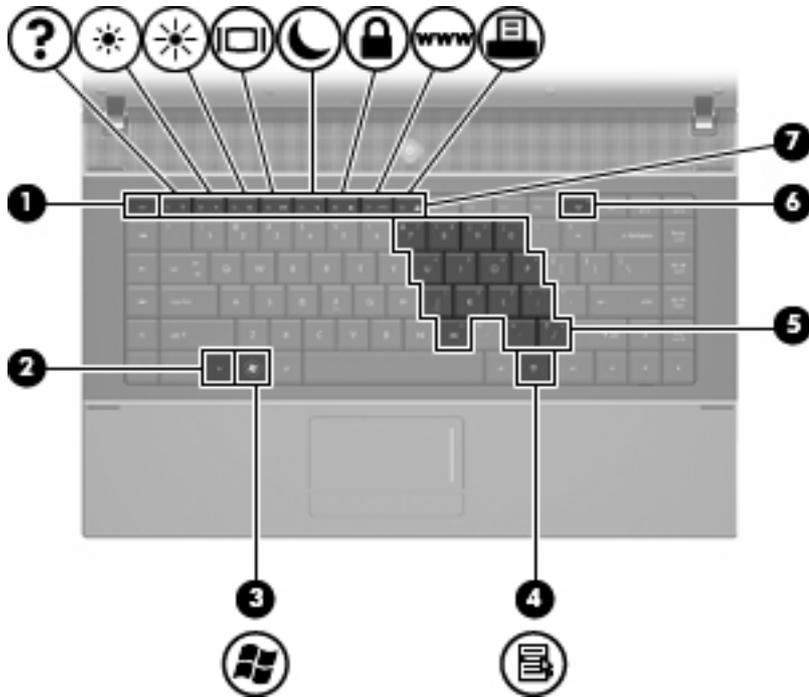


| Component | Description |
|----------------------------------|--|
| (1) <code>esc</code> key | Displays system information when pressed in combination with the <code>fn</code> key. |
| (2) <code>fn</code> key | Executes frequently used system functions when pressed in combination with a function key or the <code>esc</code> key. |
| (3) Windows logo key | Displays the Windows Start menu. |
| (4) Windows applications key | Displays a shortcut menu for items beneath the cursor. |
| (5) Embedded numeric keypad keys | Can be used like the keys on an external numeric keypad when pressed in combination with the <code>fn</code> and <code>num lk</code> keys. |
| (6) Wireless key | Because the wireless devices are enabled at the factory, use the wireless key to turn on or turn off the wireless devices simultaneously. |
| (7) Function keys | Execute frequently used system functions when pressed in combination with the <code>fn</code> key. |

Front components

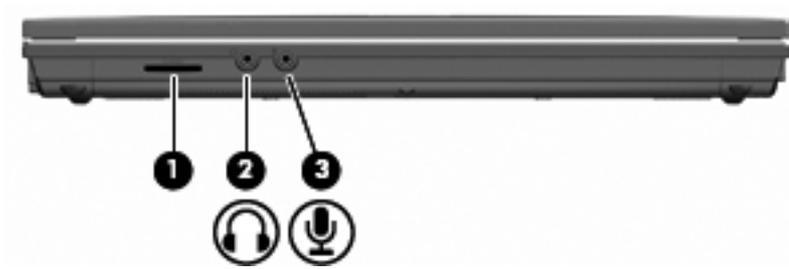


| Component | Description |
|--------------------------------|--|
| (1) SD Card Reader | Supports the following optional digital card formats: <ul style="list-style-type: none">• MultiMediaCard (MMC)• MultiMediaCard 4.2 (MMC Plus, including MMC Plus HC)• Secure Digital (SD) Memory Card• Secure Digital High Capacity (SDHC) Memory Card• Secure Digital High Speed (SDHS) Memory Card |
| (2) Audio-out (headphone) jack | Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio. NOTE: When a device is connected to the headphone jack, the computer speakers are disabled. |
| (3) Audio-in (microphone) jack | Connects an optional computer headset microphone, stereo array microphone, or monaural microphone. |

Right-side components

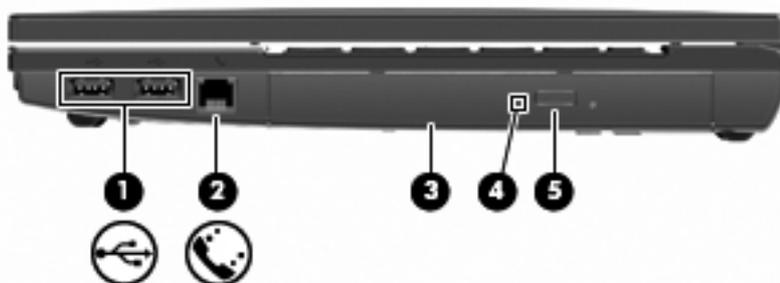

| Component | Description |
|---|--|
| (1) USB ports (2) | Connect optional USB devices. |
| (2) RJ-11 (modem) jack (select models only) | Connects a modem cable. |
| (3) Optical drive (select models only) | Reads optical discs and, on select models, also writes to optical discs. |
| (4) Optical drive light (select models only) | Blinking: The optical drive is being accessed. |
| (5) Optical drive button (select models only) | Opens optical drive tray. |


Left-side components

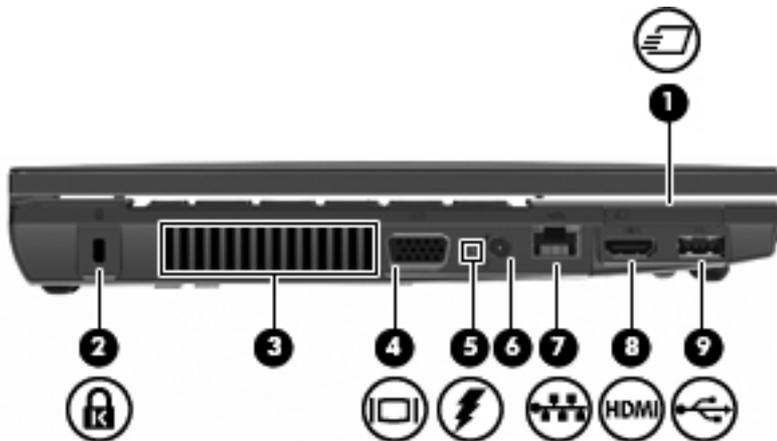

| Component | Description |
|---------------------------|---|
| (1) ExpressCard slot | Supports optional ExpressCards. |
| (2) Security cable slot | Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen. |
| (3) Vent | Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation. |
| (4) External monitor port | Connects an external VGA monitor or projector. |
| (5) Battery light | <ul style="list-style-type: none"> Amber: A battery is charging. Turquoise: A battery is close to full charge capacity. Blinking amber: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly. Off: If the computer is plugged into an external power source, the light turns off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source the light stays off until the battery reaches a low battery level. |
| (6) Power connector | Connects an AC adapter. |
| (7) RJ-45 (network) jack | Connects a network cable. |
| (8) HDMI port | Connects an optional HDMI device. |
| (9) USB port (1) | Connects optional USB devices. |

Bottom components


 **NOTE:** Refer to the illustration that most closely matches your computer.

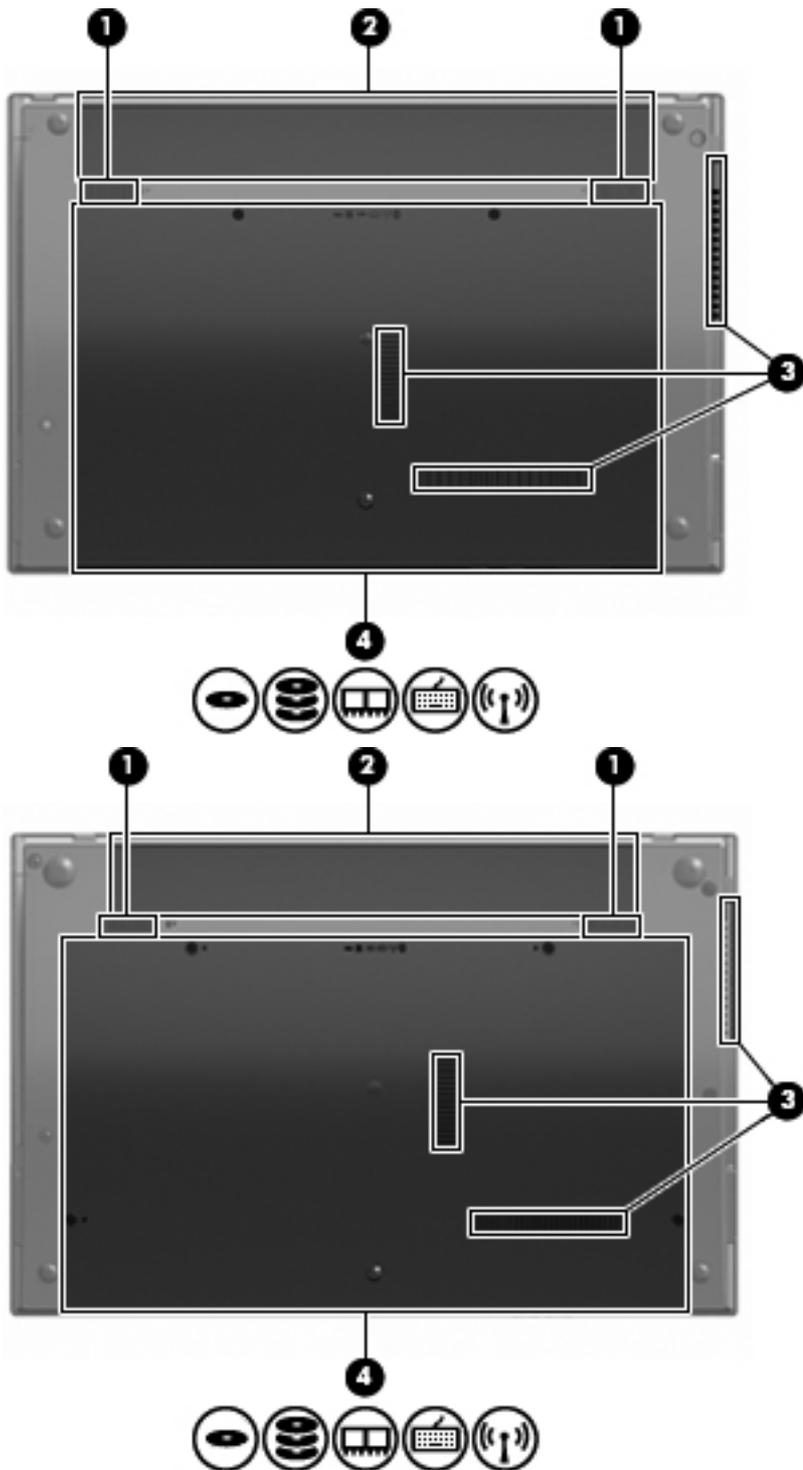

| Component | Description |
|---------------------------------|---|
| (1) Battery release latches (2) | Release the battery from the battery bay. |

| Component | Description |
|-------------------------------|---|
| (2) Battery bay | Holds the battery. |
| (3) Vents (3) | Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation. |
| (4) Memory module compartment | Contains the memory module slots. |
| WLAN module compartment | Contains the wireless LAN module slot. CAUTION: To prevent an unresponsive system and the display of a warning message, replace the WLAN module with only a module authorized for use in the computer by the governmental agency that regulates wireless devices in your country. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support. |
| Hard drive bay | Holds the hard drive. |

Multimedia components

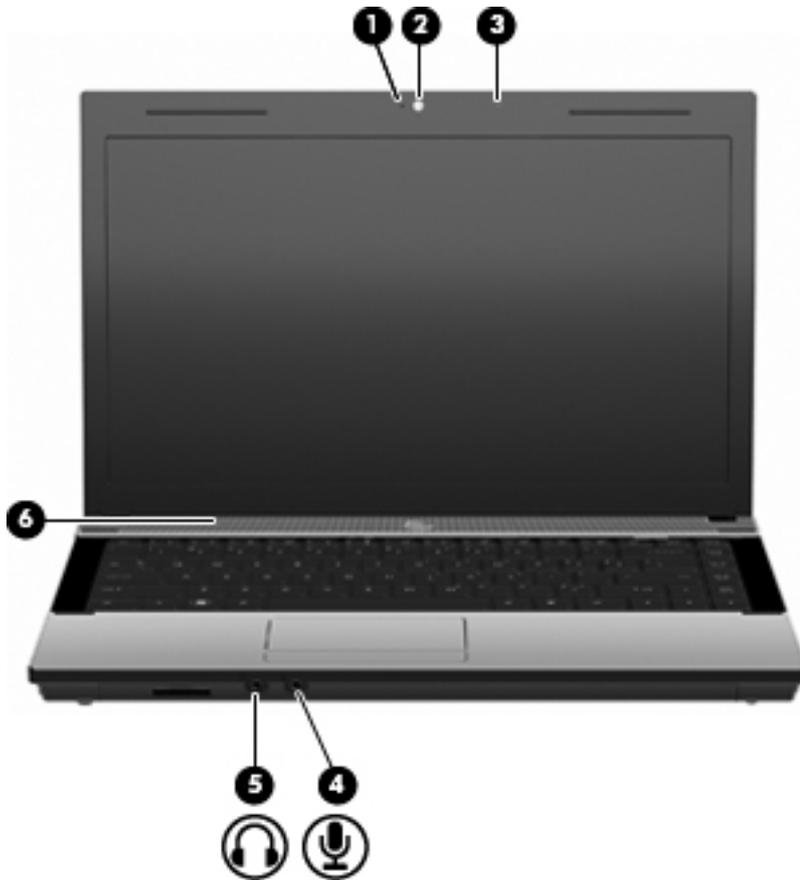

| Component | Description |
|---------------------------------------|--|
| (1) Webcam light (select models only) | On: The webcam is in use. |
| (2) Webcam (select models only) | Records video and captures still photographs. |
| (3) Integrated microphone | Records sound. |
| (4) Audio-out (headphone) jack | Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio. NOTE: When a device is connected to the headphone jack, the computer speakers are disabled. |
| (5) Audio-in (microphone) jack | Connects an optional computer headset microphone, stereo array microphone, or monaural microphone. |
| (6) Speaker | Produces sound. |

Wireless antennas (select models only)

On select computer models, at least 2 antennas send and receive signals from one or more wireless devices. These antennas are not visible from the outside of the computer.



 **NOTE:** For optimal transmission, keep the areas immediately around the antennas free from obstructions.

| Component | Description |
|--------------------|---|
| WLAN antennas (2)* | Send and receive wireless signals to communicate with wireless local area networks (WLANs). |

*The antennas are not visible from the outside of the computer.

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

Additional hardware components



| Component | Description |
|-----------------|---|
| (1) Power cord* | Connects an AC adapter to an AC outlet. |
| (2) AC adapter | Converts AC power to DC power. |
| (3) Battery* | Powers the computer when the computer is not plugged into external power. |


*Batteries and power cords vary in appearance by country or region.

3 Illustrated parts catalog


Service tag

When ordering parts or requesting information, provide the computer serial number and model description provided on the service tag.

- (1) Product name: This is the product name affixed to the front of the computer.
- (2) Serial number (s/n): This is an alphanumeric identifier that is unique to each product.
- (3) Product number (p/n): This is an alphanumeric identifier that provides specific information about the hardware components. The product number helps a service technician to determine what components and parts are needed.
- (4) Warranty period: This number describes the duration (in years) of the warranty period for this computer.
- (5) Model description: This is an alphanumeric identifier used to locate documents, drivers, and support for your computer.

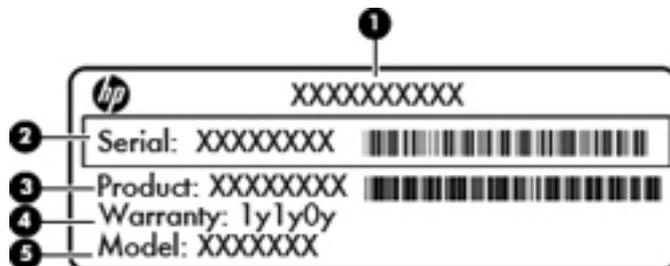

Computer major components

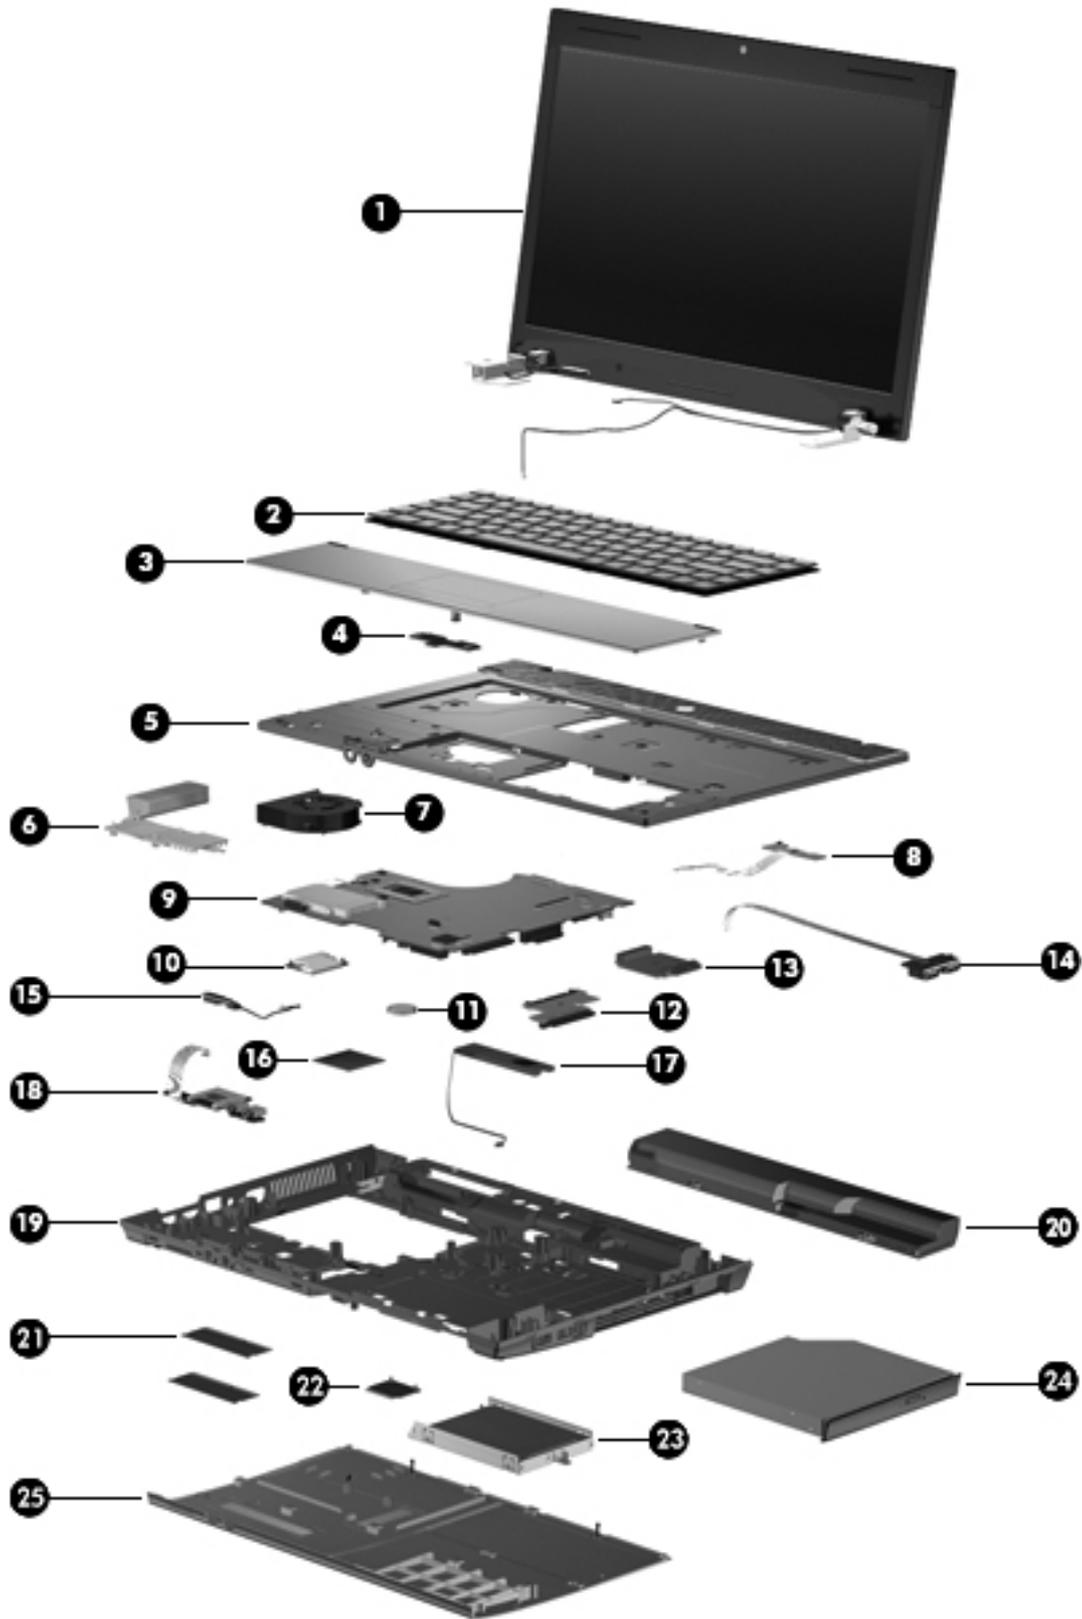

| Item | Description | |
|------------|--|------------|
| (1) | Display assembly (includes microphone, 2 WLAN antenna transceivers and cables and, on select computer models, 2 WWAN antenna transceivers and cables) | |
| | 39.6-cm (15.6-in) HD AntiGlare display assembly for use in computers equipped without webcam (1366×768 resolution) | 605801-001 |
| | 39.6-cm (15.6-in) HD AntiGlare display assembly for use in computers equipped with webcam (1366×768 resolution) | 605802-001 |
| | 39.6-cm (15.6-in) HD BrightView display assembly for use in computers without webcam (1366×768 resolution) | 605803-001 |
| | 39.6-cm (15.6-in) HD BrightView display assembly for use in computers with webcam (1366×768 resolution) | 605804-001 |
| | 35.6-cm (14.0-in) HD AntiGlare display assembly for use in computers without webcam (1366×768 resolution) | 605805-001 |
| | 35.6-cm (14.0-in) HD AntiGlare display assembly for use in computers equipped with webcam (1366×768 resolution) | 605806-001 |
| | 35.6-cm (14.0-in) HD BrightView display assembly for use in computers without webcam (1366×768 resolution) | 605807-001 |
| | 35.6-cm (14.0-in) HD BrightView display assembly for use in computers equipped with webcam (1366×768 resolution) | 605808-001 |
| | 33.8-cm (13.3-in) HD AntiGlare display assembly for use in computers with WLAN but without webcam (1366×768 resolution) | 605809-001 |
| | 33.8-cm (13.3-in) HD AntiGlare display assembly for use in computers with WLAN and webcam (1366×768 resolution) | 605810-001 |
| | 33.8-cm (13.3-in) HD BrightView display assembly for use in computers with WLAN but without webcam (1366×768 resolution) | 605811-001 |
| | 33.8-cm (13.3-in) HD BrightView display assembly for use in computers with WLAN and webcam (1366×768 resolution) | 605812-001 |
| | 33.8-cm (13.3-in) HD AntiGlare display assembly for use in computers with WLAN but without webcam (1366×768 resolution), red | 616597-001 |
| | 33.8-cm (13.3-in) HD AntiGlare display assembly for use in computers with WLAN and webcam (1366×768 resolution), red | 616598-001 |
| | 33.8-cm (13.3-in) HD BrightView display assembly for use in computers with WLAN but without webcam (1366×768 resolution), red | 616599-001 |
| | 33.8-cm (13.3-in) HD BrightView display assembly for use in computers with WLAN and webcam (1366×768 resolution), red | 616600-001 |
| (2) | Keyboard | |
| | NOTE: For a detailed list of available keyboards, see Sequential part number listing on page 35 . | |
| | For use in 33.8-cm (13.3-in) and 35.6-cm (14.0-in) computers | 605813-xxx |
| | For use in 39.6-cm (15.6-in) computers | 605814-xxx |
| (3) | Palm rest (includes TouchPad, TouchPad board, and 2 ribbon cables) | |
| | For use in Compaq 33.8-cm (13.3-in) computers | 605779-001 |
| | For use in Compaq 33.8-cm (13.3-in) computers, red | 616602-001 |
| | For use in HP 35.6-cm (14.0-in) computers | 605780-001 |


| Item | Description | |
|-------------|--|------------|
| | For use in HP 39.6-cm (15.6-in) computers | 605782-001 |
| (4) | TouchPad board | 605795-001 |
| (5) | Top cover | |
| | Top cover for Compaq 33.8-cm (13.3-in) computers | 605774-001 |
| | Top cover for Compaq 33.8-cm (13.3-in) computers, red | 616601-001 |
| | Top cover for HP 35.6-cm (14.0-in) computers | 605775-001 |
| | Top cover for HP 39.6-cm (15.6-in) computers | 605777-001 |
| (6) | Heat sink | |
| | For use in computers with UMA graphics subsystems | 611804-001 |
| | For use in computers with discrete graphics subsystems, NB | 611805-001 |
| | For use in computers with discrete graphics subsystems, CPU | 615355-001 |
| (7) | Fan | |
| | For use in 39.6-cm (15.6-in) computers | 605791-001 |
| | For use in 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers | 605787-001 |
| (8) | Power switch board | 605794-001 |
| (9) | System board (includes RTC battery and replacement thermal material) | |
| | System board with discrete graphics and RTC battery with RS880M chipset | 611802-001 |
| | System board with UMA graphics and RTC battery with RS880M chipset | 611803-001 |
| (10) | Modem module | |
| | NOTE: The modem module spare part kit does not include a modem module cable. The modem module cable is included in the Cable Kit , spare part number 599807-001. See Cables on page 31 for more Cable Kit spare part information. | |
| | For use in all countries and regions except Australia and New Zealand | 510100-001 |
| | For use only in Australia and New Zealand | 510100-011 |
| (11) | RTC battery | 449137-001 |
| (12) | Hard drive extender for use in 39.6-cm (15.6-in) computers | 605798-001 |
| (13) | Optical drive extender | |
| | For use in 39.6-cm (15.6-in) computers | 605799-001 |
| | For use in 35.6-cm (14.0-in) computers | 605800-001 |
| (14) | USB board with cable | 605796-001 |
| | USB board for use on system boards with UMA graphics subsystem | 622615-001 |

| Item | Description | |
|------|---|------------|
| (15) | Bluetooth module | 537921-001 |
| | HP Integrated module with Bluetooth 2.1 wireless technology For use in Andorra, Argentina, Australia, Austria, Bangladesh, Belarus, Belgium, Bermuda, Brazil, Brunei, Bulgaria, Canada, Cayman Islands, Chile, China, Croatia, Cyprus, Czech Republic, Denmark, Egypt, El Salvador, Estonia, Finland, France, Germany, Greece, French Guiana, Guadeloupe, Guam, Hong Kong, Hungary, Iceland, India, Indonesia, Ireland, Israel, Italy, Japan, Jordan, South Korea, Latvia, Puerto Rico, Liechtenstein, Lithuania, Luxembourg, Malaysia, Malta, Martinique, Mexico, Morocco, Netherlands, New Zealand, Norway, Pakistan, Panama, Peru, Philippines, Poland, Portugal, Romania, Russia, Saudi Arabia, Singapore, Slovakia, Slovenia, South Africa, Spain, Sri Lanka, Sweden, Switzerland, Taiwan, Thailand, Tunisia, Turkey, Ukraine, United Arab Emirates, the United Kingdom, the United States, Venezuela, Virgin Islands | |
| (16) | AMD Processor (includes replacement thermal material) (not illustrated) | |
| | AMD Turion™ II Dual-Core P520 2.3-GHz with 2-MB L2 cache | 594173-001 |
| | AMD Athlon™ II Dual-Core P320 2.1–GHz with 2-MB L2 cache | 594165-001 |
| | AMD Phenom II Champlain P820 25W | 594167-001 |
| | AMD V-Series Single-Core V120 2.2-GHz with 2-MB L2 cache | 594171-001 |
| (17) | Speaker | 605792-001 |
| (18) | Audio board | 620608-001 |
| | Audio board for use on system boards with UMA graphics subsystem | 622614-001 |
| (19) | Base enclosure | |
| | For use in 33.8-cm (13.3-in) computers | 622191-001 |
| | For use in 35.6-cm (14.0-in) computers | 620609-001 |
| | For use in 39.6-cm (15.6-in) computers | 622192-001 |
| (20) | Battery | |
| | 9-cell, 93-Wh, 2.8-Ah | 593573-001 |
| | 6-cell, 47-Wh, 2.2-Ah | 593572-001 |
| (21) | Memory module | |
| | 2-GB (PC3-10600, 1333-MHz, DDR3) | 598856-001 |
| | 1-GB (PC3-10600, 1333-MHz, DDR3) | 598859-001 |
| (22) | WLAN module | |
| | Broadcom 4313AGN 802.11a/b/g/draft-n WiFi Adapter | 593836-001 |
| | Broadcom 4312G 802.11b/g WiFi adapters: | |
| | <ul style="list-style-type: none"> For use in Antigua and Barbuda, Barbados, Belize, Canada, the Cayman Islands, Guam, Puerto Rico, Trinidad and Tobago, the U.S. Virgin Islands, and the United States | 504593-003 |

| Item | Description | |
|-------------|---|------------|
| | <ul style="list-style-type: none"> For use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, the Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cameroon, Cape Verde, the Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Ireland, Israel, Italy, the Ivory Coast, Jamaica, Jordan, Kazakhstan, Kenya, Kiribati, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, the Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe | 504593-004 |
| | Atheros 9285G 802.11b/g/n WiFi Adapter for use in all countries and regions | 605560-005 |
| | Realtek RTL8191SE 802.11b/g/n WiFi Adapter for use in all countries and regions | 593533-001 |
| (23) | Hard drive (includes hard drive bracket) | |
| | 500-GB, 7200-rpm | 608139-001 |
| | 500-GB, 7200-rpm for use in 39.6-cm (15.6-in) computers | 611029-001 |
| | 500-GB, 5400-rpm | 614958-001 |
| | 500-GB, 5400-rpm for use in 39.6-cm (15.6-in) computers | 614956-001 |
| | 320-GB, 7200-rpm | 608138-001 |
| | 320-GB, 7200-rpm for use in 39.6-cm (15.6-in) computers | 611028-001 |
| | 320-GB, 5400-rpm | 614957-001 |
| | 320-GB, 5400-rpm for use in 39.6-cm (15.6-in) computers | 614955-001 |
| | 250-GB, 7200-rpm | 608137-001 |
| | 250-GB, 7200-rpm for use in 39.6-cm (15.6-in) computers | 611027-001 |
| | 250-GB, 5400-rpm | 493994-001 |
| | 250-GB, 5400-rpm for use in 39.6-cm (15.6-in) computers | 614523-001 |
| | 160-GB, 7200-rpm | 455954-001 |
| | 160-GB, 7200-rpm for use in 39.6-cm (15.6-in) computers | 614522-001 |
| | 160-GB, 5400-rpm | 615040-001 |
| | 160-GB, 5400-rpm for use in 39.6-cm (15.6-in) computers | 615844-001 |
| (24) | Optical drive (includes bezel) | |

| Item | Description | |
|-------------|--|------------|
| | DVD-ROM Drive | 608141-001 |
| | DVD±RW Double-Layer Drive with LightScribe | 608140-001 |
| (25) | Access door | |
| | For use in 33.8-cm (13.3-in) and 35.6-cm (14.0-in) computers | 605784-001 |
| | For use in 39.6-cm (15.6-in) computers | 605785-001 |


Display assembly components

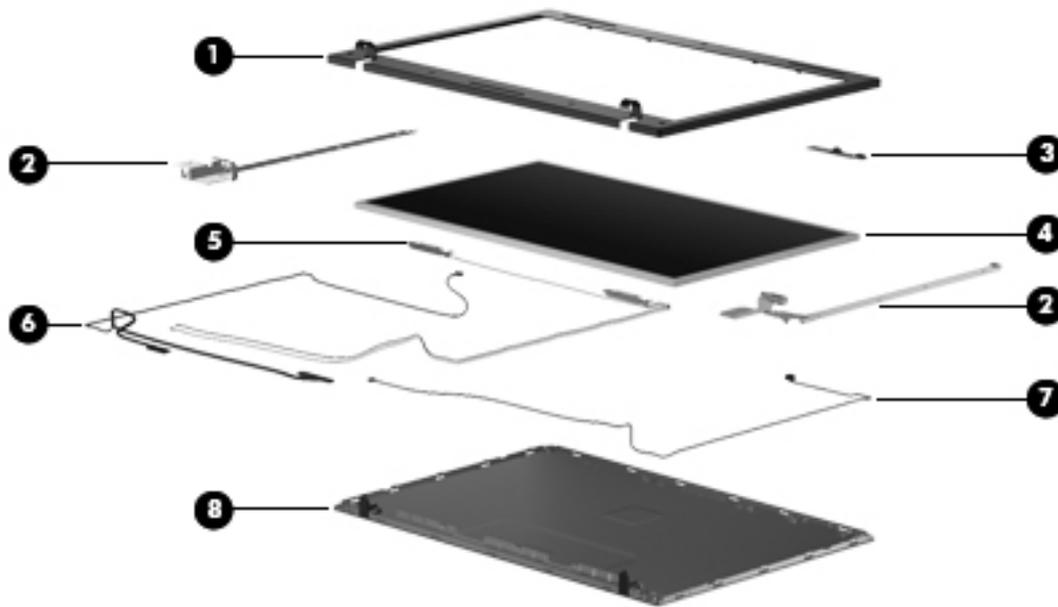

| Item | Description | Spare part number |
|------------|---|-------------------|
| (1) | Display bezel | |
| | Compaq 33.8-cm (13.3-in) LCD bezel without webcam | 605751-001 |
| | Compaq 33.8-cm (13.3-in) LCD bezel with webcam | 605752-001 |
| | HP 35.6-cm (14.0-in) LCD bezel without webcam | 605753-001 |
| | HP 35.6-cm (14.0-in) LCD bezel with webcam | 605754-001 |
| | HP 39.6-cm (15.6-in) LCD bezel without webcam | 605757-001 |
| | HP 39.6-cm (15.6-in) LCD bezel with webcam | 605758-001 |
| (2) | Display Hinge Kit | |
| | Hinge Kit for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers | 605768-001 |
| | Hinge Kit for 39.6-cm (15.6-in) computers | 605769-001 |
| (3) | Webcam module | 611026-001 |
| (4) | Display panel | |
| | Display panel AntiGlare without webcam for use in 39.6-cm (15.6-in) computers | 605801-001 |
| | Display panel AntiGlare with webcam for use in 39.6-cm (15.6-in) computers | 605802-001 |
| | Display panel BrightView without webcam for use in 39.6-cm (15.6-in) computers | 605803-001 |
| | Display panel BrightView with webcam for use in 39.6-cm (15.6-in) computers | 605804-001 |
| | Display panel AntiGlare without webcam for use in 35.6-cm (14-in) computers | 605805-001 |
| | Display panel AntiGlare with webcam for use in 35.6-cm (14-in) computers | 605806-001 |
| | Display panel BrightView without webcam for use in 35.6-cm (14-in) computers | 605807-001 |
| | Display panel BrightView with webcam for use in 35.6-cm (14-in) computers | 605808-001 |


| Item | Description | Spare part number |
|------------|--|------------------------------|
| | Display panel AntiGlare without webcam for use in 33.8-cm (13.3-in) computers | 605809-001 |
| | Display panel AntiGlare with webcam for use in 33.8-cm (13.3-in) computers | 605810-001 |
| | Display panel BrightView without webcam for use in 33.8-cm (13.3-in) computers | 605811-001 |
| | Display panel BrightView with webcam for use in 33.8-cm (13.3-in) computers | 605812-001 |
| | Display panel AntiGlare without webcam for use in 33.8-cm (13.3-in) computers, red | 616597-001 |
| | Display panel AntiGlare with webcam for use in 33.8-cm (13.3-in) computers, red | 616598-001 |
| | Display panel BrightView without webcam for use in 33.8-cm (13.3-in) computers, red | 616599-001 |
| | Display panel BrightView with webcam for use in 33.8-cm (13.3-in) computers, red | 616600-001 |
| (5) | WLAN transceiver cable | spared with display assembly |
| (6) | LCD cable | |
| | LCD cable with webcam | 605767-001 |
| | LCD cable without webcam | 605766-001 |
| (7) | Microphone cable | |
| (8) | Display enclosure | |
| | For use in Compaq 33.8-cm (13.3-in) computers | 605761-001 |
| | For use in Compaq 33.8-cm (13.3-in) computers, red | 616596-001 |
| | For use in HP 35.6-cm (14.0-in) computers | 605762-001 |
| | For use in HP 39.6-cm (15.6-in) computers | 605764-001 |

Plastics Kit

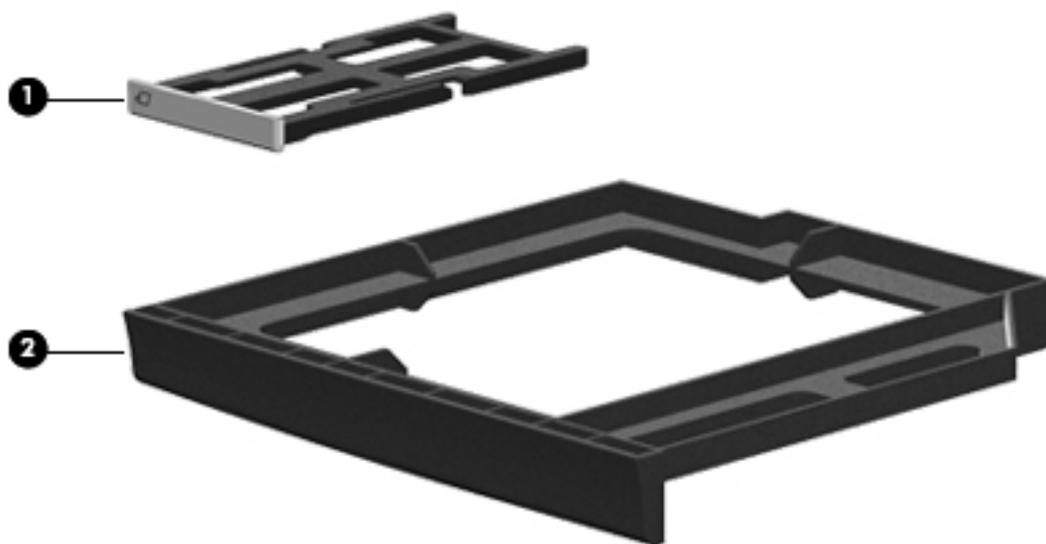


| Item | Description | Spare part number |
|------|------------------------|-------------------|
| | Plastics Kit: | 605786-001 |
| (1) | ExpressCard slot bezel | |
| (2) | Optical drive bezel | |

Cables

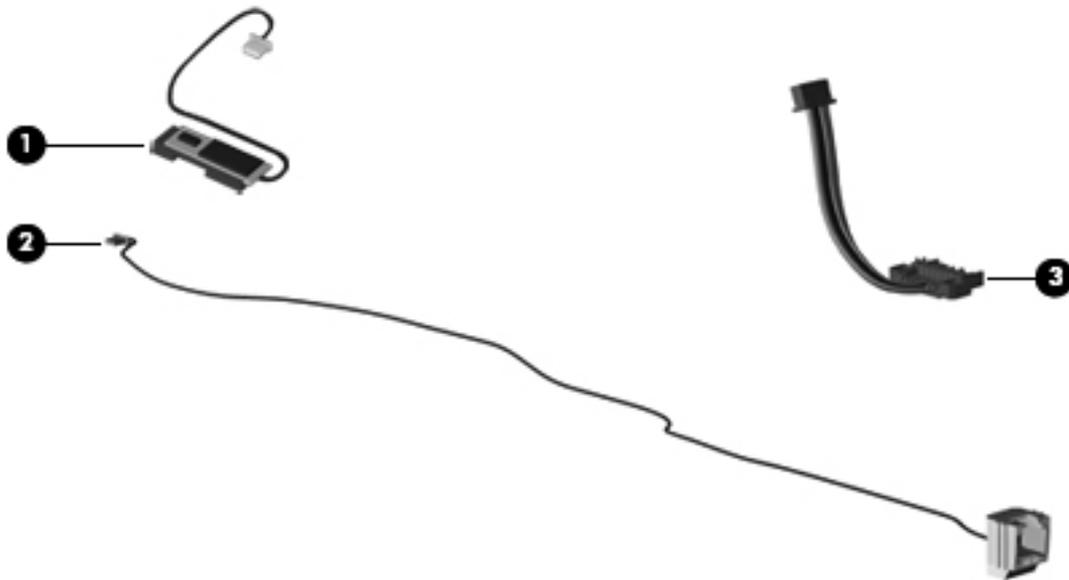

| Item | Description | Spare part number |
|------|------------------------------|-------------------|
| | Cable Kit , includes: | 605793-001 |
| (1) | Bluetooth cable | |
| (2) | RJ-11 cable | |
| (3) | Main battery connector | |

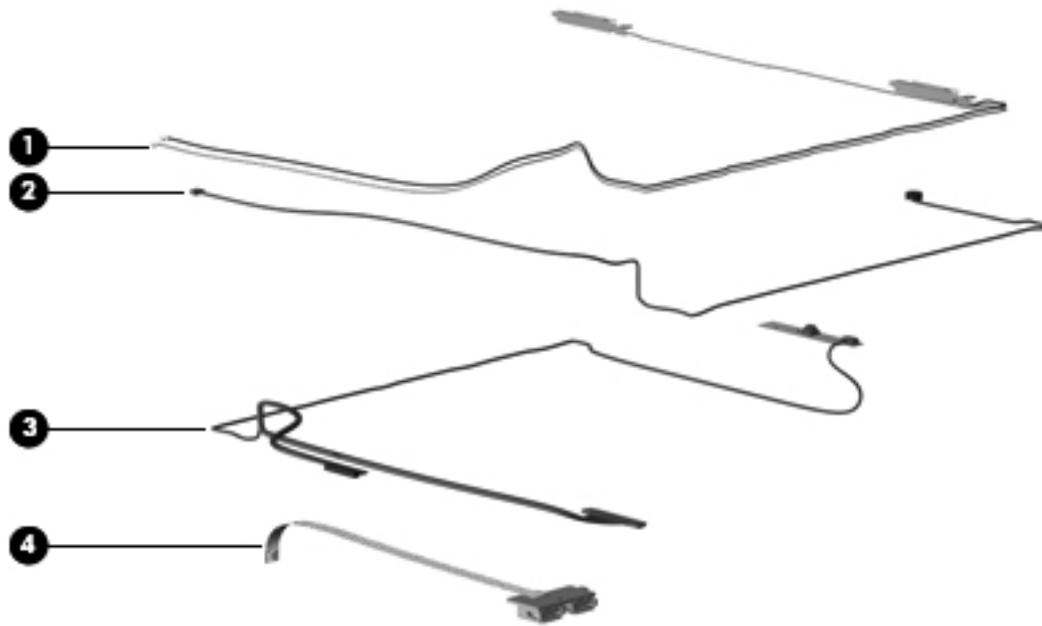

| Item | Description | Spare part number |
|------|---------------------------------------|------------------------------|
| (1) | WLAN transceiver with cable | spared with display assembly |
| (2) | Microphone cable | spared with display assembly |
| (3) | LCD Cable Kit | |
| | LCD Cable without webcam (not shown) | 605766-001 |
| | LCD Cable with webcam cable | 605767-001 |
| (4) | USB cable | 605796-001 |

Mass storage devices



| Item | Description | Spare part number |
|------|--|-------------------|
| (1) | Hard drive (includes bracket) | |
| | 500-GB, 7200-rpm | 608139-001 |
| | 500-GB, 7200-rpm for use in 39.6-cm (15.6-in) computers | 611029-001 |
| | 500-GB, 5400-rpm | 614958-001 |
| | 500-GB, 5400-rpm for use in 39.6-cm (15.6-in) computers | 614956-001 |
| | 320-GB, 7200-rpm | 608138-001 |
| | 320-GB, 7200-rpm for use in 39.6-cm (15.6-in) computers | 611028-001 |
| | 320-GB, 5400-rpm | 614957-001 |
| | 320-GB, 5400-rpm for use in 39.6-cm (15.6-in) computers | 614955-001 |
| | 250-GB, 7200-rpm | 608137-001 |
| | 250-GB, 7200-rpm for use in 39.6-cm (15.6-in) computers | 611027-001 |
| | 250-GB, 5400-rpm | 493994-001 |
| | 250-GB, 5400-rpm for use in 39.6-cm (15.6-in) computers | 614523-001 |
| | 160-GB, 7200-rpm | 455954-001 |
| | 160-GB, 7200-rpm for use in 39.6-cm (15.6-in) computers | 614522-001 |
| | 160-GB, 5400-rpm | 615040-001 |
| | 160-GB 5400-rpm for use in 39.6-cm (15.6-in) computers | 615844-001 |
| (2) | Optical drive (includes bezel) | |
| | DVD±RW Double-Layer Drive with LightScribe | 608140-001 |
| | DVD-ROM Drive | 608141-001 |

Miscellaneous parts

| Description | Spare part number |
|--|-------------------|
| AC adapters | |
| 65-W AC adapter for use with computers with UMA graphics | 613149-001 |
| 90-W AC adapter for use with computers with discrete graphics | 613150-001 |
| Power cords | |
| For use in Argentina | 490371-D01 |
| For use in Brazil | 490371-201 |
| For use in Denmark | 490371-081 |
| For use in Europe, the Middle East, and Africa | 490371-021 |
| For use in Israel | 490371-BB1 |
| For use in Italy | 490371-061 |
| For use in South Africa | 490371-AR1 |
| For use in Switzerland | 490371-111 |
| For use in the United Kingdom | 490371-031 |
| For use in the United States | 490371-001 |
| Screw Kit , includes: | 605790-001 |
| <ul style="list-style-type: none"> • (15) Torx 2.5×6.0 screws • (15) Phillips 2.5×4.5 screws • (15) Phillips 2.5×4.5 screws • (15) Phillips 2.5×4.5 screws • (15) Phillips 2.0×3.0 screws • (15) Phillips 3.0×4.5 screws | |
| Rubber Kit (contains: 10 top bumper strips, 20 bottom case hinge bumpers, 10 rubber feet, 10 middle body bumpers, 10 RJ-11 bumpers, 10 bottom case bumpers) | |
| For use in 33.8-cm (13.3-in) and 35.6-cm (14.0-in) computers | 605789-001 |
| For use in 39.6-cm (15.6-in) computers | 608931-001 |

Sequential part number listing

| Spare part number | Description |
|-------------------|---|
| 449137-001 | RTC battery |
| 455954-001 | 160-GB, 7200-rpm hard drive for use in computers with 35.6-cm (14-in) or 33.8-cm (13.3-in) displays |
| 490371-001 | Power cord for use in the United States |
| 490371-021 | Power cord for use in Europe, the Middle East, and Africa |
| 490371-031 | Power cord for use in the United Kingdom |
| 490371-061 | Power cord for use in Italy |
| 490371-081 | Power cord for use in Denmark |
| 490371-111 | Power cord for use in Switzerland |
| 490371-201 | Power cord for use in Brazil |
| 490371-AR1 | Power cord for use in South Africa |
| 490371-BB1 | Power cord for use in Israel |
| 490371-D01 | Power cord for use in Argentina |
| 493994-001 | 250-GB, 5400-rpm hard drive for use in computers with 35.6-cm (14-in) or 33.8-cm (13.3-in) displays |
| 504593-003 | Broadcom BCM4312 802.11b/g WLAN module for use in Antigua and Barbuda, Barbados, Belize, Canada, the Cayman Islands, Guam, Puerto Rico, Trinidad and Tobago, the U.S. Virgin Islands, and the United States |
| 504593-004 | Broadcom 4312 802.11b/g WLAN module for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, the Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cameroon, Cape Verde, the Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Ireland, Israel, Italy, the Ivory Coast, Jamaica, Jordan, Kazakhstan, Kenya, Kiribati, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, the Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe |
| 510100-001 | Modem module for use in all countries and regions except Australia and New Zealand |
| 510100-011 | Modem module for use in Australia and New Zealand |
| 537921-001 | Bluetooth module with Bluetooth 2.1 wireless technology |
| 593533-001 | Realtek RTL8191SE 802.11b/g/n WiFi Adapter |
| 593572-001 | Battery, 6-cell, 47 Wh, 2.2 Ah for use in computers with 15.6-in displays |

| Spare part number | Description |
|--------------------------|---|
| 593573-001 | Battery, 9-cell, 93 Wh, 2.8 Ah for use in computers with 15.6-in displays |
| 593836-001 | Broadcom 4313AGN 802.11a/b/g/draft-n WiFi Adapter |
| 594165-001 | AMD Athlon™ II Dual-Core P320 2.1-GHz processor with 2-MB L2 cache |
| 594167-001 | AMD Phenom II Champlain P820 25W processor |
| 594171-001 | AMD V-Series Single-Core V120 2.2-GHz processor with 2-MB L2 cache |
| 594173-001 | AMD Turion II Dual-Core P520 2.3-GHz processor with 2-MB L2 cache |
| 598856-001 | 2-GB memory (PC3-10600, 1333-MHz, DDR3) |
| 598859-001 | 1-GB memory (PC3-10600, 1333-MHz, DDR3) |
| 605560-005 | Atheros 9285G 802.11b/g/n WiFi Adapter |
| 605751-001 | Compaq 33.8-cm (13.3-in) LCD bezel without webcam |
| 605752-001 | Compaq 33.8-cm (13.3-in) LCD bezel with webcam |
| 605753-001 | HP 35.6-cm (14.0-in) LCD bezel without webcam |
| 605754-001 | HP 35.6-cm (14.0-in) LCD bezel with webcam |
| 605757-001 | HP 39.6-cm (15.6-in) LCD bezel without webcam |
| 605758-001 | HP 39.6-cm (15.6-in) LCD bezel with webcam |
| 605761-001 | Compaq 33.8-cm (13.3-in) display enclosure |
| 605762-001 | HP 35.6-cm (14.0-in) display enclosure |
| 605764-001 | HP 39.6-cm (15.6-in) display enclosure |
| 605766-001 | LCD cable without webcam |
| 605767-001 | LCD cable with webcam |
| 605768-001 | Hinge Kit for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers |
| 605769-001 | Hinge Kit for 39.6-cm (15.6-in) computers |
| 605774-001 | Top cover for Compaq 33.8-cm (13.3-in) computers |
| 605775-001 | Top cover for HP 35.6-cm (14.0-in) computers |
| 605777-001 | Top cover for HP 39.6-cm (15.6-in) computers |
| 605779-001 | Palm rest with TouchPad for Compaq 33.8-cm (13.3-in) computers (includes TouchPad board and cable) |
| 605780-001 | Palm rest with TouchPad for HP 35.6-cm (14.0-in) computers (includes TouchPad board and cable) |
| 605782-001 | Palm rest with TouchPad for HP 39.6-cm (15.6-in) computers (includes TouchPad board and cable) |
| 605784-001 | Service door for 33.8-cm (13.3-in) and 35.6-cm (14.0-in) computers |
| 605785-001 | Service door for 39.6-cm (15.6-in) computers |
| 605786-001 | Plastics Kit |
| 605787-001 | Fan for use in 33.8-cm (13.3-in) and 35.6-cm (14.0-in) computers |
| 605789-001 | Rubber Kit for 33.8-cm (13.3-in) and 35.6-cm (14.0-in) computers |
| 605790-001 | Screw Kit |

| Spare part number | Description |
|--------------------------|---|
| 605791-001 | Fan for use in 39.6-cm (15.6-in) computers |
| 605792-001 | Speaker |
| 605793-001 | Cable Kit |
| 605794-001 | Power switch board |
| 605795-001 | TouchPad board |
| 605796-001 | USB board |
| 605798-001 | Hard drive extender for use in 39.6-cm (15.6-in) computers |
| 605799-001 | Optical drive extender for 39.6-cm (15.6-in) computers |
| 605800-001 | Optical drive extender for 35.6-cm (14.0-in) computers |
| 605801-001 | 39.6-cm (15.6-in) HD AntiGlare display assembly for use in computers equipped without webcam (1366×768 resolution) |
| 605802-001 | 39.6-cm (15.6-in) HD AntiGlare display assembly for use in computers equipped with webcam (1366×768 resolution) |
| 605803-001 | 39.6-cm (15.6-in) HD BrightView display assembly for use in computers without webcam (1366×768 resolution) |
| 605804-001 | 39.6-cm (15.6-in) HD BrightView display assembly for use in computers with webcam (1366×768 resolution) |
| 605805-001 | 35.6-cm (14.0-in) HD AntiGlare display assembly for use in computers without webcam (1366×768 resolution) |
| 605806-001 | 35.6-cm (14.0-in) HD AntiGlare display assembly for use in computers equipped with webcam (1366×768 resolution) |
| 605807-001 | 35.6-cm (14.0-in) HD BrightView display assembly for use in computers without webcam (1366×768 resolution) |
| 605808-001 | 35.6-cm (14.0-in) HD BrightView display assembly for use in computers equipped with webcam (1366×768 resolution) |
| 605809-001 | 33.8-cm (13.3-in) HD AntiGlare display assembly for use in computers with WLAN but without webcam (1366×768 resolution) |
| 605810-001 | 33.8-cm (13.3-in) HD AntiGlare display assembly for use in computers with WLAN and webcam (1366×768 resolution) |
| 605811-001 | 33.8-cm (13.3-in) HD BrightView display assembly for use in computers with WLAN but without webcam (1366×768 resolution) |
| 605812-001 | 33.8-cm (13.3-in) HD BrightView display assembly for use in computers with WLAN and webcam (1366×768 resolution) |
| 605813-001 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in the United States |
| 605813-031 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in the United Kingdom |
| 605813-041 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Germany |
| 605813-051 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in France |
| 605813-061 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Italy |
| 605813-071 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Spain |

| Spare part number | Description |
|--------------------------|--|
| 605813-081 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Denmark |
| 605813-091 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Norway |
| 605813-121 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in French Canada |
| 605813-131 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Portugal |
| 605813-141 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Turkey |
| 605813-161 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Latin America |
| 605813-171 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Saudi Arabia |
| 605813-201 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Brazil |
| 605813-211 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Hungary |
| 605813-251 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Russia |
| 605813-261 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Bulgaria |
| 605813-281 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Thailand |
| 605813-291 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Japan |
| 605813-A41 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Europe |
| 605813-A81 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in the Czech Republic |
| 605813-AB1 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Taiwan |
| 605813-AD1 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in South Korea |
| 605813-B31 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for International use |
| 605813-B71 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Finland |
| 605813-BA1 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Slovenia |
| 605813-BB1 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Israel |
| 605813-BG1 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Switzerland |
| 605813-DD1 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Iceland |
| 605813-DJ1 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in Greece |
| 605813-DW1 | Keyboard for 35.6-cm (14.0-in) and 33.8-cm (13.3-in) computers for use in the French Arabic region |
| 605814-001 | Keyboard for 39.6-cm (15.6-in) computers for use in the United States |
| 605814-031 | Keyboard for 39.6-cm (15.6-in) computers for use in the United Kingdom |
| 605814-041 | Keyboard for 39.6-cm (15.6-in) computers for use in Germany |
| 605814-051 | Keyboard for 39.6-cm (15.6-in) computers for use in France |
| 605814-061 | Keyboard for 39.6-cm (15.6-in) computers for use in Italy |
| 605814-071 | Keyboard for 39.6-cm (15.6-in) computers for use in Spain |
| 605814-081 | Keyboard for 39.6-cm (15.6-in) computers for use in Denmark |
| 605814-091 | Keyboard for 39.6-cm (15.6-in) computers for use in Norway |
| 605814-121 | Keyboard for 39.6-cm (15.6-in) computers for use in French Canada |

| Spare part number | Description |
|--------------------------|---|
| 605814-131 | Keyboard for 39.6-cm (15.6-in) computers for use in Portugal |
| 605814-141 | Keyboard for 39.6-cm (15.6-in) computers for use in Turkey |
| 605814-161 | Keyboard for 39.6-cm (15.6-in) computers for use in Latin America |
| 605814-171 | Keyboard for 39.6-cm (15.6-in) computers for use in Saudi Arabia |
| 605814-201 | Keyboard for 39.6-cm (15.6-in) computers for use in Brazil |
| 605814-211 | Keyboard for 39.6-cm (15.6-in) computers for use in Hungary |
| 605814-251 | Keyboard for 39.6-cm (15.6-in) computers for use in Russia |
| 605814-261 | Keyboard for 39.6-cm (15.6-in) computers for use in Bulgaria |
| 605814-A41 | Keyboard for 39.6-cm (15.6-in) computers for use in Europe |
| 605814-A81 | Keyboard for 39.6-cm (15.6-in) computers for use in the Czech Republic |
| 605814-B31 | Keyboard for 39.6-cm (15.6-in) computers for International use |
| 605814-B71 | Keyboard for 39.6-cm (15.6-in) computers for use in Finland |
| 605814-BA1 | Keyboard for 39.6-cm (15.6-in) computers for use in Slovenia |
| 605814-BB1 | Keyboard for 39.6-cm (15.6-in) computers for use in Israel |
| 605814-BG1 | Keyboard for 39.6-cm (15.6-in) computers for use in Switzerland |
| 605814-DD1 | Keyboard for 39.6-cm (15.6-in) computers for use in Iceland |
| 605814-DJ1 | Keyboard for 39.6-cm (15.6-in) computers for use in Greece |
| 605814-DW1 | Keyboard for 39.6-cm (15.6-in) computers for use in the French Arabic region |
| 608137-001 | 250-GB, 7200-rpm hard drive for use in computers with 35.6-cm (14-in) or 33.8-cm (13.3-in) displays |
| 608138-001 | 320-GB, 7200-rpm hard drive for use in computers with 35.6-cm (14-in) or 33.8-cm (13.3-in) displays |
| 608139-001 | 500-GB, 7200-rpm hard drive for use in computers with 35.6-cm (14-in) or 33.8-cm (13.3-in) displays |
| 608140-001 | DVD RW with LightScribe |
| 608141-001 | DVD-ROM |
| 608931-001 | Rubber Kit for 39.6-cm (15.6-in) computers |
| 611026-001 | Webcam |
| 611027-001 | 250-GB, 7200-rpm hard drive for use in computers with 39.6-cm (15.6-in) displays |
| 611028-001 | 320-GB, 7200-rpm hard drive for use in computers with 39.6-cm (15.6-in) displays |
| 611029-001 | 500-GB, 7200-rpm hard drive for use in computers with 39.6-cm (15.6-in) displays |
| 611802-001 | System board with discrete graphics, AMD processor, RTC battery, with RS880M chipset |
| 611803-001 | System board with UMA graphics, AMD processor, RTC battery, with RS880M chipset |
| 611804-001 | Heat sink for use in computers with UMA graphics subsystem and AMD processor |
| 611805-001 | Heat sink for use in computers with discrete graphics subsystem and AMD processor |
| 613149-001 | 65-W AC adapter for use with computers with UMA graphics |
| 613150-001 | 90-W AC adapter for use with computers with discrete graphics |

| Spare part number | Description |
|--------------------------|---|
| 614522-001 | 160-GB, 7200-rpm hard drive for use in computers with 39.6-cm (15.6-in) displays |
| 614523-001 | 250-GB, 5400-rpm hard drive for use in computers with 39.6-cm (15.6-in) displays |
| 614955-001 | 320-GB, 5400-rpm hard drive for use in computers with 39.6-cm (15.6-in) displays |
| 614956-001 | 500-GB, 5400-rpm hard drive for use in computers with 39.6-cm (15.6-in) displays |
| 614957-001 | 320-GB, 5400-rpm hard drive for use in computers with 35.6-cm (14-in) or 33.8-cm (13.3-in) displays |
| 614958-001 | 500-GB, 5400-rpm hard drive for use in computers with 35.6-cm (14-in) or 33.8-cm (13.3-in) displays |
| 615040-001 | 160-GB, 5400-rpm hard drive for use in computers with 35.6-cm (14-in) or 33.8-cm (13.3-in) displays |
| 615355-001 | Heat sink for use in computers with discrete graphics subsystem and AMD processor |
| 615844-001 | 160-GB, 5400-rpm hard drive for use in 39.6-cm (15.6-in) computer |
| 616596-001 | Compaq 33.8-cm (13.3-in) display enclosure, red |
| 616597-001 | Display panel AntiGlare without webcam for use in 33.8-cm (13.3-in) computer, red |
| 616598-001 | Display panel AntiGlare with webcam for use in 33.8-cm (13.3-in) computer, red |
| 616599-001 | Display panel BrightView without webcam for use in 33.8-cm (13.3-in) computer, red |
| 616600-001 | Display panel BrightView with webcam for use in 33.8-cm (13.3-in) computer, red |
| 616601-001 | Top cover for Compaq 33.8-cm (13.3-in) computers, red |
| 616602-01 | Palm rest with TouchPad for Compaq 33.8-cm (13.3-in) computers, red (includes TouchPad board and 2 cables) |
| 620608-001 | Audio board |
| 620609-001 | Base enclosure for 35.6-cm (14.0-in) computers |
| 622191-001 | Base enclosure for 33.8-cm (13.3-in) computers |
| 622192-001 | Base enclosure for 39.6-cm (15.6-in) computers |
| 622614-001 | Audio board for use on system boards with UMA graphics subsystem |
| 622615-001 | USB board for use on system boards with UMA graphics subsystem |

4 Removal and replacement procedures

Preliminary replacement requirements

Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screwdriver
- Magnetic screwdriver
- Phillips P0 and P1 screwdrivers
- Torx T8 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.

 **NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

 **CAUTION:** Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

Cables and connectors

- △ **CAUTION:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.
-

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Drive handling

- △ **CAUTION:** Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing a diskette drive or optical drive, be sure that a diskette or disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive, an optical drive, or a diskette drive, place it in a static-proof bag.

Avoid exposing a hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

Grounding guidelines

Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

△ **CAUTION:** To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Use nonmagnetic tools.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

△ **CAUTION:** A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels

| Event | Relative humidity | | |
|---------------------------------|-------------------|----------|---------|
| | 10% | 40% | 55% |
| Walking across carpet | 35,000 V | 15,000 V | 7,500 V |
| Walking across vinyl floor | 12,000 V | 5,000 V | 3,000 V |
| Motions of bench worker | 6,000 V | 800 V | 400 V |
| Removing DIPS from plastic tube | 2,000 V | 700 V | 400 V |
| Removing DIPS from vinyl tray | 11,500 V | 4,000 V | 2,000 V |
| Removing DIPS from Styrofoam | 14,500 V | 5,000 V | 3,500 V |
| Removing bubble pack from PCB | 26,500 V | 20,000 V | 7,000 V |
| Packing PCBs in foam-lined box | 21,000 V | 11,000 V | 5,000 V |

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm $\pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive strips must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

| Material | Use | Voltage protection level |
|-----------------------|------------|--------------------------|
| Antistatic plastic | Bags | 1,500 V |
| Carbon-loaded plastic | Floor mats | 7,500 V |
| Metallized laminate | Floor mats | 5,000 V |

Component replacement procedures


This section provides removal and replacement procedures.

There are many screws, in many different sizes, that must be removed, replaced, or loosened when servicing the computer. Make special note of each screw size and location during removal and replacement.

Service tag


When ordering parts or requesting information, provide the computer serial number and model description provided on the service tag:

- (1) Product name: This is the product name affixed to the front of the computer.
- (2) Serial number (s/n): This is an alphanumeric identifier that is unique to each product.
- (3) Product number (p/n): This number provides specific information about the hardware components. The product number helps a service technician to determine what components and parts are needed.
- (4) Warranty period: This number describes the duration (in years) of the warranty period for this computer.
- (5) Model description: This is an alphanumeric identifier used to locate documents, drivers, and support for the computer.

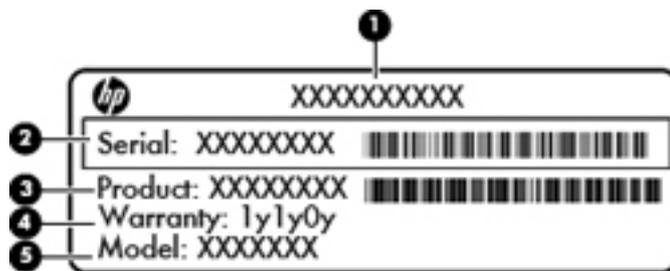

Computer feet

The computer feet are adhesive-backed rubber pads. The feet are included in the Rubber Kit, spare part number 605789-001 for **33.8-cm** (13.3-in) and **35.6-cm** (14.0-in) computers and in Rubber Kit 608931-001 for **39.6-cm** (15.6-in) computers. There are 4 rubber feet that attach to the base enclosure in the locations illustrated below.

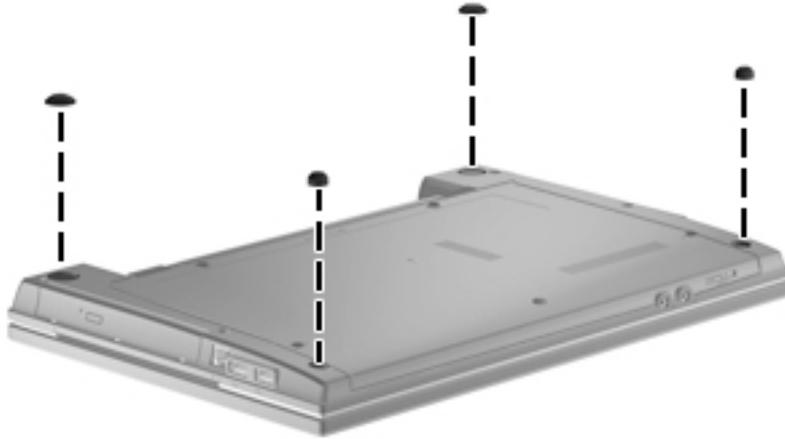

Battery


| Description | Spare part number |
|-------------------------------------|-------------------|
| 9-cell, 93-Wh, 2.8-Ah Li-on battery | 593573-001 |
| 6-cell, 47-Wh, 2.2-Ah Li-on battery | 593572-001 |

Before disassembling the computer, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.

Remove the battery:

1. Turn the computer upside down on a flat surface with the battery bay toward you.
2. Slide the battery release latches (1) to release the battery.
3. Remove the battery (2) from the computer.

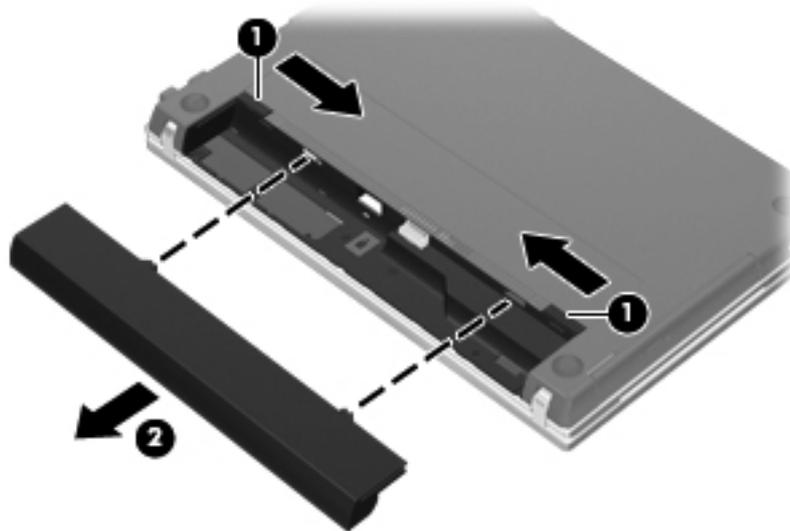

Install the battery by inserting it into the battery bay until you hear a click.

Service door


| Description | Spare part number |
|--|-------------------|
| For use in computers with 39.6-cm (15.6-in) displays | 605785-001 |
| For use in computers with 35.6-cm (14-in) and 33.8-cm (13.3-in) displays | 605784-001 |

Before removing the service door follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).

Remove the service door on a **39.6-cm** (15.6-in) computer:


1. Loosen the four Phillips PM2.0×3.0 captive screws (**1**) that secure the service door to the computer.
2. Slide the service door (**2**) away from the computer.

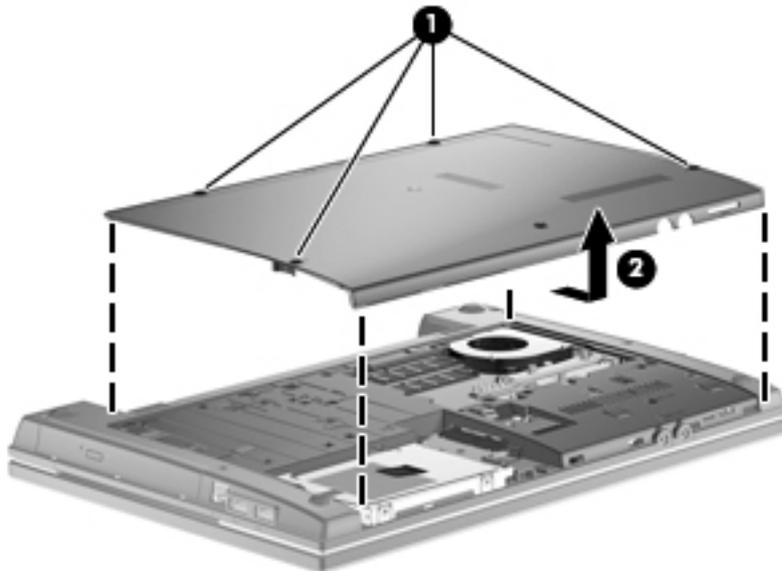

Remove the service door on a **35.6-cm** (14-in) or **33.8-cm** (13.3-in) computer:

1. Loosen the two Phillips PM2.0×3.0 captive screws (**1**) that secure the service door to the computer.

2. Slide the service door (2) away from the computer.

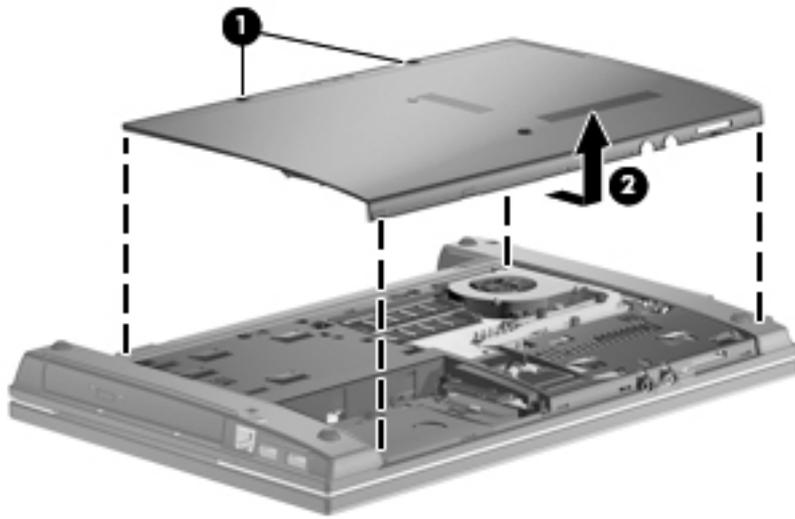

Reverse this procedure to install the service door.

Hard drive

 **NOTE:** The hard drive spare part kit includes a hard drive bracket.

| Description | Spare part number |
|---|-------------------|
| 500-GB, 7200-rpm hard drive for use in computers with 39.6-cm (15.6-in) displays | 611029-001 |
| 500-GB, 5400-rpm hard drive for use in computers with 39.6-cm (15.6-in) displays | 614956-001 |
| 320-GB, 7200-rpm hard drive for use in computers with 39.6-cm (15.6-in) displays | 611028-001 |
| 320-GB, 5400-rpm hard drive for use in computers with 39.6-cm (15.6-in) displays | 614955-001 |
| 250-GB, 7200-rpm hard drive for use in computers with 39.6-cm (15.6-in) displays | 611027-001 |
| 250-GB, 5400-rpm hard drive for use in computers with 39.6-cm (15.6-in) displays | 614523-001 |
| 160-GB, 7200-rpm hard drive for use in computers with 39.6-cm (15.6-in) displays | 614522-001 |
| 160-GB, 5400-rpm hard drive for use in computers with 39.6-cm (15.6-in) displays | 615844-001 |
| 500-GB, 7200-rpm hard drive | 608139-001 |
| 500-GB, 5400-rpm hard drive | 614958-001 |
| 320-GB, 7200-rpm hard drive | 608138-001 |
| 320-GB, 5400-rpm hard drive | 614957-001 |
| 250-GB, 7200-rpm hard drive | 608137-001 |
| 250-GB, 5400-rpm hard drive | 493994-001 |
| 160-GB, 7200-rpm hard drive | 455954-001 |
| 160-GB, 5400-rpm hard drive | 615040-001 |


Before removing the hard drive, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).

Remove the hard drive from a **39.6-cm** (15.6-in) computer:

1. Position the computer right-side up with the front toward you.
2. Remove the two Phillips PM2.5×6.0 screws **(1)** and loosen the Phillips PM2.5×11.0 captive screw **(2)** that secure the hard drive to the computer.
3. Grasp the mylar tab on the hard drive and slide the hard drive **(3)** to the left to disconnect it from the system board.


4. Remove the hard drive **(4)** from the hard drive bay.

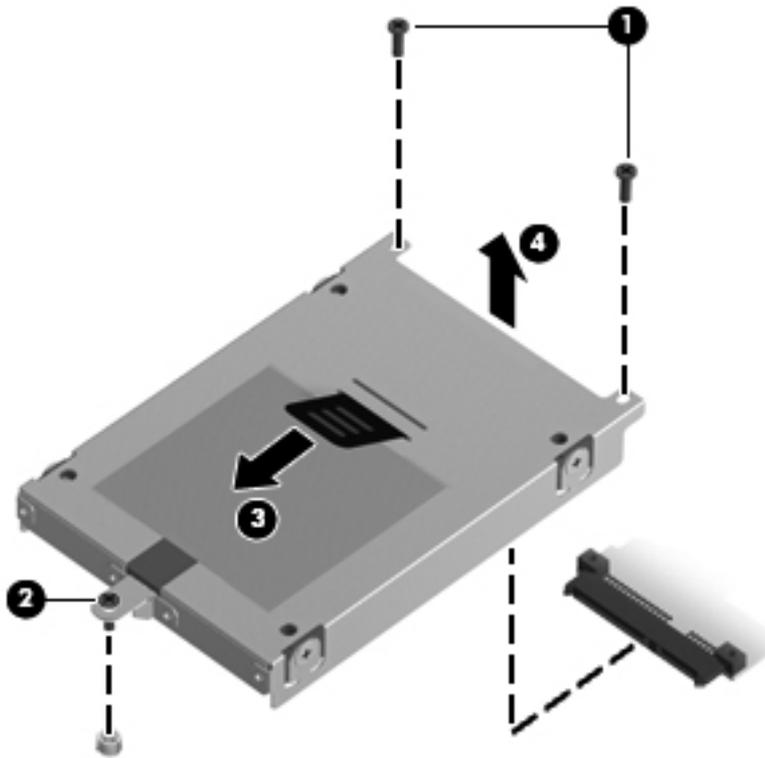

Remove the hard drive from a **35.6-cm** (14-in) or **33.8-cm** (13.3-in) computer:


1. Position the computer right-side up with the front toward you.
2. Remove the two Phillips PM2.5×6.0 screws **(1)** and loosen the Phillips PM2.5×4.0 captive screw **(2)** that secure the hard drive to the computer.
3. Grasp the mylar tab on the hard drive and slide the hard drive **(3)** to the left to disconnect it from the system board.

4. Remove the hard drive (4) from the hard drive bay.

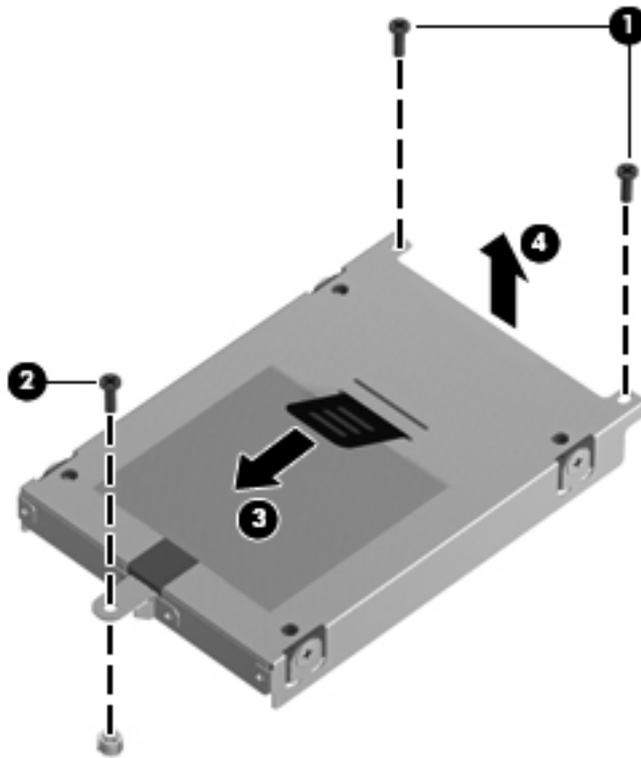

To remove the hard drive bracket, follow these steps:

1. If it is necessary to replace the hard drive bracket, remove the two Phillips PM3.0×4.0 hard drive bracket screws (1) from each side of the hard drive.
2. Lift the bracket (2) straight up to remove it from the hard drive.

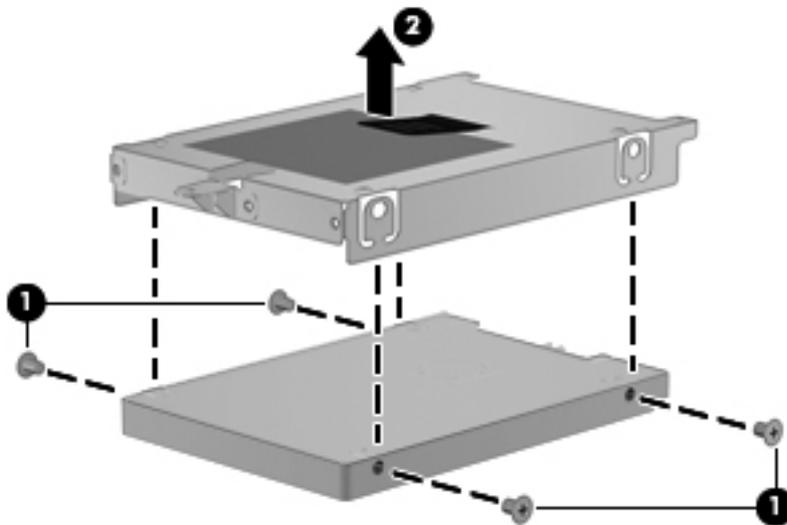

Reverse this procedure to reassemble and install the hard drive.

Memory module

 **NOTE:** When adding a second memory module, be sure it is the same type and speed as the installed memory module.

| Description | Spare part number |
|----------------------------------|-------------------|
| 2-GB (PC3-10600, 1333-MHz, DDR3) | 598856-001 |
| 1-GB (PC3-10600, 1333-MHz, DDR3) | 598859-001 |


Before removing the memory module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).

Remove the memory module:

1. Position the computer right-side up with the front toward you.
2. Spread the retaining tabs **(1)** on each side of the memory module slot to release the memory module. (The edge of the module opposite the slot rises away from the computer.)
3. Remove the memory module **(2)** by pulling the module away from the slot at an angle.

 **NOTE:** Memory modules are designed with a notch to prevent incorrect insertion into the memory module slot.

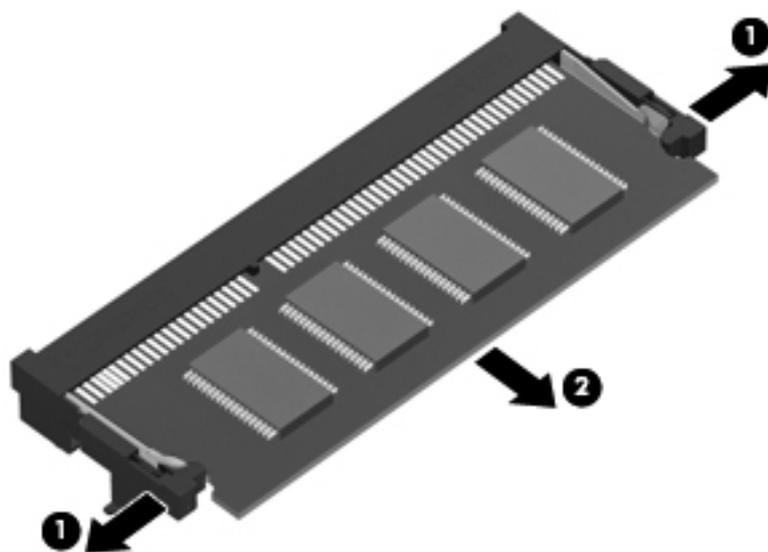

Reverse this procedure to install a memory module.

WLAN module

| Description | Spare part number |
|---|-------------------|
| Broadcom 4312 802.11b/g WLAN modules | |
| <ul style="list-style-type: none">For use in Antigua and Barbuda, Barbados, Belize, Canada, the Cayman Islands, Guam, Puerto Rico, Trinidad and Tobago, the U.S. Virgin Islands, and the United States | 504593-003 |
| <ul style="list-style-type: none">For use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, the Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cameroon, Cape Verde, the Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Ireland, Israel, Italy, the Ivory Coast, Jamaica, Jordan, Kazakhstan, Kenya, Kiribati, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, the Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe | 504593-004 |
| Broadcom 4313AGN 802.11a/b/g/draft-n WiFi Adapter | 593836-001 |
| Atheros 9285G 802.11 b/g/n WiFi Adapter for use in all countries and regions | 605560-005 |
| Realtek RTL8191SE802.11 b/g/n WiFi Adapter for use in all countries and regions | 593533-001 |

△ **CAUTION:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.

Before removing the WLAN module, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).

Remove the WLAN module:

1. Disconnect the WLAN antenna cables (1) from the terminals on the WLAN module.

 **NOTE:** The black WLAN antenna cable is connected to the WLAN module “Main” terminal. The white WLAN antenna cable is connected to the WLAN module “Aux” terminal.

2. Remove the two Phillips PM2.0×2.5 screws (2) that secure the WLAN module to the computer. (The edge of the module opposite the slot rises away from the computer.)
3. Remove the WLAN module (3) by pulling the module away from the slot at an angle.

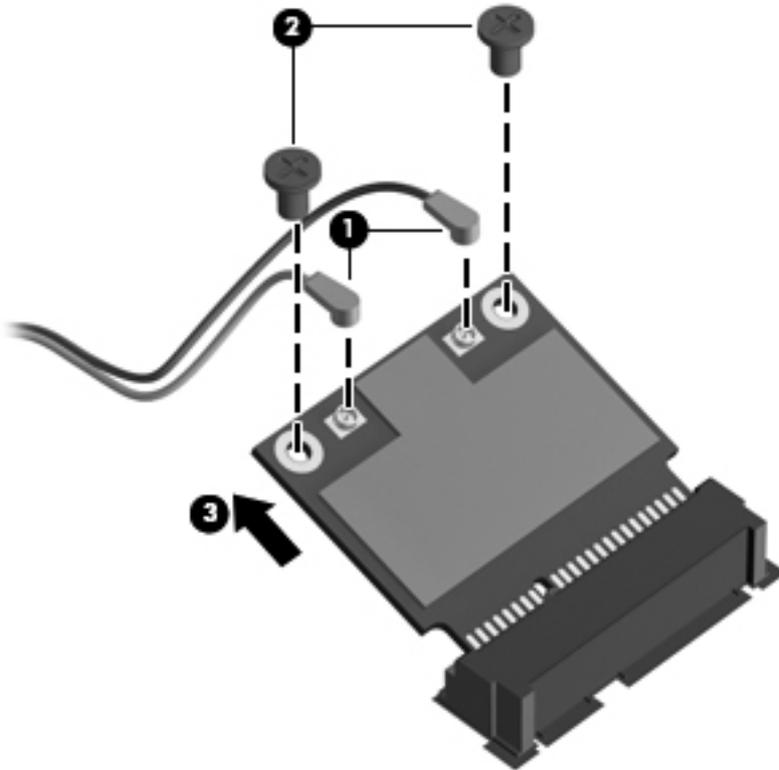

Reverse this procedure to install the WLAN module.

Optical drive

 **NOTE:** All optical drive spare part kits include an optical drive bezel.


| Description | Spare part number |
|---|-------------------|
| DVD±RW Double-Layer Drive with LightScribe (includes bezel) | 608140-001 |
| DVD-ROM Drive (includes bezel) | 608141-001 |

Before removing the optical drive, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).


Remove the optical drive:

1. Position the computer with the right side toward you.
2. Remove the Torx M2.5×6.0 screw (1) that secures the optical drive to the computer.
3. Insert a flat-bladed screwdriver or similar tool into the optical drive tab access (2) and press the tab to the right to release the optical drive from the computer.
4. Remove the optical drive (3) from the computer.

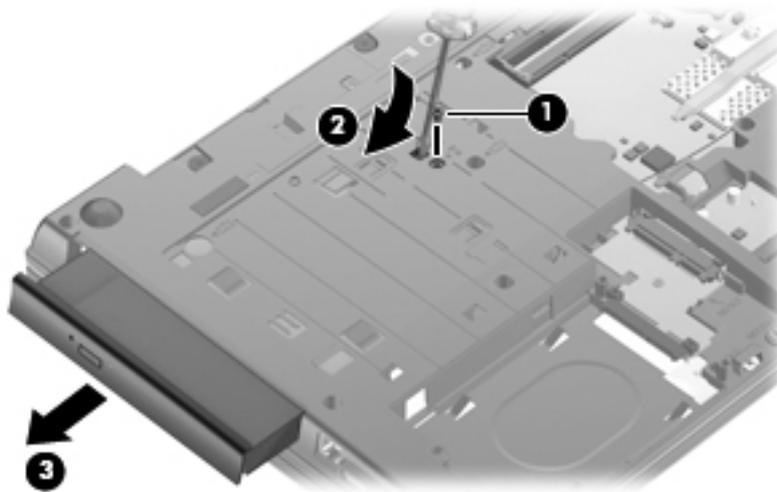

5. If it is necessary to replace the optical drive bracket, position the optical drive with the rear toward you.
6. Remove the two Phillips PM2.0×2.0 screws (1) that secure the optical drive bracket to the optical drive.

7. Remove the optical drive bracket (2).

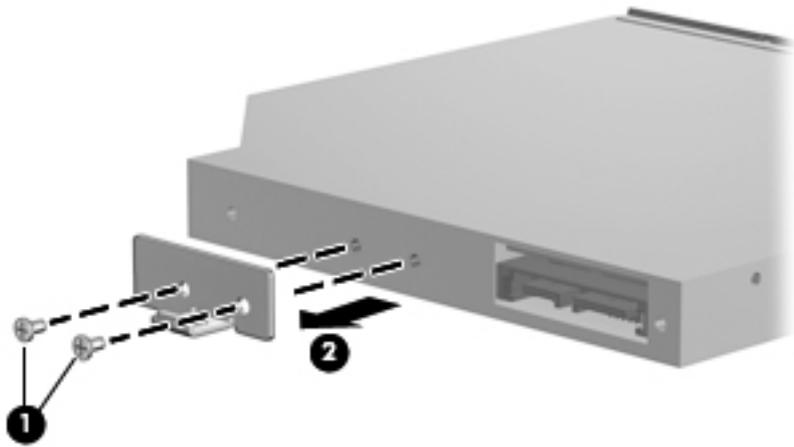

Reverse this procedure to reassemble and install an optical drive.

Fan


| Description | Spare part number |
|---|-------------------|
| Fan for use in 39.6-cm (15.6-in) computer models | 605791-001 |
| Fan for use in 33.8-cm (13.3-in) and 35.6-cm (14.5-in) computer models | 605787-001 |

Before removing the fan, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).

Remove the fan:

1. Position the computer upside down with the front toward you.
2. Disconnect the fan cable (1) from the system board .
3. Remove the Phillips PM2.0×3.0 screw (2) that secures the fan, and then remove the fan (3).

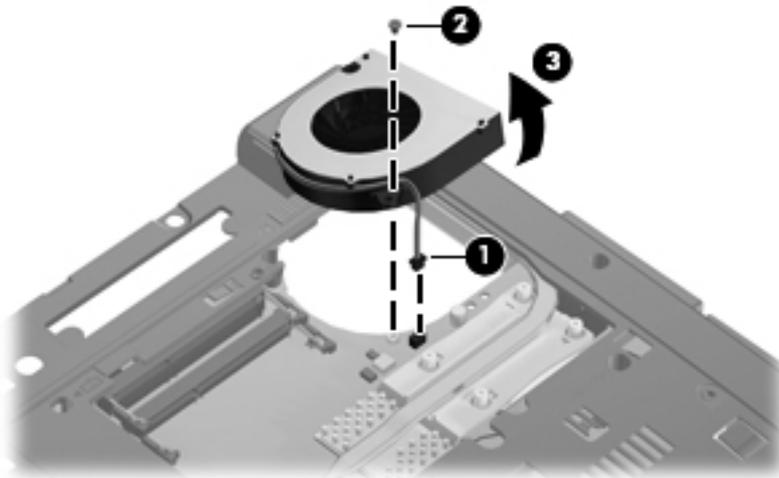

Reverse this procedure to install the fan.

Heat sink

 **NOTE:** The heat sink spare part kit includes replacement thermal material.


| Description | Spare part number |
|--|-------------------|
| Heat sink for use in computers with UMA graphics subsystems | 611804-001 |
| Heat sink for use in computers with discrete graphics subsystems NB | 611805-001 |
| Heat sink for use in computers with discrete graphics subsystems CPU | 615355-001 |

Before removing the heat sink, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).
6. Remove the fan (see [Fan on page 59](#)).


Remove the heat sink on computers with UMA graphics subsystems:

1. Position the computer right-side up with the front facing you.
2. Following the numbered sequence stamped into the heat sink, loosen the captive screws **(1)** and **(2)** around the processor.
3. Raise the end of the heat sink **(3)** to free it from the system board components and then remove the heat sink **(4)** from the system board.

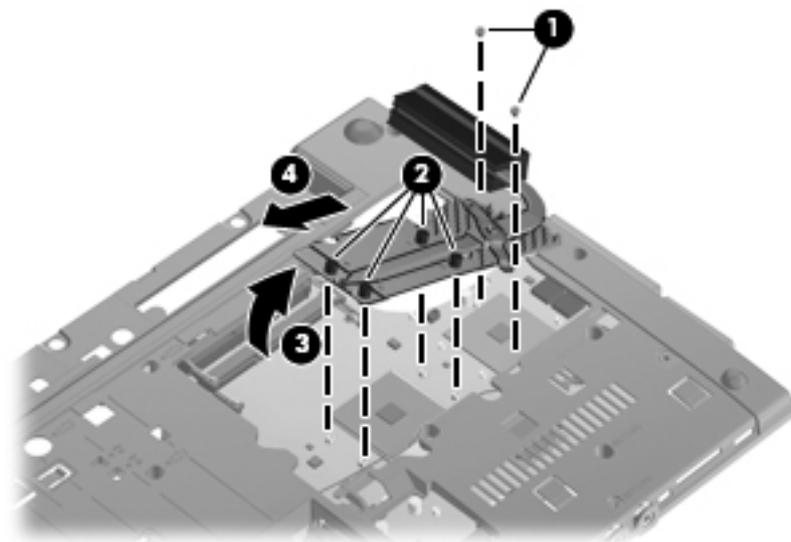

Remove the heat sink on computers with discrete graphics subsystems:

1. Position the computer right-side up with the front facing you.
2. Following the numbered sequence stamped into the heat sink, loosen the captive screws **(1)** and **(2)** around the processor.
3. Lift the heat sink **(3)** from the system board.

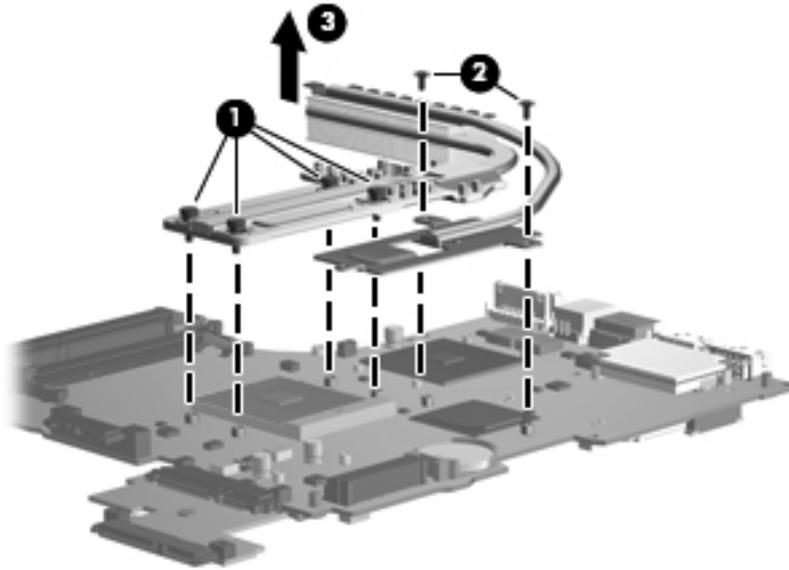

Following the numbered sequence stamped into the heat sink, reverse the above procedure to install the heat sink.

Processor

 **NOTE:** The processor spare part kit includes replacement thermal material.

| Description | Spare part number |
|--|-------------------|
| AMD Athlon™ II Dual-Core P320 2.1-GHz, 2MB L2 | 594165-001 |
| AMD Sempron™ Single-Core V120 2-GHz, 2MB L2 | 594171-001 |
| AMD Turion™ II Dual-Core, P520 2.3-GHz, 2MB L2 | 594173-001 |
| AMD Phenom II Champlain P820 25W | 594167-001 |

Before removing the processor, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).
6. Remove the fan (see [Fan on page 59](#)).
7. Remove the heat sink (see [Heat sink on page 60](#)).

Remove the processor:

1. Position the computer right-side up with the front toward you.
2. Use a flat-bladed screwdriver to turn the processor locking screw **(1)** one-half turn counterclockwise until you hear a click.

3. Lift the processor (2) straight up and remove it.

 **NOTE:** When you install the processor, the gold triangle (3) on the processor must be aligned with the triangle (4) embossed on the processor socket.

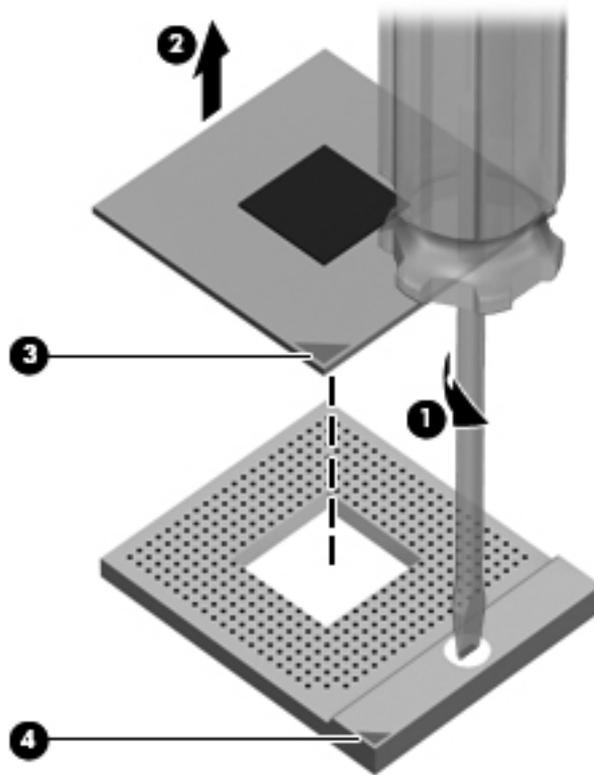

Reverse this procedure to install the processor.

Palm rest

| Description | Spare part number |
|--|-------------------|
| Palm rest for Compaq brand units with 33.8-cm (13.3-in) displays (includes TouchPad, TouchPad board, and 2 cables) | 605779-001 |
| Palm rest for Compaq brand units with 33.8-cm (13.3-in) displays (includes TouchPad, TouchPad board, and 2 cables), Red | 616602-001 |
| Palm rest for HP brand units with 39.6-cm (15.6-in) displays (includes TouchPad, TouchPad board, and 2 cables) | 605782-001 |
| Palm rest for HP brand units with 35.6-cm (14-in) displays (includes TouchPad, TouchPad board, and 2 cables) | 605780-001 |

Before removing the palm rest, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).

Remove the palm rest on **39.6-cm** (15.6-in) computers:

1. Position the computer right side up with the display open.
2. Pull up **(1)** on the top edge of the palm rest nearest the keyboard. With the palm rest at an angle, slide the unit **(2)** to release the latches at its base.




3. Release the ZIF connector (1) to which the TouchPad cable is connected, and then disconnect the cable (2) from the system board.

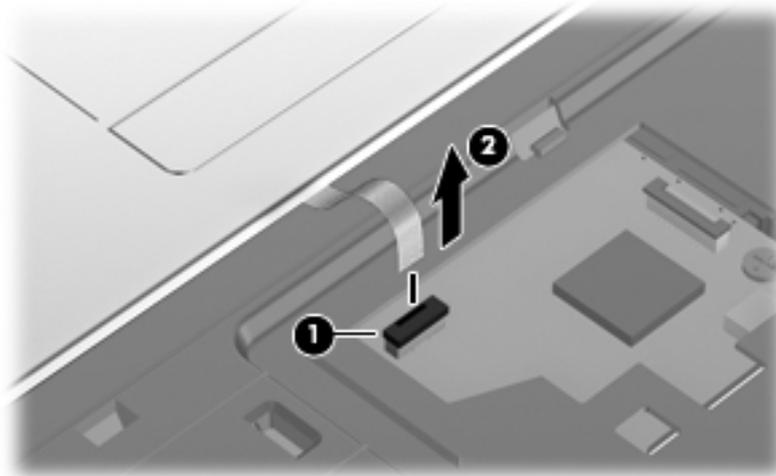

4. Remove the palm rest.

Remove the palm rest on **35.6-cm** (14-in) or **33.8-cm** (13.3-in) computers:


1. Position the computer upside down with the front toward you.
2. Remove the Torx M2.5×6.0 screw that secures the palm rest to the computer.

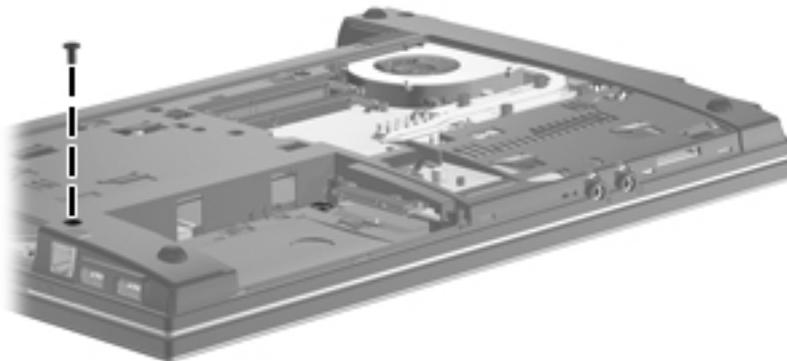

3. Turn the computer over, rotate the palm rest up (1) and slide the palm rest to the right (2) to release it from the computer.



4. Release the ZIF connector (1) to which the TouchPad cable is connected, and then disconnect the cable (2) from the system board.

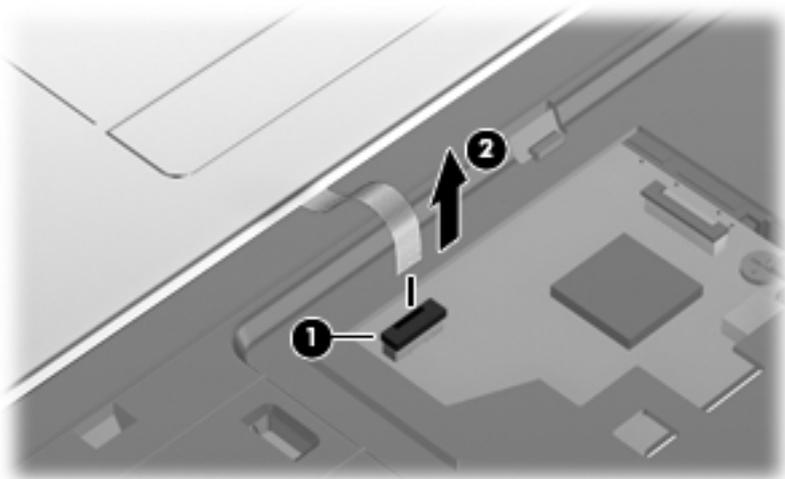

5. Remove the palm rest.

Reverse this procedure to install the palm rest.

Keyboard

| Description | Spare part number |
|--|-------------------|
| Keyboards for use in computers with 39.6-cm (15.6-in) displays | 605814-xx1 |
| Keyboards for use in computers with 35.6-cm (14.3-in) and 33.8-cm (13.3-in) displays | 605813-xx1 |


NOTE: For a detailed list of available keyboards, see [Sequential part number listing on page 35](#).

Before removing the keyboard, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).
6. Remove the palm rest (see [Palm rest on page 64](#)).

Remove the keyboard on **39.6-cm** (15.6-in) computers:


1. Position the computer upside down with the rear toward you.
2. Remove the three Phillips PM2.5×3.0 broadhead black screws (1) and three Torx M2.5×6.0 screws (2) that secure the keyboard.

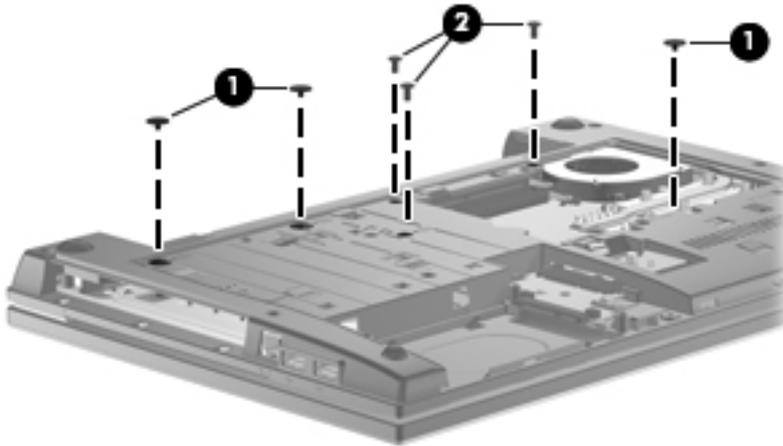

3. Turn the unit over, lift the top edge of the keyboard (1) and slide it (2) towards the display.

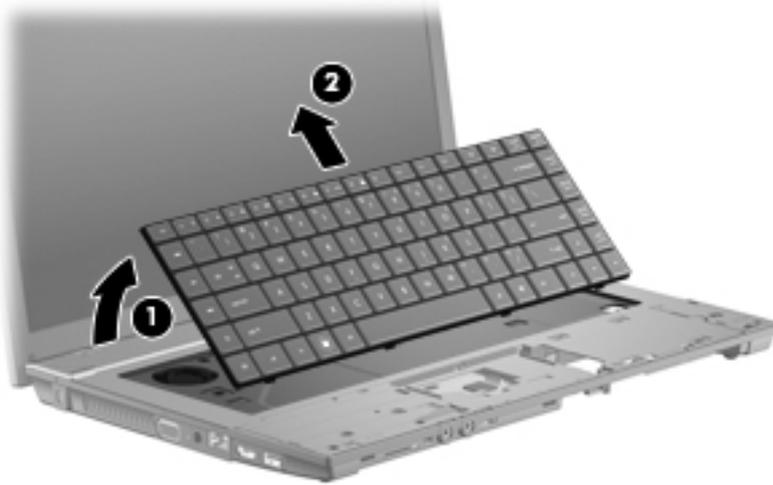


4. Rest the keyboard on its edge and slide the keyboard back toward the display then, release the ZIF connector (1) to which the keyboard cable is attached, and disconnect the keyboard cable (2) from the system board.

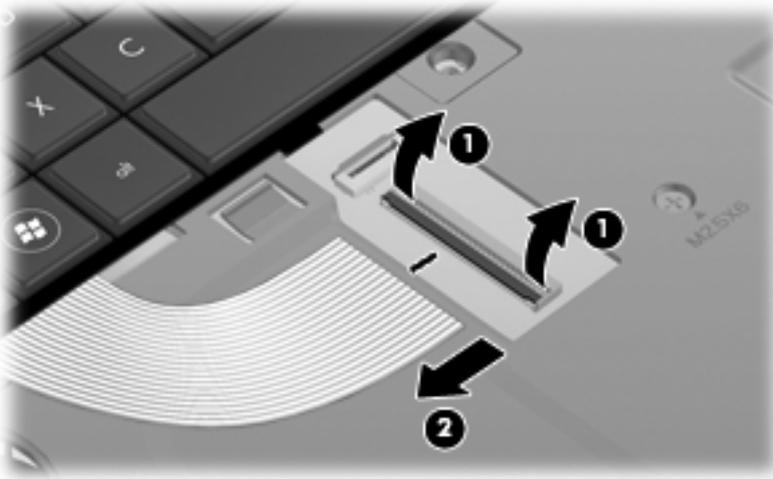


Remove the keyboard on **35.6-cm** (14.0-in) and **33.8-cm** (13.3-in) computers:

1. Position the computer upside down with the rear toward you.


2. Remove two Phillips PM2.5×3.0 broadhead black screws (1), one Phillips PM2.5×3.0 broadhead silver screw (2), and two Torx M2.5×6.0 screws (3) that secure the keyboard.

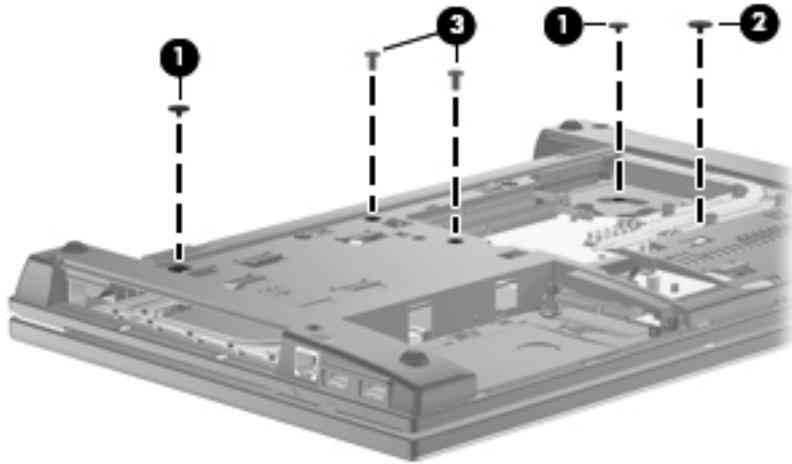

3. Turn the unit over, lift the top edge of the keyboard (1) and slide it (2) towards the display.

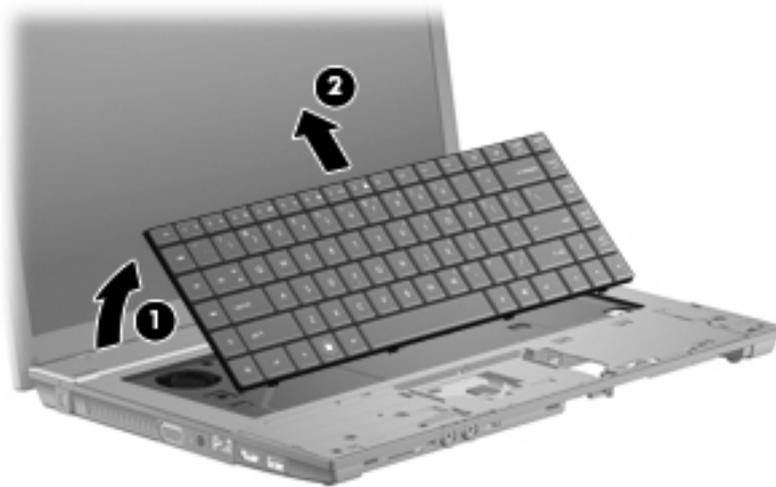

4. Rest the keyboard on its edge and slide the keyboard back toward the display then, release the ZIF connector (1) to which the keyboard cable is attached, and disconnect the keyboard cable (2) from the system board.

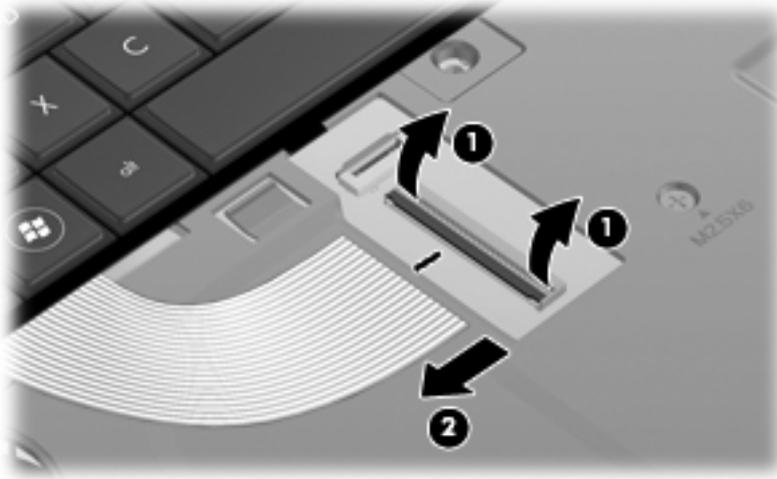

Reverse this procedure to install the keyboard.

Top cover


| Description | Spare part number |
|---|-------------------|
| Top cover for use in Compaq brand computers with 33.8-cm (13.3-in) displays | 605774-001 |
| Top cover for use in Compaq brand computers with 33.8-cm (13.3-in) displays, red | 616601-001 |
| Top cover for use in HP brand computers with 39.6-cm (15.6-in) displays | 605777-001 |
| Top cover for use in HP brand computers with 35.6-cm (14.0-in) displays | 605775-001 |

Before removing the top cover, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).
6. Remove the palm rest (see [Palm rest on page 64](#)).
7. Remove the keyboard (see [Keyboard on page 67](#)).


Remove the top cover on a **39.6-cm** (15.6-in) computer:

1. With the display panel in the open position, press in **(1)** of the ExpressCard to release it and then pull the card **(2)** from the computer.

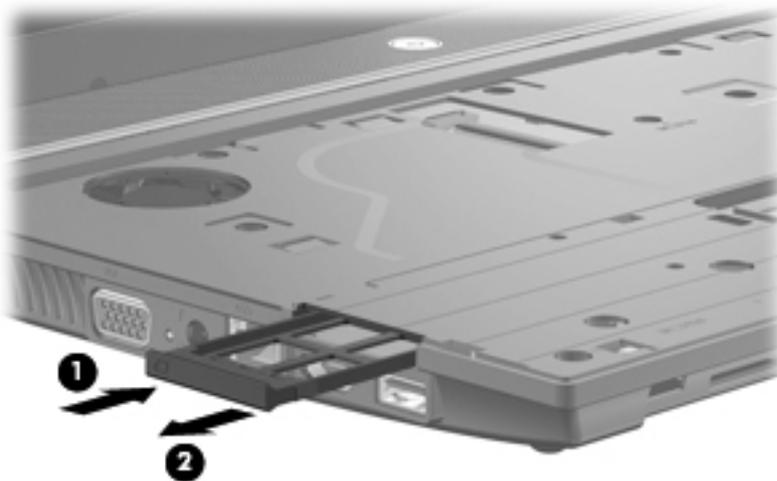


2. Position the computer upside down with the front toward you.


3. Remove the nine Torx M2.5×6.0 screws (1), three Phillips PM2.5×3.0 black broadhead screws (2), and three Phillips PM2.0×3.0 screws (3).

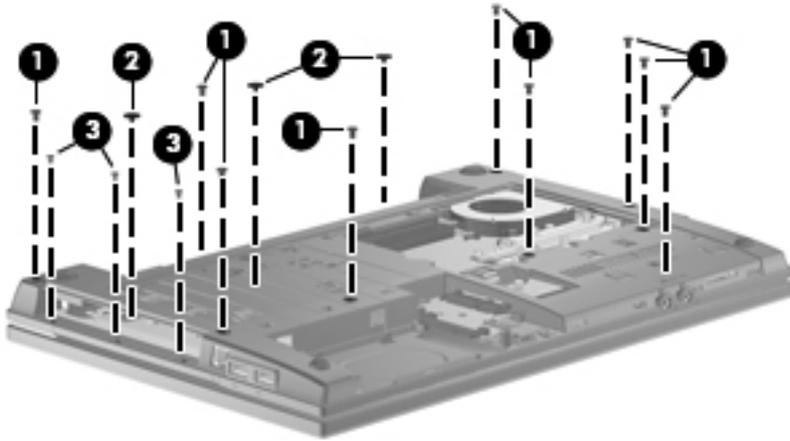


4. Turn the computer over so it is right-side up and remove four Torx M2.5×6.0 screws.

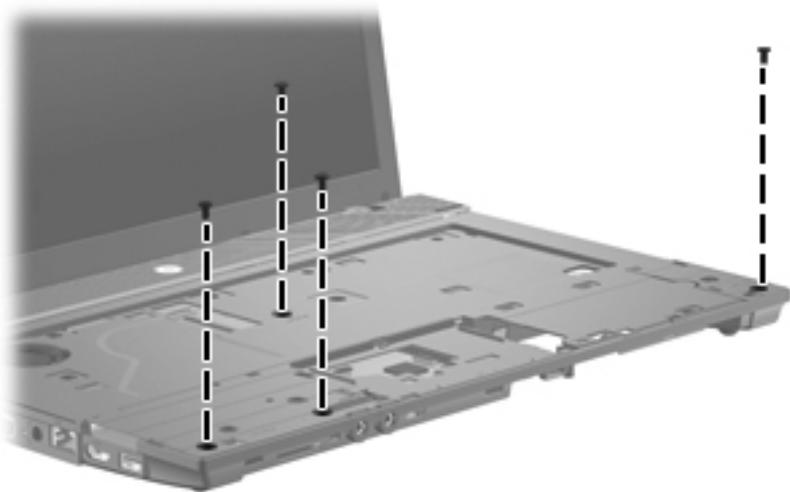

5. Release the ZIF connector (1) and remove the power switch cable (2).

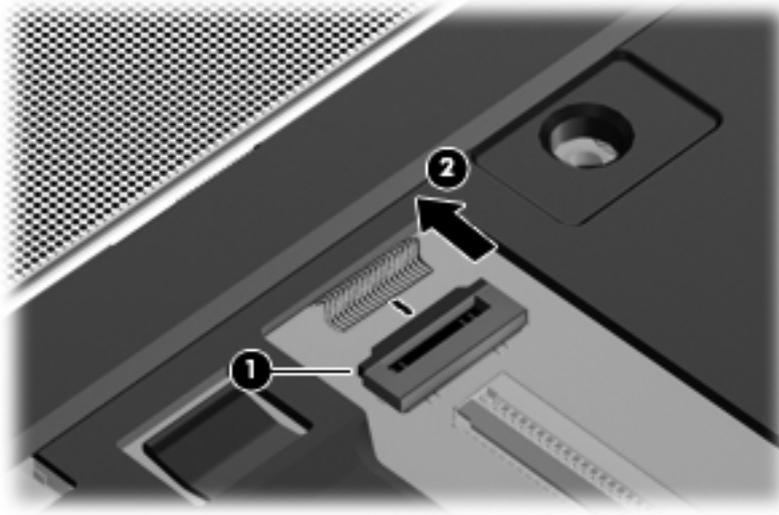


6. Rotate the top cover up (1) and remove it from the base enclosure (2).

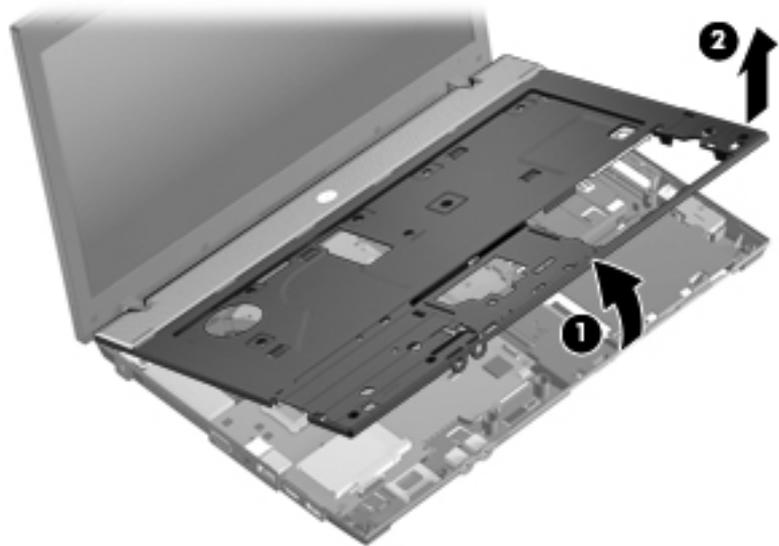


Remove the top cover on a **35.6-cm** (14.0-in) and **33.8-cm** (13.3-in) computer:


1. With the display panel in the open position, press in **(1)** of the ExpressCard to release it and then pull the card **(2)** from the computer.

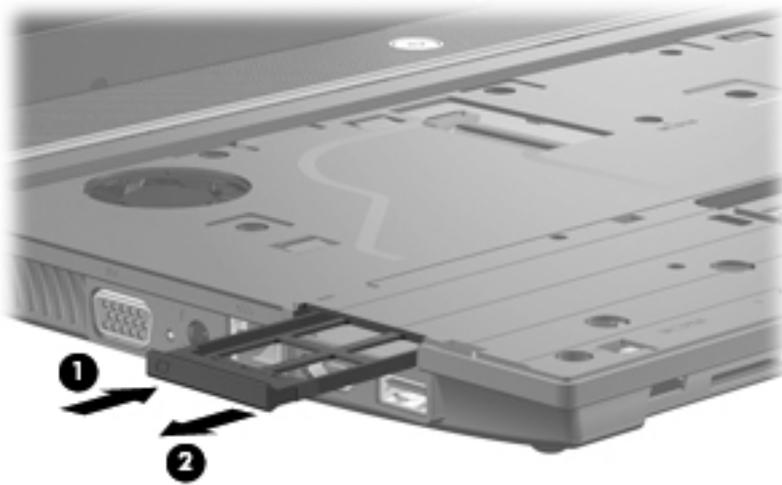


2. Position the computer upside down with the front toward you.
3. Remove the two Phillips PM2.0×2.0 screws **(1)** located in the battery bay, the five Torx M2.5×6.0 screws **(2)**, **(3)**, **(4)**, and **(5)**, and the two Phillips PM2.0×3.0 screws **(6)** located in the recess near the optical drive.

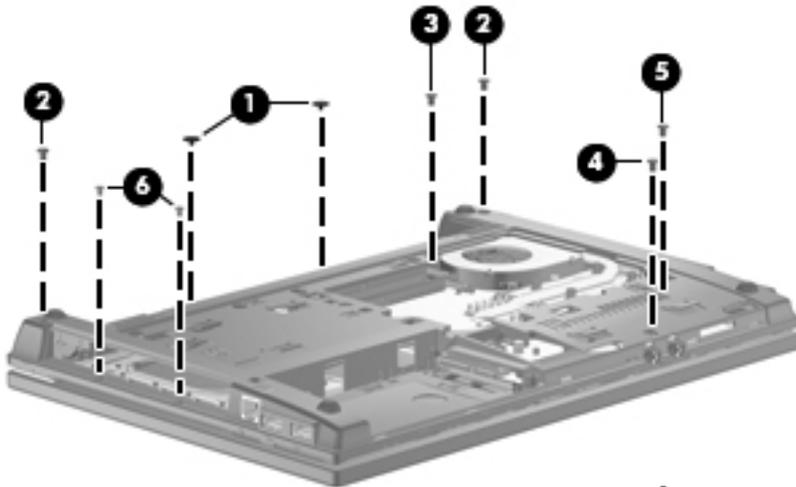


4. Turn the computer over so it is right-side up and remove five Torx M2.5×6.0 screws.

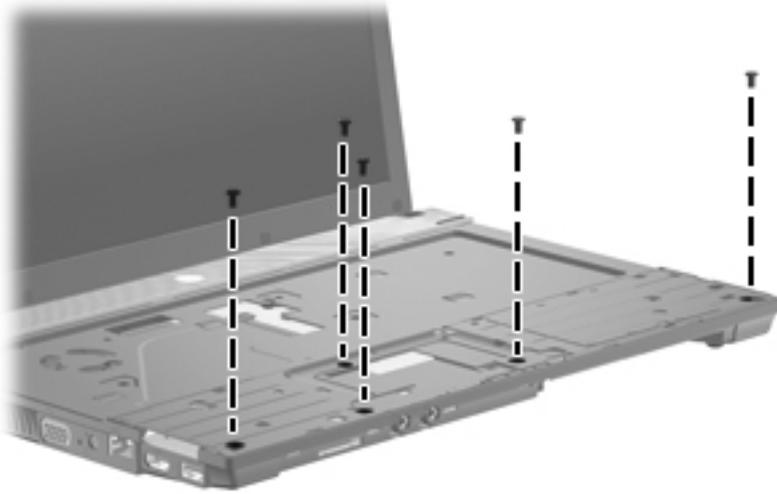

5. Release the ZIF connector (1) and disconnect the power switch cable (2).

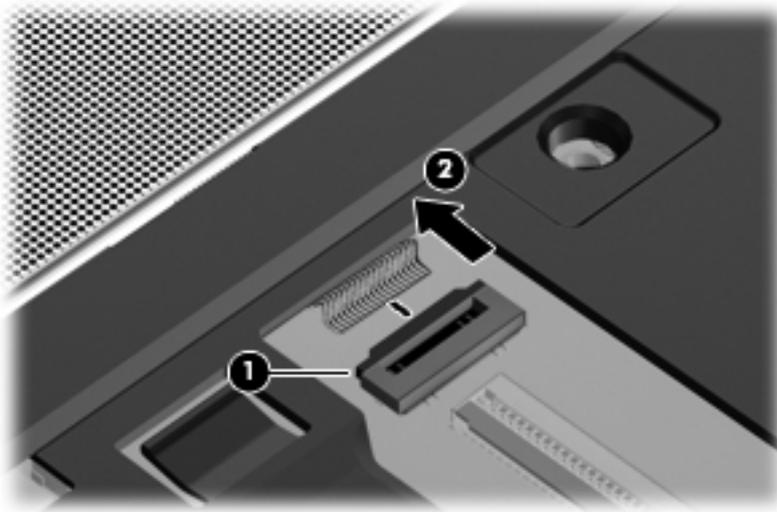

6. Rotate the top cover up (1) and off the base enclosure (2).

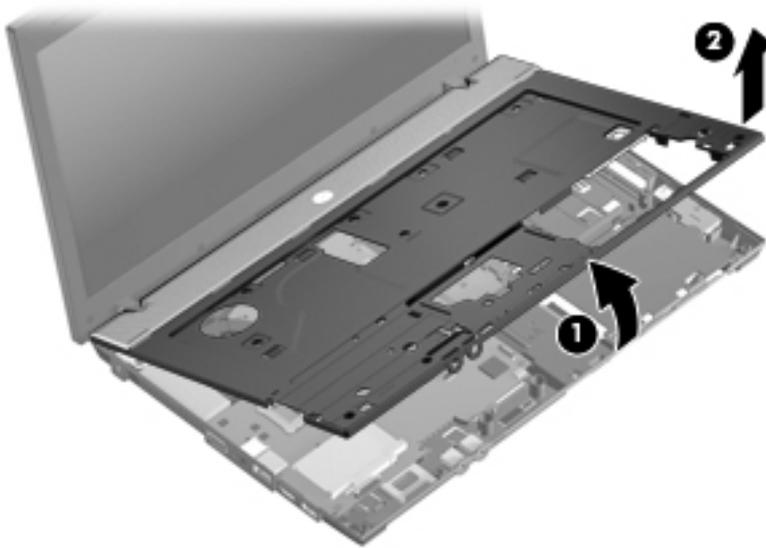

Reverse this procedure to install the top cover.

Power switch board


The spare part number for the power switch board used in all models is 605794-001.

Before removing the power switch board, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).
6. Remove the keyboard (see [Keyboard on page 67](#)).

Remove the power switch board:

1. Release the ZIF connector (1) and disconnect the ribbon cable (2) from the system board.

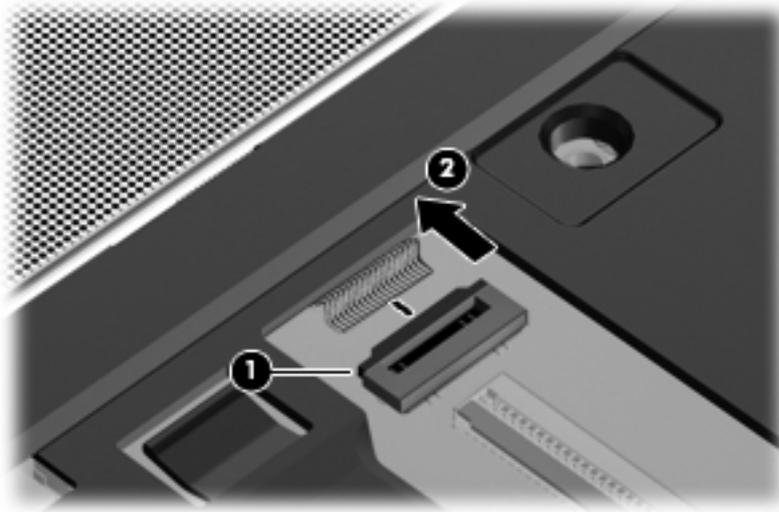

2. Remove the Phillips M2.5×3.0 broadhead screw (1) that secures the board to the base pan, raise the end of the board (2), and then slide the board out of the retainer (3).

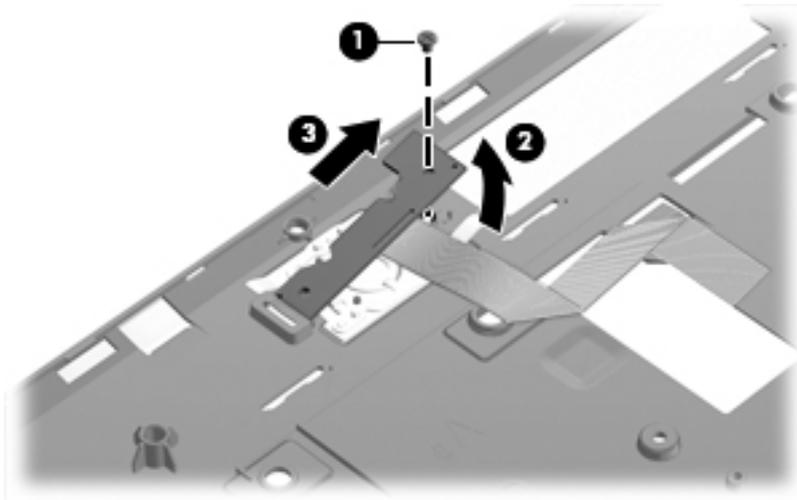

Reverse this procedure to install the power switch board.

Bluetooth module


 **NOTE:** The Bluetooth module spare part number is 537921-001 and is used in all countries and regions except Japan and Asia Pacific countries and regions. The Bluetooth module cable is included in the Cable Kit, spare part number 605793-001. See [Cables on page 31](#) for more Cable Kit spare part number information.

Before removing the Bluetooth module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the palm rest (see [Palm rest on page 64](#)).
6. Remove the keyboard (see [Keyboard on page 67](#)).
7. Remove the top cover (see [Top cover on page 71](#)).

Remove the Bluetooth module on **39.6-cm** (15.6-in) computers:


1. Position the computer right-side up with the front toward you.
2. Disconnect the Bluetooth cable (1) from the system board and remove the antenna (2) from the base enclosure. The antenna is held to the base enclosure with adhesive.

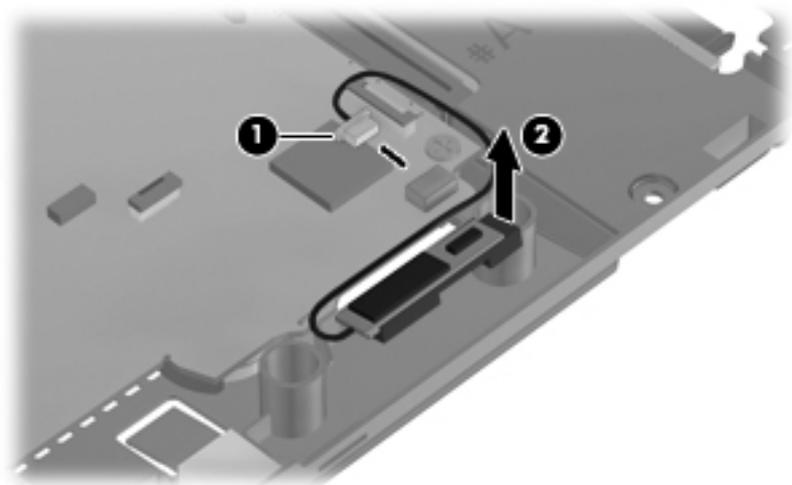

Remove the Bluetooth module on **35.6-cm** (14.0-in) and **33.8-cm** (13.3-in) computers:

1. Position the computer right-side up with the front toward you.

2. Disconnect the Bluetooth cable (1) from the system board and remove the antenna (2) from the base enclosure. The antenna is held to the base enclosure with adhesive.

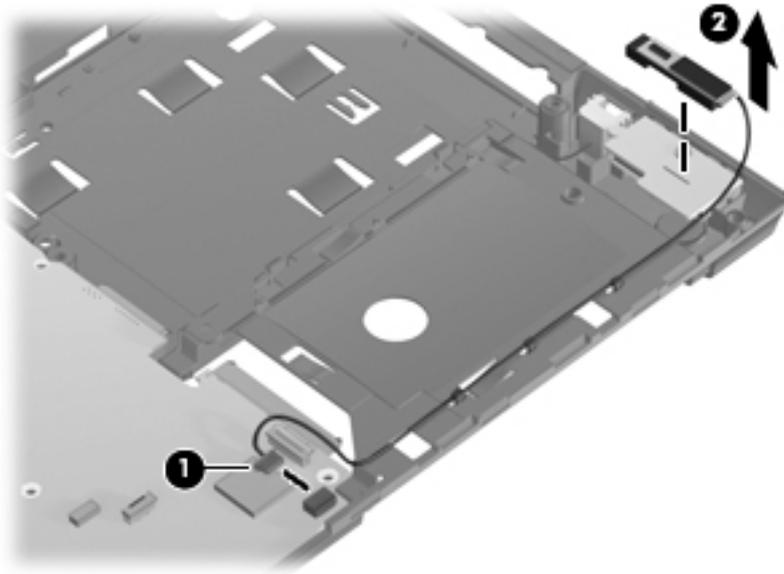

Reverse this procedure to install the Bluetooth module.

USB connector assembly

| Description | Spare Part Number |
|--|-------------------|
| USB board with cable | 605796-001 |
| USB board for use on system boards with UMA graphics subsystem | 622615-001 |


Before removing the USB connector assembly, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the palm rest (see [Palm rest on page 64](#)).
6. Remove the keyboard (see [Keyboard on page 67](#)).
7. Remove the top cover (see [Top cover on page 71](#)).

Remove the USB connector assembly on **39.6-cm** (15.6-in) computers:


1. Position the computer right-side up with the right side toward you.
2. Release the ZIF connector (1) and remove the cable (2) from the system board.

3. Remove the Torx M2.5×6.0 screw (3) then, lift the USB connector assembly (4) from the base enclosure.

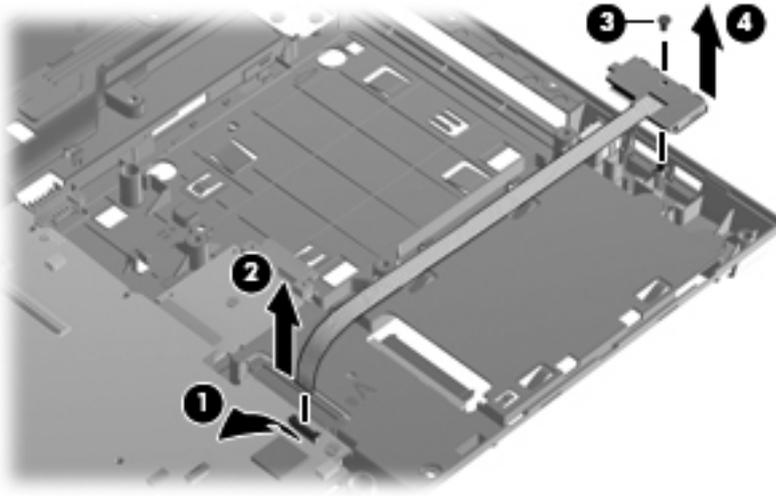

Remove the USB connector assembly on **35.6-cm** (14.0-in) and **33.8-cm** (13.3-in) computers:

1. Position the computer right-side up with the right side toward you.
2. Release the ZIF connector (1) and remove the cable (2) from the system board.
3. Lift the USB connector assembly (3) that is held on the base enclosure with adhesive.

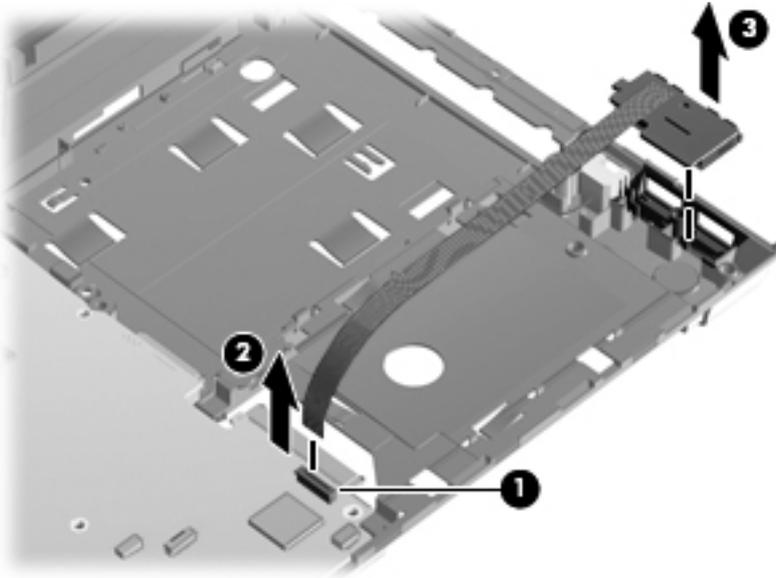

Reverse this procedure to install the USB connector assembly.

Speaker


The spare part number for the speaker used in all models is 605792-001.

Before removing the speaker, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).
6. Remove the palm rest (see [Palm rest on page 64](#)).
7. Remove the keyboard (see [Keyboard on page 67](#)).
8. Remove the top cover (see [Top cover on page 71](#)).

Remove the speaker:

1. Disconnect the speaker cable from the connector **(1)** on the system board.
2. Remove the two screws from the speaker **(2)**.
3. Lift the speaker up **(3)**, and then release the cable from the cable retainers **(4)**.
4. Remove the speaker and cable from the base enclosure.

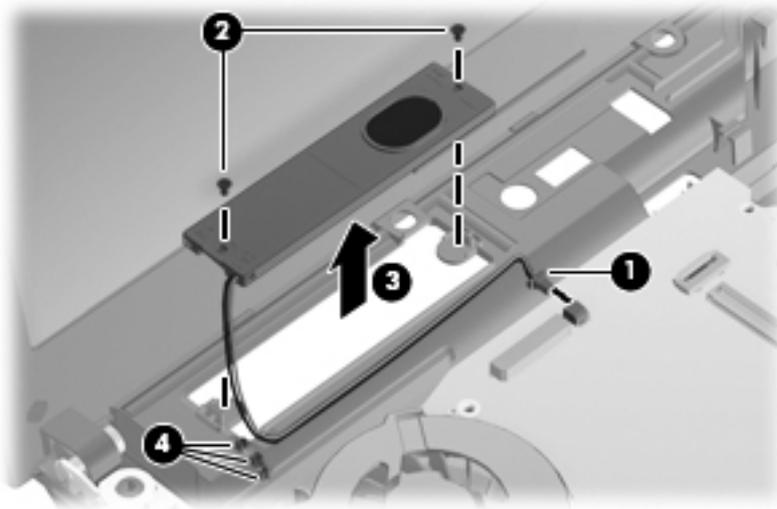

Reverse this procedure to install the speaker.

Display assembly

| Description | Spare part number |
|---|-------------------|
| <ul style="list-style-type: none">• 39.6-cm (15.6-in) HD BrightView display assembly for use in computers equipped with webcam (1366×768 resolution) | 605804-001 |
| <ul style="list-style-type: none">• 39.6-cm (15.6-in) HD BrightView display assembly for use in computers without webcam (1366×768 resolution) | 605803-001 |
| <ul style="list-style-type: none">• 39.6-cm (15.6-in) HD AntiGlare display assembly for use in computers equipped with webcam (1366×768 resolution) | 605802-001 |
| <ul style="list-style-type: none">• 39.6-cm (15.6-in) HD AntiGlare display assembly for use in computers equipped without webcam (1366×768 resolution) | 605801-001 |
| <ul style="list-style-type: none">• 35.6-cm (14.0-in) HD BrightView display assembly for use in computers equipped with webcam (1366×768 resolution) | 605808-001 |
| <ul style="list-style-type: none">• 35.6-cm (14.0-in) HD BrightView display assembly for use in computers without webcam (1366×768 resolution) | 605807-001 |
| <ul style="list-style-type: none">• 35.6-cm (14.0-in) HD AntiGlare display assembly for use in computers equipped with webcam (1366×768 resolution) | 605806-001 |
| <ul style="list-style-type: none">• 35.6-cm (14.0-in) HD AntiGlare display assembly for use in computers without webcam (1366×768 resolution) | 605805-001 |
| <ul style="list-style-type: none">• 33.8-cm (13.3-in) HD BrightView display assembly for use in computers equipped with webcam and WLAN (1366×768 resolution) | 605812-001 |
| <ul style="list-style-type: none">• 33.8-cm (13.3-in) HD BrightView display assembly for use in computers with WLAN but without webcam (1366×768 resolution) | 605811-001 |
| <ul style="list-style-type: none">• 33.8-cm (13.3-in) HD AntiGlare display assembly for use in computers equipped with webcam and WLAN (1366×768 resolution) | 605810-001 |
| <ul style="list-style-type: none">• 33.8-cm (13.3-in) HD AntiGlare display assembly for use in computers with WLAN but without webcam (1366×768 resolution) | 605809-001 |
| <ul style="list-style-type: none">• 33.8-cm (13.3-in) HD AntiGlare display assembly for use in computers with WLAN but without webcam (1366×768 resolution), red | 616597-001 |
| <ul style="list-style-type: none">• 33.8-cm (13.3-in) HD AntiGlare display assembly for use in computers equipped with webcam and WLAN (1366×768 resolution), red | 616598-001 |
| <ul style="list-style-type: none">• 33.8-cm (13.3-in) HD BrightView display assembly for use in computers with WLAN but without webcam (1366×768 resolution), red | 616599-001 |
| <ul style="list-style-type: none">• 33.8-cm (13.3-in) HD BrightView display assembly for use in computers equipped with webcam and WLAN (1366×768 resolution), red | 616600-001 |

Before removing the display assembly, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).


5. Remove the service door (see [Service door on page 49](#)).
6. Remove the palm rest (see [Palm rest on page 64](#)).
7. Remove the keyboard (see [Keyboard on page 67](#)).
8. Remove the top cover (see [Top cover on page 71](#)).

Remove the display on **39.6-cm** (15.6-in) computers:

1. Orient the computer in its normal position, face up with the display open as far as it will comfortably go.


△ **CAUTION:** Support the display assembly when removing the retaining screws. Failure to support the display assembly can result in damage to the display assembly and other computer components.

2. Disconnect the display cable (1) and the microphone cable (2) from the system board.
3. Release the WLAN cables from the cable run (3), being careful when pulling them through the opening near the hard drive.

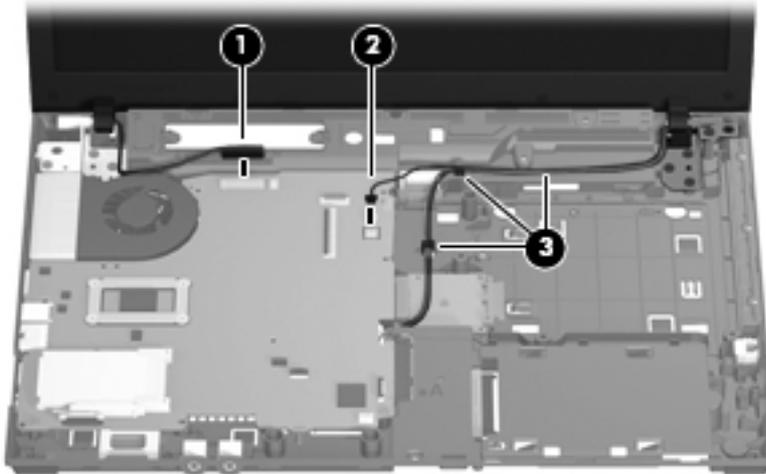

4. Remove eight Torx M2.5×6.0 screws (1) that secure the display to the base enclosure. Be careful of the grounding cable (2) that is secured by one of the hinge retaining screws.

5. Lift the display assembly (3) from the base enclosure.

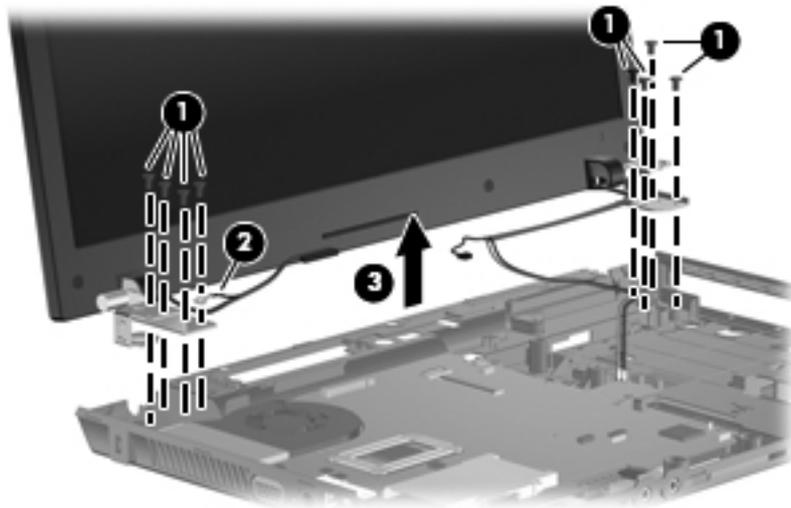


Remove the display on **35.6-cm** (14.0-in) and **33.8-cm** (13.3-in) computers:

1. Orient the computer in its normal position, face up with the display open as far as it will comfortably go.


△ **CAUTION:** Support the display assembly when removing the retaining screws. Failure to support the display assembly can result in damage to the display assembly and other computer components.

2. Disconnect the display cable (1) and the microphone cable (2) from the system board.
3. Release the WLAN cables from the cable run (3), being careful when pulling them through the opening near the hard drive.

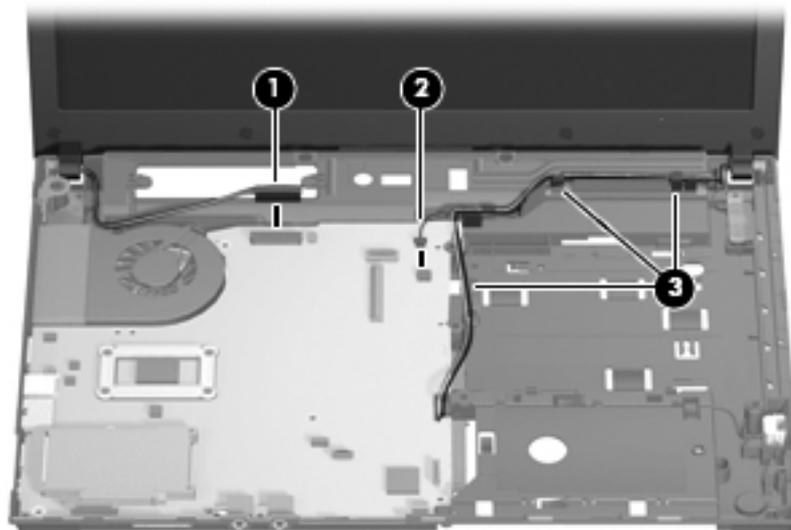


4. Remove four Torx M2.5×6.0 screws (1) that secure the display to the base enclosure. Be careful of the grounding cable (2) that is secured by one of the hinge retaining screws.

5. Lift the display assembly (3) from the base enclosure.

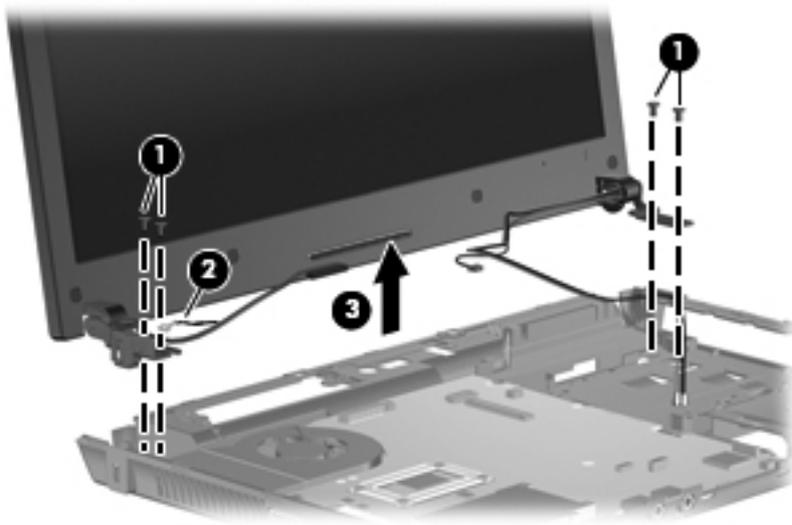


Remove the display assembly:

1. If it is necessary to replace the display bezel, display enclosure, or display hinges, remove the two mylar screw covers (1) and the 2 Phillips PM2.5×4.0 screws (2) that secure the display bezel to the display assembly. The screw covers for the 39.6-cm (15.6-in) computer are available in the Rubber Kit, spare part number 608931-001, and for the 35.6-cm (14.0-in) or 33.8-cm (13.3-in) computer are available in the Rubber Kit, spare part number 605789-001.

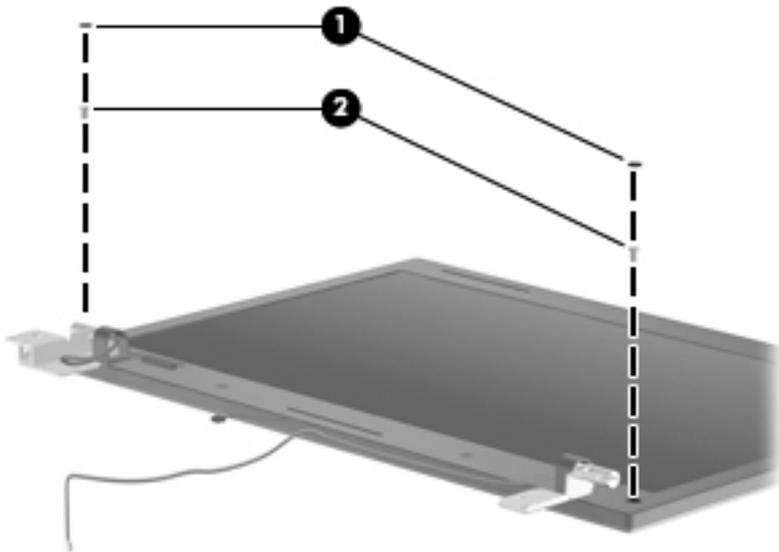


2. Starting at the top of the display, flex the bezel (1) and work around the periphery of the bezel (2) and (3) to release the bezel from the display enclosure .

3. Lift the bezel (4) from the display enclosure.

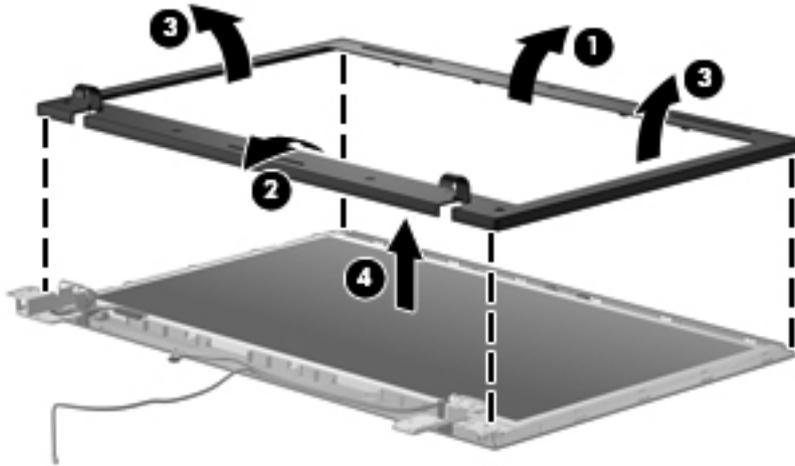


4. If it is necessary to replace the webcam module, disconnect the webcam cable from the module (1), and pull the webcam module (2) that is attached with adhesive off the display enclosure. The webcam module can be ordered by using spare part number 611026-001.

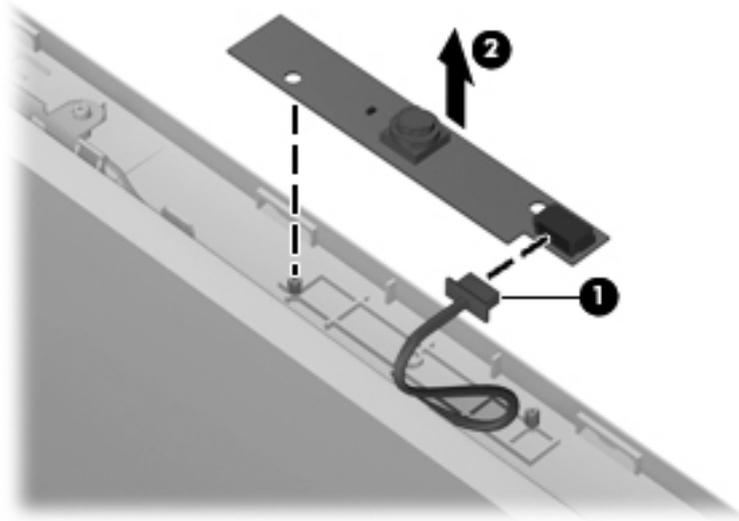

 **NOTE:** To replace the webcam module in the display enclosure, align the holes on the webcam module with the pins on the display enclosure and press onto the double-sided tape.


5. If it is necessary to replace the display hinges, remove the six Torx M2.5×6.0 screws (1) that secure the display panel to the display enclosure.

- Lift the display panel up and out the housing (2).

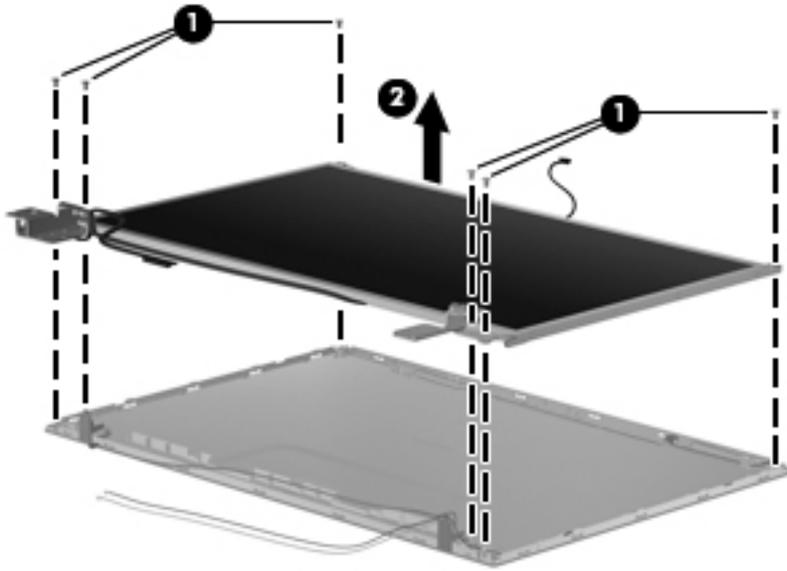

Remove the display hinges from a **39.6-cm** (15.6-in) computer:


- Remove the eight Phillips PM2.0×3.0 screws (1) that secure the display hinges to the display panel.
- Remove the display hinges (2) by pulling them away from the display panel. The left and right display hinges are available in the Hinge Kit, spare part number 605769-001.

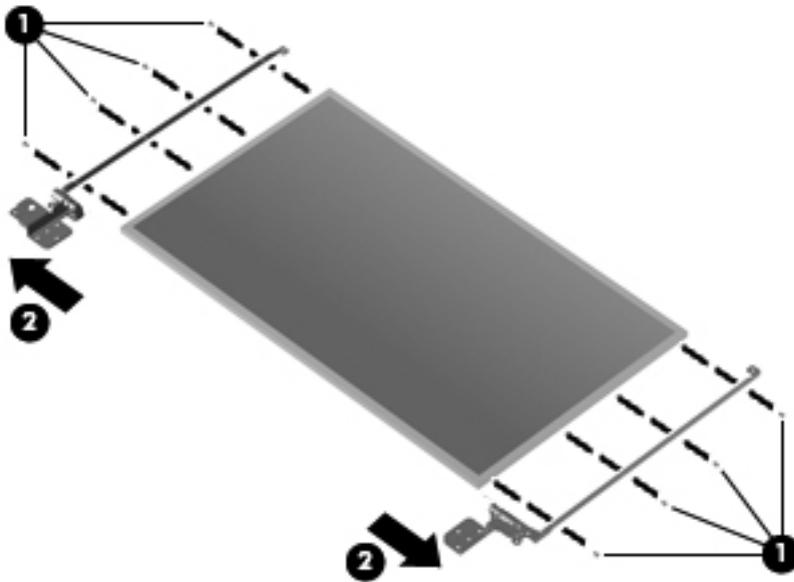

Remove the display hinges from **35.6-cm** (14.0-in) or **33.8-cm** (13.3-in) computers:


- Remove the six Phillips PM2.0×3.0 screws (1) that secure the display hinges to the display panel

2. Remove the display hinges **(2)** by pulling them away from the display panel. The left and right display hinges are available in the Hinge Kit, spare part number 605768-001..

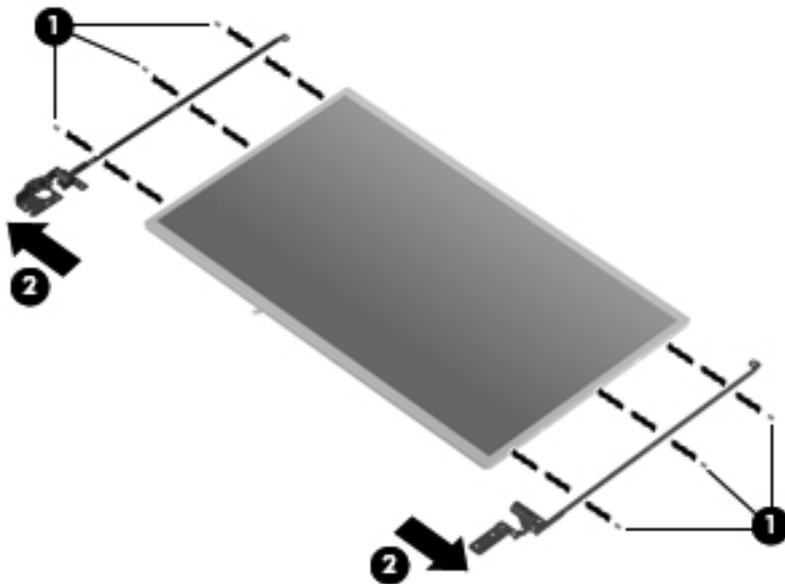

Remove the microphone:


1. Pull the microphone from its socket **(1)** on the display enclosure.
2. Remove the microphone cable from the raceway **(2)** in the display enclosure.

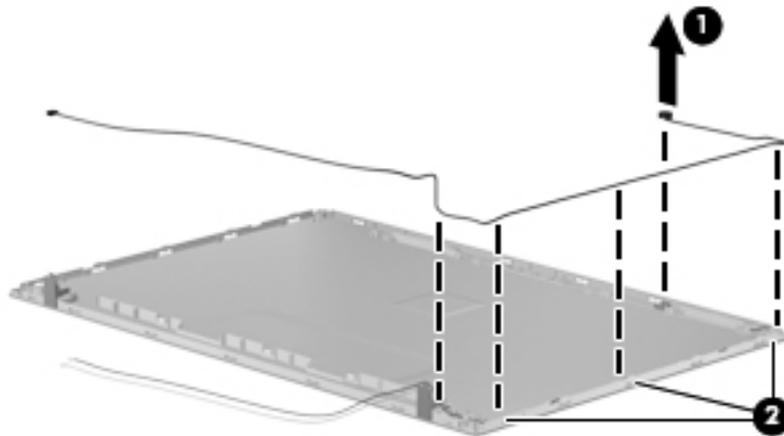

To remove the display cable assembly:


1. Place the display panel face down on a protected soft surface and remove the clear protector **(1)** that covers the cable connector on the back of the panel.

2. Remove the display cable (2) from the back of the display panel.

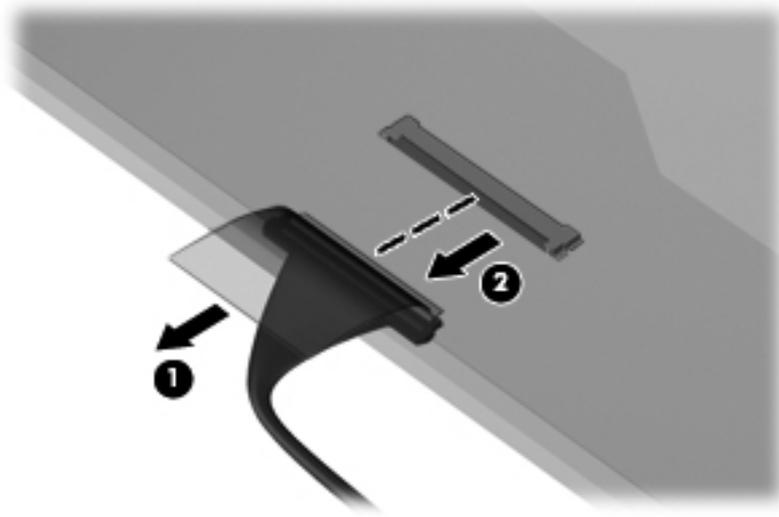

To remove the WLAN antennas:

1. Route the antenna cables (1) out of the routing channels in the inside of the display enclosure.
2. Peel the WLAN antenna receivers (2) from the enclosure

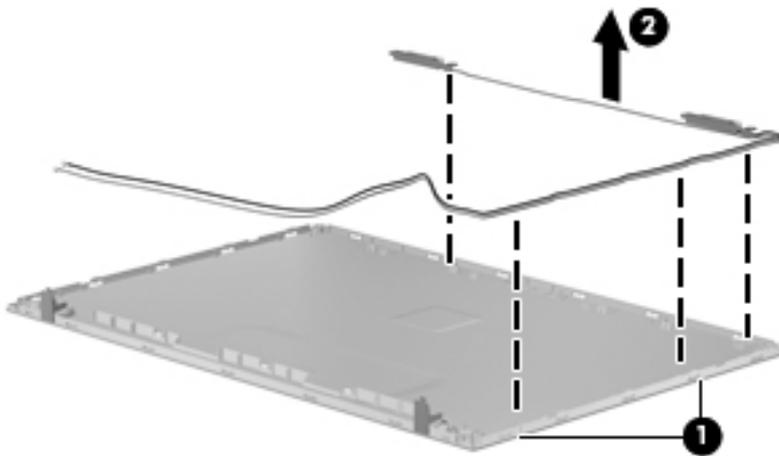

Reverse this procedure to assemble the display assembly.

System board

 **NOTE:** The system board spare part kit includes replacement thermal material.

| Description | Spare part number |
|---|-------------------|
| System board with UMA graphics and RTC battery with RS880M chipset | 611803-001 |
| System board with discrete graphics and RTC battery with RS880M chipset | 611802-001 |

Before removing the system board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).
6. Remove the hard drive (see [Hard drive on page 51](#)).
7. Remove the optical drive (see [Optical drive on page 57](#)).
8. Remove the fan (see [Fan on page 59](#)).
9. Remove the palm rest (see [Palm rest on page 64](#)).
10. Remove the keyboard (see [Keyboard on page 67](#)).
11. Remove the top cover (see [Top cover on page 71](#)).


When replacing the system board, be sure that the following components are removed from the defective system board and installed on the replacement system board:

- Memory module (see [Memory module on page 54](#))
- WLAN module (see [WLAN module on page 55](#))
- Modem module (see [Modem module on page 97](#))
- Heat sink (see [Heat sink on page 60](#))
- Processor (see [Processor on page 62](#))
- Audio board (see [Audio board on page 99](#))


Remove the system board on a **39.6-cm** (15.6-in) computer:

1. Position the computer with the front toward you.
2. Release the audio ZIF connector **(1)** and disconnect the cable **(2)** from the left edge of the system board.

3. Remove the two Phillips M2.0×3.0 screws (3) that secure the system board to the base enclosure.

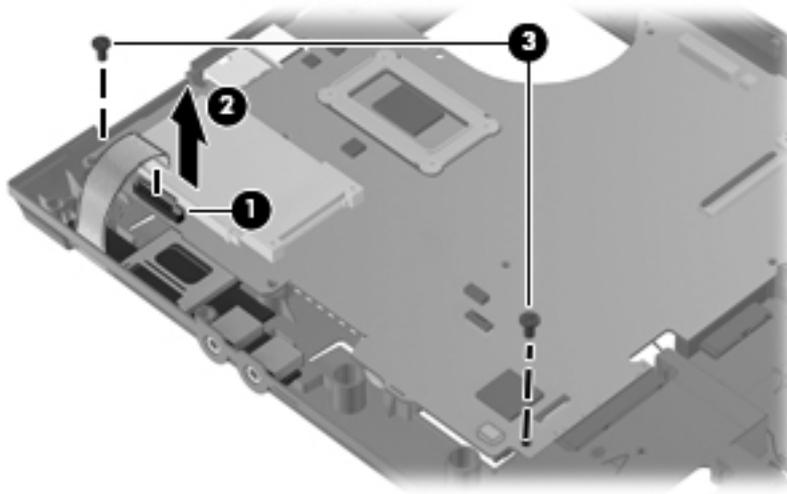


4. Remove the optical drive extender by first removing the Phillips PM2.0×3.0 screw (1) that secures the extender to the base enclosure.
5. Lift the system board slightly and then pull the extender straight out (2) from the system board.

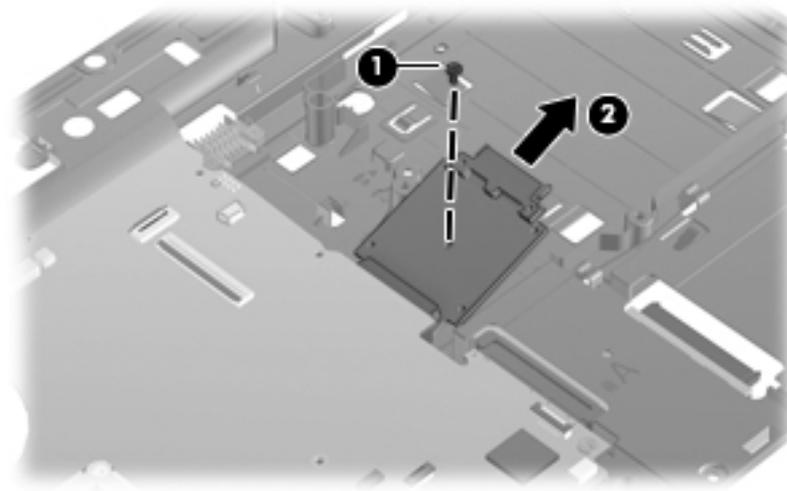


6. Remove the hard drive extender by first removing the Phillips PM2.0×3.0 screw (1) that secures the extender to the base enclosure.

7. Pull the extender out (2) of the system board and lift it from the base enclosure.

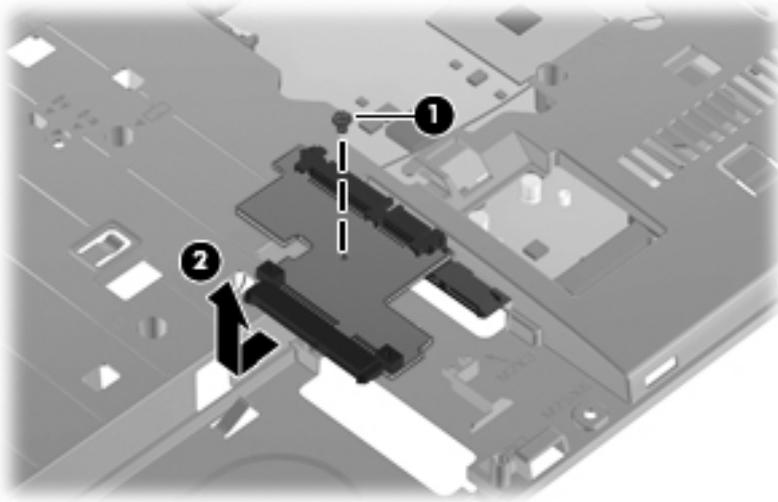


8. Release the RJ-11 cable from the cable routing area, lift the connector from the base enclosure (1), and disconnect the cable (2) from the system board.
9. Disconnect the main battery cable (3) from the bottom of the system board.
10. Lift the system board at an angle (4) and slide it (5) out of the base enclosure.

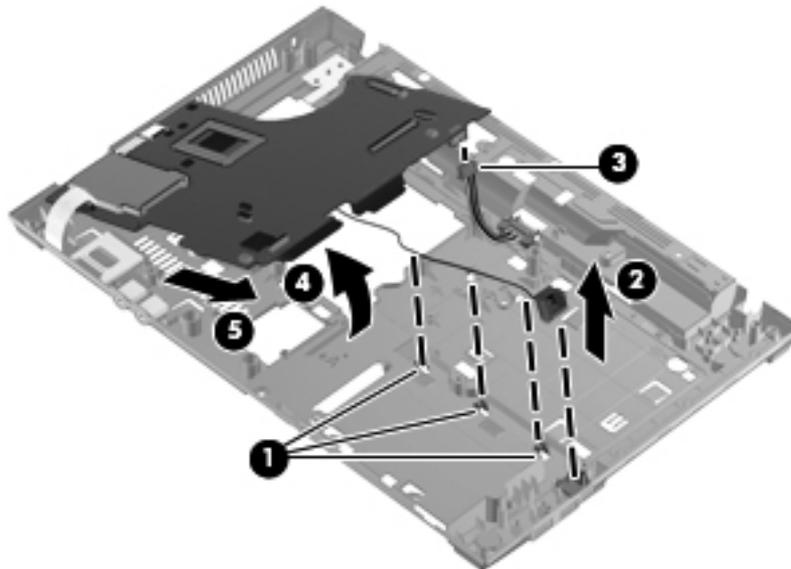

Remove the system board on **35.6-cm** (14.0-in) or **33.8-cm** (13.3-in) computers:

1. Position the computer with the front toward you.


2. Remove the Phillips PM2.0×3.0 screw (1) that secures the board to the base enclosure, disconnect the audio ZIF connector and remove the flat-ribbon cable (2) from the system board.

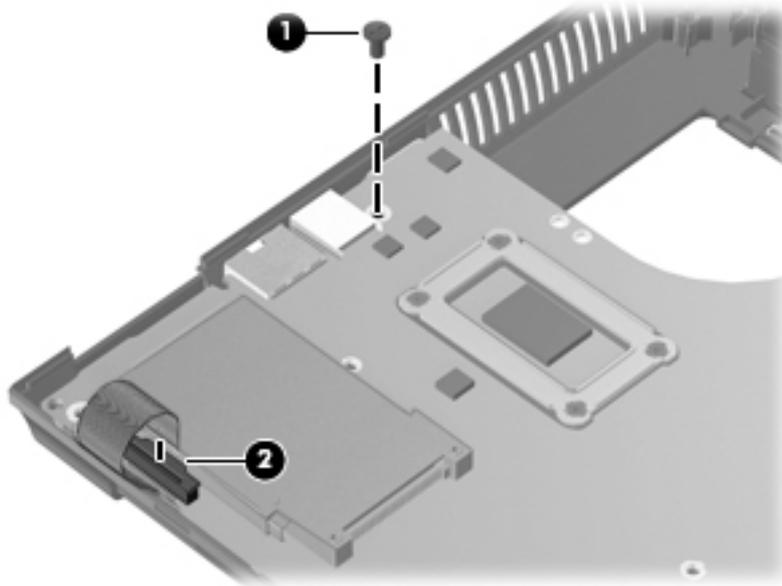

3. Remove the optical drive extender on the **35.6-cm** (14.0-in) computer by first removing the Phillips PM2.0×3.0 screw (1) that secures the extender to the base enclosure.


 **NOTE:** **33.8-cm** (13.3-in) computers do not use an optical drive extender.

4. Lift the system board slightly and then pull the extender straight out (2) from the system board.

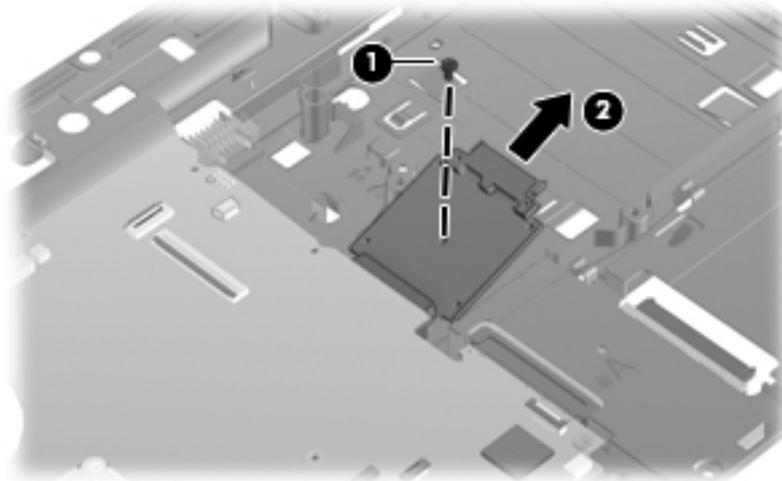

5. Release the RJ-11 cable from the cable routing area, lift the connector from the base enclosure (1), and disconnect the connector (2) from the system board.
6. Lift the system board at an angle (3) and disconnect the main battery cable (4) from the bottom of the board.

7. Slide the system board **(5)** out of the base enclosure.

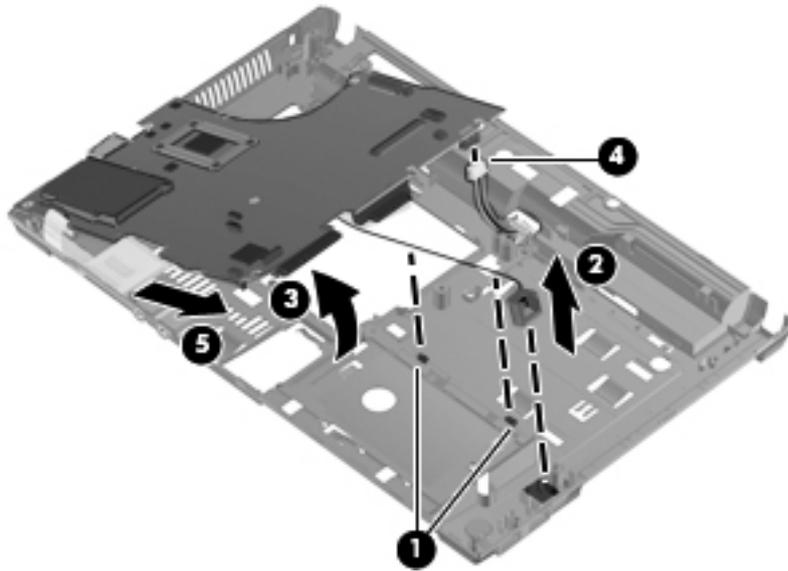

Reverse this procedure to install the system board.

Main battery connector

The main battery cable is included in Cable Kit 605793-001.


Before removing the main battery cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).
6. Remove the hard drive (see [Hard drive on page 51](#)).
7. Remove the optical drive (see [Optical drive on page 57](#)).
8. Remove the fan (see [Fan on page 59](#)).
9. Remove the palm rest (see [Palm rest on page 64](#)).
10. Remove the keyboard (see [Keyboard on page 67](#)).
11. Remove the top cover (see [Top cover on page 71](#)).
12. Remove the system board (see [System board on page 90](#)).

Remove the main battery cable:

1. Remove the two Phillips PM2.5×4.0 screws **(1)** that secure the connector to the base enclosure.

2. Lift the connector up **(2)** and out of the base enclosure.

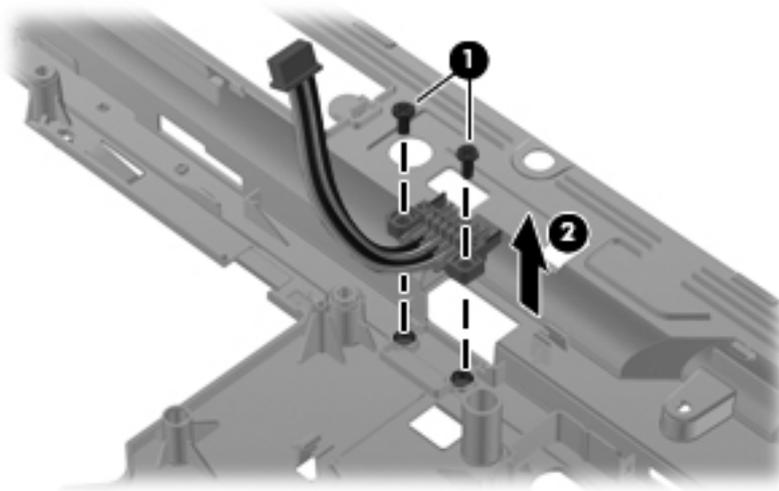

Reverse the procedure to install the main battery connector.

RTC battery


The spare part number for the RTC battery is 449137-001.

Before removing the RTC battery, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).
6. Remove the hard drive (see [Hard drive on page 51](#)).
7. Remove the optical drive (see [Optical drive on page 57](#)).
8. Remove the fan (see [Fan on page 59](#)).
9. Remove the palm rest (see [Palm rest on page 64](#)).
10. Remove the keyboard (see [Keyboard on page 67](#)).
11. Remove the top cover (see [Top cover on page 71](#)).
12. Remove the system board (see [System board on page 90](#)).

Remove the RTC battery:

1. Position the computer right-side up with the front toward you.
2. Release the RTC battery from the socket (1) on the system board and lift the battery (2) up.

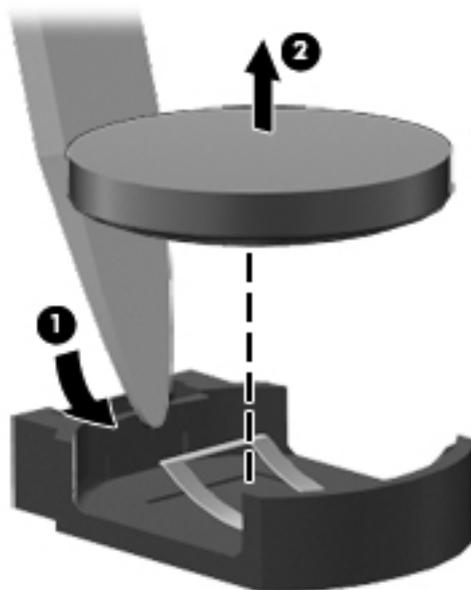

Reverse this procedure to install the RTC battery.

Modem module

| Description | Spare part number |
|---|-------------------|
| For use in all countries and regions except Australia and New Zealand | 510100-001 |
| For use only in Australia and New Zealand | 510100-011 |


Before removing the modem module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).
6. Remove the hard drive (see [Hard drive on page 51](#)).
7. Remove the optical drive (see [Optical drive on page 57](#)).
8. Remove the fan (see [Fan on page 59](#)).
9. Remove the palm rest (see [Palm rest on page 64](#)).
10. Remove the keyboard (see [Keyboard on page 67](#)).
11. Remove the top cover (see [Top cover on page 71](#)).
12. Remove the system board (see [System board on page 90](#)).


Remove the modem module:

1. Position the computer right-side up with the front toward you.
2. Remove the two Phillips PM2.5×3.0 screws (1) that secure the modem module to the system board.

3. Lift the modem module (2) straight up from the system board.

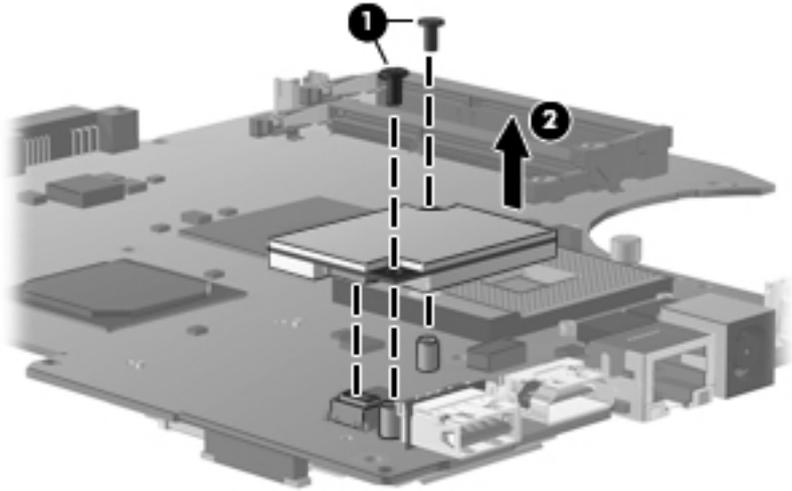

4. With the modem raised, disconnect the RJ-11 cable (1) from beneath the modem.
5. Remove the tape (2) that secures the cable to the system board and then, remove the cable (3).

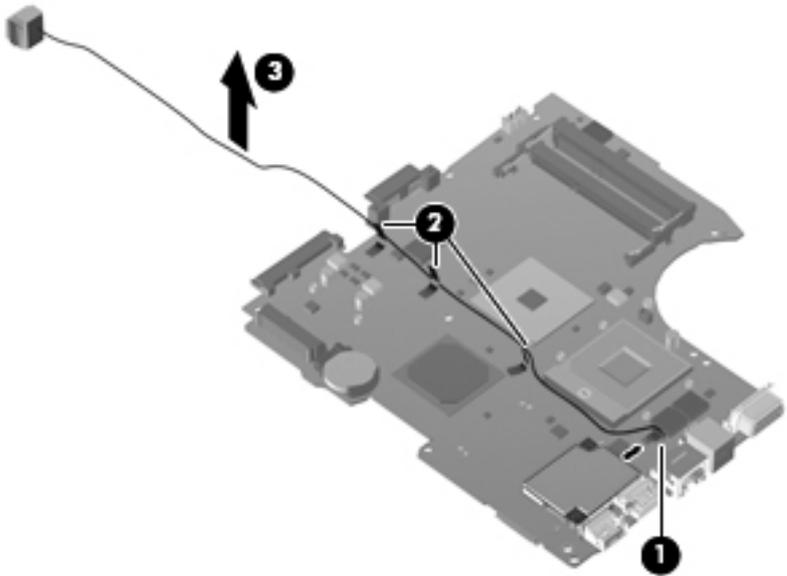

Reverse this procedure to install the modem module.

Audio board

| Description | Spare part numbers |
|--|--------------------|
| Audio board | 620608-001 |
| Audio board for use on system boards with UMA graphics subsystem | 622614-001 |


Before removing the audio board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 48](#)).
5. Remove the service door (see [Service door on page 49](#)).
6. Remove the hard drive (see [Hard drive on page 51](#)).
7. Remove the optical drive (see [Optical drive on page 57](#)).
8. Remove the fan (see [Fan on page 59](#)).
9. Remove the palm rest (see [Palm rest on page 64](#)).
10. Remove the keyboard (see [Keyboard on page 67](#)).
11. Remove the top cover (see [Top cover on page 71](#)).
12. Remove the system board (see [System board on page 90](#)).

Remove the audio board from **39.6-cm** (15.6-in) computers:


1. Position the computer right-side up with the front toward you.

2. Remove the Phillips PM2.0×3.0 screw (1) that secures the audio board to the base enclosure and then remove the audio board (2).

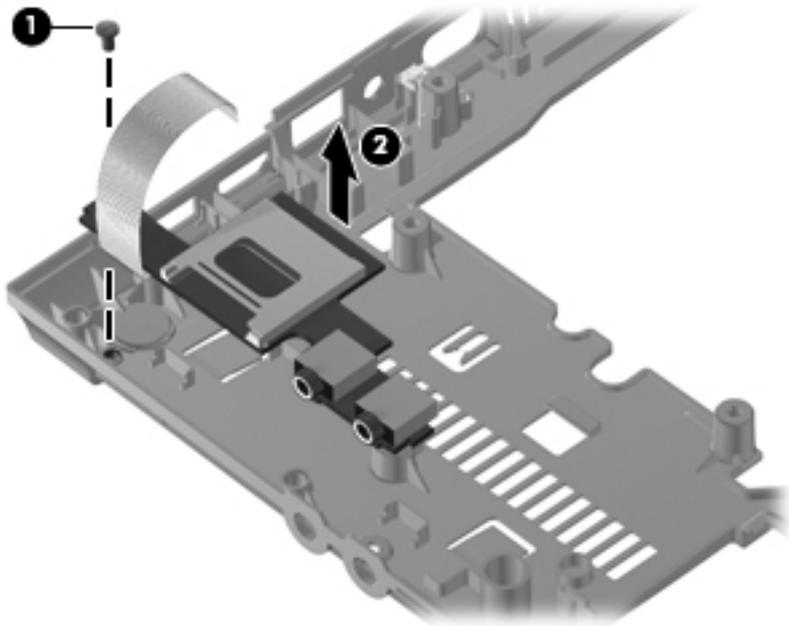

Remove the audio board from **35.6-cm** (14.0-in) and **33.8-cm** (13.3-in) computers:

1. Release the latch (1) that secures the board to the base enclosure.
2. Lift the audio board (2) from the base enclosure.

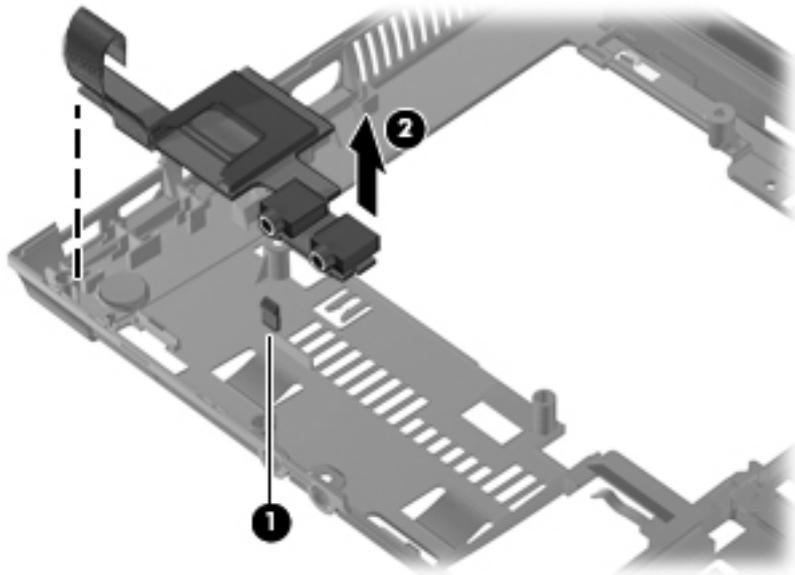

Reverse this procedure to install the audio board.

5 Computer Setup

Computer Setup in Windows

Starting Computer Setup

Computer Setup is a preinstalled, ROM-based utility that can be used even when the operating system is not working or will not load.

 **NOTE:** Some of the Computer Setup menu items listed in this guide may not be supported by your computer.

NOTE: An external keyboard or mouse connected to a USB port can be used with Computer Setup only if USB legacy support is enabled.

To start Computer Setup, follow these steps:

1. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
2. Press **f10** to enter BIOS Setup.

Using Computer Setup

Navigating and selecting in Computer Setup

The information and settings in Computer Setup are accessed from the File, Security, and System Configuration menus.

To navigate and select in Computer Setup, follow these steps:

1. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
 - To select a menu or a menu item, use the tab key and the keyboard arrow keys and then press **enter**, or use a pointing device to click the item.
 - To scroll up and down, click the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key.
 - To close open dialog boxes and return to the main Computer Setup screen, press **esc**, and then follow the on-screen instructions.

 **NOTE:** You can use either a pointing device (TouchPad, pointing stick, or USB mouse) or the keyboard to navigate and make selections in Computer Setup.

2. Press **f10** to enter BIOS Setup.
3. Select the **File**, **Security**, or **System Configuration** menu.

To exit Computer Setup menus, choose one of the following methods:

- To exit Computer Setup menus without saving your changes, click the **Exit** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the tab key and the arrow keys to select **File > Ignore Changes and Exit**, and then press **enter**.

– or –

- To save your changes and exit Computer Setup menus, click the **Save** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the tab key and the arrow keys to select **File > Save Changes and Exit**, and then press **enter**.

Your changes go into effect when the computer restarts.

Restoring factory settings in Computer Setup

 **NOTE:** Restoring defaults will not change the hard drive mode.

To return all settings in Computer Setup to the values that were set at the factory, follow these steps:

1. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
2. Press **f10** to enter BIOS Setup.
3. Use a pointing device or the arrow keys to select **File > Restore Defaults**.
4. Follow the on-screen instructions.
5. To save your changes and exit, click the **Save** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the arrow keys to select **File > Save Changes and Exit**, and then press **enter**.

Your changes go into effect when the computer restarts.

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

Computer Setup menus

The menu tables in this section provide an overview of Computer Setup options.



NOTE: Some of the Computer Setup menu items listed in this guide may not be supported by your computer.

File menu

| Select | To do this |
|--|---|
| System Information | <ul style="list-style-type: none">• View identification information for the computer and the batteries in the system.• View specification information for the processor, cache and memory size, system ROM, video revision, and keyboard controller version. |
| Set System Date and Time | Set or change the date and time on the computer. |
| System Diagnostics | Displays the following information: <ul style="list-style-type: none">• System information<ul style="list-style-type: none">◦ Identification information for the computer and the batteries in the system.◦ Specification information for the processor, cache and memory size, system ROM, video revision, and keyboard controller version.• Start-up Test—Verifies the system components needed for starting the computer.• Run-in Test—Runs a comprehensive check on system memory.• Hard Disk Test—Runs a comprehensive self-test on any hard drive in the system.• Memory Test—Runs a comprehensive test on any memory installed in the computer.• Battery Test—Runs a comprehensive test on any batteries installed in the computer.• Error Log—Displays a log file if any errors have occurred. |
| Restore defaults | Replace the configuration settings in Computer Setup with the original factory settings. (Hard drive mode, password settings, and security settings are not changed when you restore the factory settings.) |
| Reset BIOS security to factory default | Restore the BIOS security settings to the factory default. |
| Ignore Changes and Exit | Cancel any changes entered during the current session. Then exit and restart the computer. |
| Save Changes and Exit | Save any changes entered during the current session. Then exit and restart the computer. Your changes go into effect when the computer restarts. |

Security menu

 **NOTE:** Some of the menu items listed in this section may not be supported by your computer.

| Select | To do this |
|---|--|
| Setup BIOS Administrator Password | Set up a BIOS administrator password. |
| User Management > Create a New BIOS User Account (requires a BIOS administrator password) | <ul style="list-style-type: none">• Select from a list of BIOS users.• Select from a list of ProtectTools users. |
| Password Policy (requires a BIOS administrator password) | Revise password policy criteria. |
| HP SpareKey | Enable/disable HP SpareKey (enabled by default). |
| Always Prompt for HP SpareKey Enrollment | Enable/disable HP SpareKey enrollment (enabled by default). |
| Fingerprint Reset on Reboot (If Present) | Reset/clear the fingerprint reader ownership (select models only; disabled by default). |
| Change Password | Enter, change, or delete a BIOS administrator password. |
| HP SpareKey Enrollment | Enroll or reset HP SpareKey, which is a set of security questions and answers used if you forget your password. |
| Anti Theft > AT-p (select models only) | Enable/disable Anti-theft Protection. |
| DriveLock Passwords | <ul style="list-style-type: none">• Enable/disable DriveLock on any computer hard drive (enabled by default).• Change a DriveLock user password or master password. <p>NOTE: DriveLock settings are accessible only when you enter Computer Setup by turning on (not restarting) the computer.</p> |
| Automatic DriveLock | Enable/disable Automatic DriveLock support (disabled by default). |
| Disk Sanitizer | Run Disk Sanitizer to destroy all existing data on the primary hard drive or the drive in the upgrade bay. CAUTION: If you run Disk Sanitizer, the data on the selected drive is destroyed permanently. |
| System IDs | Enter a user-defined computer asset tracking number and ownership tag. |

System Configuration menu



NOTE: Some of the listed System Configuration options may not be supported by your computer.

| Select | To do this |
|-----------------------|---|
| Language | Change the Computer Setup language. |
| Boot Options | <ul style="list-style-type: none">• Set a Startup Menu delay (in seconds).• Set the MultiBoot Express Boot Popup delay in seconds.• Enable/disable custom logo (disabled by default).• Enable/disable display diagnostic URL (enabled by default).• Enable/disable CD-ROM boot (enabled by default).• Enable/disable SD Card boot (enabled by default).• Enable/disable floppy boot (enabled by default).• Enable/disable PXE Internal NIC boot (enabled by default).• Enable/Disable Unified Extensible Firmware Interface (UEFI) Boot Mode (disabled by default).• Set the legacy boot order. |
| Device Configurations | <ul style="list-style-type: none">• Enable/disable USB legacy support (enabled by default). When enabled, USB legacy support allows the following:<ul style="list-style-type: none">◦ Use of a USB keyboard in Computer Setup even when a Windows operating system is not running.◦ Startup from bootable USB devices, including a hard drive, diskette drive, or optical drive connected by a USB port to the computer.• Select a parallel port mode: ECP (Enhanced Capabilities Port), standard, bidirectional, or EPP (Enhanced Parallel Port).• Enable/disable fan always on while connected to an AC outlet (enabled by default).• Enable/disable Data Execution Prevention (select models only). When enabled, the processor can disable some virus code execution, which helps to improve computer security (enabled by default).• Select a SATA (Serial Advanced Technology Attachment) device mode. The following options are available:<ul style="list-style-type: none">◦ AHCI (Advanced Host Controller Interface)◦ IDE (Integrated Drive Electronics)◦ RAID (Redundant Array of Independent Disks) (select models only) |

| Select | To do this |
|--------|---|
| | <p data-bbox="893 210 1450 273">NOTE: Availability of these options above varies by computer model.</p> <ul data-bbox="845 294 1450 1001" style="list-style-type: none"><li data-bbox="845 294 1450 357">• Enable/disable secondary battery fast charge (enabled by default).<li data-bbox="845 378 1450 409">• Enable/disable HP QuickLook 2 (enabled by default).<li data-bbox="845 430 1450 493">• Enable/disable preboot authentication on HP QuickLock boot (enabled by default).<li data-bbox="845 514 1450 546">• Enable/disable HP QuickWeb (enabled by default).<li data-bbox="845 567 1450 630">• Enable/disable HP QuickWeb write protect (disabled by default).<li data-bbox="845 651 1450 714">• Enable/disable virtualization technology (select models only; disabled by default).<li data-bbox="845 735 1450 798">• Enable/disable Intel TXT (Trust Execution Technology) (select models only; disabled by default).<li data-bbox="845 819 1450 850">• Enable/disable Multi Core CPU (enabled by default).<li data-bbox="845 871 1450 903">• Enable/disable Intel HT technology (enabled by default).<li data-bbox="845 924 1450 955">• Enable/disable wake on USB (enabled by default).<li data-bbox="845 976 1450 1039">• Enable/disable Num lock state at boot (disabled by default). |

| Select | To do this |
|-------------------------|---|
| Built-In Device Options | <ul style="list-style-type: none">• Enable/disable the wireless button state (enabled by default).• Enable/disable embedded WWAN device (select models only; enabled by default).• Enable/disable embedded WLAN device (enabled by default).• Enable/disable embedded Bluetooth® device radio (enabled by default).• Enable/disable the network interface controller (LAN) (enabled by default).• Enable/disable LAN/WLAN device (disabled by default).• Set the wake on LAN state. Options include the following:<ul style="list-style-type: none">◦ Disabled◦ Boot to Network (set by default)◦ Follow Boot Order• Enable/disable the ambient light sensor (enabled by default).• Enable/disable the notebook upgrade bay device (enabled by default).• Enable/disable the fingerprint device (enabled by default).• Enable/disable the integrated camera (enabled by default).• Enable/disable the power monitor circuit (enabled by default).• Enable/disable the audio device (enabled by default).• Enable/disable a modem device (enabled by default).• Enable/disable the microphone (enabled by default).• Enable/disable the internal speakers (enabled by default). |

| Select | To do this |
|----------------------------------|--|
| Port Options | <p>NOTE: All port options are enabled by default.</p> <ul style="list-style-type: none"> • Enable/disable the serial port (select models only). • Enable/disable the parallel port (select models only). • Enable/disable the flash media reader. • Enable/disable the USB port. <p>CAUTION: Disabling the USB port also disables MultiBay devices and ExpressCard devices on the advanced port replicator.</p> <ul style="list-style-type: none"> • Enable/disable the 1394 port (select models only). • Enable/disable the ExpressCard slot (select models only). • Enable/disable the eSATA port (select models only). |
| AMT Options (select models only) | <p>NOTE: All AMT options are disabled by default.</p> <ul style="list-style-type: none"> • Enable/disable firmware verbosity. • Enable/disable AMT setup prompt (Ctrl-P) • Enable/disable USB key provisioning support. • Enable/disable unconfigure AMT on next boot. • Select terminal emulation mode. Options include the following: <ul style="list-style-type: none"> ◦ ANSI (default setting) ◦ VT100 • Enable/disable firmware progress event support. • Enable/disable initiate Intel CIRA. |
| Set Security Level | Change, view, or hide security levels for all BIOS menu items. |
| Restore Security Defaults | Restore the default security settings. |

Computer Setup in Linux

Starting Computer Setup

Computer Setup is a preinstalled, ROM-based utility that can be used even when the operating system is not working or will not load.

 **NOTE:** Some of the Computer Setup menu items listed in this guide may not be supported by your computer or your operating system.

NOTE: Pointing devices are not supported in Computer Setup. You must use the keyboard to navigate and make selections.

NOTE: An external keyboard connected by USB can be used with Computer Setup only if USB legacy support is enabled.

To start Computer Setup, follow these steps:

1. Turn on or restart the computer.
2. Before your operating system opens and while the “F10=ROM Based Setup” message is displayed in the lower-left corner of the screen, press **f10**.

Using Computer Setup

Navigating and selecting in Computer Setup

The information and settings in Computer Setup are accessed from the File, Security, and System Configuration menus.

1. Open Computer Setup by turning on or restarting the computer, and then pressing **f10** while the "F10 = ROM Based Setup" message is displayed in the lower-left corner of the screen.

Because Computer Setup is not operating system based, it does not support the TouchPad. Navigation and selection are by keystroke:

- To choose a menu or a menu item, use the arrow keys.
 - To select an item, press **enter**.
 - To close open dialog boxes and return to the main Computer Setup screen, press **esc**.
 - To view navigation information, press **f1**.
 - To change the language, press **f2**.
2. Select the **File, Security, System Configuration** menu.
 3. To exit Computer Setup, choose one of the following methods:
 - To exit Computer Setup without saving your preferences, use the arrow keys to select **File > Ignore Changes And Exit**. Then follow the instructions on the screen.
 - To save your preferences and exit Computer Setup, use the arrow keys to select **File > Save Changes And Exit**. Then follow the instructions on the screen.

Your preferences go into effect when the computer restarts.

Restoring factory settings in Computer Setup

To return all settings in Computer Setup to the values that were set at the factory, follow these steps:

1. Open Computer Setup by turning on or restarting the computer, and then pressing **f10** while the "F10 = ROM Based Setup" message is displayed in the lower-left corner of the screen.
2. Use the arrow keys to select **File > Restore Defaults**, and then press **enter**.
3. When the confirmation dialog box opens, press **f10**.
4. To save your preferences and exit Computer Setup, use the arrow keys to select **File > Save Changes And Exit**. Then follow the instructions on the screen.

Your preferences go into effect when the computer restarts.

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

Computer Setup menus

The menu tables in this section provide an overview of Computer Setup options.

 **NOTE:** Some of the Computer Setup menu items listed in this section may not be supported by your computer or your operating system.

File menu

 **NOTE:** Some of the menu items listed in this section may not be supported by your computer or your operating system.

| Select | To do this |
|-------------------------|--|
| System information | <ul style="list-style-type: none">• View identification information for the computer.• View specification information for the processor, cache and memory size, and system ROM. |
| Restore Defaults | Replace the configuration settings in Computer Setup with the original factory settings. (Password settings and security settings are not changed when you restore the factory settings.) |
| Ignore Changes And Exit | Cancel any changes entered during the current session. Then exit and restart the computer. |
| Save Changes And Exit | Save any changes entered during the current session. Then exit and restart the computer. Your changes go into effect when the computer restarts. |

Security menu

 **NOTE:** Some of the menu items listed in this section may not be supported by your computer or your operating system.

| Select | To do this |
|---------------------|--|
| Setup Password | Enter, change, or delete a setup password. |
| Password Options | <ul style="list-style-type: none">• Enable/disable stringent security.• Enable/disable the password requirement on computer restart. |
| DriveLock Passwords | <ul style="list-style-type: none">• Enable/disable DriveLock on any computer hard drive.• Enter, change, or disable DriveLock on an optional MultiBay hard drive. <p>NOTE: DriveLock settings are accessible only when you enter Computer Setup by turning on (not restarting) the computer.</p> |
| System IDs | Enter a user-defined computer asset tracking number and ownership tag. |
| Disk Sanitizer | Run Disk Sanitizer to destroy all existing data on the primary hard drive. The following options are available: <ul style="list-style-type: none">• Fast: Runs the Disk Sanitizer erase cycle once.• Optimum: Runs the Disk Sanitizer erase cycle 3 times.• Custom: Allows you to select the desired number of Disk Sanitizer erase cycles from a list. <p>CAUTION: If you run Disk Sanitizer, the data on the primary hard drive is destroyed permanently.</p> |

Diagnostics menu

 **NOTE:** Some of the menu items listed in this section may not be supported by your computer or your operating system.

| Select | To do this |
|-----------------------|---|
| HDD Self-Test Options | Run a comprehensive self-test on any hard drive in the system or on any optional MultiBay hard drive. |
| Memory Check | Run a comprehensive check on system memory. |

System Configuration menu

 **NOTE:** Some of the menu items listed in this section may not be supported by your computer or your operating system.

| Select | To do this |
|-----------------------|---|
| Language | Change the Computer Setup language. |
| Boot options | <ul style="list-style-type: none">• Set an f9, f10, and f12 delay when starting up.• Enable/disable CD-ROM boot.• Enable/disable floppy boot.• Enable/disable internal network adapter boot.• Enable/disable MultiBoot, which sets a boot order that can include most boot devices in the system.• Set the Express Boot Popup delay in seconds.• Set the boot order.<ul style="list-style-type: none">◦ 1st boot device: USB CD-ROM◦ 2nd boot device: USB floppy◦ 3rd boot device: USB SuperDisk◦ 4th boot device: Notebook hard drive◦ 5th boot device: USB hard disk◦ 6th boot device: Network controller |
| Device Configurations | <ul style="list-style-type: none">• Swap the functions of the fn key and left ctrl key.• Enable/disable USB legacy support. When enabled, USB legacy support allows the following:<ul style="list-style-type: none">◦ Use of a USB keyboard in Computer Setup even when a your operating system is not running.◦ Startup from bootable USB devices, including a hard drive, diskette drive, or optical drive connected by a USB port to the computer.• Enable/disable BIOS DMA data transfers.• Enable/disable fan always on while connected to an AC outlet.• Enable/disable data execution prevention.• Enable/disable LAN power saving mode.• Enable/disable SATA Native Mode.• Enable/disable Dual Core CPU.• Enable/disable HDD translation mode. |

| Select | To do this |
|-------------------------|---|
| Built-in device options | <ul style="list-style-type: none"><li data-bbox="855 218 1358 245">• Enable/disable embedded WLAN Device Radio.<li data-bbox="855 268 1390 296">• Enable/disable embedded Bluetooth Device Radio.<li data-bbox="855 319 1374 346">• Enable/disable Network Interface Controller (NIC)<li data-bbox="855 369 1262 396">• Enable/disable LAN/WLAN Switching.<li data-bbox="855 420 1182 447">• Enable/disable Wake on LAN.<li data-bbox="855 470 1358 497">• Enable/disable the integrated camera (webcam) |
| Port options | <ul style="list-style-type: none"><li data-bbox="855 520 1134 548">• Enable/disable USB port.<li data-bbox="855 571 1214 598">• Enable/disable ExpressCard slot. |

6 Specifications

Computer specifications

| | Metric | U.S. |
|---|---------------------------|-----------------|
| Dimensions – 39.6-cm (15.6-in) | | |
| Depth | 24.96 cm | 9.83 in |
| Width | 37.18 cm | 14.6 in |
| Height (front to rear) | 2.75 to 3.55 cm | 1.09 to 1.40 in |
| Dimensions – 35.6-cm (14.0-in) | | |
| Depth | 22.8 cm | 8.98 in |
| Width | 32.3 cm | 12.67 in |
| Height (front to rear) | 2.68 to 3.48 cm | 1.06 to 1.38 in |
| Dimensions – 33.8-cm (13.3-in) | | |
| Depth | 22.8 cm | 8.98 in |
| Width | 32.3 cm | 12.67 in |
| Height (front to rear) | 2.68 to 3.48 cm | 1.06 to 1.38 in |
| Weight – 39.6-cm (15.6-in) (equipped with optical drive, WXGA display assembly, 1 memory module, hard drive, and 9-cell battery) | < 2.59 kg | < 5.70 lbs |
| Weight – 35.6-cm (14.0-in) (equipped with optical drive, WXGA display assembly, 1 memory module, hard drive, and 6-cell battery) | < 2.26 kg | < 5.00 lbs |
| Weight – 33.8-cm (13.3-in) (equipped with optical drive, WXGA display assembly, 1 memory module, hard drive, and 6-cell battery) | 2.04 kg | 4.5 lbs |
| Input power | | |
| Operating voltage | 18.5 V dc @ 4.74 A – 90 W | |
| Operating current | 4.74 A | |
| Temperature | | |
| Operating (not writing to optical disc) | 0°C to 35°C | 32°F to 95°F |
| Operating (writing to optical disc) | 5°C to 35°C | 41°F to 95°F |
| Nonoperating | -20°C to 60°C | -4°F to 140°F |

| | Metric | U.S. |
|---|---|---------------------|
| Relative humidity | | |
| Operating | 10% to 90% | |
| Nonoperating | 5% to 95% | |
| Maximum altitude (unpressurized) | | |
| Operating | -15 m to 3,048 m | -50 ft to 10,000 ft |
| Nonoperating | -15 m to 12,192 m | -50 ft to 40,000 ft |
| Shock | | |
| Operating | 125 g, 2 ms, half-sine | |
| Nonoperating | 200 g, 2 ms, half-sine | |
| Random vibration | | |
| Operating | 0.75 g zero-to-peak, 10 Hz to 500 Hz, 0.25 oct/min sweep rate | |
| Nonoperating | 1.50 g zero-to-peak, 10 Hz to 500 Hz, 0.5 oct/min sweep rate | |
| NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The computer operates well within this range of temperatures. | | |

39.6-cm (15.6-in) display specifications

| | Metric | U.S. |
|--------------------------------|---|---------|
| Dimensions | | |
| Height | 19.35 cm | 7.6 in |
| Width | 34.42 cm | 13.5 in |
| Diagonal | 39.49 cm | 15.6 in |
| Number of colors | 262,000 | |
| Contrast ratio | 500:1 (typical BrightView), 400:1 (typical AntiGlare) | |
| Brightness | 200 nits (typical) | |
| Pixel resolution | | |
| Format | 1366 × 768 | |
| Configuration | RGB | |
| Backlight | LED | |
| Response Time | 16 ms | |
| Total power consumption | 5.6 W (max) | |
| Viewing angle @CR>10 | 5 VA | |

35.6-cm (14.0-in) display specifications

| | Metric | U.S. |
|---------------------------------|--|-------------|
| Dimensions | | |
| Height | 17.40 cm | 6.9 in |
| Width | 30.94 cm | 12.2 in |
| Diagonal | 35.50 cm | 14.0 in |
| Number of colors | 262,000 | |
| Contrast ratio | 500:1 (min BrightView), 400:1 (min AntiGlare)) | |
| Brightness | 200 nits (typical) | |
| Pixel resolution | | |
| Format | 1366 × 768 | |
| Configuration | RGB | |
| Backlight | LED | |
| Response Time | 8 ms (typ) | |
| Total power consumption | 3.8 W (max) | |
| Viewing angle @ CR>10 | SVA | |

33.8-cm (13.3-in) display specifications

| | Metric | U.S. |
|---------------------------------|--|-------------|
| Dimensions | | |
| Height | 16.50 cm | 6.5 in |
| Width | 29.34 cm | 11.5 in |
| Diagonal | 33.66 cm | 13.3 in |
| Number of colors | 262,000 | |
| Contrast ratio | 500:1 (min BrightView), 400:1 (min AntiGlare)) | |
| Brightness | 200 nits (typical) | |
| Pixel resolution | | |
| Format | 1366 × 768 | |
| Configuration | RGB | |
| Backlight | LED | |
| Response Time | 8 ms (typ) | |
| Total power consumption | 4.5 W (max) | |
| Viewing angle @ CR>10 | SVA | |

Hard drive specifications

| | 500-GB* | 320-GB* | 250-GB* | 160-GB* |
|---|--------------------------------|--------------------------------|--------------------------------|--------------------------------|
| Dimensions | | | | |
| Height | 9.5 mm | 9.5 mm | 9.5 mm | 9.5 mm |
| Width | 70 mm | 70 mm | 70 mm | 70 mm |
| Weight | 101 g | 101 g | 101 g | 101 g |
| Interface type | SATA | SATA | SATA | SATA |
| Transfer rate | 100 MB/sec | 100 MB/sec | 100 MB/sec | 100 MB/sec |
| Security | ATA security | ATA security | ATA security | ATA security |
| Seek times (typical read, including setting) | | | | |
| Single track | 3 ms | 3 ms | 3 ms | 3 ms |
| Average | 13 ms | 13 ms | 13 ms | 13 ms |
| Maximum | 24 ms | 24 ms | 24 ms | 24 ms |
| Logical blocks | 1,048,576,000 | 625,141,400 | 488,376,280 | 312,560,640 |
| Disc rotational speed | 5400 rpm | 5400 rpm | 7200 and 5400 rpm | 7200 and 5400 rpm |
| Operating temperature | 5°C to 55°C (41°F to 131°F) |

*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications may differ slightly.

NOTE: Certain restrictions and exclusions apply. Contact technical support for details.

DVD-ROM Drive specifications

| | | |
|---------------------------|---|------------|
| Applicable disc | DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18, CD-ROM (Mode 1 and 2), CD Digital Audio, CD-XA ready (Mode 2, Form 1 and Form 2), CD-I (Mode 2, Form 1 and Form 2), CD-R, CD-RW, Photo CD (single and multisession), CD-Bridge | |
| Access time | CD | DVD |
| Random | < 100 ms | < 125 ms |
| Cache buffer | 512 KB | |
| Data transfer rate | | |
| CD-R (24X) | 3600 KB/s (150 KB/s at 1X CD rate) | |
| CD-RW (10X) | 1500 KB/s (150 KB/s at 1X CD rate) | |
| CD-ROM (24X) | 3600 KB/s (150 KB/s at 1X CD rate) | |
| DVD (8X) | 10,800 KB/s (1,352 KB/s at 1X DVD rate) | |
| Multiword DMA mode 2 | 16.6 MB/s | |

DVD±RW Double-Layer Combo Drive specifications

| Applicable disc | Read: | Write: |
|---------------------------|--|---|
| | CD-DA, CD+(E)G, CD-MIDI, CD-TEXT, CD-ROM, CD-ROM XA, MIXED MODE CD, CD-I, CD-I Bridge (Photo-CD, Video CD), Multisession CD (Photo-CD, CD-EXTRA, Portfolio, CD-R, CD-RW), CD-R, CD-RW, DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18), DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-RAM | CD-R and CD-RW DVD+R, DVD+RW, DVD-R, DVD-RW, DVD-RAM |
| Access time | CD | DVD |
| Random | < 175 ms | < 230 ms |
| Cache buffer | 2 MB | |
| Data transfer rate | | |
| 24X CD-ROM | 3,600 KB/sec | |
| 8X DVD-ROM | 10,800 KB/sec | |
| 24X CD-R | 3,600 KB/sec | |
| 16X CD-RW | 2,400 KB/sec | |
| 8X DVD+R | 10,800 KB/sec | |
| 4X DVD+RW | 5,400 KB/sec | |
| 8X DVD-R | 10,800 KB/sec | |
| 4X DVD-RW | 5,400 KB/sec | |
| 2.4X DVD+R(9) | 2,700 KB/sec | |
| 5X DVD-RAM | 6,750 KB/sec | |
| Transfer mode | Multiword DMA Mode | |

7 Backup and recovery

Backup and recovery in Windows 7

Overview

To protect your information, use Windows Backup and Restore to back up individual files and folders, back up your entire hard drive (select models only), create system repair discs (select models only), or create system restore points. In case of system failure, you can use the backup files to restore the contents of your computer.

Backup and Restore provides the following options:

- Creating a system repair disc (select models only)
- Backing up individual files and folders
- Creating a system image (select models only)
- Scheduling automatic backups (select models only)
- Creating system restore points
- Recovering individual files
- Restoring the computer to a previous state
- Recovering information using recovery tools

 **NOTE:** For detailed instructions, perform a search for these topics in Help and Support.

NOTE: In case of system instability, HP recommends that you print the recovery procedures and save them for later use.

Backing up your information

Recovery after a system failure is as complete as your most current backup. You should create system repair discs (select models only) and your initial backup immediately after software setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup. The system repair discs (select models only) are used to start up (boot) the computer and repair the operating system in case of system instability or failure. Your initial and subsequent backups allow you to restore your data and settings if a failure occurs.

You can back up your information to an optional external hard drive, a network drive, or discs.

Note the following when backing up:

- Store personal files in the Documents folder, and back it up regularly.
- Back up templates that are stored in their associated programs.
- Save customized settings that appear in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time-saver if you have to reset your preferences.

To create a screen shot:

1. Display the screen you want to save.
2. Copy the screen image:

To copy only the active window, press **alt+fn+prt sc**.

To copy the entire screen, press **fn+prt sc**.

3. Open a word-processing document, and then select **Edit > Paste**.

The screen image is added to the document.

4. Save the document.

- When backing up to discs, use any of the following types of discs (purchased separately): CD-R, CD-RW, DVD+R, DVD+R DL, DVD-R, DVD-R DL, or DVD±RW. The discs you use will depend on the type of optical drive installed in your computer.

 **NOTE:** DVDs and DVDs with double-layer (DL) support store more information than CDs, so using them for backup reduces the number of recovery discs required.

- When backing up to discs, number each disc before inserting it into the optical drive of the computer.

To create a backup using Backup and Restore , follow these steps:

 **NOTE:** Be sure that the computer is connected to AC power before you start the backup process.

NOTE: The backup process may take over an hour, depending on file size and the speed of the computer.

1. Select **Start > All Programs > Maintenance > Backup and Restore**.
2. Follow the on-screen instructions to set up your backup, create a system image (select models only), or create a system repair disc (select models only).

 **NOTE:** Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

Performing a recovery

In case of system failure or instability, the computer provides the following tools to recover your files:

- Windows recovery tools: You can use the Backup and Restore to recover information you have previously backed up. You can also use Windows Startup Repair to fix problems that might prevent Windows from starting correctly.
- **f11** recovery tools: You can use the **f11** recovery tools to recover your original hard drive image. The image includes the Windows operating system and software programs installed at the factory.

 **NOTE:** If you are unable to boot (start up) your computer and you cannot use the system repair discs you previously created (select models only), you must purchase a Windows 7 operating system DVD to reboot the computer and repair the operating system. For additional information, refer to the “Using a Windows 7 operating system DVD (purchased separately)” section in this guide.

Using the Windows recovery tools

To recover information you previously backed up, follow these steps:

1. Click **Start > All Programs > Maintenance > Backup and Restore**.
2. Follow the on-screen instructions to recover your entire computer (select models only) or your files.

 **NOTE:** Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

To recover your information using Startup Repair, follow these steps:

 **CAUTION:** Using Startup Repair completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process restores the operating system, as well as the drivers, software, and utilities from the backup used for recovery.

1. If possible, back up all personal files.
2. If possible, check for the presence of the Windows partition and the HP Recovery partition.

To check for the Windows partition, select **Start > Computer**.

To check for the HP Recovery partition, select **Start**, right-click **Computer**, click **Manage**, and then click **Disk Management**.

 **NOTE:** If the Windows partition and the HP Recovery partition are not listed, you must recover your operating system and programs using the Windows 7 operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to the “Using a Windows 7 operating system DVD (purchased separately)” section in this guide.

3. If the Windows partition and the HP Recovery partition are listed, restart the computer, and then press **f8** before the Windows operating system loads.
4. Select **Repair your computer**.
5. Follow the on-screen instructions.

 **NOTE:** For additional information on recovering information using the Windows tools, perform a search for these topics in Help and Support.

Using f11

△ **CAUTION:** Using **f11** completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The **f11** recovery tool reinstalls the operating system and HP programs and drivers that were installed at the factory. Software not installed at the factory must be reinstalled.

To recover the original hard drive image using **f11**, follow these steps:

1. If possible, back up all personal files.
2. If possible, check for the presence of the HP Recovery partition: Select **Start**, right-click **Computer**, click **Manage**, then click **Disk Management**.

 **NOTE:** If the HP Recovery partition is not listed, you must recover your operating system and programs using the Windows 7 operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to the “Using a Windows 7 operating system DVD (purchased separately)” section in this guide.

3. If the HP Recovery partition is listed, restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
4. Press **f11** to enter HP Recovery.
5. Follow the on-screen instructions.

Using a Windows 7 operating system DVD (purchased separately)

If you are unable to boot (start up) your computer and you cannot use the system repair discs you previously created (select models only), you must purchase a Windows 7 operating system DVD to reboot the computer and repair the operating system. Make sure that your most recent backup (stored on discs or on an external drive) is easily accessible. To order a Windows 7 operating system DVD, go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions. You can also order the DVD by calling technical support. For contact information, refer to the *Worldwide Telephone Numbers* booklet included with the computer.

△ **CAUTION:** Using a Windows 7 operating system DVD completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process helps you restore the operating system, as well as drivers, software, and utilities.

To initiate recovery using a Windows 7 operating system DVD, follow these steps:

 **NOTE:** This process takes several minutes.

1. If possible, back up all personal files.
2. Restart the computer, and then insert the Windows 7 operating system DVD into the optical drive before the Windows operating system loads.
3. When prompted, press any keyboard key.
4. Follow the on-screen instructions.
5. Click **Next**.

6. Select **Repair your computer**.
7. Follow the on-screen instructions.

Backup and recovery in Windows Vista

Overview

To protect your information, use Backup and Restore to back up individual files and folders, back up your entire hard drive (select models only), or create system restore points. In case of system failure, you can use the backup files to restore the contents of your computer.

Backup and Restore provides the following options:

- Backing up individual files and folders
- Backing up the entire hard drive (select models only)
- Scheduling automatic backups (select models only)
- Creating system restore points
- Recovering individual files
- Restoring the computer to a previous state
- Recovering information using recovery tools

 **NOTE:** For detailed instructions, perform a search for these topics in Help and Support.

NOTE: In case of system instability, HP recommends that you print the recovery procedures and save them for later use.

Backing up your information

Recovery after a system failure is as complete as your most current backup. You should create your initial backup immediately after software setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

You can back up your information to an optional external hard drive, a network drive, or discs.

Note the following when backing up:

- Store personal files in the Documents folder, and back it up regularly.
- Back up templates that are stored in their associated programs.
- Save customized settings that appear in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time-saver if you have to reset your preferences.

To create a screen shot:

1. Display the screen you want to save.
2. Copy the screen image:

To copy only the active window, press **alt+fn+prt sc**.

To copy the entire screen, press **fn+prt sc**.

3. Open a word-processing document, and then select **Edit > Paste**.

The screen image is added to the document.

4. Save the document.

- When backing up to discs, use any of the following types of discs (purchased separately): CD-R, CD-RW, DVD+R, DVD+R DL, DVD-R, DVD-R DL, or DVD±RW. The discs you use will depend on the type of optical drive installed in your computer.

 **NOTE:** DVDs and DVDs with double-layer (DL) support store more information than CDs, so using them for backup reduces the number of recovery discs required.

- When backing up to discs, number each disc before inserting it into the optical drive of the computer.

To create a backup using Backup and Restore , follow these steps:

 **NOTE:** Be sure that the computer is connected to AC power before you start the backup process.

NOTE: The backup process may take over an hour, depending on file size and the speed of the computer.

1. Select **Start > All Programs > Maintenance > Backup and Restore**.
2. Follow the on-screen instructions to back up your entire computer (select models only) or your files.

 **NOTE:** Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

Performing a recovery

In case of system failure or instability, the computer provides the following tools to recover your files:

- Windows recovery tools: You can use Backup and Restore to recover information you have previously backed up. You can also use Windows Startup Repair to fix problems that might prevent Windows from starting correctly.
- f11 recovery tools: You can use the f11 recovery tools to recover your original hard drive image. The image includes the Windows operating system and software programs installed at the factory.

 **NOTE:** If you are unable to boot (start up) your computer, you must purchase a Windows Vista® operating system DVD to reboot the computer and repair the operating system. For additional information, refer to the “Using a Windows Vista operating system DVD (purchased separately)” section in this guide.

Using the Windows recovery tools

To recover information you previously backed up, follow these steps:

1. Click **Start > All Programs > Maintenance > Backup and Restore**.
2. Follow the on-screen instructions to recover your entire computer (select models only) or your files.

 **NOTE:** Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

To recover your information using Startup Repair, follow these steps:

 **CAUTION:** Using Startup Repair completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process restores the operating system, as well as the drivers, software, and utilities from the backup used for recovery.

1. If possible, back up all personal files.
2. If possible, check for the presence of the Windows partition and the HP Recovery partition. To find the partitions, select **Start > Computer**.

 **NOTE:** If the Windows partition and the HP Recovery partition have been deleted, you must recover your operating system and programs using the Windows Vista operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to the “Using a Windows Vista operating system DVD (purchased separately)” section in this guide.

3. Restart the computer, and then press **f8** before the Windows operating system loads.
4. Select **Repair your computer**.
5. Follow the on-screen instructions.

 **NOTE:** For additional information on recovering information using the Windows tools, perform a search for these topics in Help and Support.

Using f11

 **CAUTION:** Using **f11** completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The **f11** recovery tool reinstalls the operating system and HP programs and drivers that were installed at the factory. Software not installed at the factory must be reinstalled.

To recover the original hard drive image using **f11**, follow these steps:

1. If possible, back up all personal files.
2. If possible, check for the presence of the HP Recovery partition. To find the partition, select **Start > Computer**.

 **NOTE:** If the HP Recovery partition has been deleted, you must recover your operating system and programs using the Windows Vista operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to the “Using a Windows Vista operating system DVD (purchased separately)” section in this guide.

3. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
4. Press **f11** to enter HP Recovery.
5. Follow the on-screen instructions.

Using a Windows Vista operating system DVD (purchased separately)

If you are unable to boot (start up) your computer, you must purchase a Windows Vista operating system DVD to reboot the computer and repair the operating system. Make sure that your most recent backup (stored on discs or on an external drive) is easily accessible. To order a Windows Vista operating system DVD, go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions. You can also order the DVD by calling technical support. For contact information, refer to the *Worldwide Telephone Numbers* booklet included with the computer.

△ **CAUTION:** Using a Windows Vista operating system DVD completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process helps you restore the operating system, as well as drivers, software, and utilities.

To initiate recovery using a Windows Vista operating system DVD, follow these steps:

 **NOTE:** This process takes several minutes.

1. If possible, back up all personal files.
2. Restart the computer, and then insert the Windows Vista operating system DVD into the optical drive before the Windows operating system loads.
3. When prompted, press any keyboard key.
4. Follow the on-screen instructions.
5. Click **Next**.
6. Select **Repair your computer**.
7. Follow the on-screen instructions.

Backup and recovery in Windows XP

Overview

To protect your information, use the Windows® Backup utility (select models only) to back up files and folders or create recovery points. In case of system failure, you can use the backup files to restore your computer.

Windows provides the following options:

- Backing up individual files and folders
- Backing up all files and folders
- Scheduling automatic backups
- Creating recovery points
- Recovering information

 **NOTE:** For detailed instructions, perform a search for these topics in Help and Support.

NOTE: In case of system instability, HP recommends that you print the recovery procedures and save them for later use.

Backing up your information

Recovery after a system failure is as complete as your most current backup. You should create your initial backup immediately after software setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

You can back up individual files or folders to an optional external hard drive or to a network drive.

Note the following when backing up:

- Store personal files in the My Documents folder, and back it up periodically.
- Back up templates stored in their associated programs.
- Save customized settings that appear in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time saver if you have to reset your preferences.

To copy the screen and paste it into a word-processing document:

- a. Display the screen you want to save.
- b. Copy the screen image:
 - To copy only the active window, press **alt+fn+prt sc**.
 - To copy the entire screen, press **fn+prt sc**.
- c. Open a word-processing document, click **Edit > Paste**.
 - The screen image is added to the document.
- d. Save the document.

To create a backup using the Windows Backup utility (select models only) , follow these steps:

 **NOTE:** Be sure that the computer is connected to AC power before you start the backup process.

NOTE: The backup process may take over an hour, depending on file size and the speed of the computer.

1. Click **Start > All Programs > Accessories > System Tools > Backup**.
2. Follow the on-screen instructions.

Performing a recovery

In case of system failure or instability, the computer provides the following tools to recover your files:

- Windows recovery tools (select models only): You can use the Windows Backup utility to recover information you have previously backed up.
- *Operating System* and *Driver Recovery* discs (included with your computer): You can use the discs to recover your operating system and programs installed at the factory.

Recovering your information

To recover information you previously backed up, follow these steps:

1. If possible, back up all personal files.
2. Click **Start > All Programs > Accessories > System Tools > Backup**.
The Backup or Restore Wizard opens.
3. Click **Restore files and settings**, and then click **Next**.
4. Follow the on-screen instructions.

 **NOTE:** For additional information on initiating a recovery in Windows, perform a search for this topic in Help and Support.

Recovering the operating system and programs


 **CAUTION:** The recovery process reformats and completely erases the hard drive. All files you have created and any software installed on the computer are permanently removed. The recovery process reinstalls the original operating system, software, and drivers. Software, drivers, and updates not installed by HP must be manually reinstalled.

To recover your operating system and programs, follow these steps:

1. If possible, back up all personal files.
2. Insert the *Operating System* disc into the optical drive.
3. Shut down the computer.
4. Turn on the computer.
5. Follow the on-screen instructions to install the operating system.
6. After the operating system is installed, remove the *Operating System* disc and insert the *Driver Recovery* disc.
7. Follow the on-screen instructions to install the drivers and programs.


8 Connector pin assignments

Audio-in (microphone)

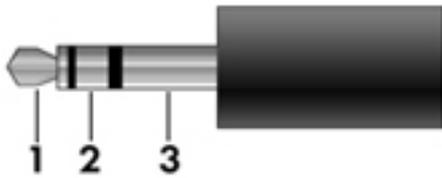


| Pin | Signal |
|-----|-----------------|
| 1 | Audio signal in |
| 2 | Audio signal in |
| 3 | Ground |

Audio-out (headphone)

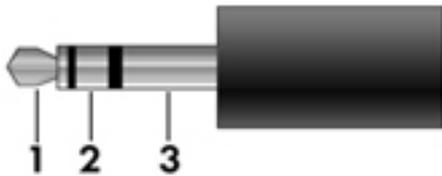


| Pin | Signal |
|-----|--------------------------|
| 1 | Audio out, left channel |
| 2 | Audio out, right channel |
| 3 | Ground |

External monitor

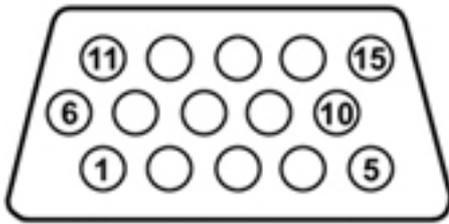


| Pin | Signal |
|-----|-----------------|
| 1 | Red analog |
| 2 | Green analog |
| 3 | Blue analog |
| 4 | Not connected |
| 5 | Ground |
| 6 | Ground analog |
| 7 | Ground analog |
| 8 | Ground analog |
| 9 | +5 VDC |
| 10 | Ground |
| 11 | Monitor detect |
| 12 | DDC 2B data |
| 13 | Horizontal sync |
| 14 | Vertical sync |
| 15 | DDC 2B clock |

HDMI

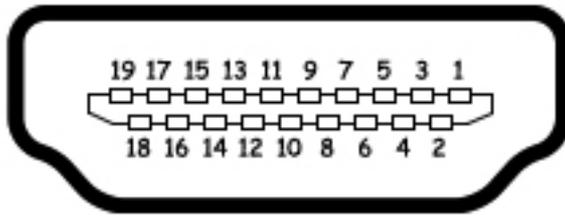


| Pin | Signal |
|-----|---|
| 1 | Transition minimized differential signal (TMDS) data 2+ |
| 2 | TMDS data 2 shield |
| 3 | TMDS data 2- |
| 4 | TMDS data 1+ |
| 5 | TMDS data 1 shield |
| 6 | TMDS data 1- |
| 7 | TMDS data 0+ |
| 8 | TMDS data 0 shield |
| 9 | TMDS data 0- |
| 10 | TMDS clock+ |
| 11 | TMDS clock shield |
| 12 | TMDS clock- |
| 13 | Consumer electronic control (CEC) |
| 14 | Not connected |
| 15 | DDC clock |
| 16 | DDC data |
| 17 | Ground |
| 18 | +5V power |
| 19 | Hot plug detect |

RJ-11 (modem)

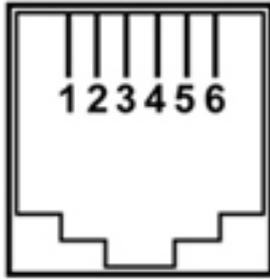


| Pin | Signal |
|-----|--------|
| 1 | Unused |
| 2 | Tip |
| 3 | Ring |
| 4 | Unused |
| 5 | Unused |
| 6 | Unused |

RJ-45 (network)

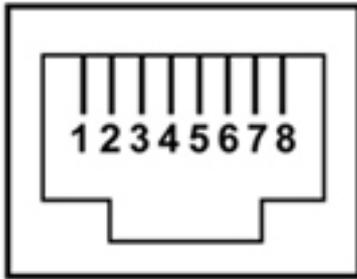

| Pin | Signal |
|-----|------------|
| 1 | Transmit + |
| 2 | Transmit - |
| 3 | Receive + |
| 4 | Unused |
| 5 | Unused |
| 6 | Receive - |
| 7 | Unused |
| 8 | Unused |

Universal Serial Bus

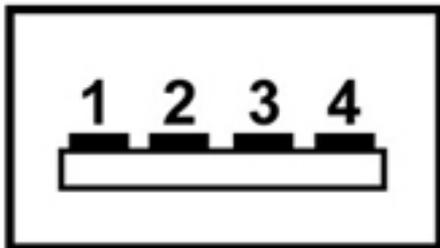

| Pin | Signal |
|-----|--------|
| 1 | +5 VDC |
| 2 | Data - |
| 3 | Data + |
| 4 | Ground |

9 Power cord set requirements

The wide range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC or from 220 to 240 volts AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

Requirements for all countries and regions

The requirements listed below are applicable to all countries and regions:

- The length of the power cord set must be at least 1.5 m (5.0 ft) and no more than 2.0 m (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

| Country/region | Accredited agency | Applicable note number |
|--------------------------------|-------------------|------------------------|
| Australia | EANSW | 1 |
| Austria | OVE | 1 |
| Belgium | CEBC | 1 |
| Canada | CSA | 2 |
| Denmark | DEMKO | 1 |
| Finland | FIMKO | 1 |
| France | UTE | 1 |
| Germany | VDE | 1 |
| Italy | IMQ | 1 |
| Japan | METI | 3 |
| The Netherlands | KEMA | 1 |
| Norway | NEMKO | 1 |
| The People's Republic of China | CCC | 5 |
| South Korea | EK | 4 |
| Sweden | SEMKO | 1 |
| Switzerland | SEV | 1 |
| Taiwan | BSMI | 4 |
| The United Kingdom | BSI | 1 |
| The United States | UL | 2 |

1. The flexible cord must be Type HO5VV-F, 3-conductor, 1.0-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00-mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
5. The flexible cord must be Type VCTF, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

10 Recycling

Battery

When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for computer battery disposal.

Display

-
- ⚠ **WARNING!** The backlight contains mercury. Exercise caution when removing and handling the backlight to avoid damaging this component and causing exposure to the mercury.
 - ⚠ **CAUTION:** The procedures in this chapter can result in damage to display components. The only components intended for recycling purposes are the liquid crystal display (LCD) panel and the backlight. When you remove these components, handle them carefully.
 - 📄 **NOTE: Materials Disposal.** This HP product contains mercury in the backlight in the display assembly that might require special handling at end-of-life. Disposal of mercury may be regulated because of environmental considerations. For disposal or recycling information, contact your local authorities, or see the Electronic Industries Alliance (EIA) Web site at <http://www.eiae.org>.
-


This section provides disassembly instructions for the display assembly. The display assembly must be disassembled to gain access to the backlight **(1)** and the liquid crystal display (LCD) panel **(2)**.




-
- 📄 **NOTE:** The procedures provided in this chapter are general disassembly instructions. Specific details, such as screw sizes, quantities, and locations, and component shapes and sizes, can vary from one computer model to another.
-

Perform the following steps to disassemble the display assembly:


1. Remove all screw covers (1) and screws (2) that secure the display bezel to the display assembly.

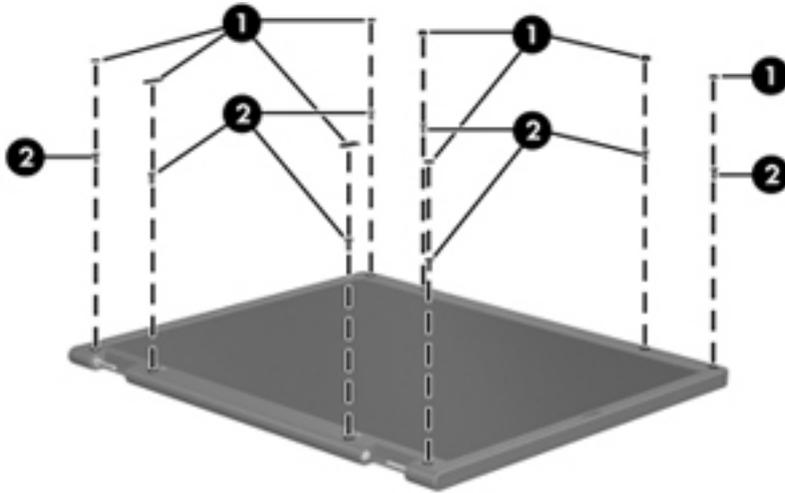


2. Lift up and out on the left and right inside edges (1) and the top and bottom inside edges (2) of the display bezel until the bezel disengages from the display assembly.
3. Remove the display bezel (3).

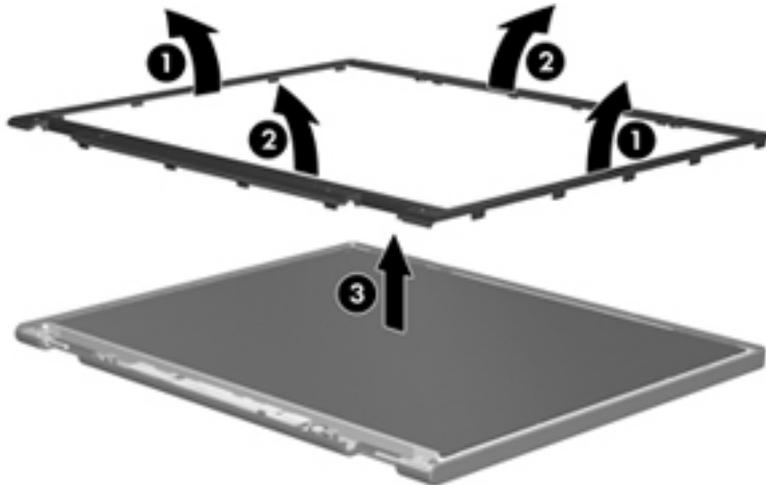


4. Disconnect all display panel cables (1) from the display inverter and remove the inverter (2).

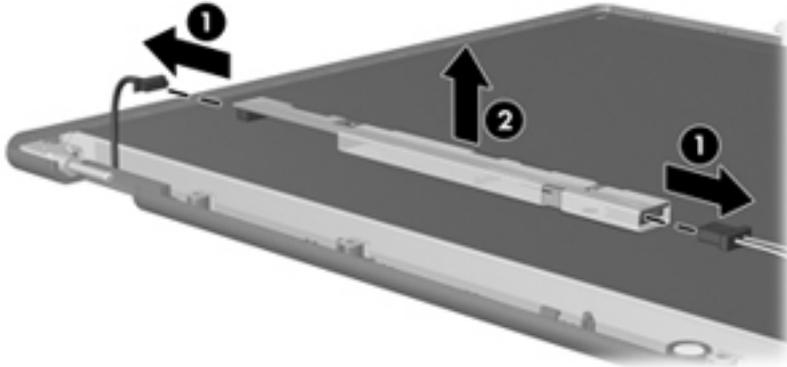

5. Remove all screws (1) that secure the display panel assembly to the display enclosure.
6. Remove the display panel assembly (2) from the display enclosure.

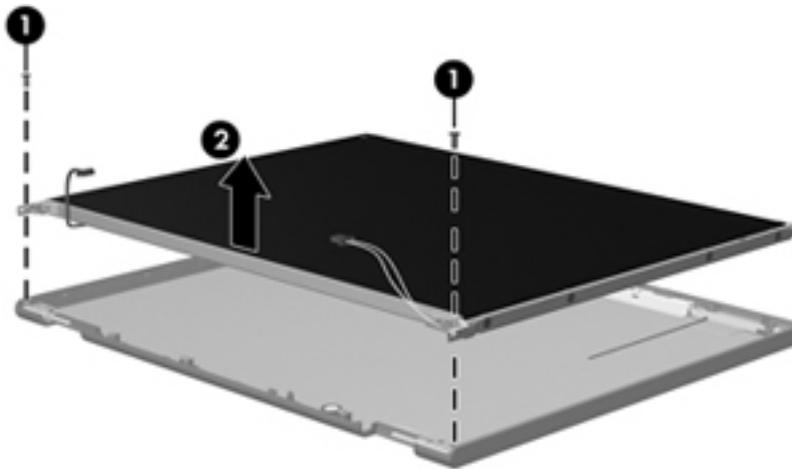


7. Turn the display panel assembly upside-down.
8. Remove all screws that secure the display panel frame to the display panel.

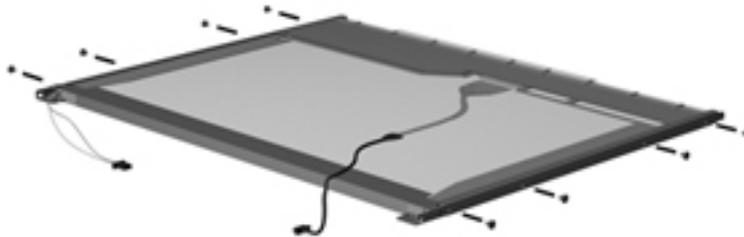


9. Use a sharp-edged tool to cut the tape (1) that secures the sides of the display panel to the display panel frame.

10. Remove the display panel frame (2) from the display panel.

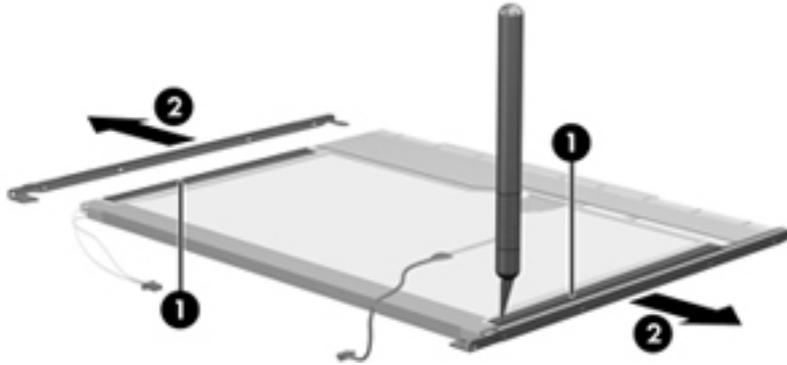


11. Remove the screws (1) that secure the backlight cover to the display panel.
12. Lift the top edge of the backlight cover (2) and swing it outward.

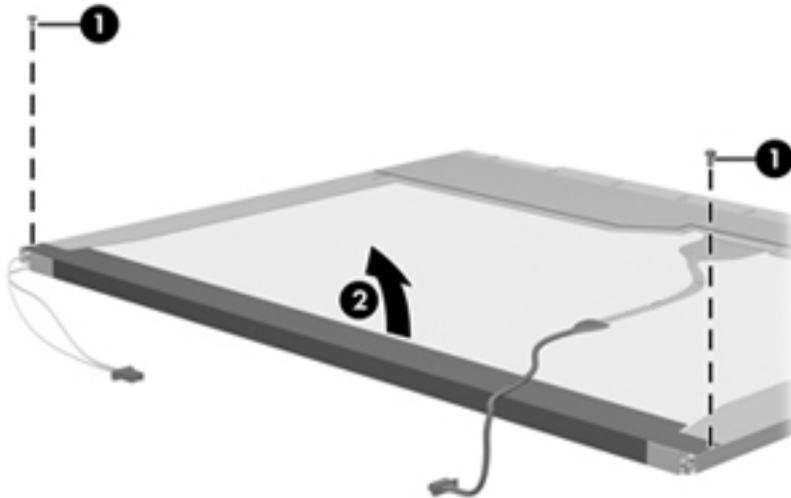

13. Remove the backlight cover.
14. Turn the display panel right-side up.


15. Remove the backlight cables (1) from the clip (2) in the display panel.

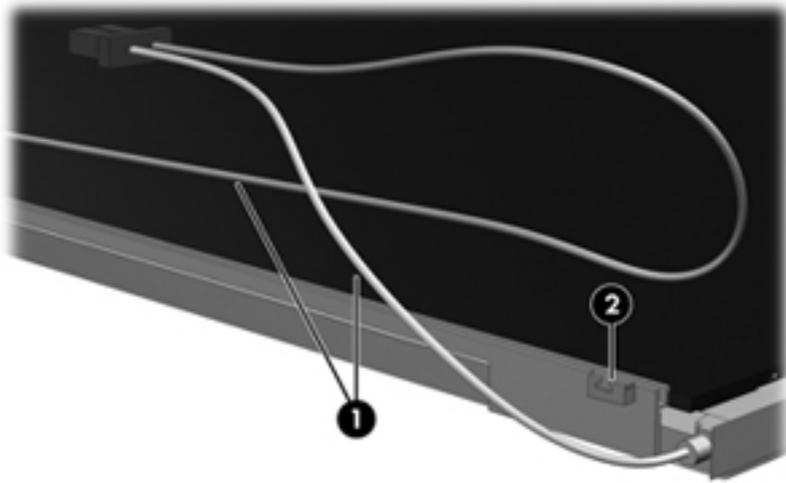


16. Turn the display panel upside-down.

⚠ WARNING! The backlight contains mercury. Exercise caution when removing and handling the backlight to avoid damaging this component and causing exposure to the mercury.


17. Remove the backlight frame from the display panel.

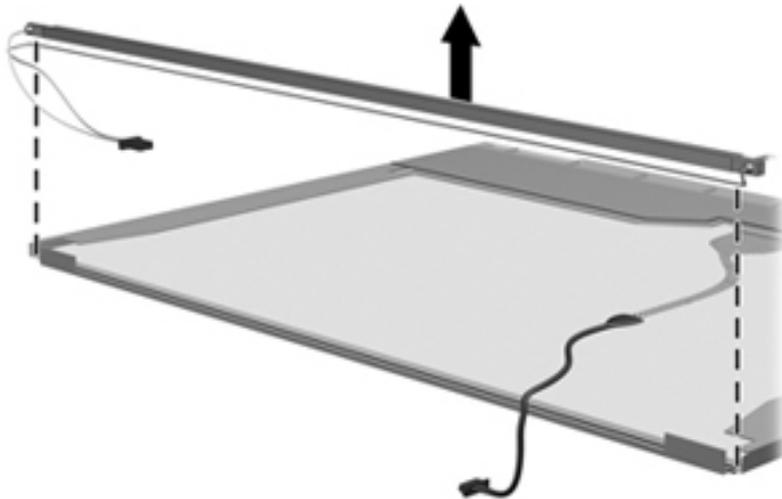


18. Remove the backlight from the backlight frame.

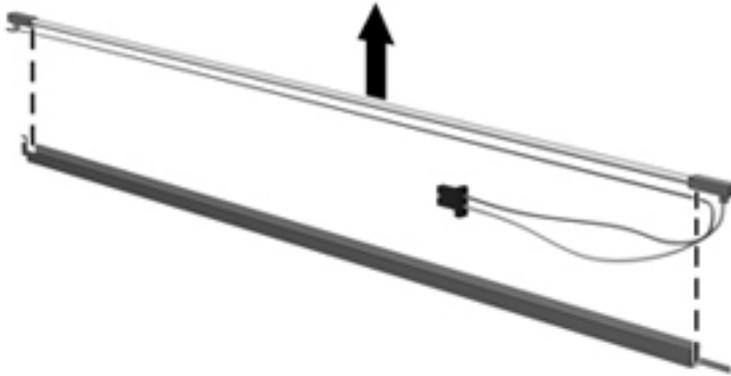

19. Disconnect the display panel cable (1) from the LCD panel.
20. Remove the screws (2) that secure the LCD panel to the display rear panel.
21. Release the LCD panel (3) from the display rear panel.
22. Release the tape (4) that secures the LCD panel to the display rear panel.

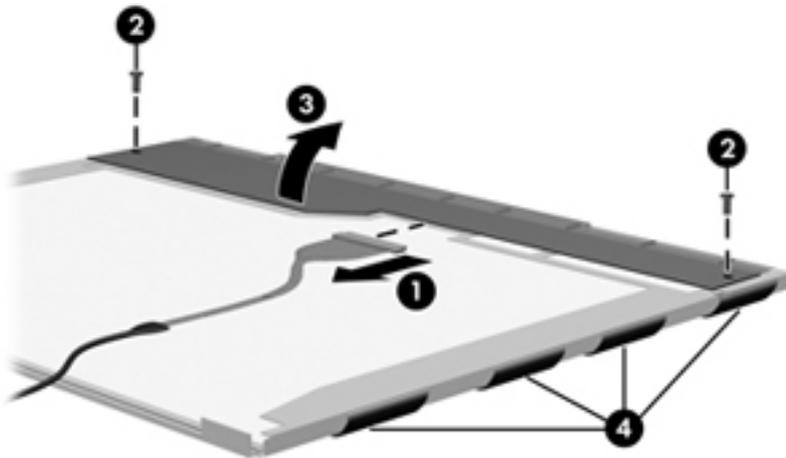

23. Remove the LCD panel.

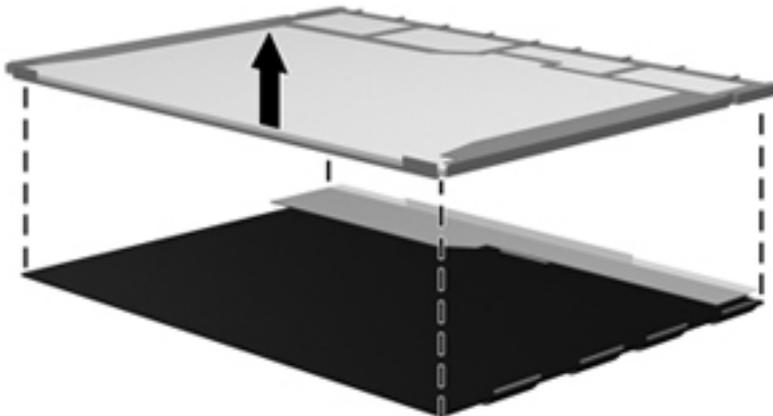

24. Recycle the LCD panel and backlight.

Index

A

- AC adapter
 - spare part numbers 34
- AC adapter, identifying 21
- access door
 - spare part number 28
- AMT options
 - AMT setup prompt (Ctrl-P) 108
 - firmware progress event support. 108
 - firmware verbosity 108
 - initiate Intel CIRA 108
 - terminal emulation mode 108
 - unconfigure AMT on next boot 108
 - USB key provisioning support 108
- antenna, disconnecting 56
- antennas 20
- applications key, Windows 12, 13
- audio board
 - removal 99
 - spare part number 26, 99
- audio board, UMA
 - spare part numbers 26
- audio, product description 3
- audio-in (microphone) jack
 - pin assignments 132
- audio-in (microphone) jack, identifying 14, 19
- audio-out (headphone) jack
 - pin assignments 132
- audio-out (headphone) jack, identifying 14, 19

B

- backing up
 - Windows 7 122

- Windows Vista 126
- Windows XP 130
- Backup and Restore 122, 123, 126, 127
- base enclosure
 - spare part number 26
- battery
 - removal 48
 - spare part number 26, 48
- battery bay 18
- battery light, identifying 16
- battery release latches, identifying 17
- battery, identifying 21
- bays
 - battery 18
 - hard drive 18
- BIOS administrator password 104
- Bluetooth module
 - removal 78
 - spare part number 26, 78
- Bluetooth module cable, illustrated 31
- boot options 105, 113
- boot order 105, 113
- built-in device
 - ambient light sensor 107
 - audio device 107
 - bay device 107
 - Bluetooth device 107
 - fingerprint reader 107
 - integrated camera 107
 - internal speakers 107
 - microphone 107
 - modem 107
 - Network Interface Controller (LAN) 107
 - options 107

- power monitor circuit 107
- Wake on LAN 107
- wireless button 107
- WLAN device 107
- WWAN device 107
- buttons
 - power 11
 - TouchPad 8

C

- Cable Kit
 - contents 31
 - spare part number 31
- cables, service considerations 42
- caps lock, identifying 9
- chipset, product description 1
- compartments
 - memory module 18
- components
 - additional hardware 21
 - bottom 17
 - front 14
 - left-side 16
 - multimedia 19
 - right-side 15
 - top 8
 - wireless antennas 20
- computer feet
 - locations 47
 - spare part number 47
- Computer Setup
 - accessing 101, 109
 - Diagnostics menu 112
 - File menu 103, 111
 - navigating and selecting 101, 110
 - restoring factory settings 102, 110
 - Security menu 104, 112

- System Configuration
 - menu 105, 113
 - using 101, 110
- computer specifications 115
- connector, power 16
- connectors, service
 - considerations 42
- cord, power 21

D

- DC-in cable, illustrated 31
- device configurations 105
- Diagnostics menu 112
- discs
 - Driver Recovery 131
 - Operating System 131
- Disk Sanitizer 104
- diskette drive
 - precautions 42
 - product description 3
- display assembly
 - removal 82
 - spare part numbers 24, 82
- display bezel
 - removal 85
 - spare part number 29
- display component recycling 139
- display enclosure
 - spare part number 30
- Display Hinge Kit
 - spare part number 29
- Display Hinge Kit, spare part number 87, 88
- display panel
 - removal 87, 88
- display
 - specifications 116, 117, 118
- DriveLock
 - automatic 104
 - password 104
- Driver Recovery disc 131
- drives
 - boot order 105, 113
 - preventing damage 42
- DVD-ROM Drive
 - removal 57
 - spare part number 28, 33, 57
 - specifications 120

- DVD±RW Double-Layer Drive with LightScribe
 - precautions 42
 - removal 57
 - spare part number 28, 33, 57
 - specifications 121

E

- earbuds 19
- electrostatic discharge 43
- embedded keypad keys, identifying 12, 13
- esc key, identifying 12, 13
- Ethernet, product description 4
- Execution disable 105
- ExpressCard slot bezel, illustrated 31
- ExpressCard slot, identifying 16
- external media cards, product description 4
- external monitor port
 - pin assignments 133
- external monitor port, identifying 16

F

- f11 recovery 125, 128
- fan
 - removal 59
 - spare part number 25, 59
- feet
 - locations 47
 - spare part number 47
- File menu 103, 111
- fn key, identifying 12, 13
- function keys, identifying 12, 13

G

- graphics, product description 1
- grounding equipment and methods 45

H

- hard drive
 - precautions 42
 - product description 3
 - removal 51
 - spare part numbers 27, 33, 51
 - specifications 119
- hard drive bay, identifying 18
- hard drive bracket, removal 53

- hard drive extender
 - spare part number 25
- hard drive recovery 125, 128
- HDMI port, pin assignments 134
- headphone (audio-out) jack
 - pin assignments 132
- headphones 19
- heat sink
 - removal 60
 - spare part number 25
- hinge, spare part number 87, 88
- HP QuickLook 106

I

- internal display switch, identifying 11

J

- jacks
 - audio-in (microphone) 14
 - audio-out (headphone) 14
 - RJ-11 (modem) 15
 - RJ-45 (network) 16

K

- keyboard
 - product description 5
 - removal 67
 - spare part number 24, 67
- keys
 - embedded keypad 12, 13
 - esc 12, 13
 - fn 12, 13
 - function 12, 13
 - Windows applications 12, 13
 - Windows logo 12, 13
 - wireless 12, 13

L

- language, changing in Computer Setup 105
- latches, battery release 17
- LCD Cable
 - contents 32
 - spare part number 32
- legacy support, USB 101, 105, 109, 113
- lights
 - battery 16
 - caps lock 9

- power 10
- wireless 10

M

- main battery cable
 - removal 94
- mass storage devices, spare part numbers 33
- memory module
 - product description 2
 - removal 54
 - spare part numbers 26, 54
- memory module compartment, identifying 18
- microphone (audio-in) jack
 - pin assignments 132
- microphone cable
 - spare part number 30
- microphone, identifying 19
- model name 1
- modem jack, pin assignments 135
- modem module
 - product description 3
 - removal 97
 - spare part numbers 25, 97
- monitor port
 - pin assignments 133
- monitor port, external 16
- Multi Core CPU 106

N

- network jack, pin assignments 136
- Num lock state 106
- numeric keypad 12, 13

O

- Operating System disc 131
- operating system, product description 5
- optical drive
 - precautions 42
 - product description 3
 - removal 57
 - spare part number 27, 33, 57
 - specifications 120, 121
- optical drive bezel, illustrated 31
- optical drive extender
 - spare part number 25
- optical drive, identifying 15

P

- packing guidelines 44
- palm rest
 - removal 64
 - spare part number 24
 - spare part numbers 64
- panels, product description 1
- passwords 104, 112
- pin assignments
 - audio-in jack 132
 - audio-out (headphone) jack 132
 - external monitor port 133
 - HDMI 134
 - headphone (audio-out) jack 132
 - microphone (audio-in) jack 132
 - modem jack 135
 - monitor port 133
 - network jack 136
 - RJ-11 135
 - RJ-45 (network) jack 136
 - Universal Serial Bus (USB) port 136
- plastic parts 41
- Plastics Kit
 - contents 31
 - spare part number 31
- pointing devices, product description 5
- port options
 - 1394 port 108
 - eSATA port 108
 - ExpressCard slot 108
 - flash media reader 108
 - parallel port 108
 - serial port 108
 - USB port 108
- ports
 - external monitor 16
 - HDMI 16
 - product description 4
 - USB 15, 16
- power button, identifying 11
- power connector, identifying 16
- power cord
 - set requirements 137
 - spare part numbers 34, 35
- power cord, identifying 21

- power light, identifying 10
- power requirements, product description 5
- power switch board
 - removal 76
 - spare part number 25
- processor
 - product description 1
 - removal 62
 - spare part numbers 26, 62
- product description
 - audio 3
 - chipset 1
 - diskette drive 3
 - Ethernet 4
 - external media cards 4
 - graphics 1
 - hard drives 3
 - keyboard 5
 - memory module 2
 - modem module 3
 - operating system 5
 - optical drives 3
 - panels 1
 - pointing devices 5
 - ports 4
 - power requirements 5
 - processors 1
 - product name 1
 - security 5
 - serviceability 7
 - wireless 4
- product name 1

R

- recovery partition 125, 128
- release latches, battery 17
- removal/replacement
 - preliminaries 41
 - procedures 46
- restore factory settings 103
- restore security defaults 103, 108
- restoring the hard drive 125, 128
- RJ-11 (modem) jack
 - pin assignments 135
- RJ-11 (modem) jack, identifying 15
- RJ-45 (network) jack
 - pin assignments 136

RJ-45 (network) jack,
 identifying 16
RTC battery
 removal 96
 spare part number 25, 35, 96
Rubber Kit, spare part number 34

S

SATA (Serial Advanced
 Technology Attachment) devices
 AHCI (Advanced Host
 Controller Interface) 105
 IDE (Integrated Drive
 Electronics) 105
SATA (Serial Advanced
 Technology Attachment)
 devices) 105
Screw Kit
 spare part number 34
scroll zone, TouchPad 8
SD Card Reader, identifying 14
security cable slot, identifying 16
Security menu
 anti-theft Protection 104
 Automatic DriveLock 104
 change password 104
 Disk Sanitizer 104
 DriveLock 104
 fingerprint reader reset 104
 HP SpareKey 104
 HP SpareKey enrollment 104
 password policy 104
 set up BIOS administrator
 password 104
 System IDs 104
 user management 104
security, product description 5
service considerations 41
service door
 removal 49
 spare part numbers 49
service tag, location 22, 46
serviceability, product
 description 7
set security level 108
setup utility
 Diagnostics menu 112
 File menu 103, 111
 navigating and
 selecting 101, 110

 restoring factory
 settings 102, 110
 Security menu 104, 112
 System Configuration
 menu 105, 113
slots
 ExpressCard 16
 memory module 18
 security cable 16
 WLAN 18
speaker, identifying 11, 19
speakers
 removal 81
 spare part number 26, 81
specifications
 computer 115
 display 116, 117, 118
 DVD-ROM Drive 120
 DVD±RW Double-Layer Drive
 with LightScribe 121
 hard drive 119
 optical drive 120, 121
static-shielding materials 45
stringent security 112
system board
 removal 90
 spare part numbers 25, 90
system board assembly, spare part
 number 25
System Configuration
 menu 105, 113
system date and time 103
system diagnostics 103
system fan 105, 113
system IDs 104
system information 103, 111

T

tools required 41
top cover
 removal 71
 spare part number 25, 71
TouchPad board
 spare part number 25
TouchPad button, identifying 8
TouchPad scroll zone,
 identifying 8
TouchPad, identifying 8
transporting guidelines 44

U

Unified Extensible Firmware
 Interface (UEFI) mode 106
USB board
 spare part numbers 25
USB board, UMA
 spare part numbers 25
USB connector assembly
 removal 79
 spare part number 79
USB legacy
 support 101, 105, 109, 113
USB port
 pin assignments 136
USB ports, identifying 15, 16

V

vents, identifying 16, 18
Virtualization Technology 106

W

wake on USB 106
webcam light, identifying 19
webcam module
 spare part number 29
webcam, identifying 19
Windows 7 operating system
 DVD 125
Windows applications key,
 identifying 12, 13
Windows Backup utility 130, 131
Windows logo key,
 identifying 12, 13
Windows recovery 124, 127, 131
Windows Vista operating system
 DVD 129
wireless antenna,
 disconnecting 56
wireless antennas 20
wireless key, identifying 12, 13
wireless light, identifying 10
wireless, product description 4
WLAN module
 removal 55
 spare part numbers 26, 55
WLAN module compartment,
 identifying 18
workstation guidelines 44