



CC330

Digital Camera

Quick Start Guide

 




For more details about the camera operation and troubleshooting, please read the User Manual located on the CDROM disc included with your camera or visit [\*\*http://www.hp.com/support\*\*](http://www.hp.com/support) and download it for the camera support page.

# GETTING READY

For more details about the camera operation and troubleshooting, please read the User Manual located on the CDROM disc included with your camera or visit <http://www.hp.com/support>.


## Unpacking

Your package should contain the camera model you purchased along with the following items. If anything is missing or appears to be damaged, please contact your vendor.


AA-size Alkaline Batteries		Warranty Card	
CD-ROM		USB Cable	
Wrist Strap			

# Camera Views

## Front View

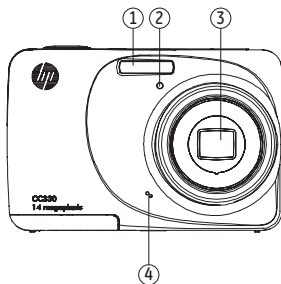


## Back View

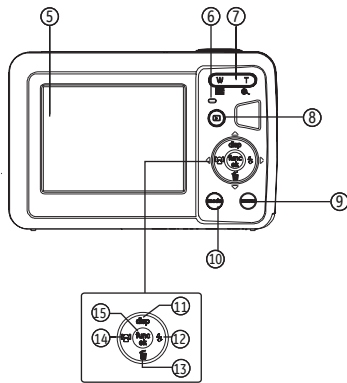


1	Flash Lamp	9	Menu Button
2	Timer Indicator	10	Mode Selection Button
3	Lens	11	Disp/Up Button
4	Microphone	12	Flash Mode/Right Button
5	LCD Screen	13	Delete Button/Down Button
6	Status Indicator	14	Face Detection/Left Button
7	Zoom Toggle	15	Function/OK Button
8	Playback Button		

## Left / Right View

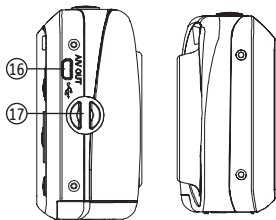


## Top / Bottom View

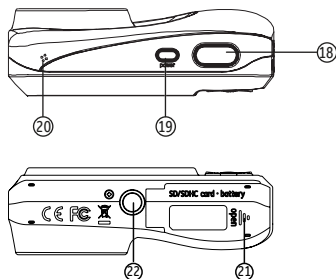


16	USB/AV Port	20	Speaker
17	Wrist Strap	21	Card Slot / Battery Compartment
18	Shutter Button	22	Tripod Socket
19	Power Button		

## Insert the Battery and SD/SDHC Card (Not included)

 
1. Open the battery compartment.



 
2. Insert the enclosed batteries into the battery slot in the correct direction.



 3. Insert an SD/SDHC card (not included) into the memory card slot as shown.



 
4. Close the battery compartment.




# Setting Date/Time and Language


## Setting the Language

1. Use the Up and Down buttons to navigate to the Language option. then press the **Ok or Right button** to enter the Language menu.
2. Use the UP/Down/Right/Left buttons to highlight the desired language.
3. Press the  button to select the option and exit the Language menu.



 
## Setting the Date and Time

1. Use the Up and Down buttons to navigate to the Date/Time option, then press the **Ok or Right** to enter the setting.
2. Press the **Left/Right** buttons to highlight each field and use the **Up/Down** buttons to adjust the value.
3. Press the  button to confirm the setting.

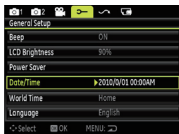











## Turning On and Off

Press the Power button to turn the camera on. To turn off the camera, press the Power button again.



## Using the Mode Button



The camera provides a convenient mode button  that allows you to switch between different modes with ease. Press the  to open the mode options menu. Use the Left/Right buttons to choose the desired mode and press  to confirm. For more details about the Mode button and the numerous camera modes, please review the User Manual located on the software CD provided with this product.

	Auto mode		ASCN mode
	Manual mode		Scene mode
	Panorama mode		Movie mode
	Portrait		



## Using Menu Button


The menu button  allows you quick access to the camera settings options.

Press the  to open the camera settings menu. Press Left/Right buttons to highlight the desired option, then press the Down button to select this option/menu, and press  to confirm. For more details about the Menu button and the camera settings, please review the User Manual located on the software CD provided with this product.


1	Photo Setup	5	General Setup
2	Movie Setup	6	Transmission
3	Playback Setup	7	File/Software
4	Display Setup		


## Taking a picture

1. Hold the camera securely.
2. Use the Zoom toggle to zoom in and out of the subject. Press the "T" side of the toggle to zoom in and press the "W" side of the toggle to zoom out.
3. Lightly press the shutter button halfway force the camera to focus on the subject. When properly in focus, a green bracket will be displayed on the screen. Press the shutter button fully to take the picture.

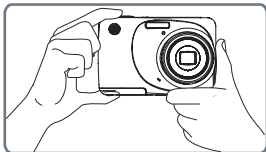

## Viewing your picture

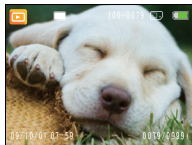


1. Press the Playback button  to switch to Playback mode.
2. Use Left/Right buttons to browse through your photos.




## Using the Delete Button

In Playback mode, press the Down/Delete  button to delete pictures or videos.

To delete pictures or videos:

1. Press  button to go to the Playback mode.
2. Select a picture or video clip you want to delete with the Left/Right buttons.
3. Press the Down/Delete button  and the delete screen appears.
4. Select Yes or Back with Up/Down button and press the  button for confirmation.

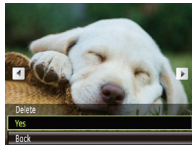

## Getting Help

Should you have a technical support question or your HP Digital Camera require service within the warranty period, please contact the original point of purchase or an authorized HP reseller in your country. If service is not available at those locations, please contact an HP Branded Product warranty agent from the support contact list provided below. A service agent will work with you to troubleshoot your issue and if necessary, issue a Return Material Authorization (RMA) number in order to replace your HP Branded Product. For warranty claims, you will be required to provide a copy of your original dated sales receipt as proof of purchase and the issued RMA number. You will be responsible for shipping charges when shipping the product to the service center. The service agent will provide you with an address and you will also be responsible for any shipping charges to the warranty service center. Once your product is received by this service center, a replacement unit will be shipped back to you typically within 5 business days.

Contact/phone Support:	
Language	Contact/phone Support:
Chinese	simp.chinese@hpodd.com trad.chinese@hpodd.com
Japanese	nippon@hpodd.com
Korean	korean@hpodd.com
Deutsch	deutsch@hpodd.com
English	english@hpodd.com
Español	espanol@hpodd.com
Français	francais@hpodd.com
Italiano	italiano@hpodd.com
Nederlandsk	hollands@hpodd.com
Português	portugues@hpodd.com
Svenska	svensk@hpodd.com

Contact/phone Support:			
Country	Language	Number	
Europe Region (EMEA)			
België	Nederlandsk/ Deutsch	+ 32 2700 1724	
Deutschland	Deutsch	+ 49 6950073896	
España	Español	+ 34 914533458	
France	Français	+ 33 171230454	
Ireland	English	+ 353 1850882016	
Italia	Italiano	+ 39 269682189	
Nederland	Nederlandsk	+ 31 202015093	
Schweiz	Deutsch/ Français/ Italiano	+ 41 18009686	
UK	English	+ 44 2073652400	
North America			
United States	English	1.866.694.7633	
Canada	English and French	1.866.694.7633	
Country	Language	City	Number
México	Español	Mexico City	52.55.1204.8185
		Guadalajara	52.33.1031.3872
		Monterrey	52.81.1107.2639
Venezuela	Español	Caracas	58.212.335.4574
Colombia	Español	Bogota	57.1.508.2325
Perú	Español	Lima	51.1.705.6232
Chile	Español	Santiago	56.2.581.4977
Brasil	Português	Sao Paolo	55.11.5504.6633
Argentina	Español	Buenos Aires	54.11.6091.2399

