



LASERJET ENTERPRISE M4555

MFP SERIES

Software Technical Reference





LaserJet Enterprise M4555 MFP Series

Software Technical Reference

Copyright and License

© 2011 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Edition 1, 4/2011

Trademark credits

Adobe®, Acrobat®, and PostScript® are trademarks of Adobe Systems Incorporated.

FireWire® FireWire is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

Microsoft®, Windows®, Windows® XP, and Windows Vista® are U.S. registered trademarks of Microsoft Corporation.

Intel® Core™ is a trademark of Intel Corporation in the U.S. and other countries.

UNIX® is a registered trademark of The Open Group.

Table of contents

1 Document and product basics	1
Purpose and scope	2
Software availability and localization	3
Printing-system software on the Web	3
In-box printing-system software CD	3
HP LaserJet software CD, Windows partition	3
CD versions and language support	4
2 Windows software description	9
Introduction	9
Windows printing-system software	9
Driver configuration for Windows	11
Bidirectional communication	11
HP Embedded Web Server	12
HP Web Jetadmin	12
HP ePrint	13
HP Print View Software	14
HP MFP Send Fax Driver	14
HP Scan to E-mail Setup Wizard	14
HP Save-to-Folder Setup Wizard	14
Font support	15
Basic fonts	15
HP Driver Deployment Utility	16
HP Driver Configuration Utility	17
3 Install Windows software and utilities	19
Introduction	19
Supported operating systems for Windows	20
System requirements	21
Printer driver support in other operating systems	21
Install overview	22

Software Installer system check	22
Microsoft Windows Installer 3.1	22
Software installation types for Windows	22
Installation options	23
Detailed Microsoft Windows installation instructions	24
Perform the recommended printer driver installation using the installation CD	24
Use the Back, Next, Finish, and Cancel buttons	30
Set a default printer	30
Use the HP Send Fax Driver	31
Download the HP Send Fax Driver	31
Install the HP Send Fax Driver	32
HP Driver Installation Utility (HP DIU)	32
Add Printer Wizard	36
Create a network folder by using the Scan Setup Wizard	43
Install optional software	54
Uninstall software	56
Uninstall component list	56
Remove the printer driver, Help & Learn Center, or fax driver by using the Windows Add or Remove Programs feature	57
Uninstall the printer driver or the HP Send Fax Driver by using the Server Properties feature	59

4 HP PCL 6 printer driver for Windows 61

Introduction	61
Change the printer driver settings for Windows	62
Properties tab set	63
Printing Preferences tab set	63
Document preview image	63
Help system	64
“What's this?” Help	64
Incompatible Print Settings messages	64
Advanced tab features	66
Paper/Output	66
Copy Count	67
Graphic	67
True Type Font	67
Document Options	67
Advanced Printing Features	68
Print Optimizations	68
Printer Features	68
Layout Options	69

Printing Shortcuts tab features	70
Use defined printing shortcuts	71
General Everyday Printing	71
Paper sizes	71
Paper source	72
Pages per sheet	73
Print on both sides	73
Paper type	73
Eco-print (two-sided printing)	74
Factory Defaults	74
Booklet Printing	74
Envelopes	74
Create a custom printing shortcut	74
Paper/Quality tab features	76
Paper Options	77
Paper sizes	77
Custom Paper Size	78
Name	78
Paper size	79
Units	79
Custom width and height control limits	79
Paper source	80
Paper type	80
Special pages	82
Covers	82
Print pages on different paper	82
Insert blank or preprinted pages	83
Chapter separator pages	84
Document preview image	85
Print Quality	86
Print Quality drop-down menu	86
EconoMode check box	86
Effects tab features	87
Resizing Options	88
Actual Size	88
Print Document On	88
Scale to Fit	88
% of Actual Size	89
Document preview image	89
Watermarks	90
Current watermarks	91

Watermark Message	92
Message Angle	92
Font Attributes	92
Default watermark settings	93
Finishing tab features	94
Document Options	94
Print on Both Sides	95
Print on both sides automatically	96
Print on both sides manually	96
Flip Pages Up	98
Booklet Layout	98
Book and Booklet Printing	98
Pages per Sheet	99
Print Page Borders	100
Page Order	100
Document preview image	100
Orientation	101
Job Storage tab features	102
Status group box	104
Job Storage Mode	104
Off	104
Proof and Hold	104
Personal Job	105
Quick Copy	105
Stored Job	106
PIN to print	106
Job Notification options	106
User Name	107
Job Name	107
Use job-storage features when printing	108
Release a job-storage print job	108
Delete a job-storage print job	108
Output tab features	109
Output Options	110
Output Bin Options	110
Document preview image	110
Services tab features	111
Internet Services	111
Device Services	112
Device Settings tab features	113
Form to Tray Assignment	113

Font Substitution Table	114
External Fonts	114
Installing external fonts	115
Removing external fonts	116
Installable Options	116
Automatic Configuration	117
Printer Status Notification	117
Tray 3	117
Tray 4	117
Tray 5	117
Duplex Unit (for 2-Sided Printing)	117
Allow Manual Duplexing	117
Accessory Output Bin	118
Printer Hard Disk	118
Job Storage	118
Job Separator	118
Mopier Mode	118
Mopier mode and collation	119
Envelope Feeder	119
About tab features	120

5 Mac software and utilities 121

Introduction	121
Determine the Mac driver version	122
Supported operating systems for Mac	122
Mac system requirements	122
Hardware requirements	122
Supported printer drivers for Mac	122
Change printer-driver settings for Mac	123
Printing-system software	123
PDEs	123
HP Embedded Web Server	123
Install notes	123
Online help	124
Screen fonts	124
Mac installation instructions	125
HP LaserJet software CD, Mac partition	125
Install the printing-system software for the Mac OS	125
General installation instructions	125
Mac OS X installation	126
Setup instructions	133

Setting up a printer with Mac OS X 10.5 and later	133
Troubleshooting the product setup	136
Remove software from Mac operating systems	136
HP Utility for Mac	138
Open the HP Utility	139
Supplies Status	140
Device Information	141
File Upload	142
Update Firmware	142
Upload Fonts	144
Commands	144
HP ePrint Center	145
Duplex Mode	146
Trays Configuration	147
Stored Jobs	147
Economode & Toner Density	149
Resolution	150
E-mail Alerts	151
Network Settings	151
Supplies Management	152
Protect Direct Ports	153
Additional Settings	154
Output Devices	155
6 Engineering details	157
Introduction	157
Remote firmware update	158
Determine the current level of firmware	158
Download the new firmware from the HP Web site	158
Use the HP Embedded Web Server	159
Use the walkup USB port on the product control panel	160
Use HP Web Jetadmin	160
Paper attributes and commands	162
Paper-source commands	162
Paper-type commands examples	163
File to E-mail utility	164
Index	165

List of tables

Table 1-1	Software CD supported languages	4
Table 1-2	Supported printer driver languages	6
Table 1-3	Documentation languages	7
Table 2-1	Software components for Windows	9
Table 3-1	Windows software component support	20
Table 4-1	PCL 6 custom paper sizes	79
Table 4-2	Font Attribute settings for new and preset watermarks	93
Table 4-3	Page orientation	98
Table 4-4	Driver mopier mode and collation settings	119
Table 6-1	Paper-source commands	162
Table 6-2	Paper-type commands	163

List of figures

Figure 3-1	Windows software installation — Opening screen	25
Figure 3-2	Windows software installation — Connection Type screen for USB connection	25
Figure 3-3	Windows software installation — Connect your Product now screen	26
Figure 3-4	Windows software installation — Connection Type screen for network connection	27
Figure 3-5	Windows software installation — Network Product(s) Found screen for network connection	28
Figure 3-6	Windows software installation — installation complete	28
Figure 3-7	HP ePrint dialog box	29
Figure 3-8	More Options screen	30
Figure 3-9	Send Fax Driver Installation–License Agreement screen	32
Figure 3-10	Send Fax Driver Installation–Device Connection screen	33
Figure 3-11	Send Fax Driver Installation–Devices Found screen	34
Figure 3-12	Send Fax Driver Installation–Device Connection screen	35
Figure 3-13	Send Fax Driver Installation–Device Installation Complete screen	36
Figure 3-14	Send Fax Driver Installation — Local or Network Printer screen	37
Figure 3-15	Send Fax Driver Installation — Select a Printer Port screen	38
Figure 3-16	Send Fax Driver Installation — Install Printer Software screen	38
Figure 3-17	Send Fax Driver Installation — Install From Disk screen	39
Figure 3-18	Send Fax Driver Installation — Name Your Printer screen	40
Figure 3-19	Send Fax Driver Installation — Printer Sharing screen	41
Figure 3-20	Send Fax Driver Installation — Print Test Page screen	42
Figure 3-21	Scan Setup Wizard — Welcome screen	44
Figure 3-22	Scan Setup Wizard — Devices Found screen	45
Figure 3-23	Scan Setup Wizard — Welcome screen	46
Figure 3-24	Scan Setup Wizard — Contacting Device screen	47
Figure 3-25	Scan Setup Wizard — Add or Remove Folders screen	48
Figure 3-26	Scan Setup Wizard — Folder Name screen	49
Figure 3-27	Scan Setup Wizard — Authentication screen	50
Figure 3-28	Scan Setup Wizard — Folder Settings screen	51
Figure 3-29	Scan Setup Wizard — Summary screen	52
Figure 3-30	Scan Setup Wizard — Complete screen	53
Figure 3-31	More Options menu	55
Figure 3-32	Windows Control Panel screen	57

Figure 3-33	HP Driver Uninstall Utility screen	58
Figure 3-34	Uninstall Complete screen	59
Figure 4-1	Incompatible Print Settings message	64
Figure 4-2	PCL 6 printer driver Advanced tab	66
Figure 4-3	PCL 6 printer driver Printing Shortcuts tab	70
Figure 4-4	PCL 6 printer driver Printing Shortcuts dialog box	75
Figure 4-5	PCL 6 printer driver Paper/Quality tab	76
Figure 4-6	PCL 6 printer driver Paper Options group box	77
Figure 4-7	PCL 6 printer driver Custom Paper Size dialog box	78
Figure 4-8	PCL 6 printer driver Print pages on different paper dialog box	83
Figure 4-9	PCL 6 printer driver Insert blank or preprinted pages option	84
Figure 4-10	PCL 6 printer driver Chapter separator pages option	85
Figure 4-11	PCL 6 printer driver Effects tab	87
Figure 4-12	Preview images – Legal on Letter; Scale to Fit off (left) and on (right)	89
Figure 4-13	PCL 6 printer driver Watermark Details dialog box	91
Figure 4-14	PCL 6 printer driver Finishing tab	94
Figure 4-15	Print on Both Sides Instructions dialog box	97
Figure 4-16	PCL 6 printer driver page-order preview images	100
Figure 4-17	PCL 6 printer driver Job Storage tab	103
Figure 4-18	PCL 6 printer driver Output tab	109
Figure 4-19	PCL 6 printer driver Services tab	111
Figure 4-20	PCL 6 printer driver Device Settings tab	113
Figure 4-21	PCL 6 printer driver Font Substitution table	114
Figure 4-22	PCL 6 printer driver HP Font Installer dialog box	115
Figure 4-23	PCL 6 printer driver About tab	120
Figure 5-1	Mac installer opening screen	126
Figure 5-2	Mac installer Introduction screen	127
Figure 5-3	Mac installer License screen	128
Figure 5-4	Mac installer license agreement screen	128
Figure 5-5	Mac installer Destination Select screen	129
Figure 5-6	Mac installer Installation Type screen	130
Figure 5-7	Mac installer password popup	130
Figure 5-8	Mac installer Installation screen	131
Figure 5-9	Mac installer Add Printer screen	132
Figure 5-10	Mac installer Add Printer list	132
Figure 5-11	Mac installer Summary screen	133
Figure 5-12	IP location on the Jetdirect page	135
Figure 5-13	HP Utility main screen	139
Figure 5-14	Supplies Status screen	140
Figure 5-15	Device Information screen	141
Figure 5-16	File Upload screen	142

Figure 5-17	Update Firmware screen	143
Figure 5-18	Upload Fonts screen	144
Figure 5-19	Commands screen	145
Figure 5-20	HP ePrint Center screen	145
Figure 5-21	Duplex Mode screen	146
Figure 5-22	Trays Configuration screen	147
Figure 5-23	Enable Job Storing screen	148
Figure 5-24	Economode & Toner Density screen	149
Figure 5-25	Resolution screen	150
Figure 5-26	E-mail Alerts screen	151
Figure 5-27	Network Settings screen	151
Figure 5-28	Supplies Management screen	152
Figure 5-29	Protect Direct Ports screen	153
Figure 5-30	Additional Settings screen	154
Figure 5-31	Output Devices screen	155
Figure 6-1	HP EWS Firmware Upgrade page	159
Figure 6-2	HP EWS Firmware Upgrade page	159

1 Document and product basics

The chapter provides information about these topics:

- [Purpose and scope](#)
- [Software availability and localization](#)

Purpose and scope

This software technical reference (STR) provides information about, and troubleshooting tips for, the printing-system software for the product.

This STR is prepared in an electronic format to serve as a quick-reference tool for Customer Care Center (CCC) agents, support engineers, system administrators, management information systems (MIS) personnel, and end users, as appropriate.

The following information is included in this STR:

- Descriptions of drivers, operating systems, and system environments
- Descriptions of installing and uninstalling the printing-system software components

For information about the location of information within chapters, see the table of contents. An index is also provided in this STR.

Software availability and localization

This section provides information about the availability of the HP LaserJet Enterprise M4555 MFP Series printing-system software and related software and firmware.

Printing-system software on the Web

All software that is contained on the installation CD is also available on the Web.

Web deployment is the preferred method for obtaining the latest software. The Web site offers an option for automatic e-mail notification about new software releases.

The printing-system software is available for download at the following Web site:

www.hp.com/support/ljm4555mfp_software


In-box printing-system software CD

The software CD for the product contains a variety of files for installing the printing-system software on the computer. This section describes the files that are available on the software CD and provides additional information about support and availability.

The printing-system software CD is divided into two partitions, one for Windows operating systems and one for Mac OS X operating systems.

The files in each partition include documentation files and files that are required in order to install and uninstall the printing-system components.

HP LaserJet software CD, Windows partition

 **NOTE:** For information about the contents of the Mac OS X partition of the printing-system software CD, see [HP LaserJet software CD, Mac partition on page 125](#).

The root directory in the Windows partition of the software CD contains the AUTORUN.EXE file, the SETUP.EXE file, and the following directories:

- Drivers
- Installer
- Installer Content
- Languages
- Prerequisites
- Setup
- Utilities

The Utilities folder contains the files to run these stand-alone utilities:

- FileToEmail
- Scrubber

CD versions and language support

The printing-system software CD is available with the following components and languages.

Table 1-1 Software CD supported languages

Language	Two-letter abbreviation	HP-preferred name	File designation
Arabic	AR	Arabic	ARWW
Bahasa Indonesian	ID	Bahasa Indonesian	IDWW
Catalan	CA	Catalan	CAWW
Croatian	HR	Hrvatski	HRWW
Czech	CS	Cestina	CSWW
Danish	DA	Dansk	DAWW
Dutch	NL	Nederlands	NLWW
English	EN	English	ENWW
Finnish	FI	Suomi	FIWW
French	FR	Francais	FRWW
German	DE	Deutsch	DEWW
Greek	EL	Greek	ELWW
Hebrew	HE	Hebrew	HEWW
Hungarian	HU	Magyar	HUWW
Italian	IT	Italiano	ITWW
Japanese	JA	Japanese	JAWW
Korean	KO	Korean	KOWW
Norwegian	NO	Norsk	NOWW
Polish	PL	Polski	PLWW
Portuguese	PT	Portugues	PTWW
Romanian	RO	Romanian	ROWW
Russian	RU	Russian	RUWW
Simplified Chinese	ZHCN	Simplified Chinese	ZHCN
Slovak	SK	Slovak	SKWW
Slovenian	SL	Slovenian	SLWW

Table 1-1 Software CD supported languages (continued)

Language	Two-letter abbreviation	HP-preferred name	File designation
Spanish	ES	Espanol	ESWW
Swedish	SV	Svenska	SVWW
Thai	TH	Thai	THWW
Traditional Chinese	ZHTW	Traditional Chinese	ZHTW
Turkish	TR	Turkce	TUWW

Driver languages

The product provides driver support in the following languages.

Table 1-2 Supported printer driver languages

Component	Language list
HP PCL 6 printer driver	<ul style="list-style-type: none">• Arabic• Korean
HP PCL 5 Universal Print Driver	<ul style="list-style-type: none">• Bulgarian• Latvian
HP PCL 6 Universal Print Driver	<ul style="list-style-type: none">• Catalan• Lithuanian
HP PS Universal Print Driver	<ul style="list-style-type: none">• Croatian• Norwegian• Czech• Polish• Danish• Portuguese• Dutch• Romanian• English• Russian• Estonian• Serbian• Finnish• Slovak• French• Slovenian• German• Spanish• Greek• Swedish• Hebrew• Thai• Hungarian• Turkish• Italian• Ukrainian• Japanese• Simplified Chinese• Traditional Chinese

Documentation languages

The product provides documentation in the following languages.

Table 1-3 Documentation languages

Component	Language list
<ul style="list-style-type: none"> HP LaserJet Enterprise M4555 MFP Series User Guide (.PDF file) 	<ul style="list-style-type: none"> Arabic Bahasa Indonesian
<ul style="list-style-type: none"> HP LaserJet Enterprise M4555 MFP Series User Guide (.CHM file) 	<ul style="list-style-type: none"> Bulgarian Catalan
<ul style="list-style-type: none"> HP LaserJet Enterprise M4555 MFP Series Driver Preconfiguration User Guide (Available in English only) 	<ul style="list-style-type: none"> Croatian Czech Danish
<ul style="list-style-type: none"> HP Jetdirect Administrator's Guide (.PDF file) (with the following exceptions) <ul style="list-style-type: none"> Catalan documentation in Spanish only No documentation in Arabic, Bulgarian, Czech, Greek, Hebrew, Croatian, Estonian, Lithuanian, Latvian, Romanian, Slovak, Slovenian, Serbian, Turkish, Ukrainian 	<ul style="list-style-type: none"> Dutch English Estonian Finnish French German Greek Hebrew Hungarian Italian Japanese
<ul style="list-style-type: none"> HP LaserJet Enterprise M4555 MFP Series Install Notes (.HTML file) 	<ul style="list-style-type: none"> Korean Latvian Lithuanian Norwegian Polish Portuguese Romanian Russian Serbian Slovak Slovenian Spanish Swedish Thai Turkish Simplified Chinese Traditional Chinese Ukrainian

2 Windows software description

Introduction

The product comes with software and installers for Microsoft Windows and Apple Computer, Inc., Mac systems. Linux and UNIX systems are supported, and software is available on the Web. For information about specific system installers, drivers, and components, see the section that corresponds to that system. For information about Mac software, see [Mac software and utilities on page 121](#).

This section contains information about the following topics:

- [Windows printing-system software](#)
- [Driver configuration for Windows](#)
- [HP Embedded Web Server](#)
- [HP Web Jetadmin](#)
- [HP ePrint](#)
- [HP Print View Software](#)
- [HP MFP Send Fax Driver](#)
- [HP Scan to E-mail Setup Wizard](#)
- [HP Save-to-Folder Setup Wizard](#)
- [Font support](#)
- [HP Driver Deployment Utility](#)
- [HP Driver Configuration Utility](#)

Windows printing-system software

Table 2-1 Software components for Windows

Component	Description
HP installer	Installs the printing-system software based on the hardware it detects from the host computer.

Table 2-1 Software components for Windows (continued)

Component	Description
Uninstaller	Removes files and folders that were installed when the printing-system software was originally installed on the computer.
Scrubber Utility	A standalone utility used remove all the installation files and folders that were installed with the printing system software was originally installed in the computer.
File-to-Email Utility	Collects crash logs and attaches the data files to an e-mail to assist troubleshooting an installation or operation failure. If the File to E-mail utility is not successful for any reason (for instance, if you cancel the utility or you are using Web-based e-mail software), all logs are saved in a folder on the desktop.
HP LaserJet Fax Setup Utility	Allows the user to configure the fax settings for both the software and the product control panel. These settings are used by the HP Easy Printer Care.
HP LaserJet Scan software	Provides access to the scan functions on the product.
HP LaserJet Send Fax software	Provides the ability to send faxes from the computer.
Driver software	Use the driver software to print, fax, and scan with the computer and the product. This software includes the following drivers: <ul style="list-style-type: none">• The HP PCL 6 printer driver. The HP PCL 6 printer driver is installed by default from the CD.• The HP PCL 5 Universal Print Driver (UPD). This printer driver is <i>not</i> installed by default. To install the HP PCL 5 UPD, use the Microsoft Add Printer wizard.• The HP PCL 6 Universal Print Driver (UPD). This printer driver is <i>not</i> installed by default. To install the HP PCL 6 UPD, use the Microsoft Add Printer wizard.• HP postscript emulation Universal Print Driver (HP PS UPD). This printer driver is <i>not</i> installed by default. To install the HP PS UPD, use the Microsoft Add Printer wizard.• The HP LaserJet Send Fax driver• Scan drivers<ul style="list-style-type: none">◦ Windows Image Acquisition (WIA) driver for Windows XP and Vista. WIA scanning can be started from a WIA-compliant program or from the computer. WIA has its own user interface that is relatively simple and does not contain the wide range of image-quality options that are available in the TWAIN driver user interface.◦ TWAIN driver. TWAIN is an industry-standard scanning protocol. Scanning from the product can be initiated from any TWAIN-compliant software program.

Table 2-1 Software components for Windows (continued)

Component	Description
Readiris Professional text-recognition software by IRIS	<p>Converts scanned images into text that can be edited in word-processing programs.</p> <p>The user interface is localized into six languages. However, the software supports text-recognition in 124 languages.</p> <p>Readiris Professional supports text recognition in 2-byte Asian characters. You must have your operating system set up to display 2-byte characters in order to see the text.</p> <p>NOTE: For better text-recognition scanning results, start Readiris and scan directly into the program. Readiris v12.0 automatically starts a wizard to help guide this process.</p> <p>When Readiris is installed on the computer, it appears as an option in the destination drop-down box in the HP Scan software. If you select Readiris as the destination, the image is scanned into .TIFF format and Readiris automatically starts the text-recognition process.</p> <p>The Readiris software uses a separate installer that comes on a separate CD. The initial release of the product includes Readiris Professional software.</p>
Help & Learn Center	Provides help for using the product software.

Driver configuration for Windows

The following printer drivers provide the printing features and communication between the computer and the product:

- PCL 6 (on the software CD)
- PCL 5 universal printer driver (HP PCL 5 UPD) (available on the Web)
- PCL 6 universal printer driver (HP PCL 6 UPD) (available on the Web)
- HP postscript emulation Universal Print Driver (HP PS UPD) (available on the Web)

All of the drivers provide access to paper-handling and print-quality features.

The HP print drivers feature bidirectional communication technology which, in supported environments, provide automatic discovery and driver configuration for product accessories at the time of installation.

Some accessories that are automatically discovered and configured include the duplexing unit.

Bidirectional communication

In environments that support bidirectional communication, the computer communicates with the product during installation, determines the physical configuration, and then configures the driver accordingly.

Bidirectional communication is the capability of the product to respond to data inquiries from the computer and report information back, such as what type of print paper is available or what accessories are connected to the product. Bidirectional communication depends on the network operating system and on the type of connection that exists between the computer and the product. If the connection does not have this capability (that is, if it has no bidirectional mode), it can only accept commands from the host and cannot report information back to the host computer.

HP Embedded Web Server

The HP Embedded Web Server (HP EWS) is a Web-based program that allows users to control settings on the product through the Web browser. The HP EWS can only be accessed if the product is installed through a network rather than a USB connection.

To access the HP EWS, open a Web browser and type product IP address in the address bar. The product IP address is documented on the configuration page.

The following tabs are available in the HP EWS:

- **Information** tab
- **General** tab
- **Copy/Print** tab
- **Scan/Digital Send** tab
- **Fax** tab
- **Troubleshooting** tab
- **Security** tab
- **HP Web Services** tab
- **Networking** tab

HP Web Jetadmin

Use HP Web Jetadmin at your computer desktop to manage HP products within an intranet. HP Web Jetadmin can be located on a server within the intranet and can be accessed from any client workstation with the required permissions.

To download a current version of HP Web Jetadmin and for the latest list of supported host systems, go to the following Web site:

www.hp.com/go/webjetadmin

HP ePrint

HP ePrint is a service that allows you to print directly to certain HP products by sending an e-mail to the product e-mail address. HP ePrint lets you print from any smart phone or computer without installing any special drivers or software.

In order to use HP ePrint, the product Web Services feature must be enabled. Complete the following steps.

1. Print a configuration page and locate the IP address.
2. At the computer, open a Web browser, type the IP address in the address line, and then press the [Enter](#) key. The HP Embedded Web Server (EWS) opens.
3. Click the **HP Web Services** tab.
4. Click the **Enable HP Web Services** button.
5. When the HP Web Services feature is enabled, ePrint information appears in the HP EWS. An e-mail address is automatically assigned to the product. The product also prints an HP Web Services page that contains this e-mail address and instructions for using the service.

HP Print View Software

Use HP Print View software to change various print settings and see immediately how those changes affect your document. When you are satisfied with the print settings, print the job directly from HP Print View to your supported and networked product.

HP Print View 2.0 supports both print and cost estimation.

Download HP Print View Software from the following location:

www.hp.com/go/ihm

HP MFP Send Fax Driver

Use the HP Send Fax Driver to send faxes from your computer via the product if the optional Analog Fax Accessory 500 is installed. After the HP Send Fax Driver is installed, access and use it in the same manner as a printer driver. The HP Send Fax Driver can only be used with network connected printers.

Download the HP MFP Send Fax Driver from the following location:

www.hp.com/go/pcsendfax



NOTE: For complete information about using the HP Send Fax Driver, see the *HP LaserJet MFP Analog Fax Accessory 500 Send Fax Driver Guide*, which can be downloaded from www.hp.com/go/ljanalogfaxaccessory500_manuals. Click **Manuals** from the left navigation bar. It is also available on the software CD.

HP Scan to E-mail Setup Wizard

Use the HP Scan to E-mail Setup Wizard to quickly set up Scan to E-mail functionality. Scan to E-mail increases productivity by enabling documents to be scanned and sent as e-mail attachments to recipient e-mail addresses.

Download the HP Scan to E-mail Setup Wizard from the following location:

www.hp.com/go/scantoemail

HP Save-to-Folder Setup Wizard

Use the HP Save-to-Folder Setup Wizard to quickly set up Scan to Folder functionality. Scan to Folder increases productivity and improves file management by enabling documents to be scanned and saved to specific folders on your PC, which can later be retrieved for archiving, editing, e-mailing and/or re-printing.

Download the HP Save-to-Folder Setup Wizard from the following location:

www.hp.com/go/savetofolder

Font support

The basic fonts listed here are included with Microsoft Windows software.

 **NOTE:** For complete font support information, see the Microsoft Windows documentation.

Basic fonts

Microsoft Windows software includes these basic fonts, which can be used with any HP printing product:

- Arial
- Courier New Italic
- Times New Roman Italic
- Arial Italic
- Courier New Bold
- Times New Roman Bold
- Arial Bold
- Courier New Bold Italic
- Times New Roman Bold Italic
- Arial Bold Italic
- Symbol
- Wingdings
- Courier New
- Times New Roman

HP Driver Deployment Utility

The HP Driver Deployment Utility (HP DDU) was created to simplify the deployment of printer drivers onto a client computer.

It is a simple utility that packages the printer-driver files, and the code needed to deploy them, into two files: an .EXE file and a .CAB file. These files are run on the client computer to copy the printer-driver files to the Windows driver store, and for network packages, to install the product.

For more information, go to the following Web site:

www.hp.com/go/DDU

HP Driver Configuration Utility

The HP Driver Configuration Utility (DCU) is a small Windows application used to edit the configuration file associated with a particular driver. The configuration file controls the printer driver settings and takes effect when the driver is installed.

The HP Driver Configuration Utility does not handle any part of the deployment or installation of the driver. Instead, the default driver configuration file is modified and saved back to the same driver directory in which it was opened (hpcpu*.cf_) or saved to the local host's directory [filename].cfm. After modification of custom settings, the settings become the defaults used during driver installation.

See the HP Universal Print Driver System Administrator's Guide and the HP Driver Configuration Utility documentation for full details on installing and using the utility.

For more information, go to the following Web site:

www.hp.com/go/dcu

3 Install Windows software and utilities

Introduction

The product comes with software and installers for Microsoft Windows and Apple, Inc., Mac systems. Linux and UNIX systems are supported, and software is available on the Web.

This chapter provides procedures for installing and removing the printing-system software for Windows operating systems. The chapter provides information about these topics:

- [Supported operating systems for Windows](#)
- [Install overview](#)
- [Detailed Microsoft Windows installation instructions](#)
- [Use the HP Send Fax Driver](#)
- [Create a network folder by using the Scan Setup Wizard](#)
- [Install optional software](#)
- [Uninstall software](#)



NOTE: If the computer is running a 64-bit Windows operating system, you must install the corresponding 64-bit printer driver.

Supported operating systems for Windows

Windows operating systems provide full-featured support for the product. Operating systems that are not described here provide varying levels of functionality.

Windows XP is used to denote Windows XP Home Edition, Windows XP Professional, and Windows XP Media Edition unless noted otherwise. Windows Vista is used to denote Windows Vista Home Basic, Windows Vista Home Premium, Windows Vista Business, Windows Vista Enterprise, and Windows Vista Ultimate unless noted otherwise. Windows 7 is used to denote Windows 7 Basic, Windows 7 Home Premium, Windows 7 Professional, Windows 7 Enterprise, and Windows 7 Ultimate.

Table 3-1 Windows software component support

	Windows XP SP2 and greater (32-bit and 64-bit)	Windows Server 2003 (32-bit and 64-bit, Service Pack 1 or greater)	Windows Server 2008 (32-bit, 64-bit, and R2 64-bit edition)	Windows Vista (32-bit and 64-bit)	Windows 7 (32-bit and 64-bit)
HP UPD PCL5 driver	x	x	x	x	x
HP UPD PCL6 driver	x	x	x	x	x
HP UPD PS driver	x	x	x	x	x
Discrete PCL6 driver	x	x	x	x	x
Installer CD (Windows/Mac)	x (32-bit only)	x (32-bit only)	x	x	x
HP MPA	x	x	x	x	x
HP DDU	x	x	x	x	x
HP DCU	x	x	x	x	x
HP Printview Software	x			x	
HP MFP Send Fax driver	x	x		x	x
HP Scan Setup Wizard	x	x	x	x	x
HP Email Setup Wizard	x	x	x	x	x

In any of the supported operating systems, you must have administrator privileges to install the product printing-system software.

For more information about the product, go to the following Web site:

www.hp.com/support/ljm4555mfp

System requirements

The system requirements for installing and using the printing-system software for Windows and Mac are as follows:

- Same system requirements for running the supported Windows operating system (OS)
- Latest operating system updates installed through Windows Update
- 200 MB of available hard-disk space
- Mac OS X v10.5, v 10.6, and later with 150 MB of free hard-disk space
- CD drive, DVD drive, or Internet connection
- Dedicated universal serial bus (Hi-Speed USB 2.0) connectivity port or network connection

Printer driver support in other operating systems

The product is also supported in the following operating environments:

- Mac OS X v10.5 or later. For more information, go to the following Web site:
www.hp.com/support/ljm4555mfp_software
- Linux. For more information, go to the following Web site:
www.hplip.net
- UNIX. For more information, go to the following Web site:
www.hp.com/go/jetdirectunix_software
- UNIX model scripts. Available *only* on the Web at the following Web site:
www.hp.com/go/unixmodelscripts.
- Citrix and Windows Terminal Services. For more information, go to the **Documentation** tab and to the UPD main page for PCL6, PCL5 and PS drivers at the following Web site:
www.hp.com/go/upd
- Novell. For more information, go to the following Web site:
www.novell.com/iprint
- SAP printing. For more information, go to the following Web site:
www.hp.com/go/sap/drivers

Install overview

The product software comes on a single CD. The software installer first checks the versions of Windows Installer and Microsoft .NET installed on the system, and then installs the printing-system software from the CD onto the hard disk and updates Windows files.

Depending on the configuration of your computer as well as the installation method selected, the following components might be installed during the printing-system software installation:

- PCL 6 printer driver
- *HP LaserJet Enterprise M4555 MFP Series User Guide*
- HP LaserJet Enterprise M4555 MFP Series Help & Learn Center
- Uninstall utility

For all of the supported platforms, each install option presents a series of query dialog boxes that guide you through the installation process.

Software Installer system check

The software installer checks the computer system to ensure that the following Windows features are the correct version to support the printing-system components.

Microsoft Windows Installer 3.1

When the user starts the installation process, the product software installer checks the computer system to determine the version number of the Windows Installer currently on the system. If the product software installer detects that the Windows Installer version is prior to version 3.1, a dialog box appears alerting the user that the Windows Installer must be updated. The user must click the **OK** button to continue. The product software installer then updates the Windows Installer and continues the printing-system installation process.

To determine which version of Windows Installer is currently running on the computer, follow these instructions.

1. For Windows 7 and Windows Vista, click the **Start** button, click the **Control Panel** option, and then click the **Programs** option.

For Windows XP, Windows Server 2003, and Windows Server 2008, click the **Start** button, click the **Control Panel** option, and then double-click the **Add/Remove programs** option.

2. Scroll down until you find the **Windows Installer** item.

Software installation types for Windows

The product printing-system software can be installed in the following ways:

- HP LaserJet Enterprise M4555 MFP Series printing-system installer (Recommended)
- Microsoft Found New Hardware Wizard (Plug and Play installation)

Installation options

The printing-system software can be used with the product in the following configurations:

- Install the printing-system software on a computer that is directly connected to the product through a USB port.
- Install the printing-system software on a computer that has access to a wired network to which the product is connected.

Detailed Microsoft Windows installation instructions

The dialog boxes shown here appear in the Windows XP Professional installation sequence. The order and appearance of dialog boxes can vary among operating systems.

Perform the recommended printer driver installation using the installation CD

The recommended installation installs the PCL 6 printer driver, the user guide, and the HP Help & Learn Center.

A series of dialog boxes appear during installation of the product printing-system software in Windows environments.



NOTE: You can return to the previous dialog box by clicking the **Back** button, or exit the printing-system software installation by clicking the **Cancel** button.


1. Close all programs.
2. Insert the printing system software CD into the CD-ROM drive. The software installer detects the operating system language, and then displays the CD browser main menu in the same language.

If the installer program has not started after 30 seconds, complete these steps:

- a. On the **Start** menu, click the **Run** option.
- b. In the text box, type `X:\SETUP.EXE` (where X is the letter of the CD-ROM drive).
- c. Click the **OK** button.

3. In the opening screen, read the license agreement, select the **I have reviewed and accept the installation agreements** check box, and then click the **Next** button.


Figure 3-1 Windows software installation — Opening screen

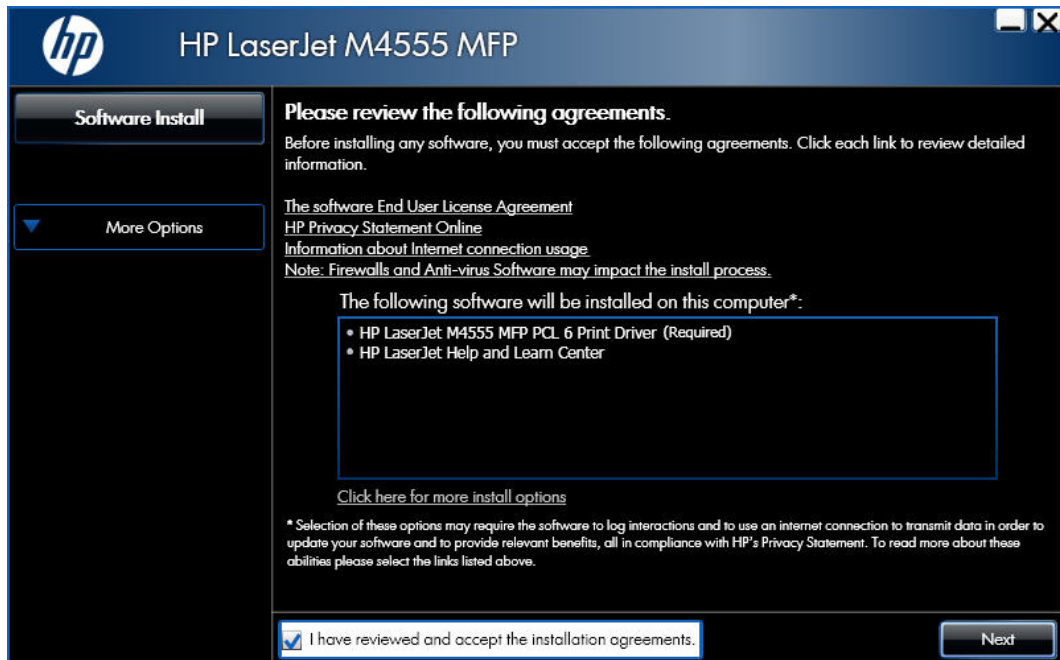

The installer program prepares the installation process and displays a progress bar.

4. In the **Connection Type** screen, select a connection type option, based on how the product connects to the computer.

Figure 3-2 Windows software installation — Connection Type screen for USB connection

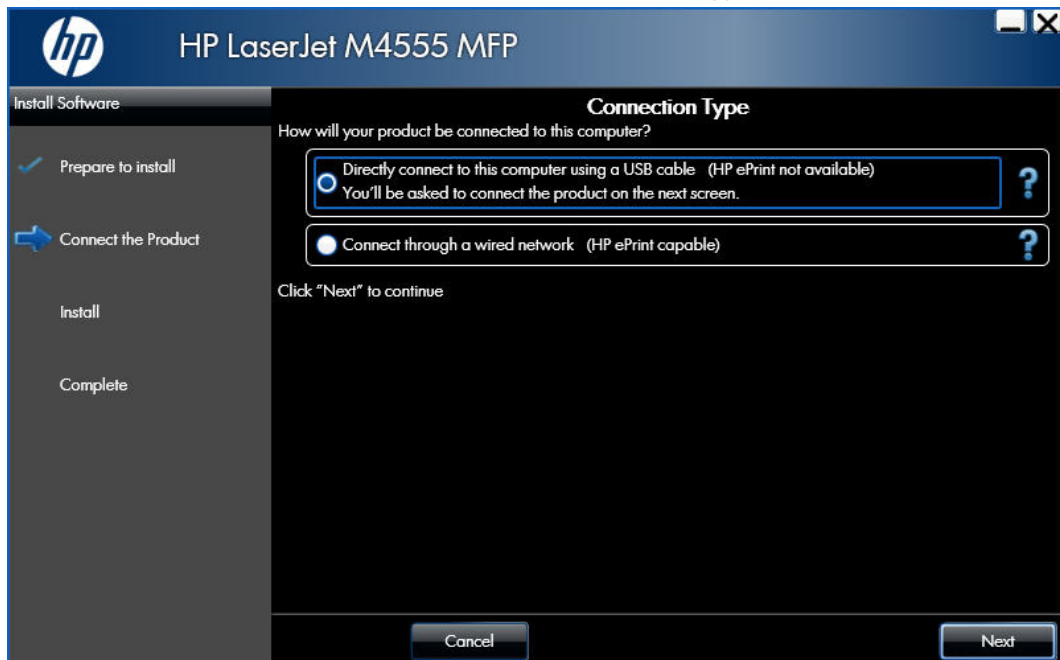


- For USB connected products, follow these steps:
 - a. Select the **Directly connect to this computer using a USB cable** option, and then click the **Next** button.
 - b. Connect the USB cable to the product and to the computer when prompted at the **Connect your Product now** screen, and then click the **Next** button .

Figure 3-3 Windows software installation — Connect your Product now screen



- For wired network connected products, follow these steps:
 - a. Select the **Connect through a wired network** option.

Figure 3-4 Windows software installation — Connection Type screen for network connection

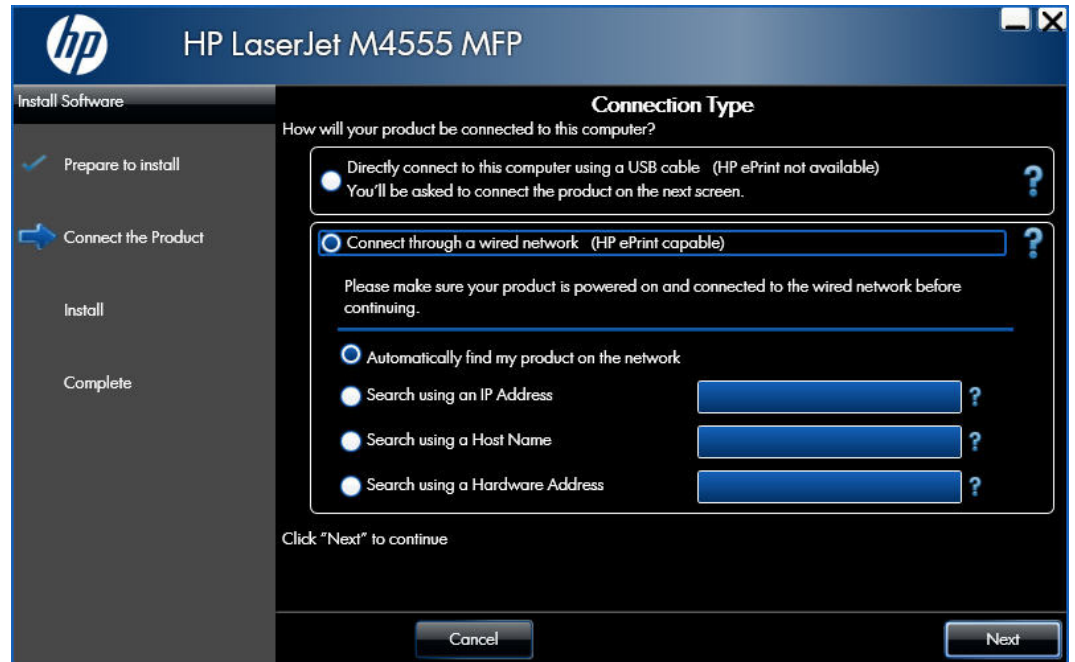


- b. If the product's network settings *are not* known, select the **Automatically find my product on the network** option.

If the product's networking settings *are* known, enter the product IP address, host name, or hardware address.

- c. Click the **Next** button.

- d. A list of products appears on the **Network Product(s) Found** screen. Select the product to install, and then click the **Next** button


Figure 3-5 Windows software installation — Network Product(s) Found screen for network connection

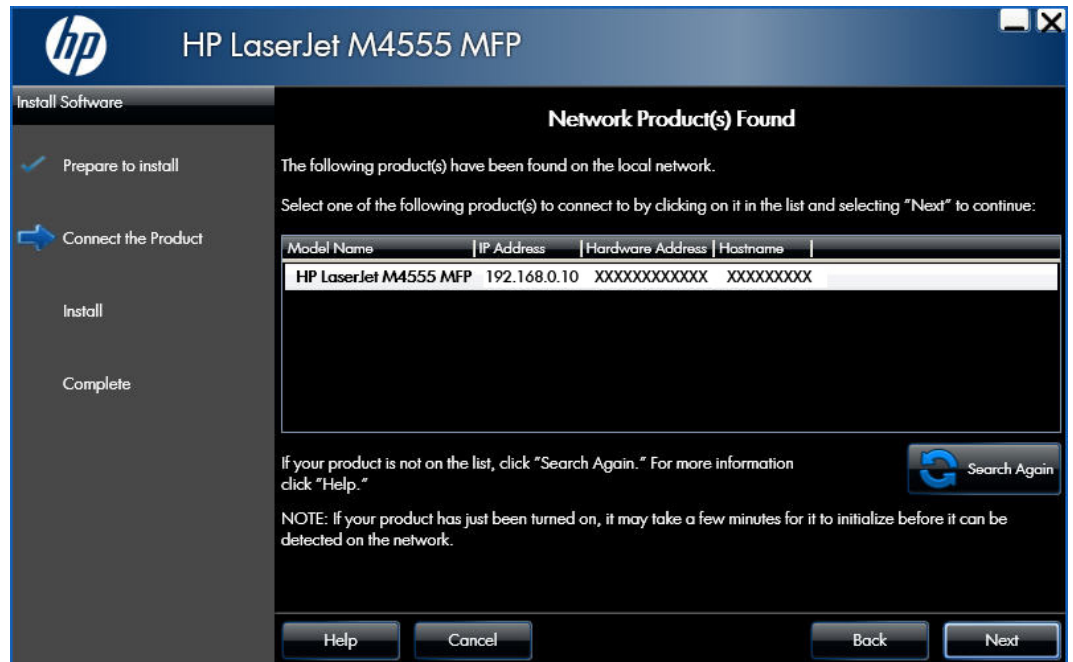

5. When the installation completes, the following screen appears.

Register the product by selecting the **Register this product with HP** check box, make this product the default printer by selecting the **Set as default printer** check box, and send a test page to the product by selecting the **Print a test page** check box.

Figure 3-6 Windows software installation — installation complete

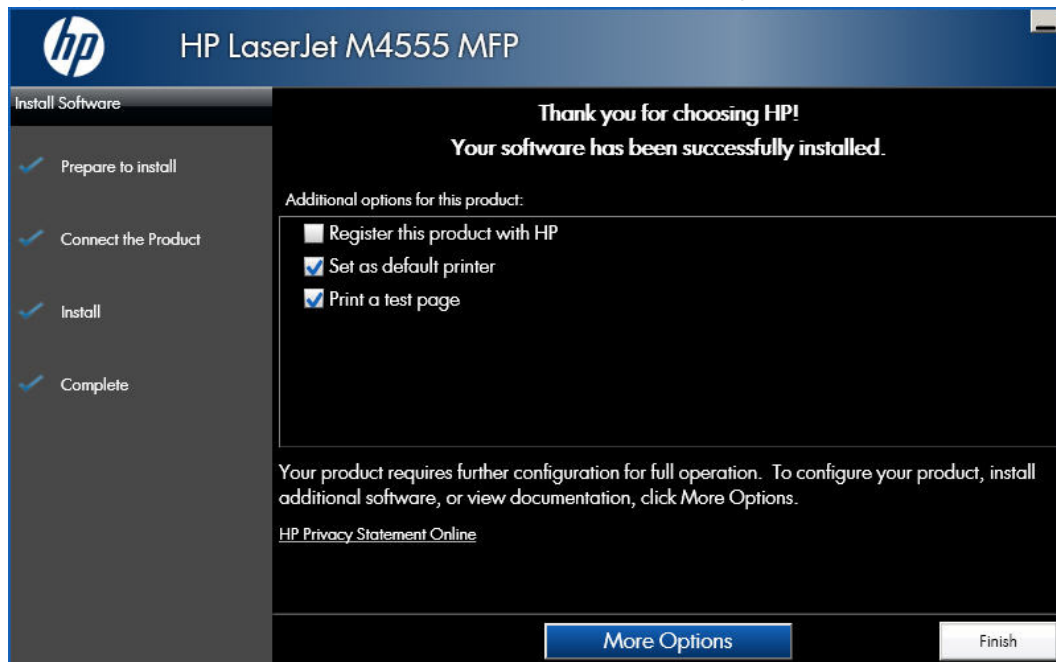

6. Click the **Finish** button to complete the installation.
7. An Eprint dialog box opens.
 - To set up an HP ePrint account, click the link.
 - To close the dialog box, click the **X** in the upper right-hand corner of the dialog box.

Figure 3-7 HP ePrint dialog box



When you are finished with the installation, click the **More Options** button to open the **More Options** screen.

Figure 3-8 More Options screen



Use the options available on this screen to install additional product software and documentation.

Use the Back, Next, Finish, and Cancel buttons

The following buttons appear on various dialog boxes during the installation process.

- **Back.** Click this button to return to the previous dialog box.
- **Next.** After you select any options on a given screen, click this button to proceed to the next step in the installation sequence.
- **Finish.** Click this button to complete the installation process and proceed to the **Additional Options** screen.
- **Cancel.** Click this button to exit the installer without installing the product.

Set a default printer

1. In Windows Vista and Windows 7, click the **Start** button, click **Control Panel**, and then click **Hardware and Sound**. Under the **Printers** section, click the **Change default printer** item.

In Windows XP, Windows Server 2003, and Windows Server 2008, click **Start**, click **Control Panel**, and then click the **Printers and Faxes** (Windows XP Professional) or **Printers and other hardware devices** (Windows XP Home) item.
2. Right-click the product that you want to set as the default printer.
3. Click the **Set As Default** item. A check mark appears next to the product set as the default.

Use the HP Send Fax Driver

Use the HP Send Fax Driver to send faxes from your computer via the product if the optional Analog Fax Accessory 500 is installed. After the HP Send Fax Driver is installed, it can be accessed and used in the same manner as a printer driver. The HP Send Fax Driver can only be used with network connected printers.



NOTE: For complete information about using the HP Send Fax Driver, see the *HP LaserJet MFP Analog Fax Accessory 500 Send Fax Driver Guide*, which can be downloaded from www.hp.com/go/ljanalogfaxaccessory500_manuals. Click **Manuals** from the left navigation bar. It is also available on the User CD.

Download the HP Send Fax Driver

Use the following steps to download the HP Send Fax Driver:

1. Click the **More Options** menu on the software CD.
2. Click the **Get Specialized Drivers** button.
3. Click the **HP Send Fax Driver (Online)** button to navigate to the download page.
4. Click the **Download** button.
5. In the dialog box that opens, click the **Save** button.
6. In the **File Name** text box on the **Save As** dialog box that opens, type the location on your computer where you want to save the self-extracting Send Fax Driver file.
7. Click the **Save** button.
8. After the file has been downloaded, close the **File Download** dialog box if necessary.

Install the HP Send Fax Driver

You can install the HP Send Fax Driver by using either the HP Driver Installation Utility (HP DIU) or the Windows Add Printer Wizard. The HP DIU is included with the downloaded driver. Installing the HP Send Fax Driver by using the HP DIU is the same process as installing from the Admin CD.

HP Driver Installation Utility (HP DIU)

To install the HP Send Fax Driver by using the HP Driver Installation Utility (HP DIU), use the following steps:


1. In Windows Explorer, double-click the downloaded HP Send Fax Driver executable file to extract the driver files. A folder is created containing the HP Send Fax Driver files.
2. Browse to the location of the HP Send Fax Driver folder, and then double click the **HPDIU.EXE** file. The HP Driver Installation Utility (HP DIU) opens to the License Agreement.



NOTE: If installing from the Admin CD, click the **Advanced Install Options** button and then click the **Install HP MFP Send Fax Driver** button.

3. After reading the license agreement, click the **Accept** button to continue to the **Device Connection** screen.

Figure 3-9 Send Fax Driver Installation–License Agreement screen

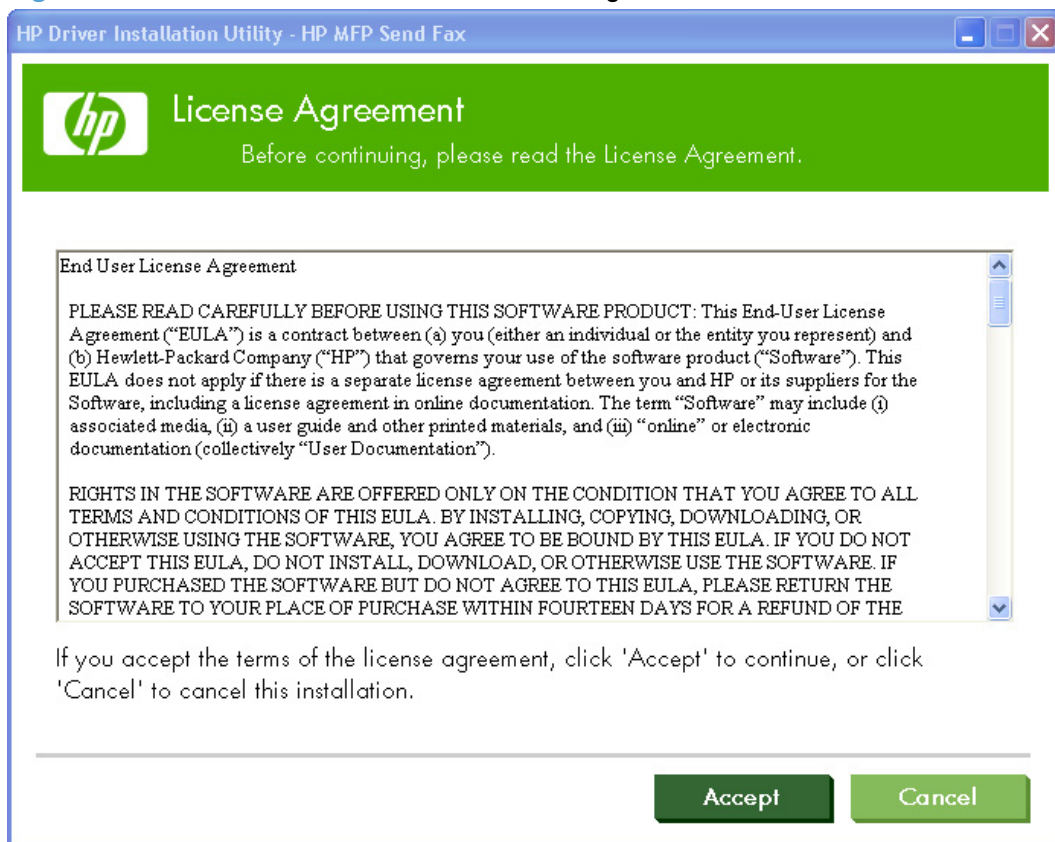


4. Select **Connected via the network**.

- If the product's networking settings are known, you can enter either the **Host Name**, **IP Address**, or the **Hardware Address**, and then click the **Install** button. Once the software is installed, the **Driver Installation Complete** screen appears.
- If the product's network settings are not known, click the **Help me find my device on the network** button. A **Discovery in Progress** window appears. After the computer searches the network, the **Devices Found** screen appears.

 **NOTE:** The product name is HP MFP Send Fax when the HP Send Fax Driver is installed on a local product.


The HP Send Fax Driver cannot be installed on a product that is connected to the computer via a USB port. It must be on a network.

Figure 3-10 Send Fax Driver Installation–Device Connection screen

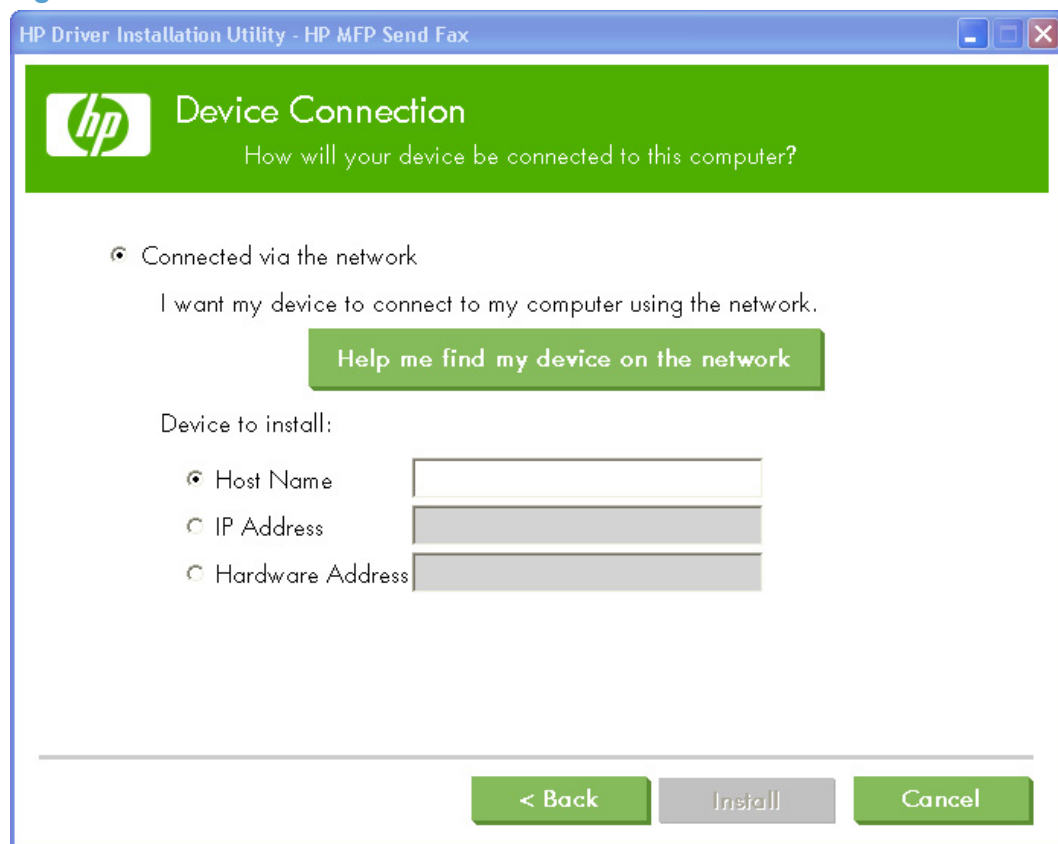


5. A list of products is displayed. Select the product you want to install, and then click the **OK** button to continue to the **Device Connection** screen.

Figure 3-11 Send Fax Driver Installation–Devices Found screen

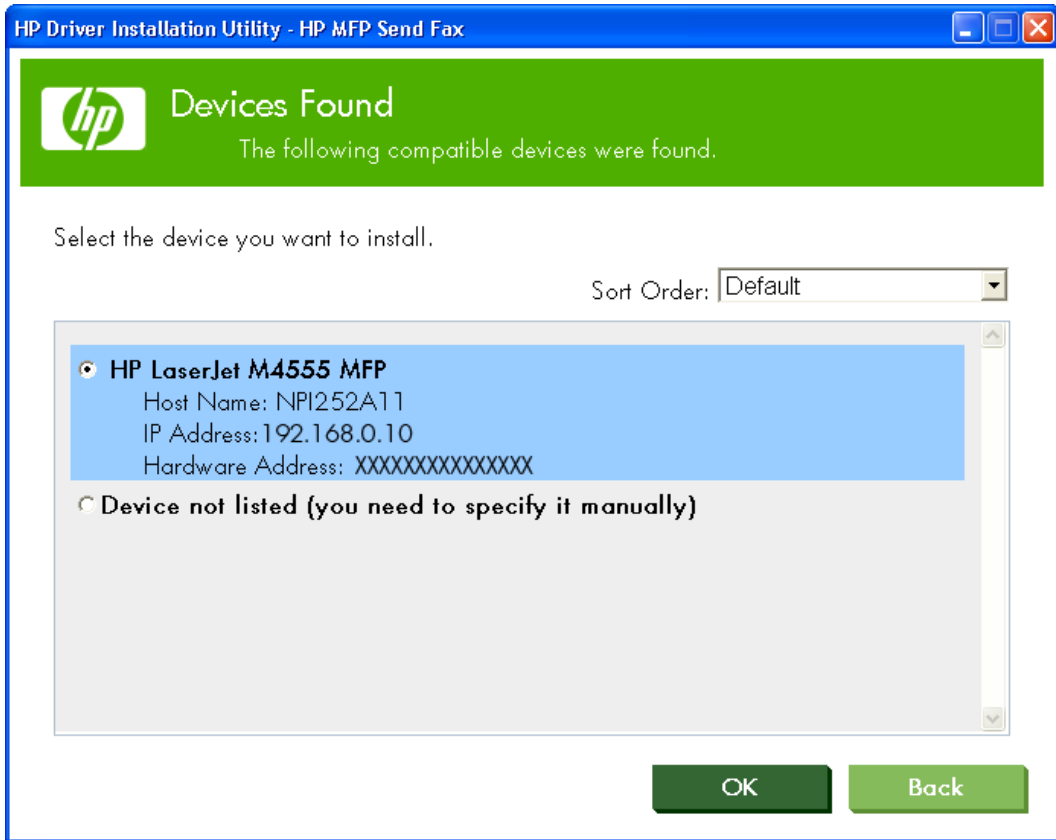


6. The network settings (**Host Name**, **IP Address**, and **Hardware Address**) for the product are displayed. Click the **Install** button. Once the software is installed, you will continue to the **Device Installation Complete** screen.

Figure 3-12 Send Fax Driver Installation–Device Connection screen

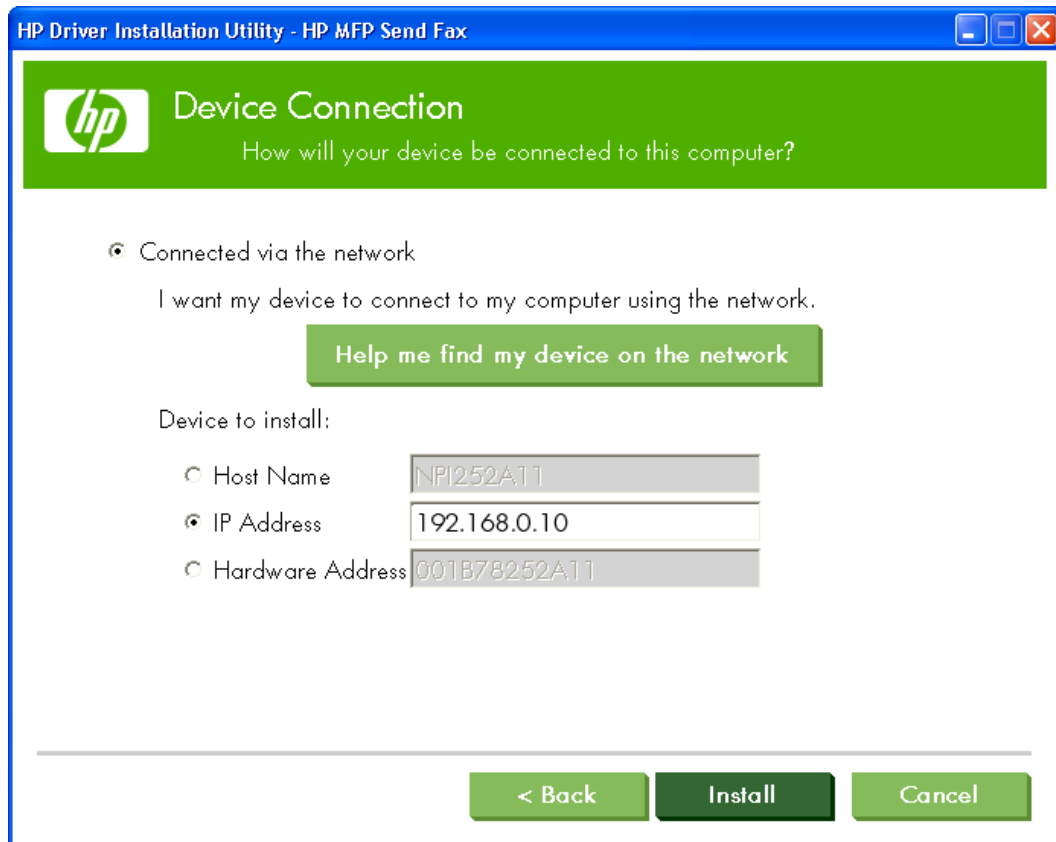

7. The following screen appears once the software is installed. Click the **Finish** button to complete the installation.

Figure 3-13 Send Fax Driver Installation–Device Installation Complete screen

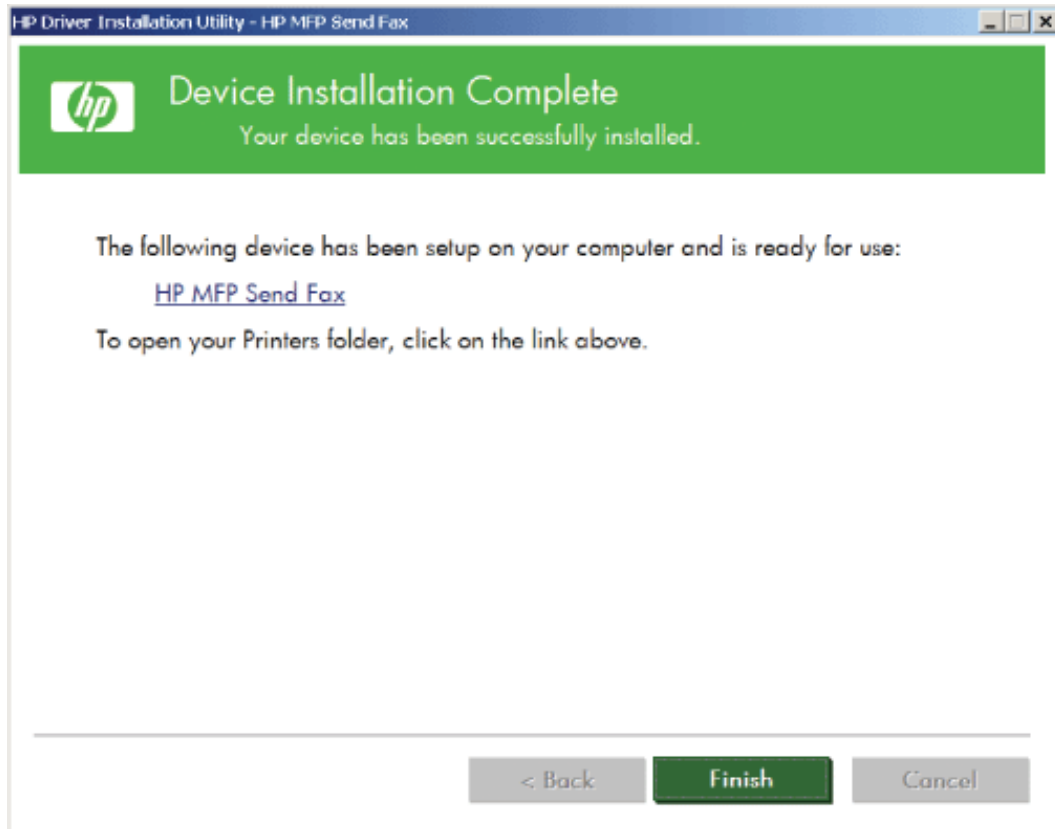

Add Printer Wizard

To install the HP Send Fax Driver by using the Windows Add Printer Wizard, use the following steps:

1. In Windows Explorer, double-click the downloaded HP Send Fax Driver executable file to extract the driver files.
2. On the **Start** menu, click **Settings**, and then do one of the following:
 - **Windows XP Professional and Windows Server 2003:** Click **Printers and Faxes**.
 - **Windows Vista:** Under the **Hardware and Sound** category, click the **Printer** item.
 - **Windows 7:** Under the **Hardware and Sound** category, click the **View Devices and Printers** item.
3. Click **Add a printer**.
4. Click the **Next** button on the **Add Printer Wizard** welcome screen.

5. Select **Local printer attached to this computer**, and then click the **Next** button.


 **NOTE:** The printer name is HP MFP Send Fax when the driver is installed on a local product.

Select **Local printer attached to this computer** to install the HP Send Fax driver on a network printer.

If you select the **A network printer, or a printer attached to another computer** option (Point and Print installation), the IP address of the computer is required. Some features, such as fax preview, are not available if the driver is installed by using the network printer installation.


The HP Send Fax Driver cannot be installed on a product that is connected to the computer via a USB, serial, or parallel port. It must be on a network.

Figure 3-14 Send Fax Driver Installation — Local or Network Printer screen

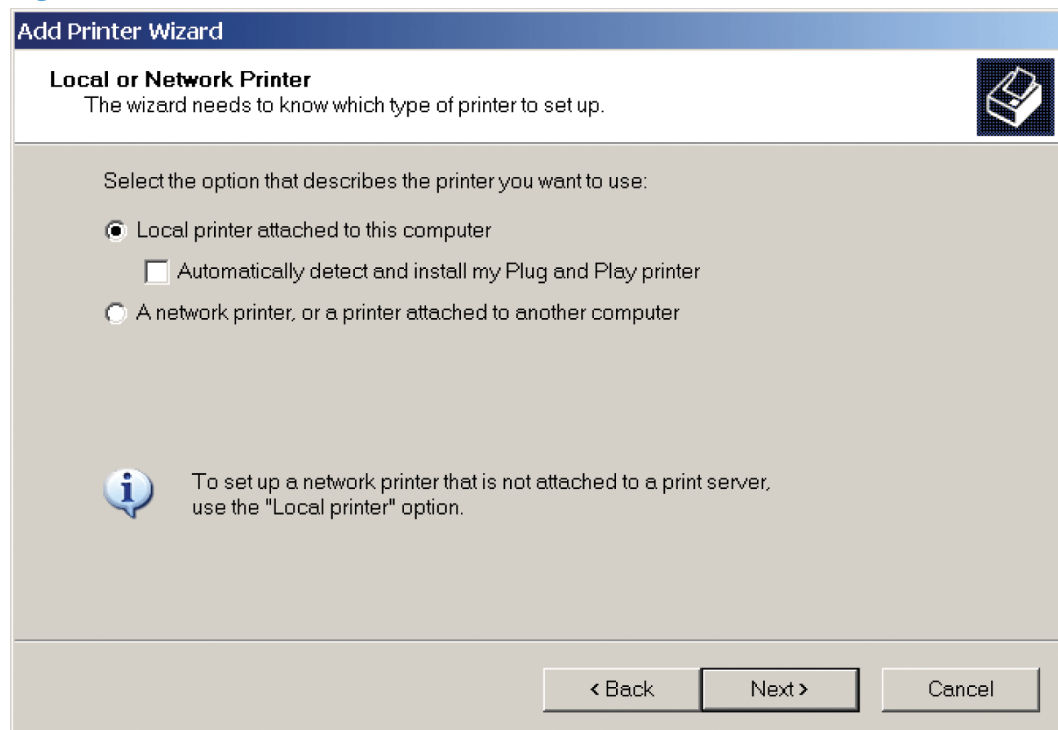


6. Select the product name, print path, or IP address of the product from the **Use the following port:** drop-down list, and then click the **Next** button.

Figure 3-15 Send Fax Driver Installation — Select a Printer Port screen

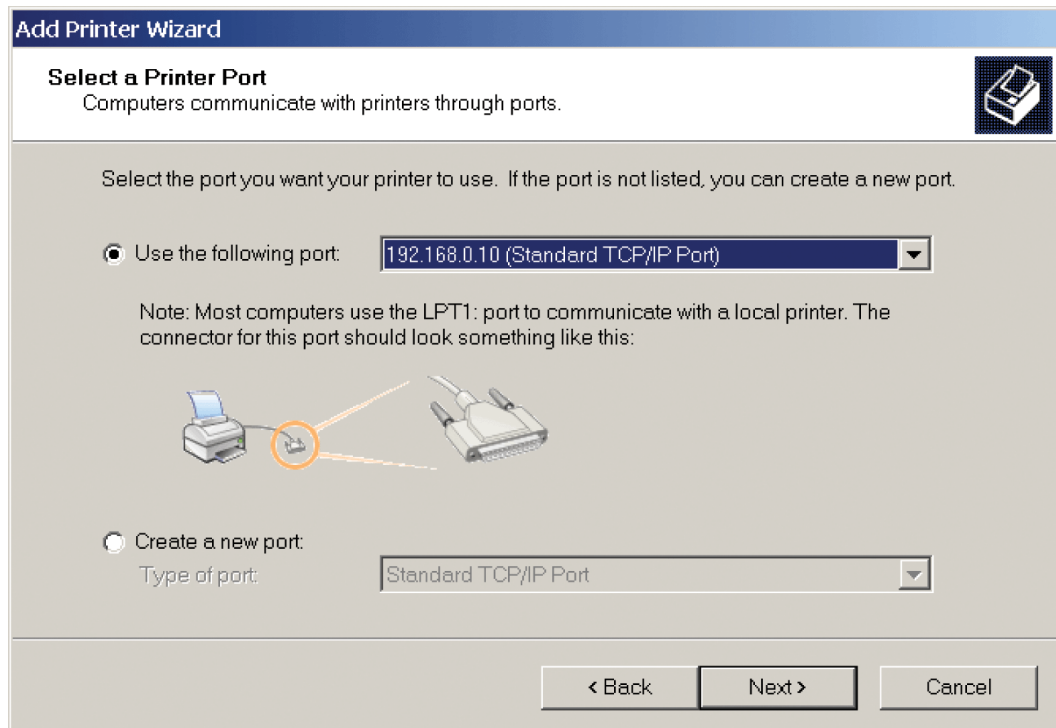


7. Click the **Have Disk...** button.

Figure 3-16 Send Fax Driver Installation — Install Printer Software screen

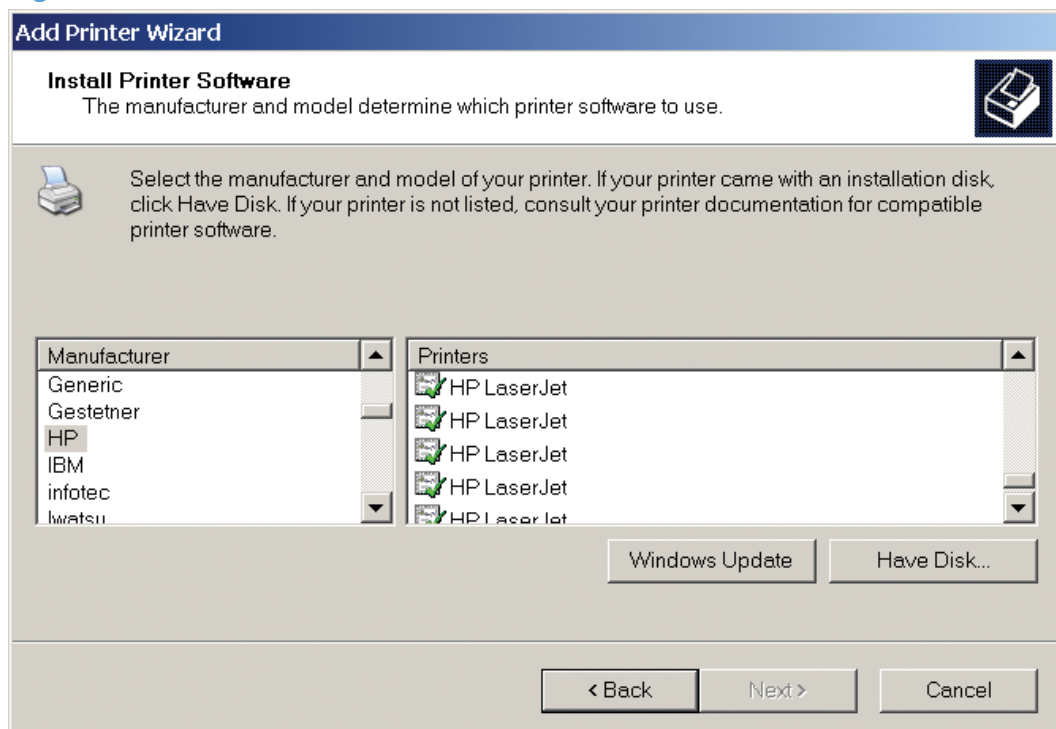


8. Click the **Browse...** button.

Figure 3-17 Send Fax Driver Installation — Install From Disk screen

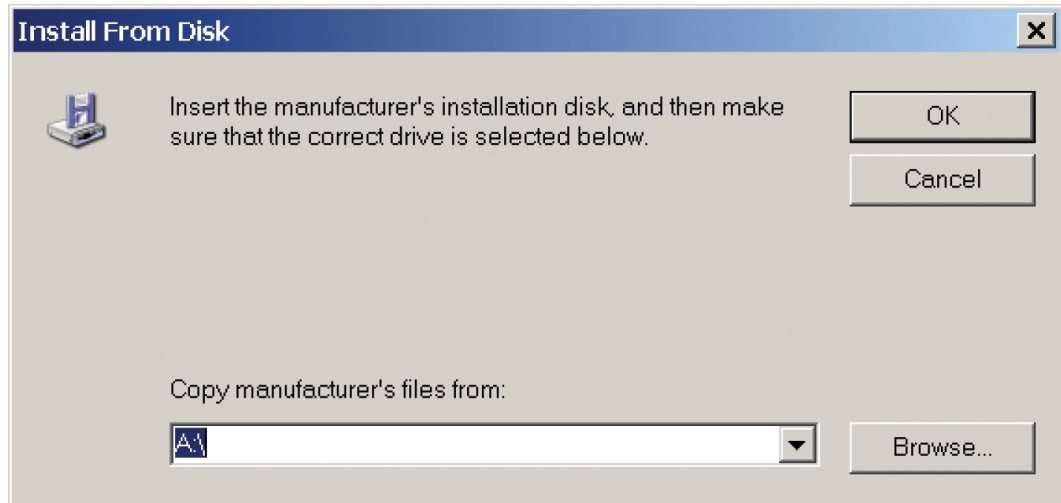

9. Navigate to and select the HP Send Fax Driver .INF file.


 **NOTE:** Different versions of the .INF file are available: a 32-bit version for Windows XP, Windows Server 2003, Windows 7, and Windows Vista; and a 64-bit version for Windows XP Professional x64, Windows Server 2003 x64, Windows 7 x64, and Windows Vista x64.

The following message displays if you select the wrong version of the file: **The specified location does not contain information about your printer.**

10. Click the **Open** button.
11. Click the **OK** button.
12. Click the **Next** button.

13. Type a name for the driver in the **Printer name:** text box, and then click the **Next** button. The default name is HP MFP Send Fax.

Figure 3-18 Send Fax Driver Installation — Name Your Printer screen

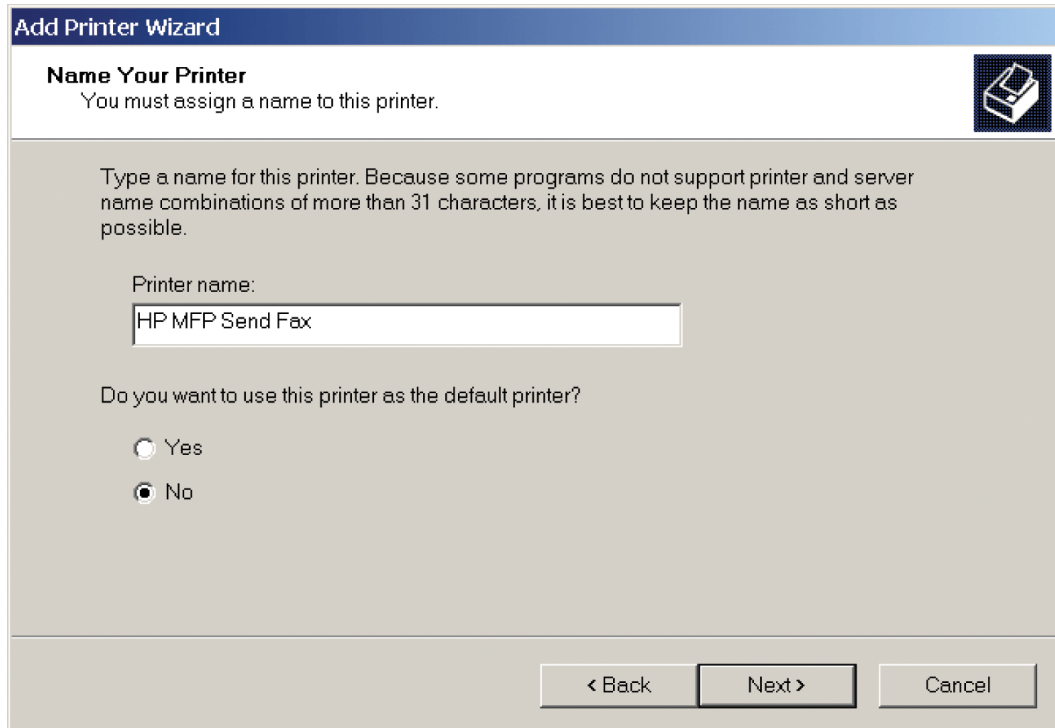

14. Select an option, and then click the **Next** button.


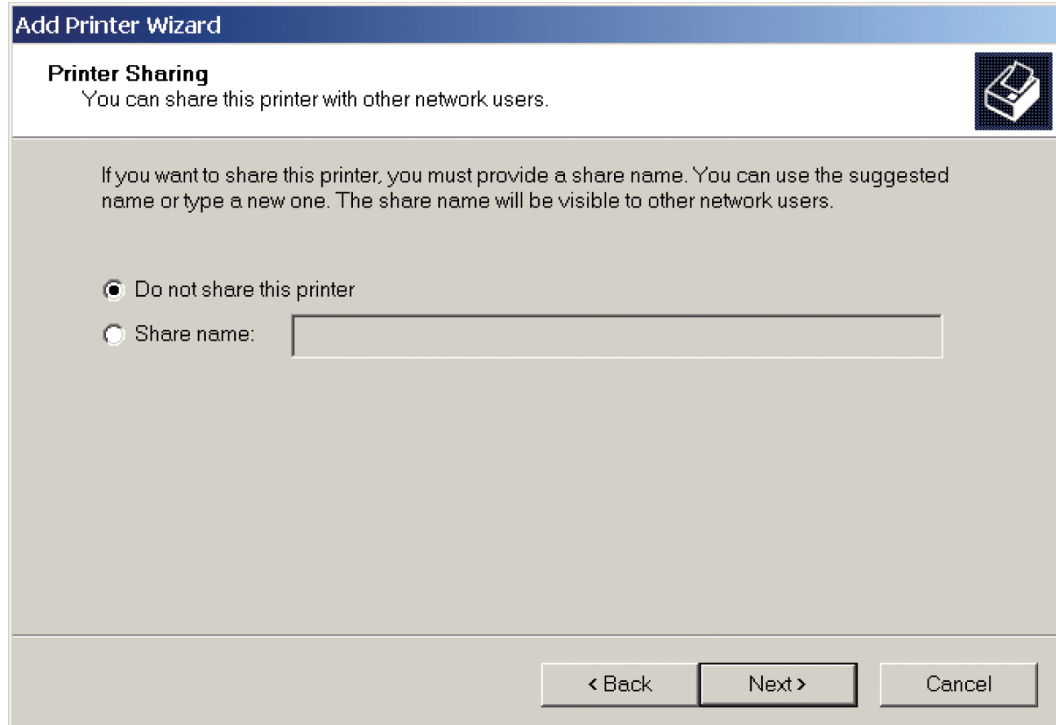
 **NOTE:** You can share the product by selecting **Share name:** on the **Printer Sharing** screen. The HP Send Fax Driver is then available for a Point and Print connection. Some features, such as fax preview, are not available if the driver is accessed by using a Point and Print connection.

Figure 3-19 Send Fax Driver Installation — Printer Sharing screen



15. Select either **Yes** or **No** to send a test fax, and then click the **Next** button.


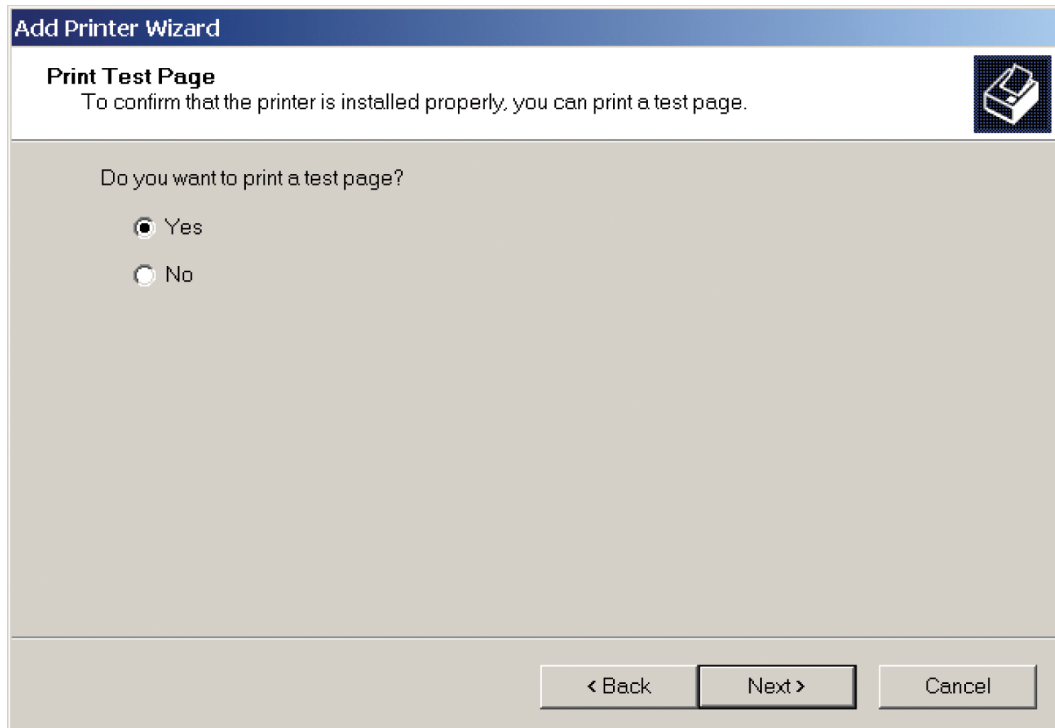

 **NOTE:** If you select **Yes**, the HP Send Fax Driver opens once the installation is complete. No page is printed from the product; however, a fax is sent.

Figure 3-20 Send Fax Driver Installation — Print Test Page screen



16. Click the **Finish** button to complete the wizard.

Create a network folder by using the Scan Setup Wizard


 **NOTE:** You can return to the previous dialog box by clicking the **Back** button, or exit the Scan Setup Wizard by clicking the **Cancel** button.

1. Insert the software CD in the CD-ROM drive to open an interactive CD Browser.
If the CD Browser does not open, follow these steps:
 - a. On the **Start** menu, click **Run**.
 - b. Type the following: X:\SETUP.EXE (where X is the letter of the CD-ROM drive).
 - c. Click **OK**.
2. Click **Configure Product**, and then click the **Scan Setup Wizard** button from the main screen of the CD Browser.
3. Click the **Install Scan Setup Wizard** button.

4. If the product's networking settings are known, enter the **Host name** or **IP Address** into the appropriate text box, and then click the **Next** button to continue to the **Contacting Device** screen.


If the product's network settings are not known, click the **Search** button. A **Discovery in Progress** window appears. After the computer searches the network, the **Devices Found** screen appears.

Figure 3-21 Scan Setup Wizard — Welcome screen

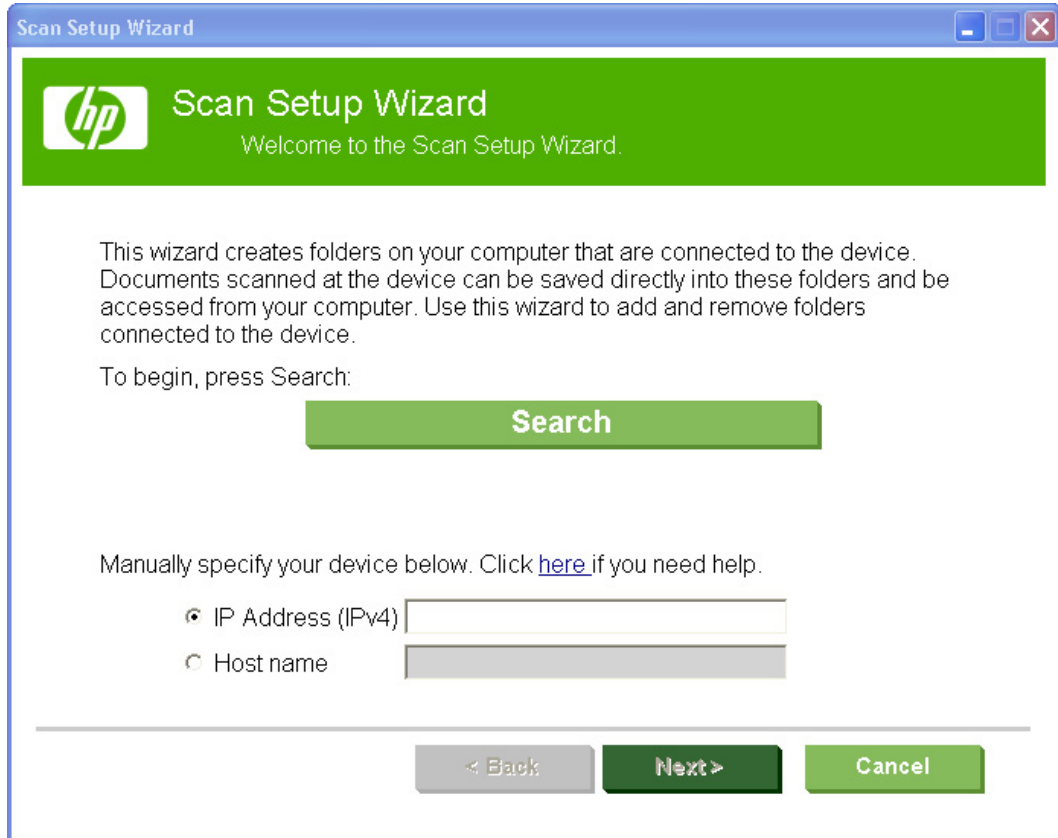


5. A list of HP LaserJet Enterprise M4555 MFP Series products is displayed. Select the product you want to install and then click **OK** to continue to the **Network Settings** screen.

Figure 3-22 Scan Setup Wizard — Devices Found screen

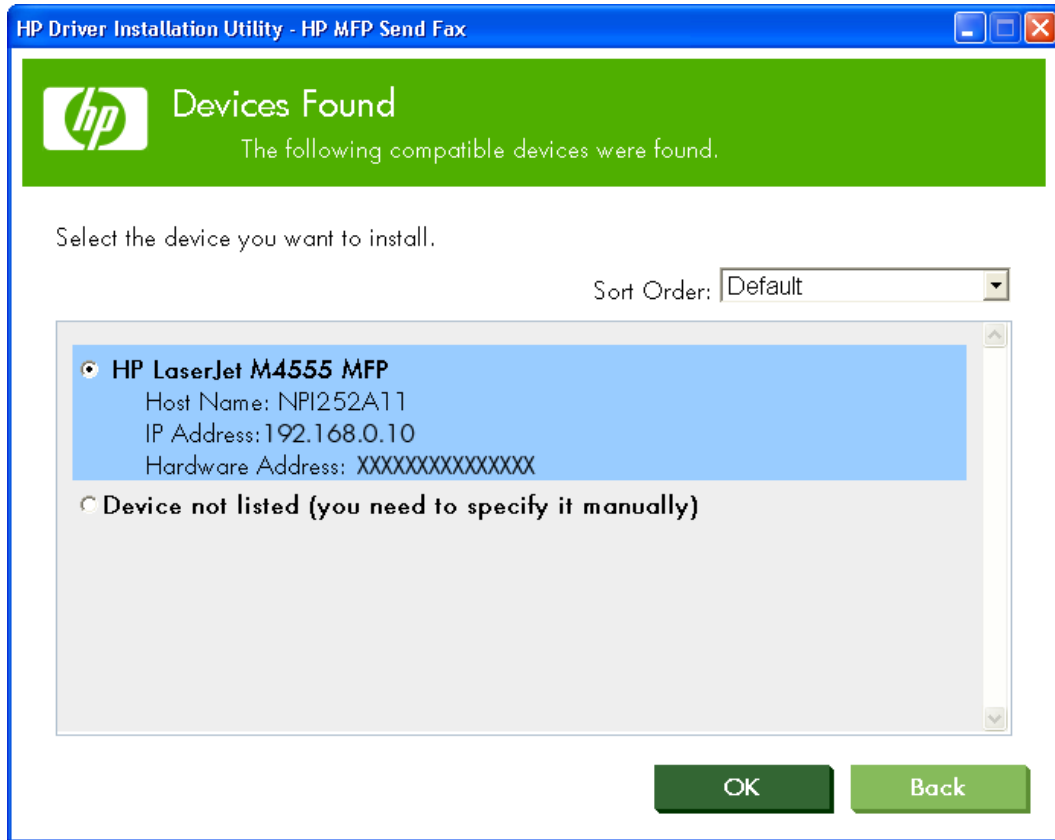

6. The product's network settings (**IP Address** and **Host name**) are displayed. Click the **Next** button to continue to the **Contacting Device** screen.

Figure 3-23 Scan Setup Wizard — Welcome screen

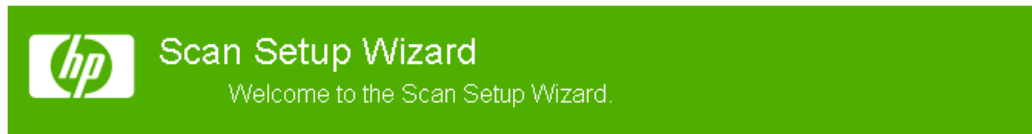

This wizard creates folders on your computer that are connected to the device. Documents scanned at the device can be saved directly into these folders and be accessed from your computer. Use this wizard to add and remove folders connected to the device.

 
To begin, press Search:




Manually specify your device below. Click [here](#) if you need help.

IP Address (IPv4)

Host name



7. The computer communicates with the product, and then you continue to the **Add or Remove Folders** screen.


 **NOTE:** If the **Scan to Desktop has been disabled in the EWS** error message appears, open the HP EWS, click the **Device Settings** tab, click the **Send to Folder** menu item, and then select both the **Enable Send to Folder** and the **Enable Scan Setup Wizard** check boxes. You might also need to close and reopen the Scan Setup Wizard.

To gain access to the HP EWS, perform the following:

- a. Make note of the TCP/IP address of the product on the Embedded Jetdirect Page. The Embedded Jetdirect Page is the second page of the configuration page printout.


To print a configuration page from the product control panel, perform the following:

- i. Touch the **Administration** button.
- ii. Touch the **Information** button.
- iii. Touch the **Configuration/Status Pages** item.
- iv. Touch the **Configuration Page** item.
- v. Touch the **Print** button.

 **NOTE:** If the product contains an HP Jetdirect EIO print server or an optional hard disk drive, additional configuration pages print that provide information about those options.


- b. Open a Web browser window.
- c. In the address line of the browser, type `ftp://<IPADDRESS>`, where `<IPADDRESS>` is the TCP/IP address of your product. For example, if the TCP/IP address is 192.168.0.10, type `ftp://192.168.0.10`.
- d. Press the **Enter** button.

Figure 3-24 Scan Setup Wizard — Contacting Device screen

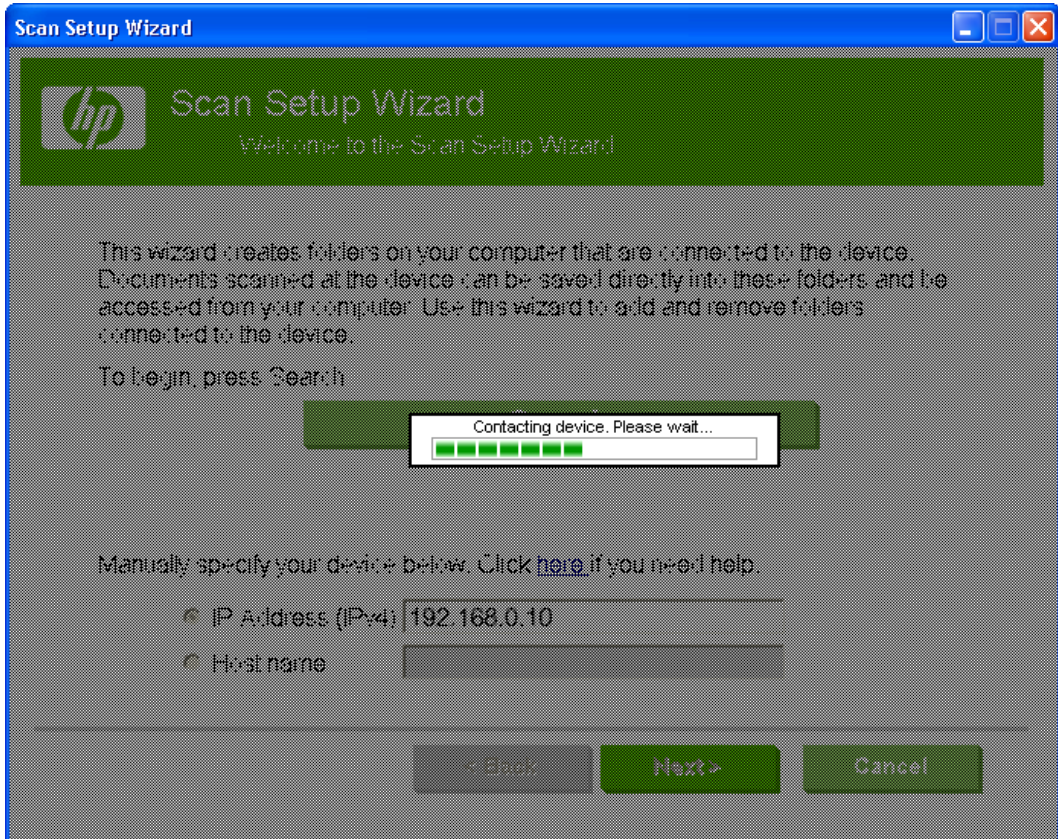


8. Select the **Add a Network Scan Folder to the Device** option, and then click the **Next** button to continue to the **Folder Name** screen.

Figure 3-25 Scan Setup Wizard — Add or Remove Folders screen

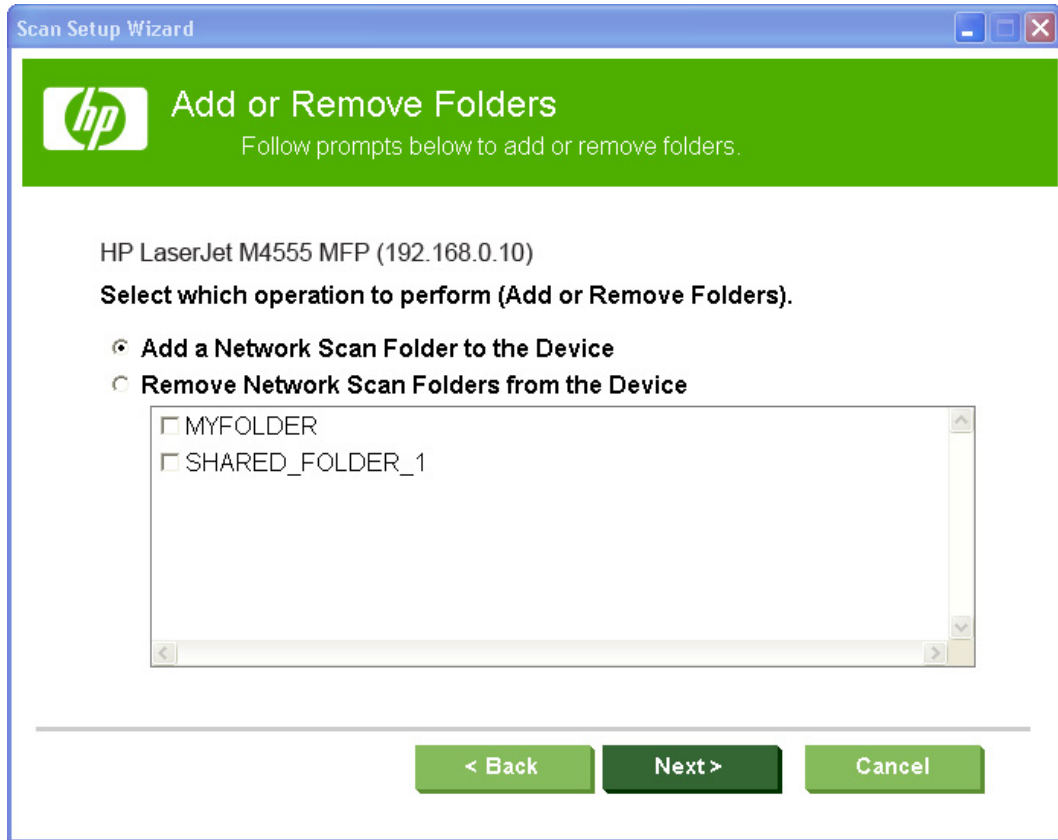

9. Specify the folder name and location of the folder, and then click the **Next** button. Once the folder has been created, you will continue to the **Authentication** screen.
 - You can either type a folder name in the **Enter the folder name here:** text box, or use the default folder name.
 - You can either click the **Browse...** button and navigate to the path where scanned documents will be stored, or enter the path in the Location text box.
 - To create a shortcut, select the **Create a shortcut to this folder on my desktop** check box.

Figure 3-26 Scan Setup Wizard — Folder Name screen

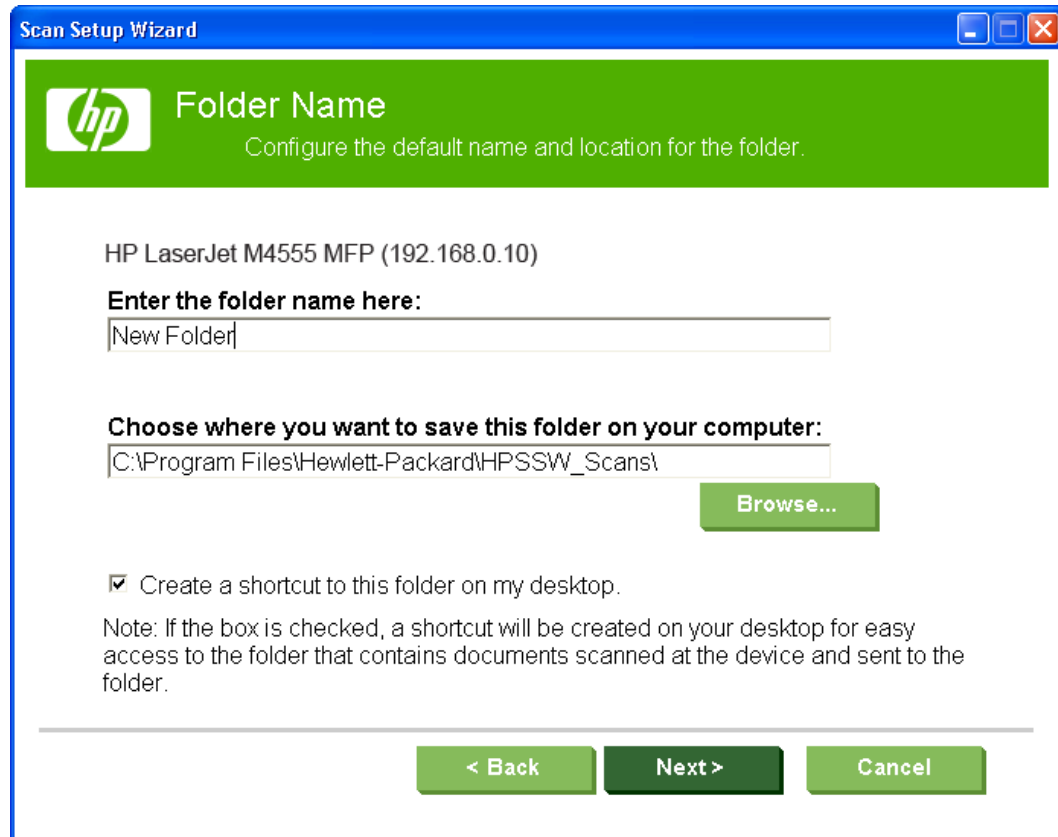

10. Complete one of the following steps:
 - To require users to enter their credentials at the product, clear the **Save password on device** check box, and then click the **Next** button to continue to the **Folder Settings** screen.
 - To use default credentials (users do not enter their credentials at the product), select the **Save password on device.** check box and type the necessary information in the **Domain:**

User Name:, and **Password:** text boxes. Click the **Next** button to continue to the **Folder Settings** screen.

Figure 3-27 Scan Setup Wizard — Authentication screen

Scan Setup Wizard

hp Authentication
Configure user credentials.

Enter your password so you will not need to sign in at the device each time you scan.

Save password on device.

Domain:

User Name:

Password:

< Back Next > Cancel

11. Select the default scan settings from the drop-down lists and then click the **Next** button to continue to the **Summary** screen.

Figure 3-28 Scan Setup Wizard — Folder Settings screen

Scan Setup Wizard

hp Folder Settings
Configure the default options for the folder.

Enter the default scan settings that you want to use when scanning to this folder.

Scan Type: Color Scan

Resolution: 150 dpi

Document Type: PDF


Quality: Medium

< Back Next > Cancel

12. The **Summary** screen lists the details of the folder created: the name of the computer where the folder was created, the name of the folder, and the name of the desktop shortcut link to the folder that was created on the computer.


To complete the creation of the folder, click **Create**. To make changes to the folder settings, click **Back**.

Figure 3-29 Scan Setup Wizard — Summary screen

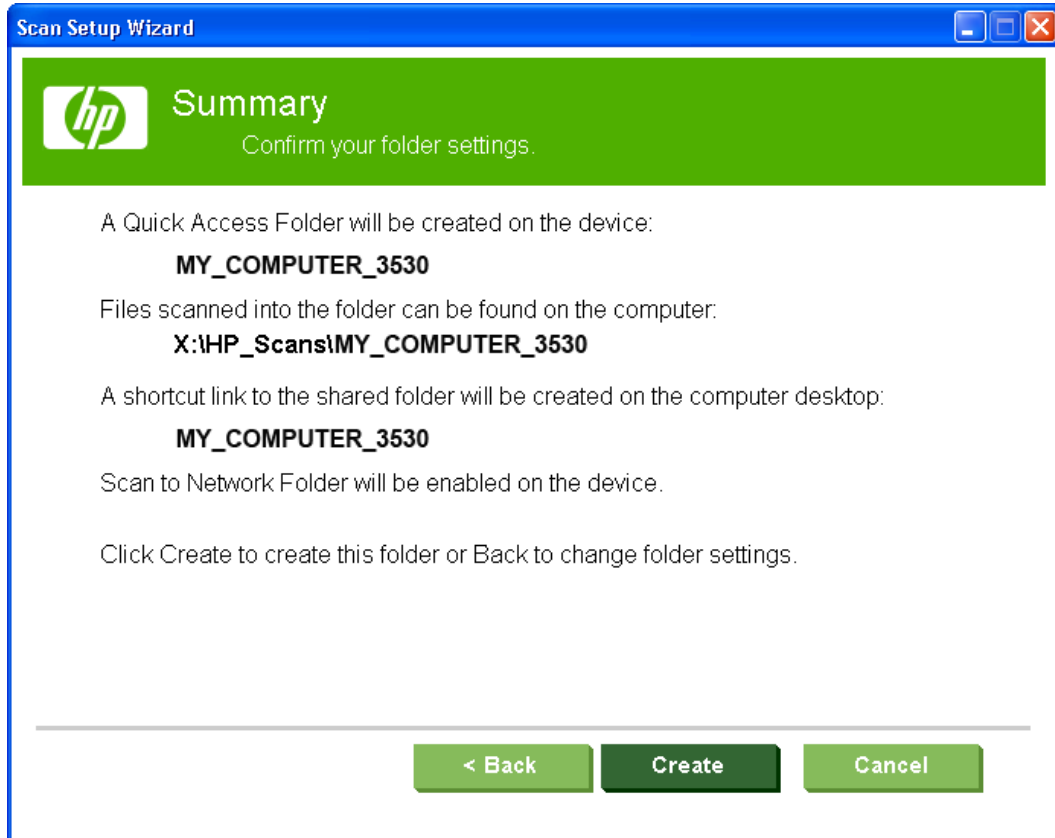

13. Click the **Add or Remove Folders** button to add another folder, or click the **Finish** button to exit the Scan Setup Wizard.

Figure 3-30 Scan Setup Wizard — Complete screen

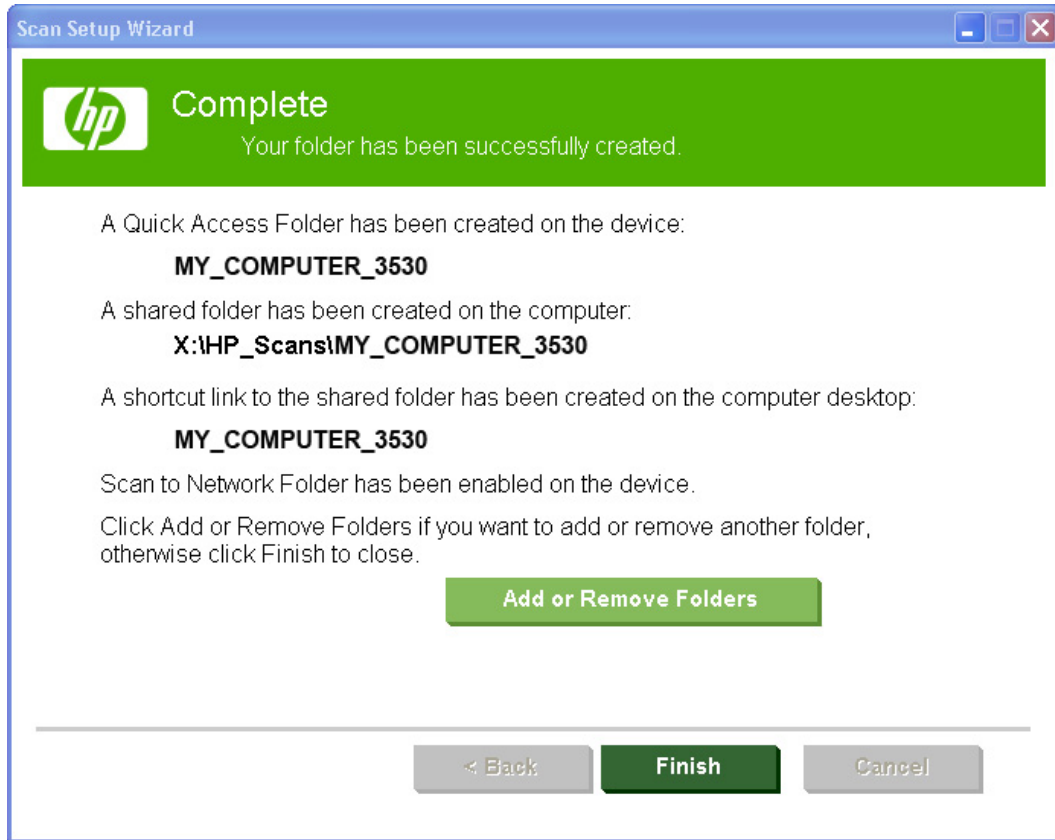

Install optional software

Use the following steps to install optional software programs:

1. Insert the software CD into the CD-ROM drive. The installer program should open.
If the installer program has not started after 30 seconds, complete these steps:
 - a. On the **Start** menu, click **Run**.
 - b. Type the following: X:\SETUP.EXE (where X is the letter of the CD-ROM drive).
 - c. Click the **OK** button.
2. Click the **More Options** menu.
3. Click the **Configure Product** button to gain access to the following software:
 - **HP Scan to Email Setup Wizard (Online)**
 - **HP Save to Folder Setup Wizard (Online)**
 - **HP Scan To Email and Save To Folder via EWS**
4. Click the **Documentation** button to gain access to the following resources:
 - **Help and Learn Center**
 - **User Guide (Web) (Online)**
 - **Readme**
 - **HP PC Send Fax Driver Guide (Online)**
5. Click the **Admin Documentation** button to gain access to the following documents:
 - **HP Driver Configuration Utility User Guide (Online)**
6. Click the **Admin Software** button to gain access to the following software:
 - **HP Universal Print Driver Portal (Online)**
 - **HP Web Jetadmin (Online)**
 - **HP Driver Deployment Utility (Online)**
 - **HP Driver Configuration Utility (Online)**

7. Click the **Get Specialized Drivers** button to gain access to the following software:
 - **HP Universal Print Driver Portal (Online)**
 - **HP PC Send Fax Driver (Online)**
8. Click the **Web Support** button to gain access to the following documents:
 - **Product Support (Online)**

Figure 3-31 More Options menu



Uninstall software



NOTE: If the printer driver was installed by using the HP Driver Installation Utility, follow the instructions in the [Remove the printer driver, Help & Learn Center, or fax driver by using the Windows Add or Remove Programs feature on page 57](#). If either one was installed using the Add Printer Wizard, follow the instructions in the [Uninstall the printer driver or the HP Send Fax Driver by using the Server Properties feature on page 59](#).


Uninstall component list


You can remove the following product components from your computer by using the Windows Add or Remove Programs feature:

- PCL 6 driver
- HP Help & Learn Center
- HP Send Fax Driver

Remove the printer driver, Help & Learn Center, or fax driver by using the Windows Add or Remove Programs feature

If the printer driver or the HP Send Fax Driver was installed by the HP Driver Installation Utility (HP DIU), perform the following to uninstall the driver:

 **NOTE:** You do not need the printing-system software CD to use this uninstall method.

 **NOTE:** To remove the software, you must log on with Administrator privileges.

1. Close all programs.
2. Complete one of the following steps:
 - **Windows XP and Windows Server 2003:** On the **Start** menu, click the **Control Panel** item, and then double-click the **Add/Remove programs** item.
 - **Windows Vista and Windows 7:** On the **Start** menu, click the **Control Panel** item, and then under the **Programs** menu click the **Uninstall a program** item.


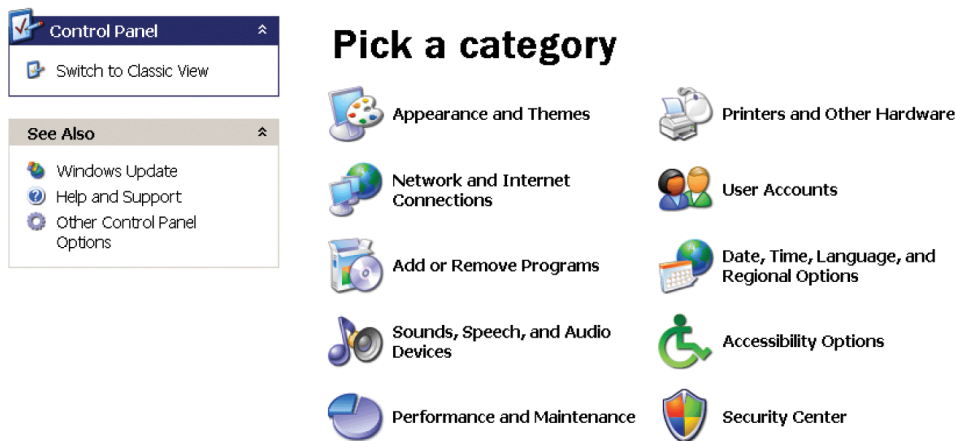
 **NOTE:** For Windows Server 2008, see the System Administrators Guide at www.hp.com/go/upd.

Figure 3-32 Windows Control Panel screen




3. Click the **Change or Remove Programs** item, select the component you want to remove, and then click the **Change/Remove** button. The following components might appear in the list of programs:
 - HP LaserJet Enterprise M4555 MFP Series PCL 6 driver
 - HP Send Fax Driver
 - HP LaserJet Enterprise M4555 MFP Series Help & Learn Center
4. The HP Driver Uninstall Utility launches. Click the **Uninstall** button to start the uninstall process. Click the **Cancel** button to exit the HP Driver Uninstall Utility.

Figure 3-33 HP Driver Uninstall Utility screen




5. When the uninstall is complete, you will be prompted to restart the computer. De-select the check box to restart at a later time.

Figure 3-34 Uninstall Complete screen

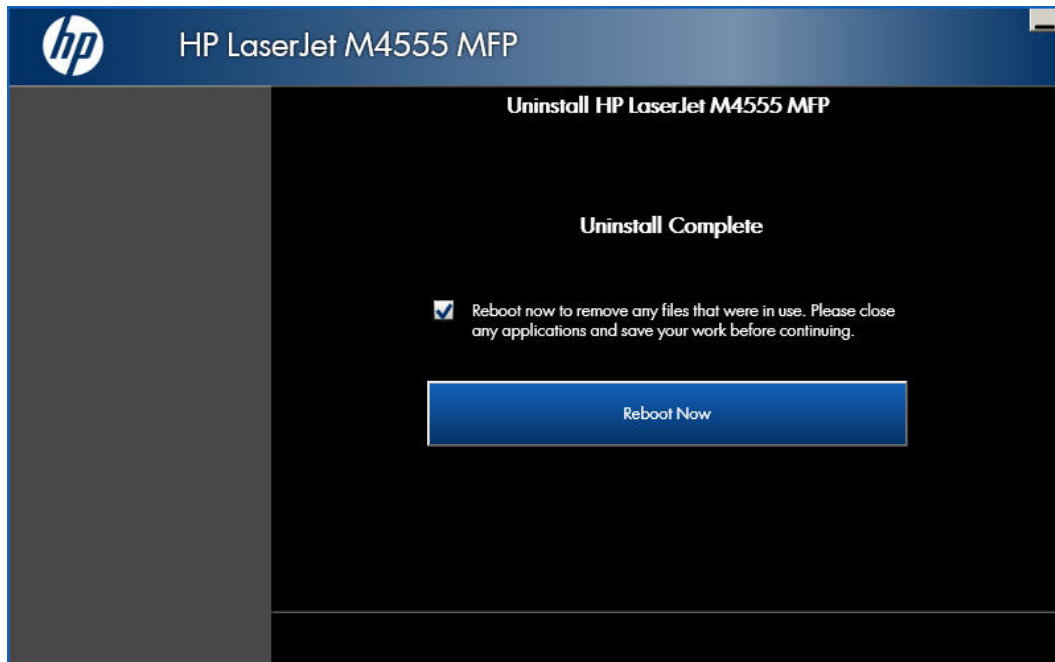

Uninstall the printer driver or the HP Send Fax Driver by using the Server Properties feature

If the printer driver or the HP Send Fax Driver was installed by the Add Printer Wizard, perform the following to uninstall the driver:

 **NOTE:** To uninstall the software, you must log on with administrator privileges.

1. Close all programs.
2. On the **Start** menu, click the **Settings** item, and then do one of the following:
 - **Windows XP Professional and Windows Server 2003:** Click **Printers and Faxes**.
 - **Windows Server 2008:** Click **Start**, click **Control Panel**, and then open the **Printers** folder.
 - **Windows Vista and Windows 7:** Under the **Hardware and Sound** category, click the **Printer** link (Windows Vista) or the **View devices and printers** link (Windows 7).
3. Right-click the icon for your product and then click the **Delete** button. This removes the icon for the product only, but it does not remove the associated files.
4. To remove the associated files, click the **File** menu from inside the **Printers** folder, and then click **Server Properties**.

5. Click the **Driver** tab, click the name of your product, and then click the **Remove** button. When you are prompted to confirm the deletion, click the **Yes** button.
6. Click the **Close** button to close the **Server Properties** screen, and then close the **Printers** folder.

4 HP PCL 6 printer driver for Windows

Introduction

This chapter describes the PCL 6 printer driver features.

You can control print jobs from the product control panel, the software program, or the printer driver user interface. Generally, for features that are duplicated in more than one location (for instance, you can select the paper input tray from any of them), settings that are established in the software program take precedence over printer-driver settings. Printer-driver settings, in turn, override product control-panel settings.

When you install the printing-system software in Windows, the PCL 6 printer driver is installed by default through the installer. The HP PS Universal Print Driver, the HP PCL 5 Universal Print Driver, and the HP PCL 6 Universal Print Driver can be installed by downloading the software from the Web.

Topics:

- [Change the printer driver settings for Windows](#)
- [Help system](#)
- [Advanced tab features](#)
- [Printing Shortcuts tab features](#)
- [Paper/Quality tab features](#)
- [Effects tab features](#)
- [Finishing tab features](#)
- [Job Storage tab features](#)
- [Output tab features](#)
- [Services tab features](#)
- [Device Settings tab features](#)
- [About tab features](#)

Change the printer driver settings for Windows

Operating System	To change the settings for all print jobs until the software program is closed	To change the default settings for all print jobs	To change the device configuration settings
Windows 7, XP, Server 2003, and Vista	<ol style="list-style-type: none"> 1. On the File menu in the software program, click Print. 2. Select the driver, and then click Properties or Preferences. <p>The steps can vary; this procedure is most common.</p>	<ol style="list-style-type: none"> 1. Click Start, click Settings, and then click Devices and Printers (Windows 7) or Printers and Faxes (Windows XP Professional and Server 2003) or Printers and Other Hardware Devices (Windows XP Home). For Windows Vista, click Start, click Control Panel, and then click Printer. 2. Right-click the driver icon, and then select Printing Preferences. 	<ol style="list-style-type: none"> 1. Click Start, click Settings, and then click Devices and Printers (Windows 7) or Printers and Faxes (Windows XP Professional and Server 2003) or Printers and Other Hardware Devices (Windows XP Home). For Windows Vista, click Start, click Control Panel, and then click Printer. 2. Right-click the driver icon, and then select Properties. 3. Click the Configure tab or the Device Settings tab.

To gain access to driver settings from within most software programs, click **File**, click **Print**, and then click **Properties**. The appearance and names of the driver tabs that appear can vary, depending on the operating system. These settings apply only while the software program is open.

You can also control the driver directly from the **Printers** folder. These settings change the default settings for all software programs.

- In Windows 7, click **Start**, select **Devices and Printers**, right-click the device name, and then click **Printing Preferences** to gain access to the same set of driver tabs that the software program controls.
- In Windows Vista, click **Start**, select **Printers**, right-click the device name, and then click **Printing Preferences** to gain access to the same set of driver tabs that the software program controls.
- In Windows XP, click **Start**, select **Settings**, select **Printers and Faxes** (Windows XP Professional) or **Printers and Other Hardware Devices** (Windows XP Home), right-click the product name, and then click **Printing Preferences** to gain access to the same set of driver tabs that the software program controls.

Click **Properties** after right-clicking the product name to gain access to the **Properties** tab set, which controls the driver behavior and driver connections.

Properties tab set

The **Properties** tab set contains information about and options for configuring the product.



NOTE: Windows also has tabs in the **Properties** tab set. For information about those tabs, see the documentation that came with the computer.

Printing Preferences tab set

The HP LaserJet Enterprise M4555 MFP Series product **Printing Preferences** tabs contain options for formatting documents for the product. Gain access to the **Printing Preferences** tabs either through the software program or through the Windows **Printers and Faxes** folder.

The following tabs are included in **Printing Preferences** tab set:

- Advanced
- Printing Shortcuts
- Paper/Quality
- Effects
- Finishing
- Output
- Job Storage
- Services

Document preview image

The document preview image is a line-drawn image of a page that represents graphics and text. The document preview image is always oriented so that the contents of the page are right-side-up. The document preview image appears in the upper-right corner of all **Printing Preferences** tabs except the **Advanced**, **Services** tab, and **Job Storage** tab.

Switching between tabs does not change the location or appearance of the document preview image. Move the mouse over the document preview image, and the mouse cursor changes from an arrow to a gloved hand. Toggle between portrait and landscape page orientation by clicking on the image.

Help system

The HP PCL 6 printer driver includes a full-featured Help system to provide assistance with printing and configuration options.


“What's this?” Help

Windows XP, Windows Server 2003, Windows Server 2008, Windows Vista, and Windows 7 support **What's this?** Help. You can gain access to “What's this?” Help messages in any of the following ways:

- Right-click a feature or control. A pop-up Help window appears.
- Click a feature or control, and then press the **F1** key. The Help window for the currently selected control appears.


Incompatible Print Settings messages

Incompatible Print Settings (constraint) messages are unsolicited messages that appear in response to specific print-driver selections. These messages alert you to selections that are illogical or impossible given the product capabilities or the current settings of other controls.

 **NOTE:** Constraint messages are limited, and the underlying software architecture might accept some settings that are illogical or impossible for the product to perform. Sending a job with incompatible settings can lead to unexpected results. If print jobs do not print as expected, check the product documentation for the product capabilities.

In supported Windows operating environments, some technically invalid print-driver configurations result in warning messages. Duplexing, for example, is not possible when the Transparency paper type is selected. The following figure shows an **Incompatible Print Settings** message.

Figure 4-1 Incompatible Print Settings message

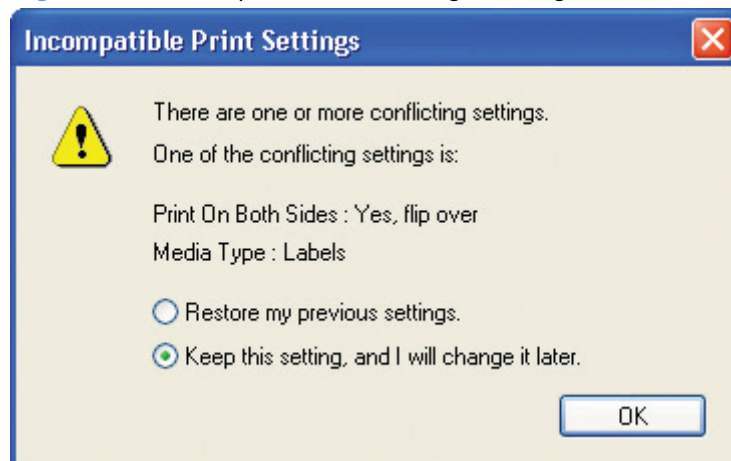

To resolve the conflicting settings, click the **Restore my previous settings.** option, and then click the **OK** button. The driver resets the conflicting control back to its previous state.

If you want to keep the conflicting setting, click the **Keep this setting, and I will change it later.** option, and then click the **OK** button.




NOTE: In this example, the conflict can be resolved manually. If the conflict is not resolved when the driver is closed, then the same dialog appears again when a print job is sent to the product.

Advanced tab features

 **NOTE:** The **Advanced** tab is located on the **Printing Preferences** tab set.

Use the **Advanced** tab to change the layout of printed pages. Use this tab to configure special controls that are not commonly used, as well as to control features such as collating and copies in the driver (although most current software programs support these features in the print dialog box or through the page settings in the software program). The following figure shows the **Advanced** tab.

Figure 4-2 PCL 6 printer driver Advanced tab

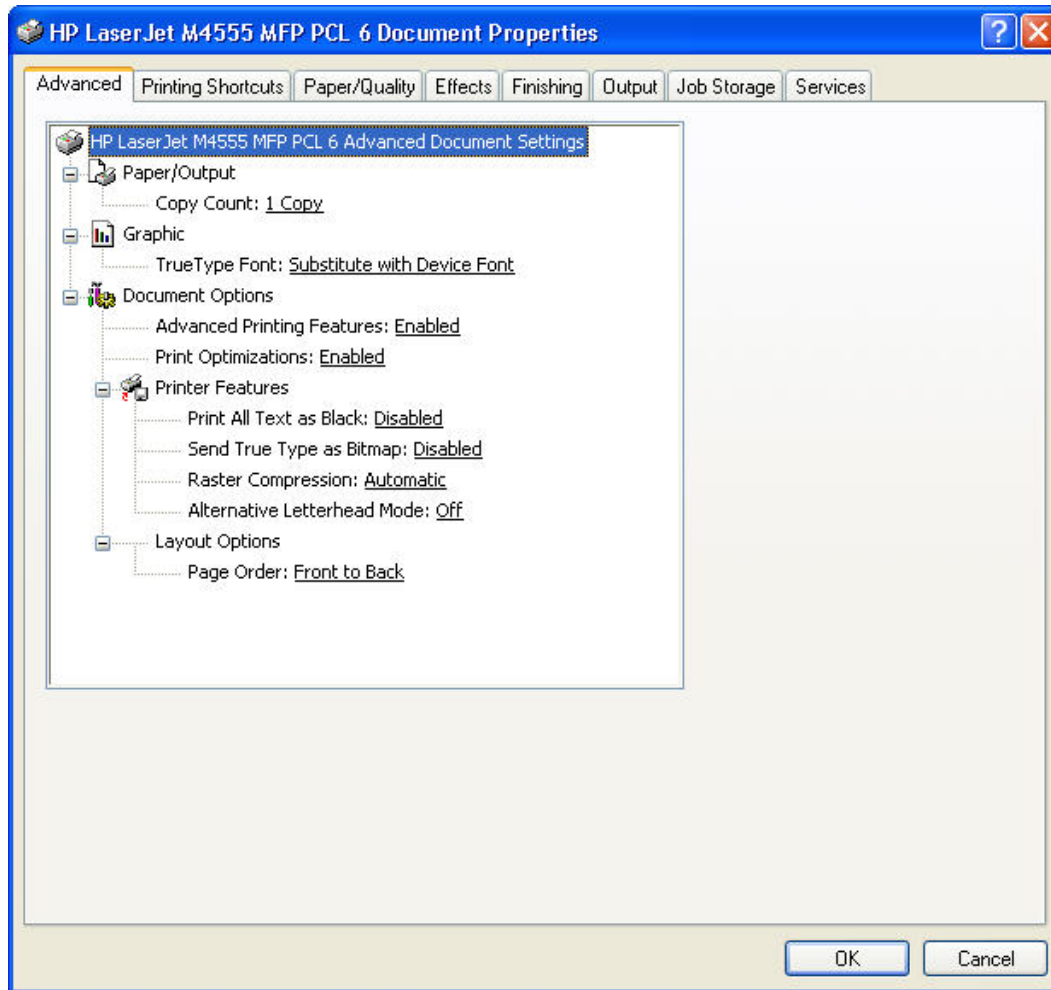

The **Advanced** tab contains the following controls:

- [Paper/Output](#)
- [Graphic](#)
- [Document Options](#)

Paper/Output

The **Paper/Output** setting contains the **Copy Count** setting.

Copy Count

Copy Count specifies the number of copies to print. This driver setting is useful for software programs that do not provide a copy count. If a copy count is available in the software program, set the copy count in the software program.

The number of copies that you request appears in the **Copy Count** option. You can select the number by typing in the text box or by using the up and down arrows to the right of the text box. Valid entries are numbers from 1 to 9999. The copies value will not advance from the maximum number (9999) to 1 when the up arrow is used, or change from 1 to the maximum number (9999) when the down arrow is used. When you click another group box or leave the **Advanced** tab, invalid entries into the text box (such as non-numerical input, numbers less than 1, or numbers greater than the maximum allowed) are changed to the last valid value that appeared in the text box. The default number of copies is 1.

Because you can set the number of copies that you want from some software programs, conflicts between the software program you are using and the driver can arise. In most cases, the software program and the driver communicate, so that the number of copies set in one location (such as the program) will appear in the other (such as the driver). For some programs, this communication does not take place, and the copies values are treated independently. For these programs, setting 10 copies in the program and then setting 10 copies in the driver will result in 100 copies (10 x 10) being printed. It is recommended that you set the number of copies in the program, whenever possible.

When the **Copy Count** option is set to more than 1, the **Collated** check box becomes available. Select this check box when you want the product to collate the printed copies. Most current software programs support the collating feature in the print dialog box or through the page settings in the software program.

Graphic

The **Graphic** setting contains the following controls:

- **True Type Font** settings

True Type Font

Use **Substitute with Device Font** (the default setting) to print documents that contain TrueType fonts by using equivalent printer fonts. This permits faster printing; however, you might lose special characters that the equivalent printer font does not support. Select **Download as Softfont** to download TrueType fonts for printing instead of using printer fonts.

Document Options

The **Document Options** setting contains the following controls:

- [Advanced Printing Features](#)
- [Print Optimizations](#)
- [Printer Features](#)
- [Layout Options](#)

Advanced Printing Features

When the **Advanced Printing Features** setting is **Enabled**, metafile spooling is turned on and **Finishing** tab options such as **Page Order**, **Booklet Layout**, and **Pages per Sheet** are available, depending on your product.

Enhanced metafile spooling is used to greatly reduce the amount of time that elapses between a request to print (initiated by an application) and the return of control to the application by the operating system.

For normal printing, leave the **Advanced Printing Features** setting at the default (**Enabled**). If compatibility problems occur, you can disable the feature. However, some advanced printing features might still appear in the printer driver, even though they have been disabled. If you select an advanced printing feature in the printer driver that has been disabled on the **Advanced** tab, the feature is automatically re-enabled.

Print Optimizations

The default setting for **Print Optimizations** is **Enabled**. When this feature is enabled and your document contains overlapping text and graphics, the text that is placed on top of a graphic might not print correctly. If the printed output is not correct, you can disable this feature. When this feature is disabled, print optimization-features, such as substituting device fonts for TrueType fonts and scanning for horizontal and vertical rules, are turned off.

Printer Features

The **Printer Features** setting contains the following controls:

- **Print All Text as Black**

The feature is **Disabled** by default. When **Enabled** is selected, the driver prints all text as black regardless of the original document text color. Color text is printed as black, except for white text, which remains white. (White text is a reliable method of printing reverse typeface against a dark background.) This setting does not affect graphic images on the page, nor does it affect any text that is part of a graphic.

- **Send True Type as Bitmap**

Send True Type as Bitmap provides an alternative for software programs that have trouble using TrueType fonts for special graphic aspects such as shading, rotation, or slanting. The setting is **Disabled** (off) by default. The TrueType fonts are converted to bitmap soft fonts before downloading. The **Enabled** setting causes the driver to send TrueType fonts to the product as outlines, which retains the standard format (outline) of the fonts.

- **Raster Compression**


Use the **Raster Compression** feature to select the graphics-compression method:

- **Automatic.** The software determines the best compression method to use.
 - **Best Quality.** This option forces the software to use a lossless compression method. (Lossless means that no data is lost during compression.)
 - **Maximum Compression.** Where applicable, this option requires the software to always use a lossy compression method (some data is lost).
- **Alternative Letterhead Mode**

When selected, this option eliminates the need to flip or reload letterhead or preprinted paper in a tray, whether you are printing on one or both sides of the sheet. Load the paper as you would for printing on both sides. If the product tray has an icon that indicates whether to load paper either face-up or face-down, load the paper in opposite orientation of that shown.

When this option is selected, you must use one of the following options in the **Paper type** setting:


- Letterhead
- Preprinted

 **NOTE:** **Alternative Letterhead Mode** is available on all models because they all include an automatic duplexing unit.

Layout Options

The **Layout Options** setting contains the **Page Order** setting.

Page Order specifies the order in which the pages of your document are printed. **Front to Back** prints the document so that page 1 prints first. **Back to Front** prints the document so that page 1 prints last.

 **NOTE:** The page-ordering operation works on whole sheets of paper rather than on individual logical pages. Accordingly, if you set **Pages per Sheet** (on the **Finishing** tab) to be greater than one, the ordering of logical pages on a physical sheet of paper does not change.

Printing Shortcuts tab features


- [Use defined printing shortcuts](#)
- [Create a custom printing shortcut](#)

 **NOTE:** The **Printing Shortcuts** tab is located on the **Printing Preferences** tab set.

Use the **Printing Shortcuts** tab to store specific combinations of driver settings for easy use.

The following figure shows the **Printing Shortcuts** tab.

Figure 4-3 PCL 6 printer driver Printing Shortcuts tab

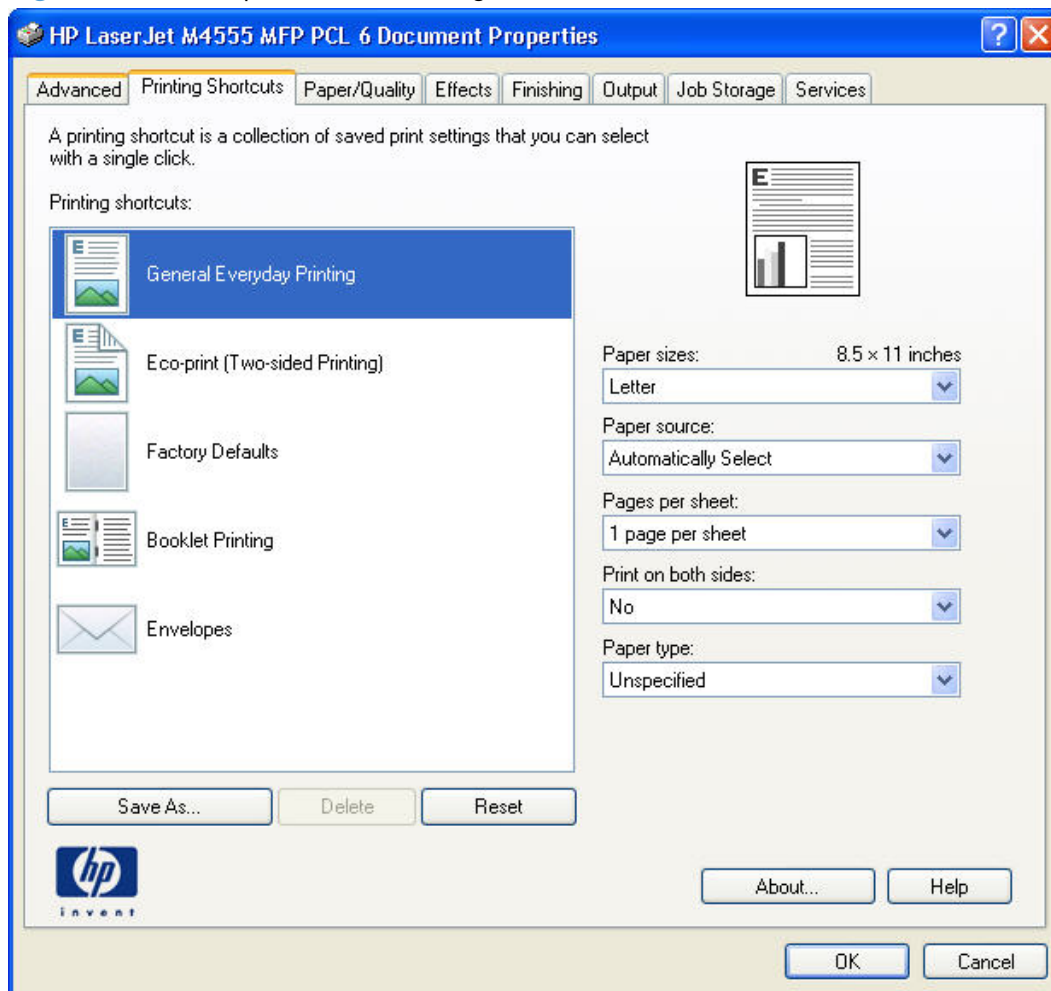

The **Printing Shortcuts** tab is a new tab that appears on the HP PCL 6 printer driver beginning with the HP Color LaserJet CM4730 MFP. In previous drivers, the Print Task Quick Sets appeared in most of the driver tabs, and was used to capture commonly used driver settings. Like Quick Sets, the **Printing Shortcuts** tab saves commonly used driver settings under a shortcut name.

- [Use defined printing shortcuts](#)
- [Create a custom printing shortcut](#)

Use defined printing shortcuts

The **Printing Shortcuts** tab contains the following pre-defined shortcuts:

- [General Everyday Printing](#)
- [Eco-print \(two-sided printing\)](#)
- [Factory Defaults](#)
- [Booklet Printing](#)
- [Envelopes](#)

General Everyday Printing

When **General Everyday Printing** is selected, the following controls are available:

- **Paper sizes:**
- **Paper source:**
- **Pages per sheet:**
- **Print on both sides:**
- **Paper type:**

When options other than the defaults are selected, the **Save as...** and **Reset** buttons become active.

Click **Save as...** to create a custom printing shortcut.

Click **Reset** to change customized settings back to the default settings.

Paper sizes

The following options are available:

- **Letter** (default)
- **Legal**
- **Executive**
- **Statement**
- **8.5 x 13**
- 3 x 5
- **4 x 6**
- **5 x 7**
- **5x8**
- **A4**

- **A5**
- **A6**
- **B5 (JIS)**
- **B6 (JIS)**
- **10x15cm**
- **16k 195x270mm**
- **16k 184x260mm**
- **16k 197x273mm**
- **Japanese Postcard**
- **Double Japan Postcard Rotated**
- **Envelope #9**
- **Envelope #10**
- **Envelope Monarch**
- **Envelope B5**
- **Envelope C5**
- **Envelope C6**
- **Envelope DL**

Paper source

The following options are available:

- **Automatically Select** (default)
- **Printer auto select**
- **Manual Feed in Tray 1**
- **Tray 1**
- **Tray 2**
- **Tray 3** (standard with F and FSKM models; optional on all other models)
- **Tray 4** (standard with FSKM models; optional on all other models)
- **Tray 5** (standard with FSKM models; optional on all other models)

Pages per sheet

The following options are available:

- **1 page per sheet** (default)
- **2 pages per sheet**
- **4 pages per sheet**
- **6 pages per sheet**
- **9 pages per sheet**
- **16 pages per sheet**

Print on both sides

The following options are available:

- **No** (default)
- **Yes, Flip Over**
- **Yes, Flip Up**

Paper type

The following options are available:

- **Unspecified** (default)
- **Plain**
- **Light 60-74g**
- **Cardstock 176-220g**
- **Monochrome Laser Transparency**
- **Labels**
- **Letterhead**
- **Envelope**
- **Preprinted**
- **Prepunched**
- **Colored**
- **Bond**
- **Recycled**
- **Rough**

Eco-print (two-sided printing)

When **Two-sided (Duplex) Printing** is selected, the following options are selected.

- **Paper sizes: Letter**
- **Paper source: Automatically Select**
- **Pages per sheet: 1 page per sheet**
- **Print on both sides: Yes, flip over**
- **Paper type: Unspecified**

Factory Defaults

When **Factory Defaults** is selected, the customizable options are grayed out, locking in those default options.

The **Factory Defaults** are as follows:

- **Paper sizes: Letter** (This setting changes according to country/region.)
- **Paper source: Automatically select**
- **Pages per sheet: 1 page per sheet**
- **Print on both sides: No**
- **Paper type: Unspecified**

Booklet Printing

- **Paper sizes: Letter** (This setting changes according to country/region.)
- **Paper source: Automatically Select**
- **Booklet Layout: Left binding**
- **Paper type: Unspecified**

Envelopes


- **Paper sizes: Envelope #10**
- **Paper source: Automatically Select**
- **Paper type: Envelope**

Create a custom printing shortcut

1. Select **General Everyday Printing** as a base.
2. Select the appropriate print settings on the **Printing Shortcuts** tab or use the settings on any of the **Printing Preferences** tabs.

3. On the **Printing Shortcuts** tab, click the **Save As...** button. The **Printing Shortcuts** dialog box appears.

Figure 4-4 PCL 6 printer driver Printing Shortcuts dialog box

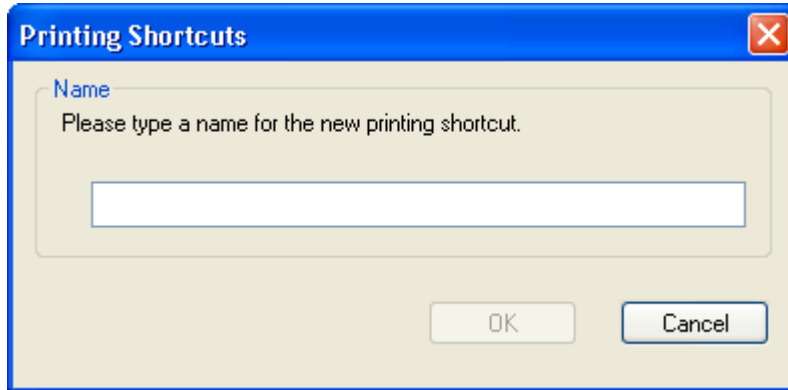


4. Type a name for the custom printing shortcut, and then click **OK**. The custom printing shortcut appears in the **Printing Shortcuts** list.
5. To delete a custom printing shortcut, click the custom shortcut, then click the **Delete** button.

Paper/Quality tab features

 **NOTE:** The **Paper/Quality** tab is located on the **Printing Preferences** tab set.

Use the **Paper/Quality** tab to specify paper size, type, and source. You can also use this tab to specify different paper selections for the front cover, first page, other pages, last page, and back cover of the document. The following figure shows the **Paper/Quality** tab.

Figure 4-5 PCL 6 printer driver Paper/Quality tab

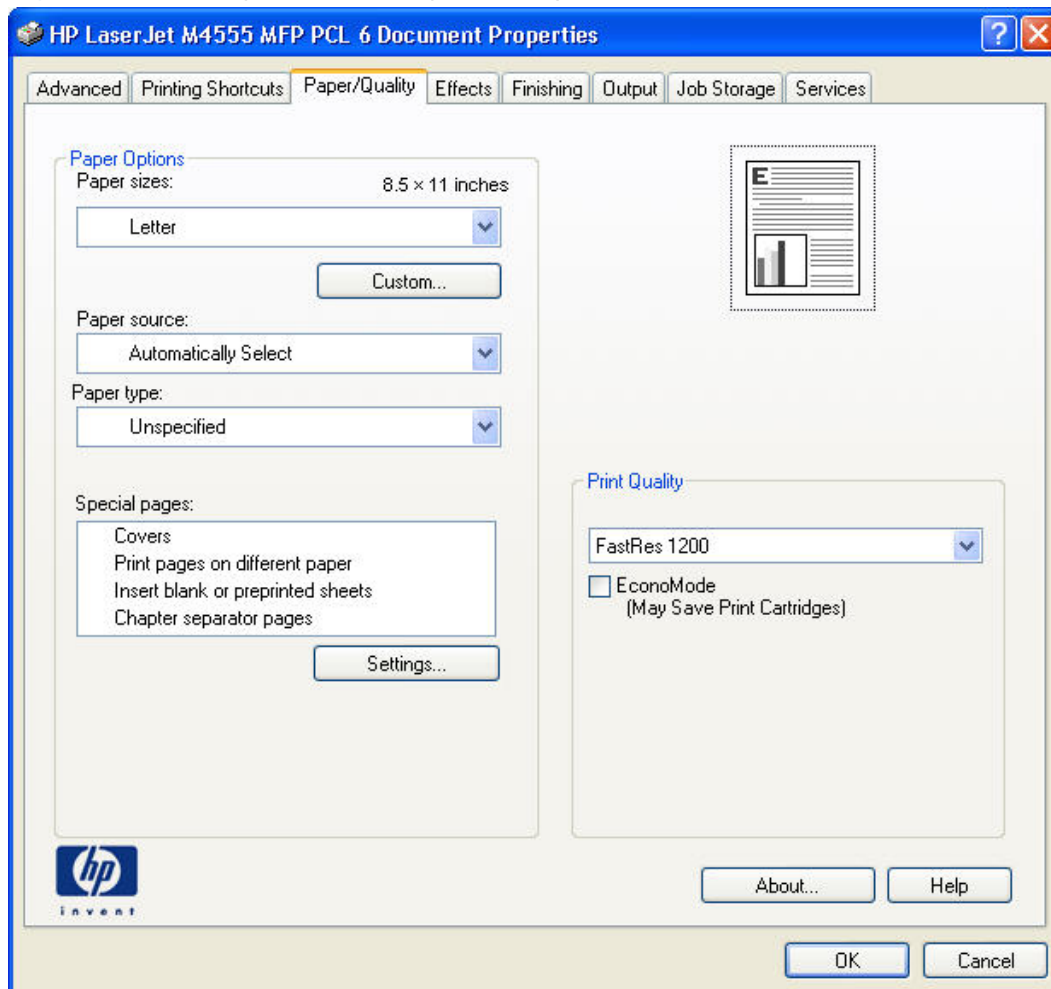


The **Paper/Quality** tab contains the following control sets:

- [Paper Options](#)
- [Document preview image](#)
- [Print Quality](#)

Paper Options

The settings specified in the **Paper Options** group box on the **Paper/Quality** tab apply to all of the pages of the document. The following figure shows the **Paper Options** group box and the selections that are available by default.

Figure 4-6 PCL 6 printer driver Paper Options group box

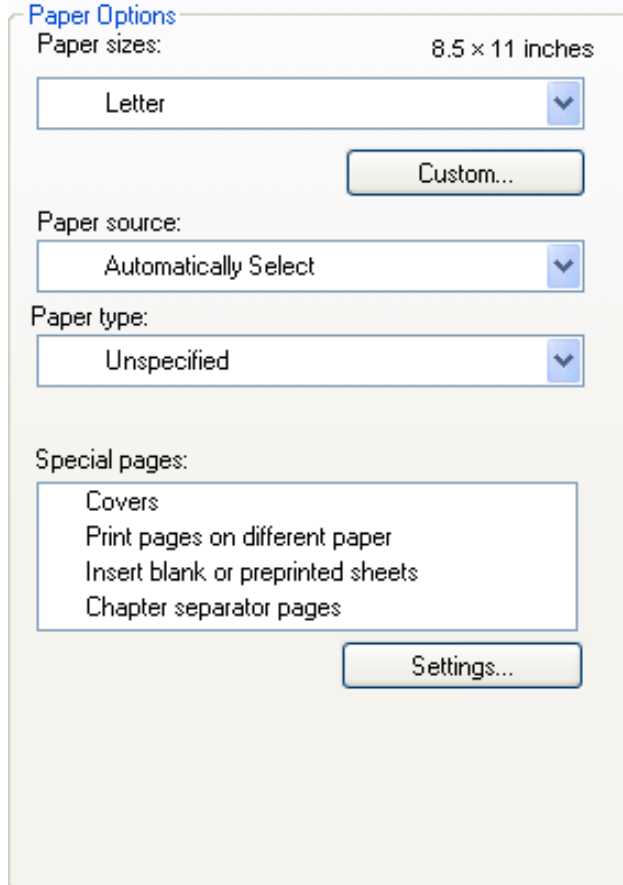

The settings in the **Paper Options** group box are described in the following order:


- [Paper sizes](#)
- [Custom Paper Size](#)
- [Paper source](#)
- [Paper type](#)
- [Special pages](#)

Paper sizes

The **Paper sizes** setting is a drop-down menu that lists all of the supported paper sizes.

When you move the mouse over the dimensions label, the mouse cursor changes from an arrow to a gloved hand. Click the dimensions label to toggle between English and metric units.

Because paper-size settings in most software programs override driver settings, it is generally best to use the driver to set paper size only when you are printing from software programs that do not include a paper-size setting, such as NotePad, or when you are producing a book or a booklet that does not require different paper sizes.

 **NOTE:** Certain software programs can override the size command and specify different paper sizes within a single document.

When you change the print-driver setting to a paper size that is not currently loaded in the product, a control-panel message appears that prompts you to load the paper size or select another tray.


For information about paper sizes, see [Paper attributes and commands on page 162](#).


When the **Settings** under the **Special Pages** section have been changed, the **Paper sizes**, **Paper source**, and **Paper type** menus change also, offering a variety of options. For more information, see [Special pages on page 82](#).

Custom Paper Size

The **Custom Paper Size** dialog box appears when you click **Custom...** on the **Paper/Quality** tab. The following figure shows the initial appearance of the **Custom Paper Size** dialog box.

Figure 4-7 PCL 6 printer driver Custom Paper Size dialog box

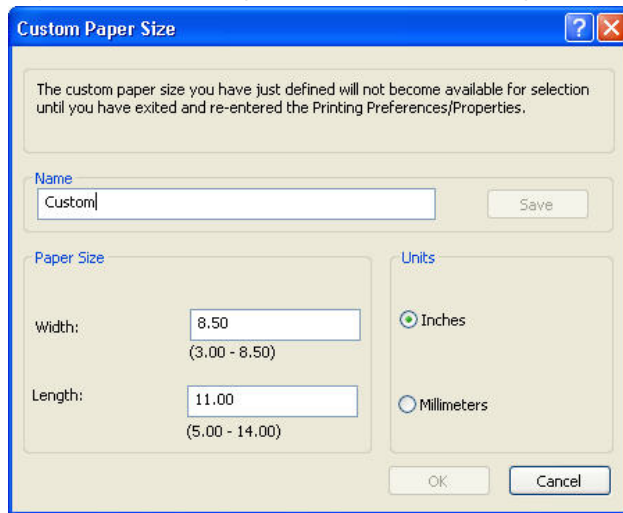

 **NOTE:** The product supports custom paper sizes up to 14 inches in length. To use this paper size, set the custom paper size to match the custom paper size that you are using.

Name

Use the **Name** text box to type a new name for a custom paper size. When you change the name to something other than **Custom**, the **Save** and **OK** buttons become active.

The name that appears in the **Name** text box depends on the following conditions:

- If a saved custom paper size has been selected from the drop-down menu on the **Paper/Quality** tab, then the **Name** text box shows the name of the selected custom paper size.
- If a standard paper size has been selected on the **Paper/Quality** tab, then the **Name** text box shows the default name of **Custom**.
- If a new name has been typed into the **Name** text box for the purpose of saving a new size or renaming an existing size, then that new name will remain in the text box until the new size is saved or the dialog box is closed.

If you type a new name into the **Name** text box, but then do not click **Save**, you can change the width and height values without losing the name. However, if you close the dialog box without clicking **Save**, any unsaved name or size values are lost without warning.

Paper size

The width and height values can be changed by typing numeric strings into the edit boxes in the **Paper Size** group box.

Any entry that is greater than the maximum limits of the width and height control is rounded down to the maximum valid entry, while any entry that is smaller than the minimum limits of the width and height control is rounded up to the minimum valid entry.

If units are in millimeters, the custom paper-size range minimum is the limit rounded up to the nearest whole millimeter. The custom paper-size range maximum is the limit rounded down to the nearest whole millimeter. Any non-numerical entry reverts to the minimum value. Width and height entries are validated when the focus has changed.

The resolution of each control is 1 millimeter or 1/10 of an inch, depending on the current measurement units.

Units

To change measurement units, click one of the options in the **Units** group box (either **Inches** or **Millimeters**).

Custom width and height control limits

The minimum paper size for the product is 76.2 x 127 mm (3.0 x 5.0 in) and the maximum is 215.90 x 355.60 mm (8.50 x 14.00 in). The following table summarizes paper size limits for each paper-handling device.

Table 4-1 PCL 6 custom paper sizes

Tray	Dimensions	Minimum	Maximum
Tray 1 (100-sheet multipurpose)	Width	76.2 mm (3.0 in)	216 mm (8.5 in)
	Length	127 mm (5.0 in)	356 mm (14.0 in)
Tray 2 (500-sheet)	Width	148.0 mm (5.83 in)	216 mm (8.5 in)
	Length	210.0 mm (8.27 in)	356 mm (14.0 in)

Table 4-1 PCL 6 custom paper sizes (continued)

Tray	Dimensions	Minimum	Maximum
Tray 3 (500-sheet)	Width	148 mm (5.38 in)	216 mm (8.5 in)
	Length	210 mm (8.27 in)	356 mm (14.0 in)
Tray 4 (500-sheet)	Width	148 mm (5.38 in)	216 mm (8.5 in)
	Length	210 mm (8.27 in)	356 mm (14.0 in)
Tray 5 (500-sheet)	Width	148 mm (5.38 in)	216 mm (8.5 in)
	Length	210 mm (8.27 in)	356 mm (14.0 in)

Paper source

The **Paper source** setting specifies the source tray to use for printing a document. The list of source trays depends on the product accessories that are installed. Any optional source trays that are installed through the **Device Settings** tab also appear here.

The **Paper source** drop-down menu can contain the following options, depending on what has been installed on the product:

- **Automatically select**
- **Printer Auto Select**
- **Manual Feed in Tray 1**
- **Tray 1** (100-sheet multipurpose tray)
- **Tray 2** (500-sheet tray)
- **Tray 3** (500-sheet paper tray; standard with F and FSKM models; optional on all other models)
- **Tray 4** (500-sheet paper tray; standard with FSKM models; optional on all other models).
- **Tray 5** (500-sheet paper tray; standard with FSKM models; optional on all other models).

The default setting is **Automatically Select**. When this setting is selected, the product uses the source tray that supports the paper size that you have selected. If you select a source tray other than **Automatically select**, make sure that the correct paper size is loaded in the source tray. For information about paper sources, see [Paper attributes and commands on page 162](#).

Paper type

The **Paper type** drop-down menu shows the first few paper types that the HP LaserJet Enterprise M4555 MFP Series supports and an entry for **More**. Clicking **More** opens the **Type Is** dialog box.

Click the + next to **Type Is** and its subcategories to view all of the paper types that the product supports, listed in the following categories.

- **Everyday <96g**
 - **Unspecified**
 - **Plain**
 - **Light 60-74g**
 - **Bond**
 - **Recycled**
- **Photo/Cover 176-220g**
 - **Cardstock 176-220g**
- **Other**
 - **Monochrome Laser Transparency**
 - **Labels**
 - **Letterhead**
 - **Envelope**
 - **Preprinted**
 - **Prepunched**
 - **Colored**
 - **Rough**

The default setting is **Unspecified**.

No mechanism exists for manually adding custom paper types through the driver. Use HP Web Jetadmin to add custom paper types. Custom types can be added only by using bidirectional communication, so they must already exist in the product when the bidirectional query occurs. If bidirectional communication is enabled, then an updated list of paper types is returned. If bidirectional communication is not enabled, then the driver looks for custom paper types that have been saved from a previous bidirectional communication query, and uses those. Otherwise, no custom paper types are available through the driver.

 **NOTE:** To download a current version of HP Web Jetadmin and for the latest list of supported host systems, go to the following Web site:

www.hp.com/go/webjetadmin

If you select a setting other than the default, make sure that the correct paper type is loaded in the tray that you selected in the **Paper source** setting. For more information about paper types, see [Paper attributes and commands on page 162](#).

When you change the print-driver setting to a paper type that is not currently loaded in the product, a control-panel message appears that prompts you to load the paper type or select another tray.

Special pages

To specify special pages to be used, click the **Settings** button under **Special Pages**.

Covers

To use specific cover settings, click **Covers** in the **Special Pages** group box.

Use the **Covers** options to include a blank or preprinted cover on a document, or to include a front/back cover from a source tray that is different from the one used for the remainder of the document.

The following are the **Covers** options:

- **Add a blank or preprinted cover:** Select which cover is customized: **Front**, **Back**, or **Both**.
- **Paper source:** The **Paper source** setting specifies the source tray to use for adding a front and/or back cover to the document. The list of source trays depends on the accessories that are installed. Any optional trays that are installed through the **Device Settings** tab also appear here.
- **Paper type:** The **Paper type** setting specifies the paper size to use for front and/or back covers. Changes made to the **Paper type** setting here override any previous **Paper type** settings using the same paper source.



NOTE: The same size of paper will be used for the entire print job.


When you change the type and source of the paper and covers, the settings remain configured until you close the software program.

Print pages on different paper

Use the **Print pages on different paper** options to select an alternative paper type or source for the first, last, or other pages of a document.

The following figure shows the **Print pages on different paper** settings and options.

Figure 4-8 PCL 6 printer driver Print pages on different paper dialog box

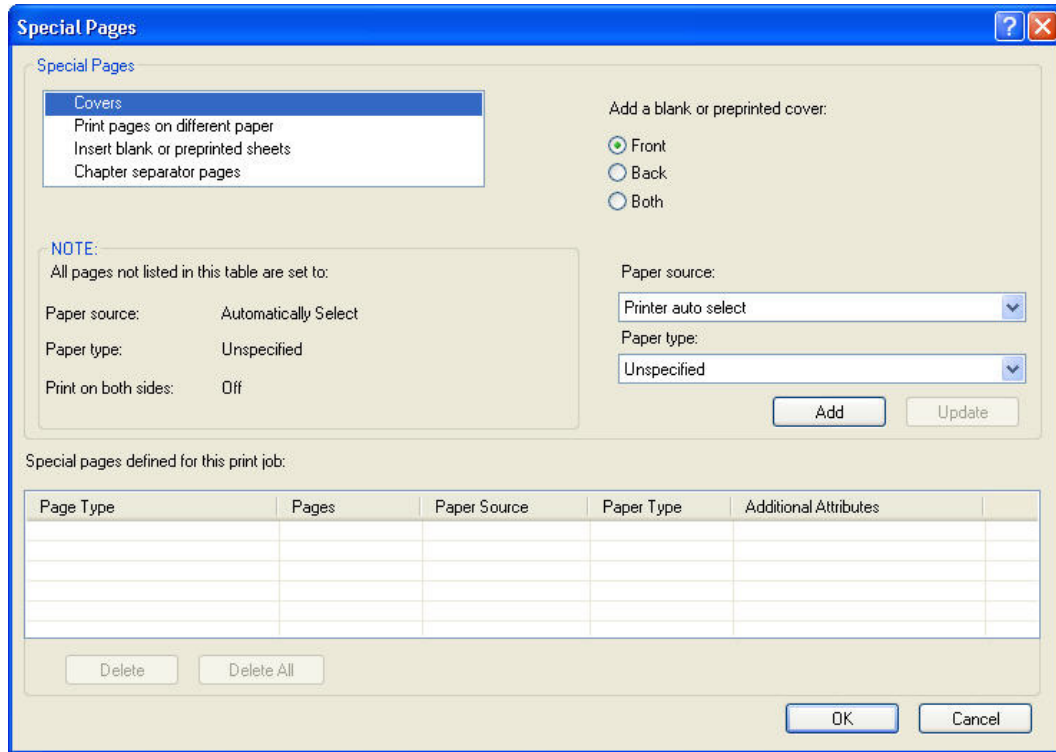

The following are the **Print pages on different paper** options:

- **Pages in document.** Select which pages are customized: the **First** page, the **Last** page, or specify a page range with the **Pages** option.
- **Paper source:** The **Paper source** setting specifies the source tray to use for printing a document. The list of source trays depends on the accessories that are installed. Any optional trays that are installed through the **Device Settings** tab also appear here.
- **Paper type:** The **Paper type** drop-down menu shows all of the paper types that the product supports.

 **NOTE:** The same type of paper is used for the entire print job.


When you change the type and source of the paper and covers, the settings remain configured until you close the software program.

Insert blank or preprinted pages

Use the **Insert blank or preprinted pages** options to designate where to insert preprinted pages or blank pages into a document.

The following figure shows the **Print pages on different paper** settings and options.

Figure 4-9 PCL 6 printer driver Insert blank or preprinted pages option

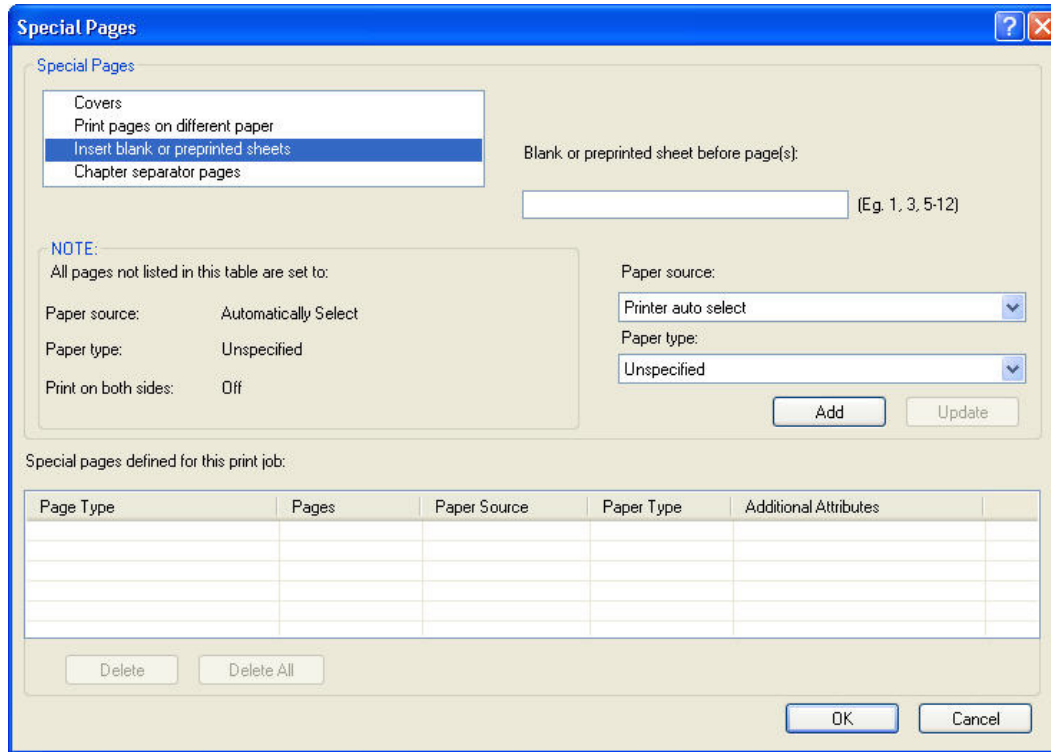

The following are the **Insert blank or preprinted pages** options:


- **Blank or preprinted sheet before page(s):** Specify where in the document you want to insert blank or preprinted pages by designating the page numbers or page ranges that the blank or preprinted pages will precede. For example, to insert a blank or preprinted page on page four, specify **5** in the **Blank or preprinted sheet before page(s):** option.
- **Paper source:** The **Paper source** setting specifies the source tray to use for printing a document. The list of source trays depends on the accessories that are installed. Any optional trays that are installed through the **Device Settings** tab also appear here.
- **Paper type:** The **Paper type** drop-down menu shows all of the paper types that the product supports.

Chapter separator pages

Use the **Chapter separator pages** options to designate where the first page of a chapter appears in the document.

The following figure shows the **Chapter separator pages** settings and options.

Figure 4-10 PCL 6 printer driver Chapter separator pages option

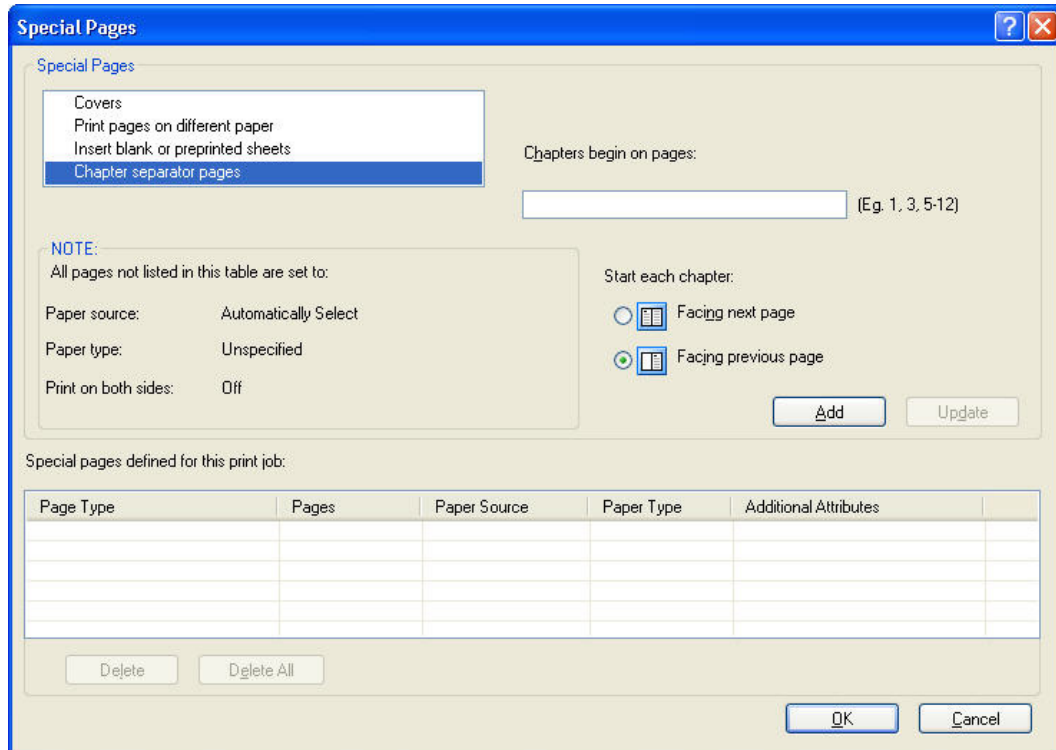

The following are the **Chapter separator pages** options:

- **Chapters begin on pages:** Specify where in the document the chapters begin by designating a page number for each chapter.
- **Start each chapter:** Select **Facing next page** to make each chapter begin on the left side of the document. Select **Facing previous page** to make each chapter begin on the right side of the document.

Document preview image

The document preview image is a line-drawn image of a page that represents graphics and text. The document preview image is always oriented so that the contents of the page are right-side-up. The document preview image appears in the upper-right corner of the following **Printing Preferences** driver tabs:

- **Printing Shortcuts**
- **Paper/Quality**
- **Effects**
- **Finishing**
- **Output**

Switching between tabs does not change the location or appearance of the document preview image. When you move the mouse over the document preview image, the mouse cursor changes from an

arrow to a gloved hand. You can toggle between portrait and landscape page orientation by clicking the image.

Print Quality

The **Print Quality** group box contains the following controls:

- [Print Quality drop-down menu](#)
- [EconoMode check box](#)

Print Quality drop-down menu

The **Print Quality** drop-down menu contains the following options:


- **FastRes 1200:** This setting produces a resolution of 1200 x 600 dots per inch (dpi) This mode is faster than 1200 x 1200 resolution, but has slightly lower print quality.
- **600 dpi:** This setting prints using standard 600 dpi resolution.
- **ProRes1200 (132 lpi):** This setting prints using 1200 x 1200 resolution. It prints more slowly than the other resolutions, but it has the best print quality.
- **ProRes1200 (180 lpi):** This setting prints using 1200 x 1200 resolution. It prints more slowly than the other resolutions, but it has the best print quality.

EconoMode check box

This product has an EconoMode option for printing drafts of documents. Using EconoMode can use less toner and decrease the cost per page. However, using EconoMode also can reduce print quality.


HP does not recommend full-time use of EconoMode. If EconoMode is used full-time, the toner supply might outlast the mechanical parts in the print cartridge. If print quality begins to degrade under these circumstances, you will need to install a new print cartridge, even if there is toner supply remaining in the cartridge.

Effects tab features

 **NOTE:** The **Effects** tab is located on the **Printing Preferences** tab set.

Use the **Effects** tab to create unique paper effects such as scaling and watermarks. The following figure shows the **Effects** tab.

Figure 4-11 PCL 6 printer driver Effects tab

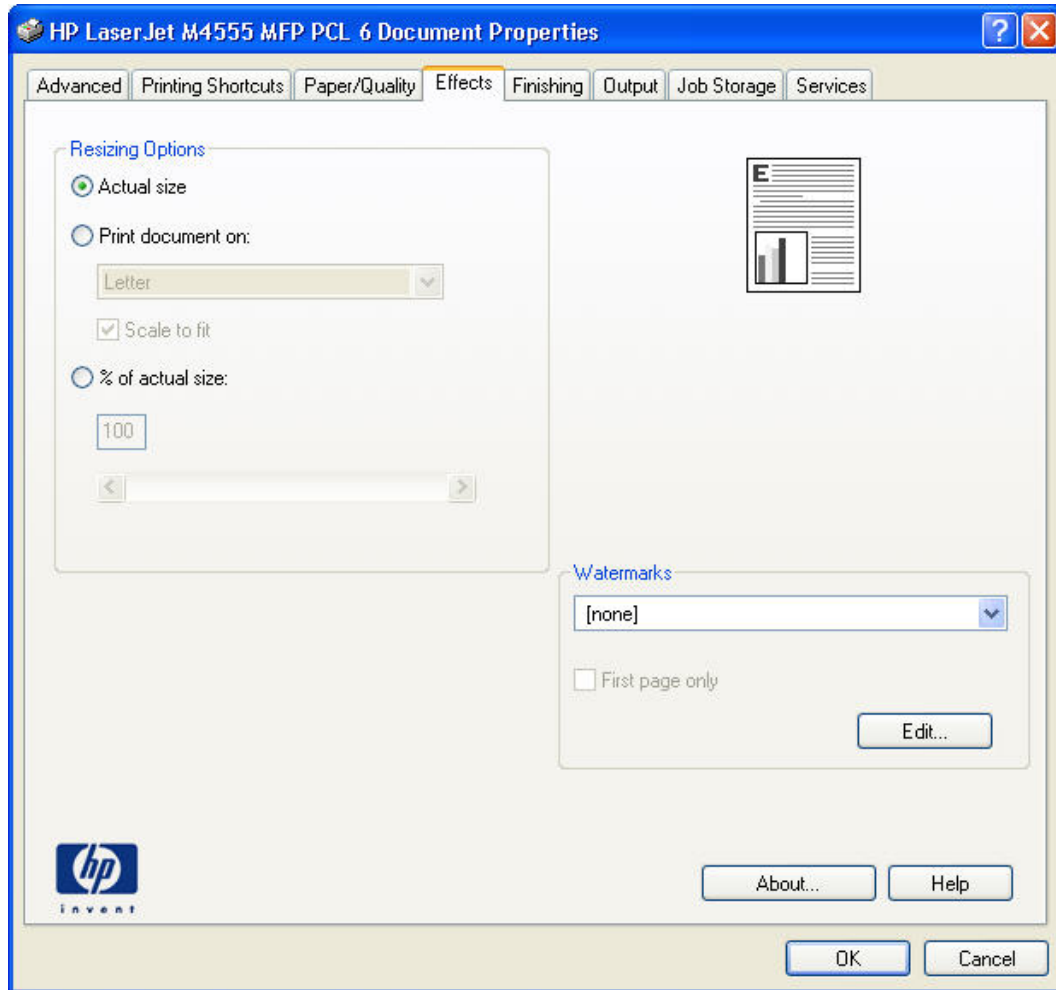

The **Effects** tab contains the following controls:

- [Resizing Options](#)
- [Document preview image](#)
- [Watermarks](#)

Resizing Options

The **Resizing Options** group box consists of the following controls:

- **Actual Size** (default)
- **Print Document On**
- **Scale to Fit**
- **% of Actual Size**

Actual Size

Actual Size is the default setting. It prints the document without changing the document size.

Print Document On

Click the **Print Document On** option to format the document for one paper size and then print the document on a different paper size, with or without scaling the image to fit the new paper size.

The **Print Document On** control is disabled by either of the following conditions:

- The **% of Actual Size** value is not 100.
- The **Pages per Sheet** value (on the **Finishing** tab) is not 1.


When **Print Document On** is selected, the drop-down menu shows the paper sizes on which you can print. The list contains all of the standard paper sizes that the selected paper source supports and any custom sizes that you have created. When **Print Document On** is selected, **Scale to Fit** is automatically selected. Clear this check box if you do not want your document reduced or enlarged to fit on the selected paper.

Scale to Fit

The **Scale to Fit** option box specifies whether each formatted document page image is scaled to fit the target paper size. By default, **Scale to Fit** is selected when **Print Document On** is selected. If the setting is turned off, then the document page images will not be scaled, and are instead centered at full size on the target paper. If the document size is larger than the target paper size, then the document image is clipped. If it is smaller, then it is centered within the target paper. The following figure shows

preview images for a document formatted for Legal-size paper with the **Print Document On** check box selected, and the target size specified as **Letter**.

Figure 4-12 Preview images – Legal on Letter; Scale to Fit off (left) and on (right)

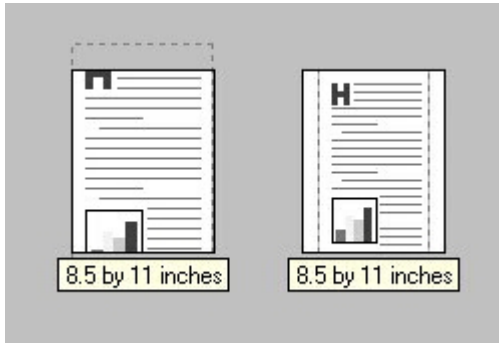

When the size for which the document is formatted (that is, the logical size) differs from the target size, the preview image uses a dashed gray line to show the boundaries of the logical page in relation to the target paper size.

% of Actual Size

The **% of Actual Size** option provides a slider bar and input box to use for scaling the percentage setting. The default setting in the entry box is 100% of actual size. Actual size is defined as the paper size that is selected within the driver or what the driver receives from the software program (if the software program does not negotiate the paper size with the driver). The driver scales the page by the appropriate factor and sends it to the product.

The limits of the range are from 25% to 400%, and any values outside the range are adjusted to those limits as soon as the focus is removed from the control (that is, when the **Tab** key is pressed or another control is selected).

Any change to the scale also changes the page preview, which increases or decreases from the upper-left corner of the preview.

The slider bar controls the scale directly. The value in the edit box changes as the slider-bar indicator is dragged, and the document preview image is updated to the new image scale. Each click on the arrows increases or decreases the scale by 1%. Each click on the slider bar affects the scale by 10%.

You cannot achieve an exact value by dragging the slider-bar indicator. Instead, either use the slider-bar indicator to approximate the value that you want and then use the arrows to refine the value, or type the value into the entry box.

The following settings disable **% of Actual Size**:

- **Print Document On** (on the **Effects** tab) is selected
- **Pages per Sheet** (on the **Finishing** tab) is not 1

Document preview image

The document preview image is a line-drawn image of a page that represents graphics and text. The document preview image is always oriented so that the contents of the page are right-side-up. The

document preview image appears in the upper-right corner of the following Printing Preferences driver tabs:

- **Printing Shortcuts**
- **Paper/Quality**
- **Effects**
- **Finishing**
- **Output**

Switching between tabs does not change the location or appearance of the document preview image. When you move the mouse over the document preview image, the mouse cursor changes from an arrow to a gloved hand. You can toggle between portrait and landscape page orientation by clicking the image.

Watermarks

Use the **Watermarks** feature to select a watermark, create a new watermark (text only), or edit an existing watermark. The following watermarks are preset in the driver:

- **(none)**
- **[Username]**
- **Confidential**
- **Draft**
- **SAMPLE**

The Watermarks feature can be configured using the Driver Configuration Utility.

If the **[Username]** watermark is selected, the driver will use the network username of the logged in user for the watermark.


The drop-down menu shows alphabetically sorted watermarks that are currently available on the system, plus the string "(none)," which indicates that no watermark is selected. This is the default setting. Any watermark that is selected from this list appears in the preview image.

When the **First Page Only** check box is selected, the watermark is printed only on the first page of the document. The **First Page Only** check box is disabled when the current watermark selection is "(none)."

Watermarks are applied to logical pages. For example, when **Pages per Sheet** is set to "4" and **First Page Only** is turned off, four watermarks appear on the physical page (one on each logical page).

Click **Edit**, and the **Watermark Details** dialog box appears.

Figure 4-13 PCL 6 printer driver Watermark Details dialog box

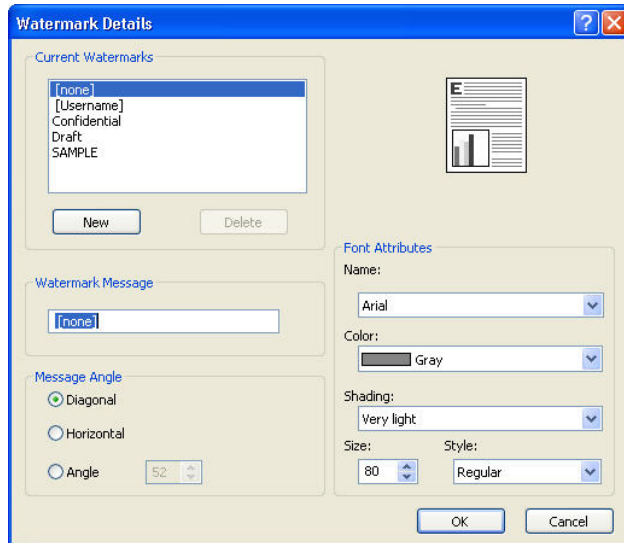

The dialog box shows a preview image and provides options for creating a new watermark and controlling the message angle and font attributes.

Click **OK** to accept all of the changes that are made in the **Watermark Details** dialog box. However, clicking **Cancel** does not cancel all of the changes. If you make changes to a watermark and then select a different watermark or click **New**, all of the changes are saved, and only the current, unsaved changes can be canceled.

Current watermarks

The **Current Watermarks** group box contains a list of available watermarks, both predefined watermarks that are available in the driver and any new watermarks that you have created.

To create a new watermark, click **New**. The new watermark appears in the **Current Watermarks** list and in the **Watermark Message** edit box as "**Untitled**" until you name it. The name that you type in the **Watermark Message** field appears in the **Current Watermarks** group box in the **Watermark Details** dialog box and in the **Watermarks** group box on the **Effects** tab.

To name the new watermark, type the selected watermark text in the **Watermark Message** edit box.

To delete a watermark, select the watermark in the **Current Watermarks** list, and then click **Delete**. A warning appears asking whether you are sure you want to delete the selected item. Click **Cancel** if you want to keep the watermark. Click **OK** to delete the selected watermark.

 **NOTE:** You can have no more than 30 watermarks in the **Current Watermarks** list at one time. When you reach the limit of 30 watermarks, the **New** button is disabled.

To edit an existing watermark, select the watermark in the **Current Watermarks** list. If you change the **Watermark Message** for that watermark, you are, in effect, creating a new watermark.

Watermark Message

The **Watermark Message** is also the name that identifies the watermark in the **Current Watermarks** list, except when more than one watermark has the same message. For example, you might want several different watermarks with the message DRAFT, each with a different typeface or font size. When this occurs, the string is appended with a space, a pound sign, and a number (for example, **Draft #2**). When a number is added, the number two is used first, but if the resulting name is also in the list, then the number increases until the name is unique (**Draft #3**, **Draft #4**, and so on).

Message Angle

Use the controls in the **Message Angle** group box to print the watermark in different orientations on the page. All settings center the watermark string within the page; the selection of a particular setting affects only the angle of the string placement. The following settings are available:

- **Diagonal**. This is the default setting. Select this setting to place the text along a line that spans the lower-left to upper-right corners of the page.
- **Horizontal**. Select this setting to place the text along a line that spans the mid-left and mid-right edges of the page.
- **Custom**. Select this setting to place the text at the specified angle across the page. Use the numeric spin box to select the angle.

Font Attributes

Use the controls in the **Font Attributes** group box to change the font and the shading, size, and style of the font.

The **Font Attributes** group box contains the following controls:

- **Name**

The **Name** drop-down menu lists fonts that are currently installed on the system. The default is language-dependent.

- **Color**

The **Color** drop-down menu contains the following selections:

- **Gray**

- **Shading**

The default **Shading** setting for new and preset watermarks is **Very Light**. The following range of shades is available from the **Shading** drop-down menu:

- **Lightest**
- **Very Light** (default)
- **Light**
- **Medium Light**

- **Medium**
- **Medium Dark**
- **Dark**
- **Very Dark**
- **Darkest**

These values represent the intensity of the gray that is used. Select **Light** to produce a lightly saturated gray watermark. Select **Lightest** to produce the lightest shade of watermark. Select **Darkest** to produce a black watermark.

- **Size**

Font sizes from 1 to 999 points are available from the **Size** menu. The default point size is language-dependent.

- **Style**

The following settings are available:

- **Regular**
- **Bold**
- **Italic**
- **Bold Italic**

The default **Style** setting for new and preset watermarks is **Regular**.

Default watermark settings

The following table shows **Font Attribute** settings for new and preset watermarks.

Table 4-2 Font Attribute settings for new and preset watermarks

Setting	New watermark	Preset watermark
Name	Arial	Varies by language
Color	Gray	Gray
Shading	Very Light	Very Light
Size	80	Varies by language
Style	Regular	Regular


Click **OK** to accept all of the changes that have been made in the **Watermark Details** dialog box. Clicking the **Cancel** button does not cancel all of the changes. If you make changes to a watermark and then select a different watermark or click the **New** button, all of the changes are saved, and only the current, unsaved changes can be canceled.

Finishing tab features

 **NOTE:** The **Finishing** tab is located on the **Printing Preferences** tab set.

Use the **Finishing** tab to print booklets and control the paper output. The following figure shows the **Finishing** tab.

Figure 4-14 PCL 6 printer driver Finishing tab

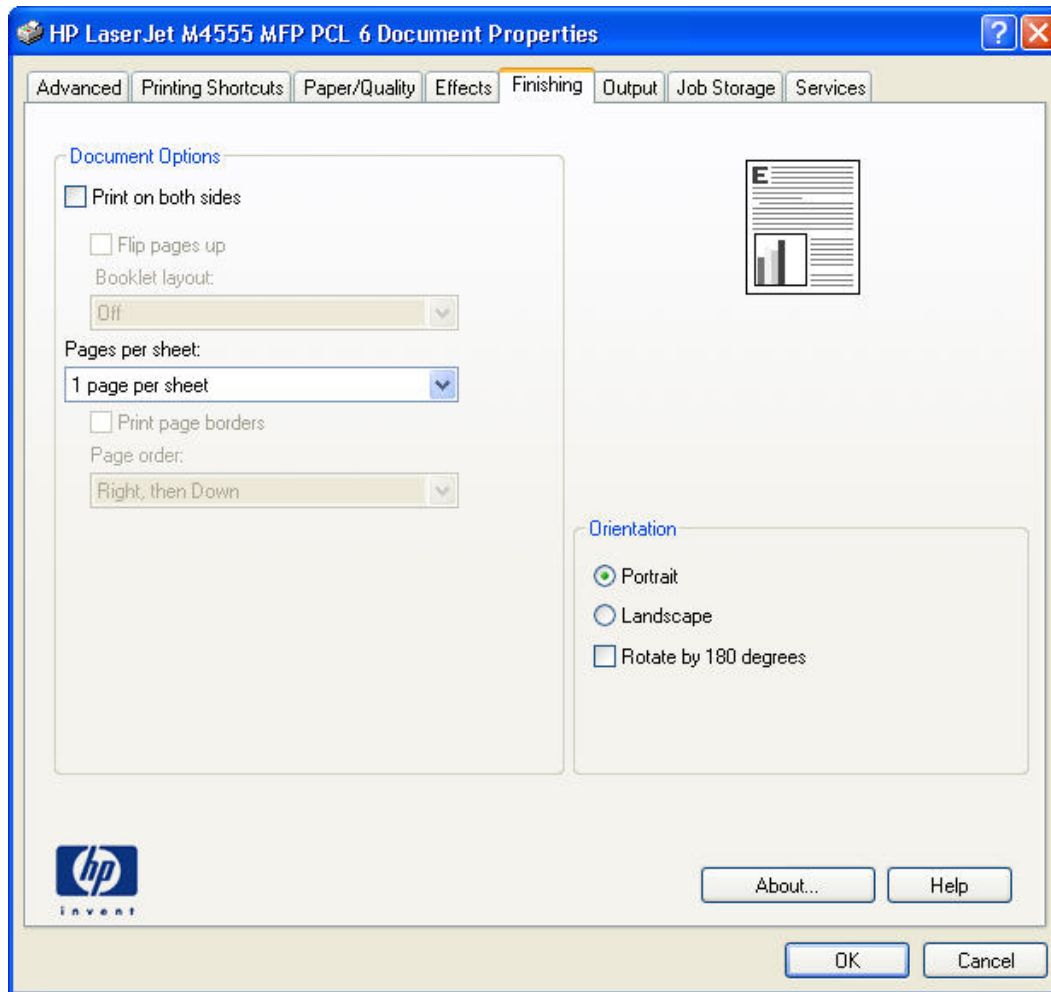

The **Finishing** tab contains the following controls:

- [Document Options](#)
- [Document preview image](#)
- [Orientation](#)

Document Options

The **Document Options** group box contains the following controls:

- [Print on Both Sides](#)

- [Flip Pages Up](#)
- [Booklet Layout](#)
- [Pages per Sheet](#)
- [Print Page Borders](#)
- [Page Order](#)

Print on Both Sides

The default setting for the **Print on Both Sides** option is off (not selected). **Print on Both Sides** is available when the following conditions exist:

- **Paper type** on the **Paper** tab is set to any paper type *except for* the following types:
 - **Labels**
 - **Monochrome Laser Transparency**
 - **Envelopes**
- **Paper sizes** is set to any paper size *except for* the following sizes:
 - **Statement**
 - 3 x 5
 - **4x6**
 - **5x7**
 - **5x8**
 - **A6**
 - **B6**
 - **10x15cm**
 - **16k 195 x 270 mm**
 - **16k 184 x 260 mm**
 - **16k 197 x 273 mm**
 - **Envelope #10**
 - **Japanese Postcard**
 - **Double Japan Postcard Rotated**
 - **Envelope #9**
 - **Envelope Monarch**
 - **Envelope B5**

- **Envelope C5**
- **Envelope C6**
- **Envelope DL**

Print on both sides automatically

The product duplexing unit prints on two sides of a sheet of paper when the **Print on Both Sides** option is specified in the print job. The product comes with a duplexing unit installed in all models.

The smart duplexing feature increases printing performance by preventing one-page print jobs or single-sided pages of a duplexed print job from going through the duplexing unit even when the duplexing feature has been selected in the driver.

All paper types support the smart duplexing feature, except for paper types that cannot be printed on both sides (such as labels, transparencies, and envelopes) and the following paper types:

- Prepunched
- Preprinted
- Letterhead
- Cardstock

When the paper type is set to **Unspecified**, the smart duplexing feature is disabled.

To achieve the best print quality when printing on the second side of the page, the product needs to make adjustments to its print modes. When you select a paper type, you are, in effect, instructing the product to use a group of settings (such as fuser temperature and print speed) to print the paper with the best possible quality. This group of settings is known as print mode. A different print mode is used with each paper type. Print-mode adjustments for the second side of a duplexed page are automatic.

Print on both sides manually


Select **Print on Both Sides (Manually)** for paper types that are not available when using the automatic duplexing unit, such as cardstock and thick paper.

Manually printing on the second side of a page is available when you are using the HP PCL 6 printer driver. If a duplexing unit is installed and manual duplexing is enabled in the driver, the product automatically prints on both sides of paper types that are supported for automatic duplexing (Letter, A4, Legal, and 8.5 x 11 only). For paper types that are *not* supported for automatic duplexing, a Help message appears prompting you to configure the driver settings for manual printing on both sides. Manual printing on both sides does not occur automatically.

Select the paper type that corresponds to the paper that you are using for the print job. The following paper types have a different print mode when you manually print on the second side:

- Plain
- Preprinted
- Letterhead
- Prepunched

- Bond
- Recycled
- Colored
- Rough

 **NOTE:** To make the **Print on Both Sides (Manually)** check box available in the document options, select the **Allow Manual Duplexing** option on the **Device Settings** tab in the print-driver **Properties** tab set. See [Installable Options on page 116](#).


If you want to print on both sides manually while using paper that is supported for automatic duplexing, you must select and apply the **Not Installed** setting on the **Duplex Unit (for 2-Sided Printing)** option on the **Device Settings** tab.

Cardstock paper can be manually printed on the second side, but no change occurs to the print mode. Transparencies and labels should *never* be manually printed on the second side.

To print a multiple-page document, follow these steps:

1. Select the **Print on Both Sides (Manually)** check box.
2. Click the **OK** button. The even-number pages of the document print.
3. When the control panel shows the **Manually Feed** message, insert the stack of paper (on which the even-number pages have been printed) as indicated in the following figure.

Figure 4-15 Print on Both Sides Instructions dialog box

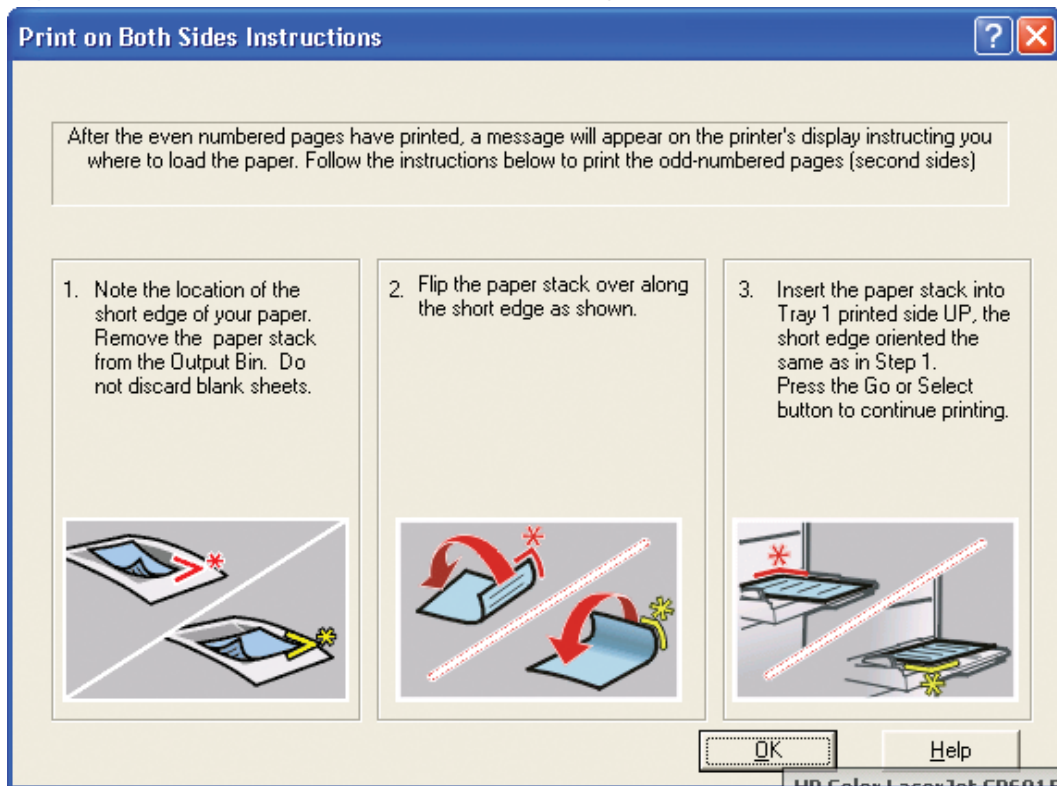

When you have completed the steps that appear in the dialog box, the second half of the print job prints on the back side of the stack of paper. The driver does not require the program to specifically support odd- and even-page printing, because the driver coordinates this function.

Flip Pages Up

Use the **Flip Pages Up** check box to specify the duplex-binding option. By default, the **Flip Pages Up** check box is not available. It is available only when **Print on Both Sides** is selected. The following table demonstrates the results of selecting this check box, depending on the paper orientation selected on the **Finishing** tab.

Table 4-3 Page orientation

Orientation (Finishing tab)	Flip Pages Up selected	Flip Pages Up not selected
Portrait	Short-edge binding	Long-edge binding
Landscape	Long-edge binding	Short-edge binding

When **Print on Both Sides** is selected, the document preview image changes to show a spiral binding along either the left edge or the top edge of the page. In addition, a folded-over corner appears in the lower-right portion of the preview image, indicating that printing occurs on the back side. An arrow on the folded-over corner points in the direction that the pages would be flipped if they were bound together.

Short-side binding is for print jobs with pages that read by flipping over like the pages of a calendar. Long-side binding is for print jobs with pages that read by turning like the pages of a book.

Booklet Layout

The **Booklet Layout** drop-down menu, visible when **Print on Both Sides** is selected, offers choices that are based on the current paper size. The default setting for the **Booklet Printing** drop-down menu is **Off**. The other settings have the following format, where **[paper size]** depends on the paper size that is set on the **Paper/Quality** tab:

- **Left Binding**
- **Right Binding**

When you select **Left Binding** or **Right Binding**, the document preview image changes to show the location of the binding. If the **Pages per Sheet** setting is on the default setting of 1, it automatically changes to **2 pages per sheet**. If you change the **Pages per Sheet** setting manually to 4, 6, 9, or 16 pages per sheet, the booklet setting is disabled. See [Pages per Sheet on page 99](#) for more information.

Book and Booklet Printing

The product supports book and booklet printing.


A book is a print job consisting of at least two pages. It can have a different paper type for the front cover, first page, other pages, last page, or back cover. Use the **Covers** and **Print pages on**

different paper settings on the **Paper/Quality** tab to select different paper for the front cover, first page, other pages, and back cover. For more information, see [Paper/Quality tab features on page 76](#).

A booklet is a print job that places two pages on each side of a sheet that can then be folded into a booklet that is half the size of the paper. Use the **Booklet Layout** drop-down menu on the **Finishing** tab to control booklet settings.

Print a booklet

1. Open the driver **Printing Preferences** tab set and click the **Printing Shortcuts** tab.
2. Click to select **Booklet Printing**.


 **NOTE:** Typically, you select the size of each page of the booklet in your software program by clicking **File**, clicking **Page**, and then clicking **Setup**. If your software program does not allow you to set the paper size, use the **Paper sizes** drop-down menu on the **Printing Shortcuts** tab.

3. Select the appropriate settings from the following drop-down menus on the **Printing Shortcuts** tab.
 - **Paper sizes**
 - **Paper source**
 - **Booklet Layout**
 - **Paper type**
4. Click the **OK** button to print.

Pages per Sheet

Use the **Pages per Sheet** option to select the number of pages that you want to print on a single sheet of paper. If you choose to print more than one page per sheet, the pages appear smaller and are arranged on the sheet in the order that they would otherwise be printed. The **Pages per Sheet** drop-down menu provides six settings:

- **1 page per sheet** (this is the default)
- **2 pages per sheet**
- **4 pages per sheet**
- **6 pages per sheet**
- **9 pages per sheet**
- **16 pages per sheet**

 **NOTE:** When you select an option other than **2 pages per sheet**, booklet printing is unavailable.

Related controls located beneath **Pages per Sheet** are **Print Page Borders** and **Page Order**, which become active when **Pages per Sheet** is greater than 1 and booklet printing is disabled.

Print Page Borders

Print Page Borders sets a line around each page image on a printed sheet to help visually define the borders of each logical page.


Page Order

The **Page Order** drop-down menu contains four selections:

- **Right, then Down**
- **Down, then Right**
- **Left, then Down**
- **Down, then Left**

The preview document image changes to reflect alterations in these settings, as shown by the examples in the following figure.

Figure 4-16 PCL 6 printer driver page-order preview images

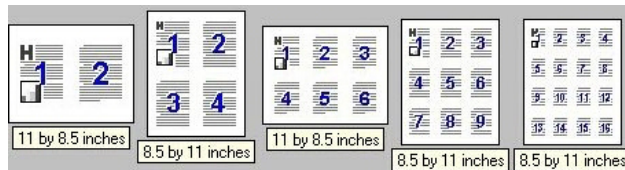

- **2 pages per sheet**
- **4 pages per sheet**
- **6 pages per sheet**
- **9 pages per sheet**
- **16 pages per sheet**

Document preview image

The document preview image is a line-drawn image of a page that represents graphics and text. The document preview image is always oriented so that the contents of the page are right-side-up. The document preview image appears in the upper-right corner of the following **Printing Preferences** driver tabs:


- **Printing Shortcuts**
- **Paper/Quality**
- **Effects**
- **Finishing**
- **Output**

Switching between tabs does not change the location or appearance of the document preview image. When you move the mouse over the document preview image, the mouse cursor changes from an

arrow to a gloved hand. You can toggle between portrait and landscape page orientation by clicking the image.

Orientation

Orientation refers to the layout of the image on the page, and does not affect the way that paper feeds into the product. You can specify the orientation of the print job. The three available orientations are portrait, landscape, and rotated. The default orientation is **Portrait**.

 **NOTE:** Nearly all software programs establish the orientation for the printed page, so the page orientation in the driver is useful only for the few software programs that do not set an orientation.

The **Orientation** group box contains the following options:

- **Portrait.** The top edge of the document is the shorter edge of the paper.
- **Landscape.** The top edge of the document is the longer edge of the paper.
- **Rotate by 180 degrees.** This creates a landscape or portrait orientation in which the image is rotated 180°. This setting is useful for printing prepunched paper.

You can toggle orientation between portrait and landscape by clicking the document preview image. If you select the **Rotate by 180 degrees** check box, no change occurs in the document preview image.

Job Storage tab features



NOTE: The **Job Storage** tab is located on the **Printing Preferences** tab set or the **Properties** tab set.

Use the job-storage feature to store print jobs in the product memory or hard disk for printing at a later time.

The **Job Storage** tab appears among the driver tabs only if the job-storage feature is enabled on the **Device Settings** tab. To support job-storage features for complex jobs, or if you often print complex graphics, print postscript (.PS) documents, or use many downloaded fonts, HP recommends that you install additional memory, install a hard disk, or both. Added memory also gives you more flexibility in supporting job-storage features. A minimum total memory of 288 MB is required to use the **Proof and Hold** and **Personal Job** job-storage features. A hard disk is required to use the **Quick Copy** and **Stored Job** job-storage features.

After a hard disk is installed, the driver must be configured to reflect the changes in the product. If bidirectional communication is enabled in your environment, the Update Now feature can be used to update the drivers. For more information, see [Automatic Configuration on page 117](#).

To configure the drivers manually after installing a hard disk, follow these steps:

1. In Windows Vista and Windows 7, click the **Start** button, click **Control Panel**, click **Hardware and Sound**, and then click **Printers**.

In Windows XP, Windows Server 2003, and Windows Server 2008, click **Start**, click **Settings**, and then click **Printers and Faxes**.

2. Right-click the product name.
3. Click **Properties**.
4. Click the **Device Settings** tab.
5. Select **Installed** for the **Printer Hard Disk** under **Installable Options**, and then select **Installed** in the drop-down menu.
6. Click **OK** to make the printer hard disk and job-storage features available.

You can disable the job-storage feature while leaving the printer hard disk enabled. To disable the job-storage feature, follow these steps:

1. In Windows Vista and Windows 7, click the **Start** button, click **Control Panel**, click **Hardware and Sound**, and then click **Printers**.

In Windows XP, Windows Server 2003, and Windows Server 2008, click **Start**, click **Settings**, and then click **Printers and Faxes**.

2. Right-click the product name.
3. Click **Properties**.
4. Click the **Device Settings** tab.

5. Select **Job Storage**.
6. Select **Disabled** in the **Change 'Job Storage' Setting** dialog box that appears.

If the job-storage feature is enabled (without installing a hard disk but with at least 288 MB of total memory), two **Job Storage Mode** settings are available on the **Job Storage** tab:


- **Proof and Hold**
- **Personal Job**

Two additional **Job Storage Mode** settings become available on the **Job Storage** tab if a hard disk is installed:

- **Quick Copy**
- **Stored Job**

The following figure shows the **Job Storage** tab.

Figure 4-17 PCL 6 printer driver Job Storage tab

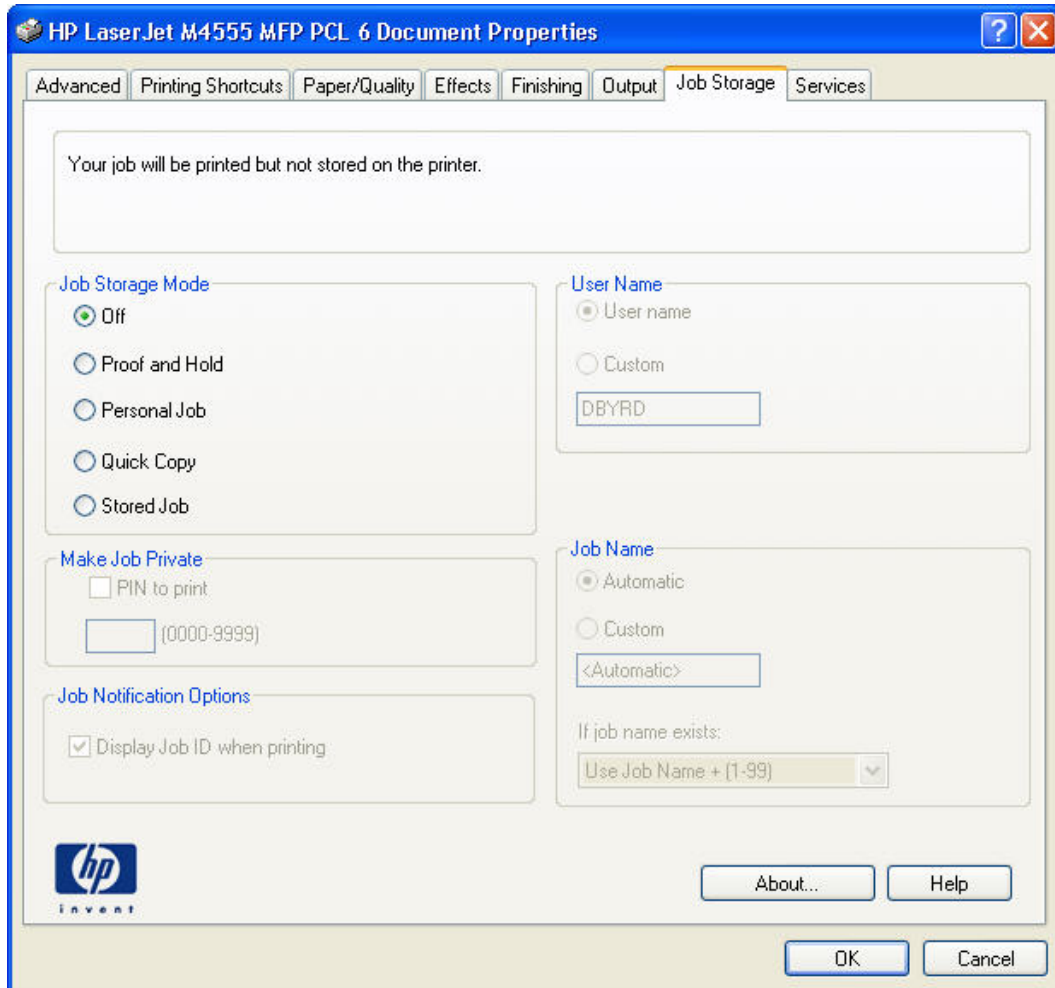

The **Job Storage** tab contains the following controls:

 **NOTE:** Information about using the job-storage feature when printing is also provided here.

- [Status group box](#)
- [Job Storage Mode](#)
- [PIN to print](#)
- [Job Notification options](#)
- [User Name](#)
- [Job Name](#)
- [Use job-storage features when printing](#)

Status group box

The unlabeled group box on the **Job Storage** tab contains a status message about the destination of a print job. The status information changes depending on the selections that are made on the **Job Storage** tab.

Job Storage Mode

Use the **Job Storage Mode** options to store documents at the product and then control their printing at the product control panel.

The product offers the following **Job Storage Mode** options:

- **Off**
- **Proof and Hold**
- **Personal Job**
- **Quick Copy**
- **Stored Job**

These options and the settings that control them are described below.

Off


When selected, this option turns the job-storage feature off (it is disabled), which means that the print job will not be stored in the product.

Proof and Hold

To use the **Proof and Hold** option, the job-storage feature must be enabled.

When selected, this option stores the print job in memory and prints only the first copy of the job, allowing you to check the first copy. If the document prints correctly, you can print the remaining copies of the print job at the control panel. You can set the number of proof-and-hold print jobs that can be stored in the product at the control panel.

After it is released for printing, the proof-and-hold job is immediately deleted from the product. If more copies are needed, you must reprint the job from the software program. If you send a second proof-and-hold job to the product with the same user name and job name as an existing proof-and-hold job (and you have not released the original job for printing), the job overwrites the existing job. Proof-and-hold jobs are deleted if you turn off the product.

 **NOTE:** The product configuration can be set to hold a maximum of 100 quick-copy or proof-and-hold jobs. The number is set at the product control panel by opening the [Administration](#) menu, opening the [General Settings](#) sub-menu, opening the [Manage Stored Jobs](#) sub-menu, and then selecting the [Quick Copy Job Storage Limit](#) item. The default setting is 32. When this preset limit is reached, the new document overwrites the oldest held document. Also, a document that has the same user name and job name as one that is already stored on the printer hard disk will overwrite the existing document.

Personal Job

To use the **Personal Job** option, the job-storage feature must be enabled.

When you select **Personal Job**, the print job is sent to the product, but is not printed until you request the job at the product control panel. Selecting **Personal Job** activates the **PIN** group box. If **PIN to print** is selected, the print job can be printed only after you type the correct PIN at the control panel. After the job is printed, the job is immediately deleted from the product. This feature is useful when you are printing sensitive or confidential documents that you do not want to leave in an output bin after printing.

The Private Job/PIN coupling has a PIN restriction of four ASCII numeric characters (0 through 9). If you type non-numeric characters, they are removed immediately. If you type more than four characters, the characters past the fourth are truncated. The field temporarily accepts fewer than four digits in the string, but when the edit field loses focus, the zeroes pad the left end until the PIN contains exactly four digits. The default initialized value for the PIN is 0000 for **Personal Job**.

After it is released for printing, the private job is immediately deleted from the product. If more copies are needed, you must reprint the job from the software program. If you send a second private job that has the same user name and job name as an existing private job (and you have not released the original job for printing), the job overwrites the existing job, regardless of the PIN. Private jobs are deleted if you turn off the product.

Quick Copy

To use the **Quick Copy** option, a printer hard disk must be installed, and the job-storage feature must be enabled.

When you select **Quick Copy**, the entire print job prints and a copy of the print job is stored on the product, after which you can print additional copies of the print job at the product control panel. The number of quick-copy print jobs that can be stored in the product is set by using the product control panel.



NOTE: The product configuration can be set to hold a maximum of 100 quick-copy or proof-and-hold jobs. The number is set at the product control panel by opening the [Administration](#) menu, opening the [General Settings](#) sub-menu, opening the [Manage Stored Jobs](#) sub-menu, and then selecting the [Quick Copy Job Storage Limit](#) item. The default setting is 32. When this preset limit is reached, the new document overwrites the oldest held document. Also, a document that has the same user name and job name as one that is already stored on the printer hard disk will overwrite the existing document. **Quick Copy** jobs are deleted if you turn off the product.

Stored Job

To use the **Stored Job** option, a hard disk must be installed on the product and the job-storage feature must be enabled.

Use the **Stored Job** option to send a print job directly to the printer hard disk without printing it. The print job is stored in the product as if it is an electronic file cabinet. After the print job is stored on the printer hard disk, you can print the job at the product control panel.

The job remains stored in the product until it is deleted or overwritten by a document that has the same user name and job name. Stored jobs remain on the printer hard disk when the product is turned off. Use this feature for forms and other common or shared documents.

A stored job can be managed in two ways: as either a private or a public job.

Select the **PIN to Print** check box to set the private mode. Use a private stored job to send a print job directly to the product, which can then be printed only after you type a PIN up to 4 digits long at the product control panel. (You can set the PIN in the **PIN** group box.)

After the job is printed, the job remains in the product and can be printed again at the product control panel.

The box labeled **PIN** is usually inactive. The **PIN to Print** option becomes available when you select **Stored Job**. If you select the **PIN to Print** box, you must type a PIN to make the stored job private.



NOTE: A *private* stored job is not the same as a *personal* job. *Personal* jobs are deleted from the product after they are printed. *Private stored* jobs are retained in the product after printing, but require that a PIN be typed each time they are printed. A printer hard disk is required for *Private stored* jobs.

PIN to print

PIN to print check box is available when **Stored Job** is selected. Select the **PIN to Print** box, then type a 4-digit PIN number in the box provided. The stored job is sent to the product, where you must enter the 4-digit PIN on the control panel to retrieve the personal job.

The **PIN to Print** check box is available when **Personal Job** is selected. Select the **PIN to Print** option, and then type a 4-digit PIN number in the box provided. The personal job is sent to the product, where you must type the 4-digit PIN on the control panel to retrieve the stored job.

Job Notification options

Clicking a **Job Storage Mode** selection causes the **User Name** and **Job Name** options to become available. The **Display Job ID when printing** check box is selected by default. The **Display Job ID when printing** option causes a pop-up dialog box to appear when the job-storage

print job is printed. The dialog box shows the user name and job name that are associated with the stored print job, as well as the printer name, port, and location.

User Name

Use the **User Name** settings to help identify the job at the product control panel. The following are the **User Name** settings:

- **User Name.** This option associates your Windows user name with the stored print job. The Windows user name automatically appears in the text field below the **User Name** options.
- **Custom.** Use this option to type a custom name for the stored print job. When you click **Custom**, the text field below the option becomes available. The **User Name** field can contain no more than 16 characters, and is limited to A through Z and 0 through 9 because the name appears on the product control-panel display. If you try to type a lowercase character, it automatically shifts to uppercase. If you try to type a character in an ASCII code of fewer than 32 or more than 126 characters, the character is removed from the edit field, along with all of the characters that follow it. If you try to type more than 16 characters, any character beyond 16 is truncated.

Job Name

Use the **Job Name** options to specify a name to identify the job at the product control panel. The following are the **Job Name** settings:

- **<Automatic>** This option, which is the default selection, automatically generates the job name that is associated with the stored print job. The file name of the print job is used if it is available to the printer driver. Otherwise, the software program name or a time stamp is used for the job name.
- **Custom.** Use this to type a custom job name for the stored print job. When you click **Custom**, the text field below the option becomes available. In those languages for which **<Automatic>** cannot be translated without the use of invalid characters, the driver uses a string of three dashes. The acceptable characters for job name and user name vary for each operating system. The string must be of a length and type that can appear on the product control-panel display.

The **Job Name** field can contain no more than 16 characters, and is limited to A through Z (uppercase or lowercase) and 0 through 9 so that the name can appear on the product control-panel display. If you try to type a character in an ASCII code of fewer than 32 or more than 126 characters, the character is removed from the edit field, along with all of the characters that follow it. If you try to type more than 16 characters, any character beyond 16 is truncated.

When the dialog box is closed, or as soon as the focus is removed from the control (that is, when the **Tab** key is pressed or another control is selected), an empty string is replaced with **<Automatic>**. The acceptable characters for job name and user name vary for each operating system. The string must be of a length and type that can appear on the product control-panel display.

If Job Name Exists. When you store a print job, you can create a print-job name or the product software can assign one automatically. If a print job with the same name already exists, the new print job will overwrite the existing print job. To eliminate the chances of a new print job overwriting an old print job because both have the same name, select **Use Job Name + (1-99)**. After you create the print job name, or when one is created automatically, the product software assigns a number between

1 and 99 to the end of the print job name to make the name unique. Select **Replace Existing File** if you always want the product software to overwrite an existing print job with the same print job name.

Use job-storage features when printing

To use job-storage features when printing, follow these steps:

1. Click **File**, and then click **Print** from the software program. The **Print** dialog box appears.





NOTE: Clicking the print icon in the software program toolbar prints the job without using job-storage features.

2. Click **Properties**. The **Properties** dialog box appears.
3. Click the **Job Storage** tab.
4. Select the job-storage options by clicking the appropriate option button, and then complete any required fields.
5. Click **OK**.

Release a job-storage print job

After you send a print job that uses the job-storage feature, you can release the job to print from the product control panel.


1. From the Home screen, touch the [Open from Device Memory](#) button.
2. Select the name of the folder where the job is stored.
3. Select the name of the job, adjust the number of copies, and then touch the Start  button to print the job.
4. If the job is locked, type the PIN in the [PIN](#) field, adjust the number of copies, and then touch the Start  button to print the job.

Delete a job-storage print job

Sometimes it is necessary to delete a print job from the printer hard disk. You can do this from the product control panel.


1. From the Home screen, touch the [Open from Device Memory](#) button.
2. Select the name of the folder where the job is stored.
3. Select the name of the job, adjust the number of copies, and then touch the [Delete](#) button.
4. If the job is locked, type the PIN in the [PIN](#) field, and then touch the [Delete](#) button.

Output tab features

 **NOTE:** The **Output** tab is located on the **Printing Preferences** tab set.

Use the **Output** tab to specify output bin to which you want to send the print job. The **Output** tab is shown in the following figure.

Figure 4-18 PCL 6 printer driver Output tab

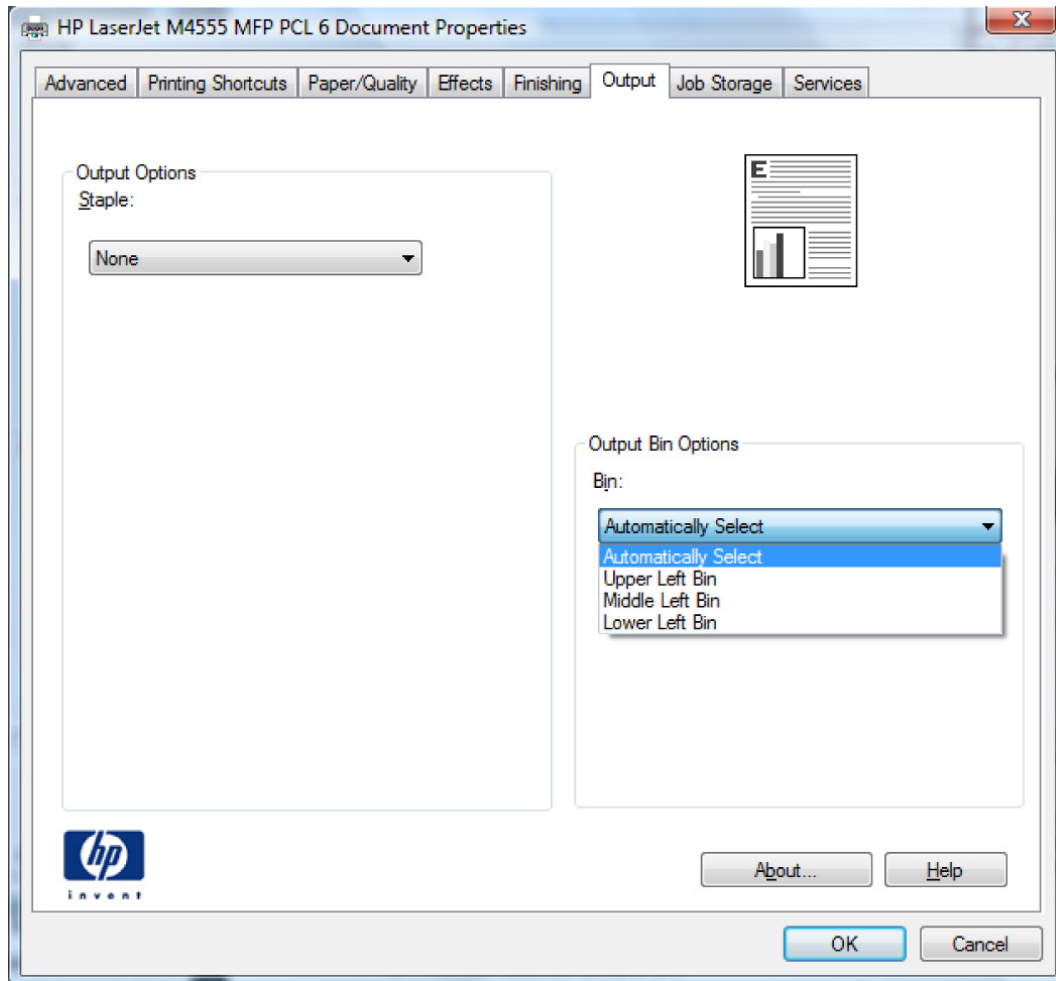

The **Output** tab contains the following control:

- [Output Options](#)
- [Output Bin Options](#)
- [Document preview image](#)

Output Options

The **Output Options** group contains the **Staple** drop-down list with the following options:

- **None:** This is the default setting. Stapling is disabled when this option is selected.
- **One Staple Angled:** Select this option to staple the print job.

Output Bin Options

The **Output Bin Options** group contains the **Bin** drop-down list with the following options:

- **Automatically Select** (default): The product selects the output bin automatically. This option is the only option when the stapler/stacker is in stacker mode (on the **Device Settings** tab).
- **Upper Left Bin** (stapler/stacker models only): Sends the job to the stapler/stacker upper bin. This option is available when the stapler/stacker is in mailbox mode or function separator mode (on the **Device Settings** tab).
- **Middle Left Bin** (stapler/stacker models only): Sends the job to the stapler/stacker middle bin. This option is available when the stapler/stacker is in mailbox mode or function separator mode (on the **Device Settings** tab).
- **Lower Left Bin** (stapler/stacker models only): Sends the job to the stapler/stacker lower bin. This option is available when the stapler/stacker is in mailbox mode or function separator mode (on the **Device Settings** tab).

Document preview image

The document preview image is a line-drawn image of a page that represents graphics and text. The document preview image is always oriented so that the contents of the page are right-side-up. The document preview image appears in the upper-right corner of the following **Printing Preferences** driver tabs:

- **Printing Shortcuts**
- **Paper/Quality**
- **Effects**
- **Finishing**
- **Output**


Switching between tabs does not change the location or appearance of the document preview image. When you move the mouse over the document preview image, the mouse cursor changes from an arrow to a gloved hand. You can toggle between portrait and landscape page orientation by clicking the image.

Services tab features

 **NOTE:** The **Services** tab is located on the **Printing Preferences** tab set or **Properties** tab set.

The **Services** tab is shown in the following figure.

Figure 4-19 PCL 6 printer driver Services tab

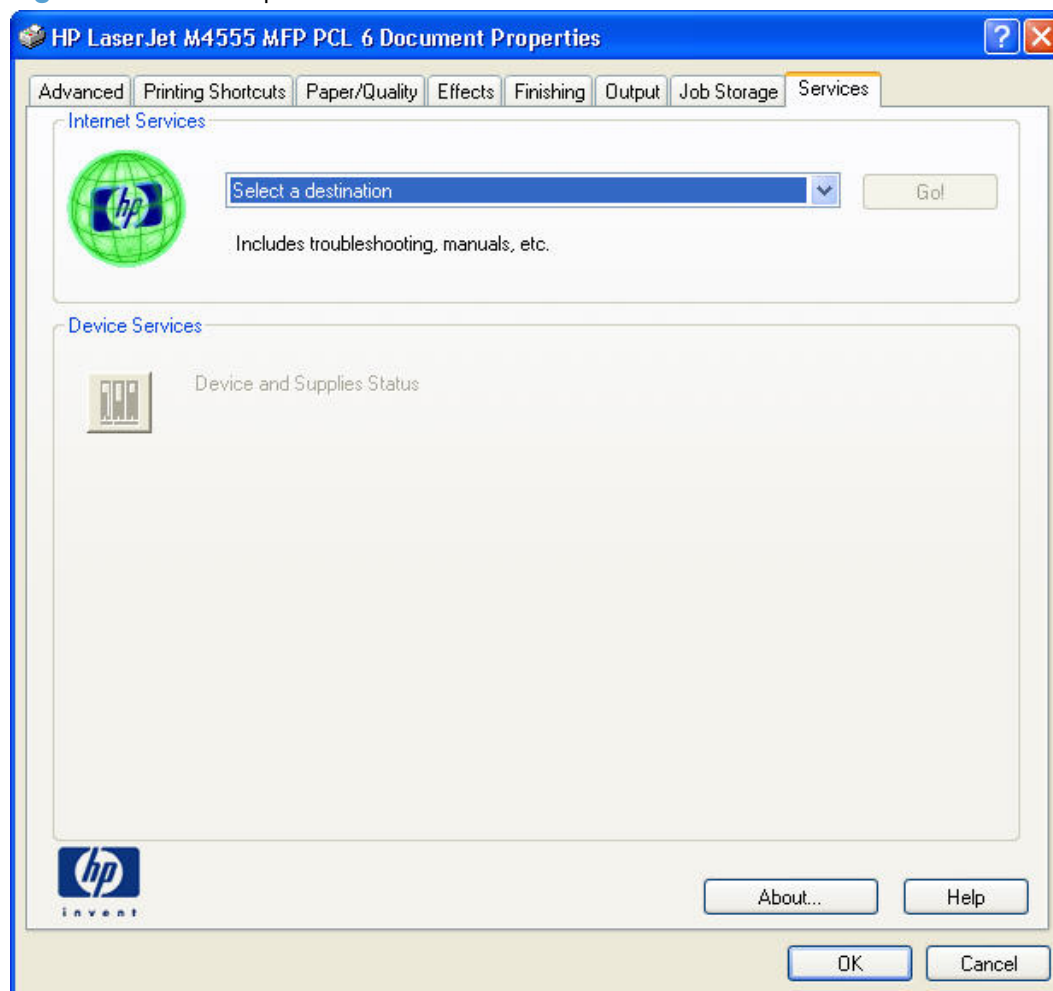

The **Services** tab contains the following group boxes:

- [Internet Services](#)
- [Device Services](#)

Internet Services

The **Internet Services** group box contains the **Select a destination** drop-down menu with the following selections:

- **Online diagnostic tools.** This is the HP Instant Support Web site, where you can find interactive tools and contacts for troubleshooting.
- **Support and troubleshooting.** This is the main Web site for product support.

- **Product manuals.** View or download product manuals.
- **Check for driver updates.** Automatically check your printer drivers to see whether the correct and most up-to-date printer drivers are installed.

If you have Internet access, select any of these items and click **Go!** to open the corresponding HP Web page.

Device Services


Click the **Device and Supplies Status** icon to open the **Device Status** screen of the HP EWS, which shows supply levels and control panel status.

Device Settings tab features

 **NOTE:** The **Device Settings** tab is located on the **Properties** tab set.

Available options depend on the feature. The following figure shows the **Device Settings** tab.

Figure 4-20 PCL 6 printer driver Device Settings tab

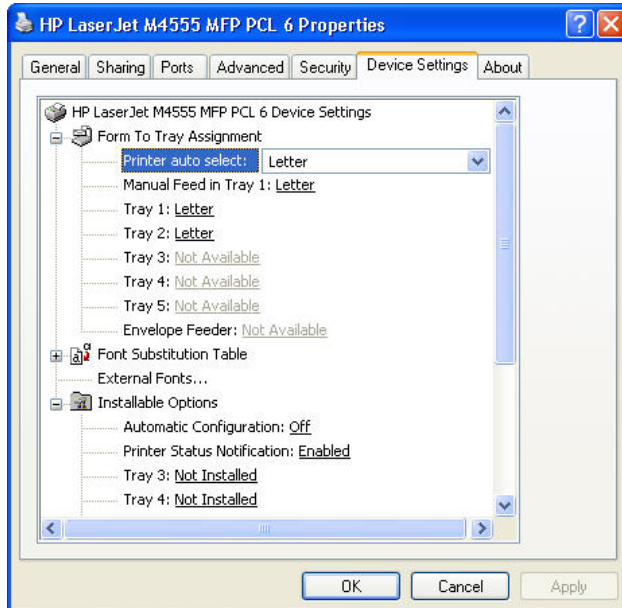

The **Device Settings** tab contains controls for paper-handling devices and controls for managing the product.

The **Device Settings** tab contains the following controls:

- [Form to Tray Assignment](#)
- [Font Substitution Table](#)
- [Installable Options](#)

Form to Tray Assignment

A network administrator can use **Form to Tray Assignment** to specify the paper size in each input tray.

The product supports more than one source of paper. You can assign a form (which defines the paper size and margins) to each paper source. When a form is matched to a source, you can select the form when you print. The product prints from the tray to which that form is assigned.

Network administrators can use the **Form to Tray Assignment** setting to specify, in the driver, the paper size that is loaded into each available input tray. The use of forms constrains the choices that are available in the paper-size list on the **Paper/Quality** tab in the **Printing Preferences** driver tabs. This constraint prevents (or reduces the likelihood of) tying up the product with paper-mount messages that occur when users request sizes or types that are not available.

The trays listed in the **Form to Tray Assignment** setting include standard trays and optional accessory trays. Generally, items that are installed separately have a separate **Installable Options** setting.

The input trays listed here are also listed as paper sources on the **Paper/Quality** tab.

Configuring the trays


1. Select the appropriate tray in the **Form to Tray Assignment** list.
2. Use the drop-down menu to select the paper size (or form) that is loaded in that tray.
3. Repeat steps 1 and 2 for the remaining trays.
4. Click **OK** to enable your settings, or, if necessary, click **Cancel** to reconfigure all the trays, and remove the size and type constraints that have been imposed on the **Paper/Quality** tab.

Font Substitution Table

Use the **Font Substitution Table** settings to change the TrueType to printer font mapping and to install and remove external fonts for the product through the **External Fonts** option. External fonts can be soft fonts or DIMM fonts.

Click the plus (+) symbol next to the **Font Substitution Table** option to open a list of fonts, as shown in the following figure. Use the settings to change the TrueType-to-product font mappings.

Figure 4-21 PCL 6 printer driver Font Substitution table

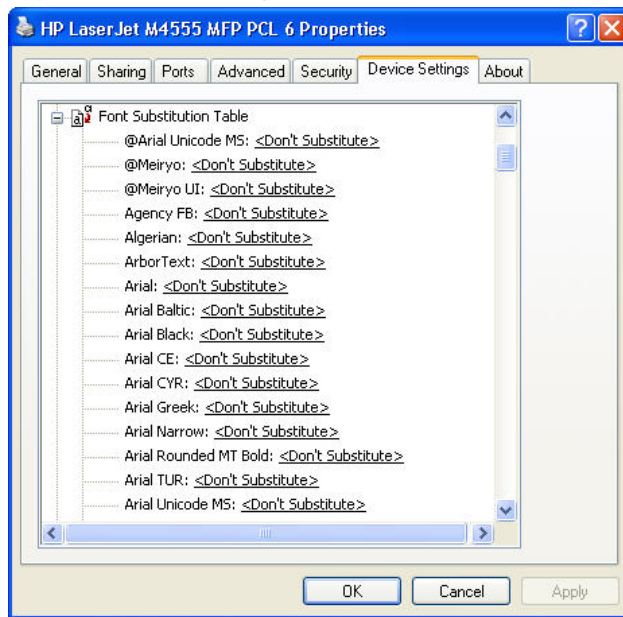


External Fonts

Use the **External Fonts** option to install and remove external fonts for the product. External fonts can be soft fonts or DIMM fonts.

Click the **External Fonts** option to make the **Properties** button available. Click **Properties** to open the **HP Font Installer** dialog box, which is shown in the following figure.

Figure 4-22 PCL 6 printer driver HP Font Installer dialog box

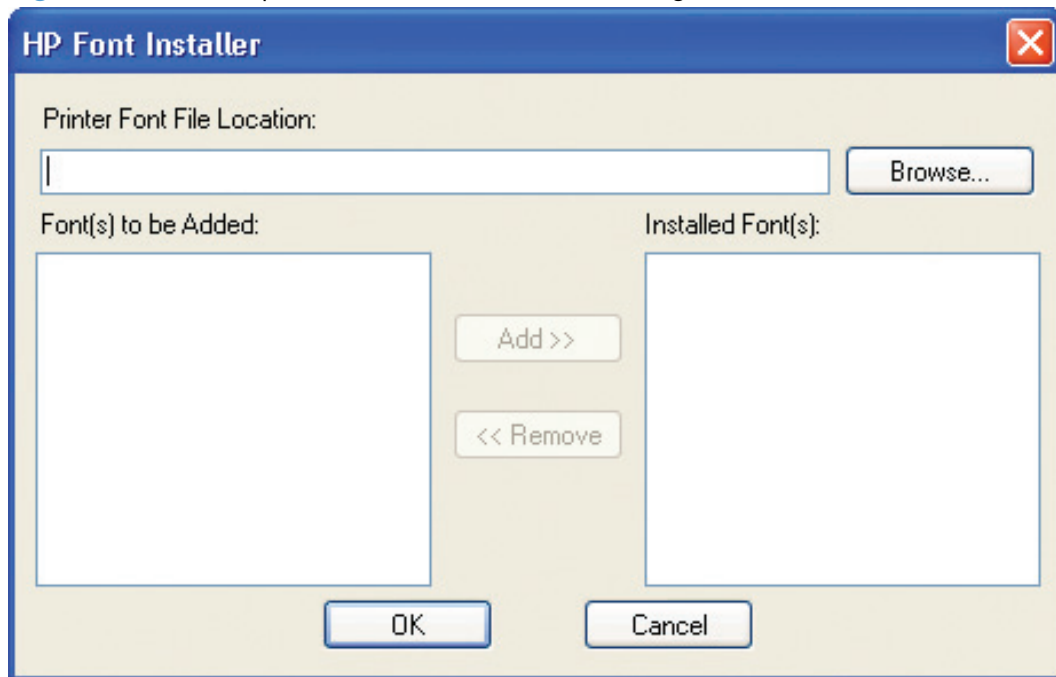

Installing external fonts

Follow these steps to install external fonts.

1. In Windows Vista and Windows 7, click the **Start** button, click **Control Panel**, click **Hardware and Sound**, and then click **Printers**.

In Windows XP, Windows Server 2003, and Windows Server 2008, click **Start**, click **Settings**, and then click **Printers and Faxes**.
2. Right-click the name of the product.
3. Click **Properties**.
4. Click the **Device Settings** tab.
5. Click the **External Fonts** option. The **Properties** button appears.
6. Click **Properties**. The **HP Font Installer** dialog box appears.
7. Type the name and path of the font metric file in the **Printer Font File Location** text box, or click **Browse** to locate the file on the computer. The font file names appear in the **Font(s) to be Added** window.
8. Select the fonts that you want to add, and then click **Add**. The fonts are installed and the file names appear in the **Installed Font(s)** window.
9. Click **OK** to close the **HP Font Installer** dialog box.

Removing external fonts

1. In Windows Vista and Windows 7, click the **Start** button, click **Control Panel**, click **Hardware and Sound**, and then click **Printers**.

In Windows XP, Windows Server 2003, and Windows Server 2008, click **Start**, click **Settings**, and then click **Printers and Faxes**.
2. Right-click the name of the product.
3. Click **Properties**.
4. Click the **Device Settings** tab.
5. Click the **External Fonts** option. The **Properties** button appears.
6. Click **Properties**. The **HP Font Installer** dialog box appears. The external fonts that are installed appear in the **Installed Fonts** window.
7. Select the fonts that you want to remove, and then click **Remove**. The fonts are removed.
8. Click **OK** to close the **HP Font Installer** dialog box.

Installable Options

Items under **Installable Options** are automatically populated and their defaults set when the driver is installed.

The product has printing options that you can install and configure in this section. The following controls are available:

- [Automatic Configuration](#)
- [Printer Status Notification](#)
- [Tray 3](#)
- [Tray 4](#)
- [Tray 5](#)
- [Duplex Unit \(for 2-Sided Printing\)](#)
- [Allow Manual Duplexing](#)
- [Accessory Output Bin](#)
- [Printer Hard Disk](#)
- [Job Storage](#)
- [Job Separator](#)
- [Mopier Mode](#)
- [Envelope Feeder](#)

Automatic Configuration

Use the **Device Settings** tab to tell the driver about the hardware configuration of the product. If bidirectional communication is enabled in a supported environment, update this tab by selecting the **Update Now** setting in the **Automatic Configuration** setting. The default setting is **Off**. After an automatic configuration, the setting returns to **Off** after the changes are made.

If your environment does not support bidirectional communication, the **Update Now** setting is unavailable, so you must manually configure the options on this tab.

If you have more than one driver installed for the product (for example, the default HP PCL 6 printer driver and the HP PCL 5 Universal Print Driver), the Update Now feature works automatically only on the driver on which it is activated. The other driver will not be updated, and might show the default setting for the specific product model.

Printer Status Notification

Status Notification Popups (SNPs) provide immediate job information and product status information via a small pop-up on the computer. SNPs also provide current information about product supplies, such as toner levels, and links to the HP SureSupply ordering system and the HP Instant Support page.

Tray 3

This control specifies whether you have Tray 3, an additional 500-sheet tray, installed on the product. Tray 3 comes standard on the F and FSKM models, and is optional on the other product models.

Tray 4

This control specifies whether you have Tray 4, an additional 500-sheet tray, installed on the product. Tray 4 comes standard on the FSKM model, and is optional on the other product models.

Tray 5

This control specifies whether you have Tray 5, an additional 500-sheet tray, installed on the product. Tray 5 comes standard on the FSKM model, and is optional on the other product models.

Duplex Unit (for 2-Sided Printing)

The duplexing unit comes installed on all the product models.



NOTE: The product uses the smart duplexing feature to detect information on both sides of the print job pages and runs the pages through the duplexing unit only if printable information appears on the second side of the page.

Allow Manual Duplexing

Select the **Allow Manual Duplexing** option to print on both sides of any supported size and most types of paper (except transparencies, envelopes, and labels). To use this feature, you must reinsert the paper stack into the input tray to print the second side. The product pauses while you make this adjustment.

This setting is enabled by default.

Accessory Output Bin

The **Accessory Output Bin** option contains the following options:

- **Not Installed:** This is the default setting. This setting should be used if the product does not have a stapler/stacker installed.
- **HP 3-Bin Stapler/Stacker – Stacker Mode:** This setting sets the stapler/stacker in stacker mode.
- **HP 3-Bin Stapler/Stacker – Function Separator Mode:** This setting sets the stapler/stacker in function separator mode.
- **HP 3-Bin Stapler/Stacker – Mailbox Mode:** This setting sets the stapler/stacker in mailbox mode.

Printer Hard Disk

When this option is installed, the **Job Storage** option and the **Mopier Mode** option are enabled in the printer driver. Use the **Job Storage** option to store print jobs and then print them later from the control panel. The multiple-original print (mopy) function is an HP-designed feature that produces multiple, collated copies from a single print job.

Job Storage

When the **Job Storage** feature is enabled, the product can store print jobs so that you can gain access to those print jobs later at the control panel.

Job Separator

Use this control to specify whether a print job identifier page should be printed between print jobs.

Mopier Mode

The multiple-original print (mopy) function is an HP-designed feature that produces multiple, collated copies from a single print job. Multiple-original printing (mopying) increases performance and reduces network traffic by transmitting the job to the product once, and then storing it in memory or on the hard disk. The remainder of the copies are printed at the fastest speed. All documents that are printed in mopier mode can be created, controlled, managed, and finished from the computer, which eliminates the extra step of using a photocopier.

The product supports the transmit-once mopying feature when the **Mopier Mode:** setting on the **Device Settings** tab is enabled.

When you use the HP PCL 6 printer driver, mopying is performed in one of two ways: either through the software or through the product hardware. When mopier mode is enabled, mopying takes place through the product hardware. One copy of a multiple-page print job is transmitted once through the network to the product, together with a printer job language (PJJ) command directing the product to make the specified number of copies.

When you disable mopier mode, you are not necessarily disabling multiple collated copies, which the driver can still perform through the software rather than the product hardware (the mopying path that is disabled when you change the **Mopier Mode** setting to **Disabled**). However, a multiple-copy print job that is sent when the mopier is disabled loses the advantage of transmitting the print job once, because the job is sent through the network for each collated copy.

Mopier mode and collation

Mopying and collating print jobs are independent but closely related functions. Mopying, the ability to send original print jobs to the product, is performed by the printer driver. Collating can be controlled by either the printer driver or the document software program. The mopying mode is selected by default in the driver, and can be disabled by changing the **Mopier Mode** setting on the **Device Settings** tab to **Disabled**.

Control collation through the printer driver by selecting or clearing the **Collated** check box on the **Advanced** tab. Click **Copy Count** under the **Paper Output** setting. You can clear the check box, which is available only when the **Copy Count** option is set to more than 1 copy, to allow the software program to control collation.

To receive uncollated multiple copies of a print job, you must clear the **Collated** check box *and* make sure that the software program collation feature is not selected.

The following table shows the relation between mopier mode settings and collation settings in the software program and the driver. The first three columns show the settings; the last column, "Expected result", shows how a 3-page print job would appear.

Table 4-4 Driver mopier mode and collation settings

Mopier mode	Application collation	Driver collation	Expected result
Disabled	Not selected	Not selected	3 copies uncollated
Disabled	Not selected	Selected	3 copies uncollated
Disabled	Selected	Not selected	3 copies collated
Disabled	Selected	Selected	3 copies collated
Enabled	Not selected	Not selected	3 copies uncollated
Enabled	Not selected	Selected	3 copies uncollated
Enabled	Selected	Not selected	3 copies collated
Enabled	Selected	Selected	3 copies collated

Envelope Feeder

A 75-envelope tray is available for this product. The **Envelope Feeder** option contains the following options:


- **Not Installed:** This setting is the default setting. The product will not pull envelopes from an installed envelope feeder if this setting is selected.
- **Installed:** This setting enables the product to print envelopes from the installed envelope feeder.

About tab features

 **NOTE:** The **About** tab is located on the **Properties** tab set.

The **About** tab provides detailed information about driver component versions. It contains an overall build version number (in parentheses after the model name) together with specific information about each of the components. The information varies according to the product model number, driver, date, and versions. The **About** tab is shown in the following figure.

Figure 4-23 PCL 6 printer driver About tab

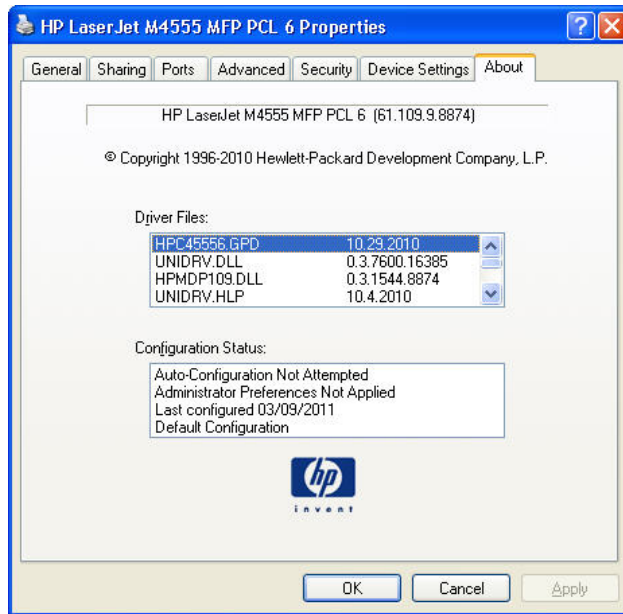

The **About** tab lists driver installation file names and their version numbers. The **About** tab also indicates whether the driver was autoconfigured, whether administrator preferences were set, the date the driver was last configured, and whether the configuration is autoconfigured or user-configured.

The **About** button is also available on most driver screens. The **About** button provides a driver version number and creation date.

5 Mac software and utilities


Introduction

The product comes with software and installers for Apple, Inc., Mac systems.

This chapter provides procedures for installing and removing the printing-system software for Mac OS X operating systems, as well as descriptions about the software and utilities. The chapter provides information about these topics:

- [Determine the Mac driver version](#)
- [Supported operating systems for Mac](#)
- [Printing-system software](#)
- [Mac installation instructions](#)
- [Remove software from Mac operating systems](#)
- [HP Utility for Mac](#)

Determine the Mac driver version

1. From the Apple menu , click the **System Preferences** menu, and then click the **Print & Fax** icon.
2. Select the product in the left side of the window.
3. Click the **Options & Supplies** button.
4. Click the **General** tab to view the driver version number.

Supported operating systems for Mac

The product supports the following Mac operating systems:

- Mac OS X 10.5, 10.6, and later



NOTE: For Mac OS X 10.5 and later, PPC and Intel® Core™ Processor Macs are supported.

Mac system requirements


Hardware requirements

- PowerPC G4, G5, or Intel Core processor
- 512 MB RAM
- 150 MB of available hard-disk space
- CD-ROM drive or Internet connection

Supported printer drivers for Mac

The HP LaserJet software installer provides PostScript® Printer Description (PPD) files, Printer Dialog Extensions (PDEs), and the HP Utility for use with Mac OS X computers. The HP printer PPD and PDE files, in combination with the built-in Apple PostScript printer drivers, provide full printing functionality and access to specific HP printer features.

Change printer-driver settings for Mac

Change the settings for all print jobs until the software program is closed	Change the default settings for all print jobs	Change the product configuration settings
<ol style="list-style-type: none">1. On the File menu, click the Print button.2. Change the settings that you want on the various menus.	<ol style="list-style-type: none">1. On the File menu, click the Print button.2. Change the settings that you want on the various menus.3. On the Presets menu, click the Save As... option and type a name for the preset. <p>These settings are saved in the Presets menu. To use the new settings, you must select the saved preset option every time you open a program and print.</p>	<p>Mac OS X 10.5 and 10.6</p> <ol style="list-style-type: none">1. From the Apple menu , click the System Preferences menu and then click the Print & Fax icon.2. Select the product in the left side of the window.3. Click the Options & Supplies button.4. Click the Driver tab.5. Configure the installed options.

Printing-system software

The product includes the following software for Mac computers:

- PDEs for Mac

PDEs

Printer Dialog Extensions (PDEs) are code plug-ins that provide access to product features, such as number of copies, duplexing, and quality settings. The PDEs are HP additions to Apple's printer driver.

HP Embedded Web Server

Mac OS X v10.5 and later support the HP Embedded Web Server (HP EWS). Use the HP Utility to control features that are not available in the driver. Use the HP EWS to perform the following tasks:

- Name the product and assign it to a zone on the AppleTalk network.
- Change product settings.
- Set a password for the product.
- From the computer, lock functions on the control panel to prevent unauthorized access (see the printing-software help).

Install notes

This text file contains important information about product features, instructions for installing the printing-system software, and technical assistance.

Online help


This HTML-based help system replaces the Apple Guide help system that was provided with Mac OS 9.x HP products. The help system is in English only, and can be viewed through a browser or in the Mac OS Help Center.

Screen fonts


The printing-system software for Mac operating systems no longer includes a font installer. The HP LaserJet Enterprise M4555 MFP Series product uses previously installed system fonts when it is installed on a Mac computer.

Mac installation instructions

On a Mac computer, the installation procedures are basically the same for a network administrator, a network client, and a single user. Install the software on any computer that has save rights to the product. Users must have Administrator rights to install the software.

 **NOTE:** If the computer is connected to the product by a LocalTalk (printer port) connection, you must configure the AppleTalk (or network) control panel for the correct connection to communicate with the product. You must set up the product, connect it to the computer or network, and turn it on *before* the software is installed. Mac operating systems do not support parallel connections.


The Mac partition contains an installer program for each language. Find the appropriate language for the operating system that is being used, and then use the installer program for that language.

 **NOTE:** Detailed installation steps can be found in [Mac OS X installation on page 126](#).

HP LaserJet software CD, Mac partition

The files contained in the Mac partition of the HP LaserJet software CD are grouped by language and reside in the following directory:

- HP LaserJet Enterprise M4555 MFP Series
- Documents

 **NOTE:** File layouts differ by language for each regional version of the software CD.

Install the printing-system software for the Mac OS

Topics:


- [General installation instructions](#)
- [Mac OS X installation](#)
- [Setup instructions](#)

General installation instructions

1. Insert the Mac printing-system software CD into the CD-ROM drive.


 **NOTE:** If the CD screen does not open automatically, double-click the CD-ROM icon on the desktop to open the CD-ROM window.

2. Double-click the **HP LaserJet M4555 MFP** icon.
3. Follow the onscreen instructions to complete the software installation.


 **NOTE:** During this installation process, be patient. The installer must perform an initial search of the computer for up to 1 minute. During this time, the installer might appear to be stalled.

4. When the software installation is complete, click the **Close** button.

Mac OS X installation

 **NOTE:** If you are connecting the product to a network, connect the network cable to the network port. If you are connecting the product to a computer by using the USB cable, install the software **before** connecting the USB cable.


1. Insert the printing-system software CD in the CD-ROM drive.


 **NOTE:** If the CD screen does not open automatically when the CD is put into the CD-ROM drive, double-click the CD-ROM icon on the desktop to open the installer folder.


2. The installer program opens. To start the installation process, double click the **HP LaserJet M4555 MFP** icon.

Figure 5-1 Mac installer opening screen



 **NOTE:** The file name displayed on your HP LaserJet installer browser screen may be different than the file name displayed in the above figure.


 **NOTE:** In the HP LaserJet installer browser screen, double-click the **Documents** icon to gain access to the product manuals. Select a language folder, and then locate the available ReadMe file, which is in .htm format.

 **NOTE:** For more information, see the user guide on the Web at:

www.hp.com/go/ljm4555mfp_manuals


3. In the **Introduction** screen, click the **Continue** button.


Figure 5-2 Mac installer Introduction screen

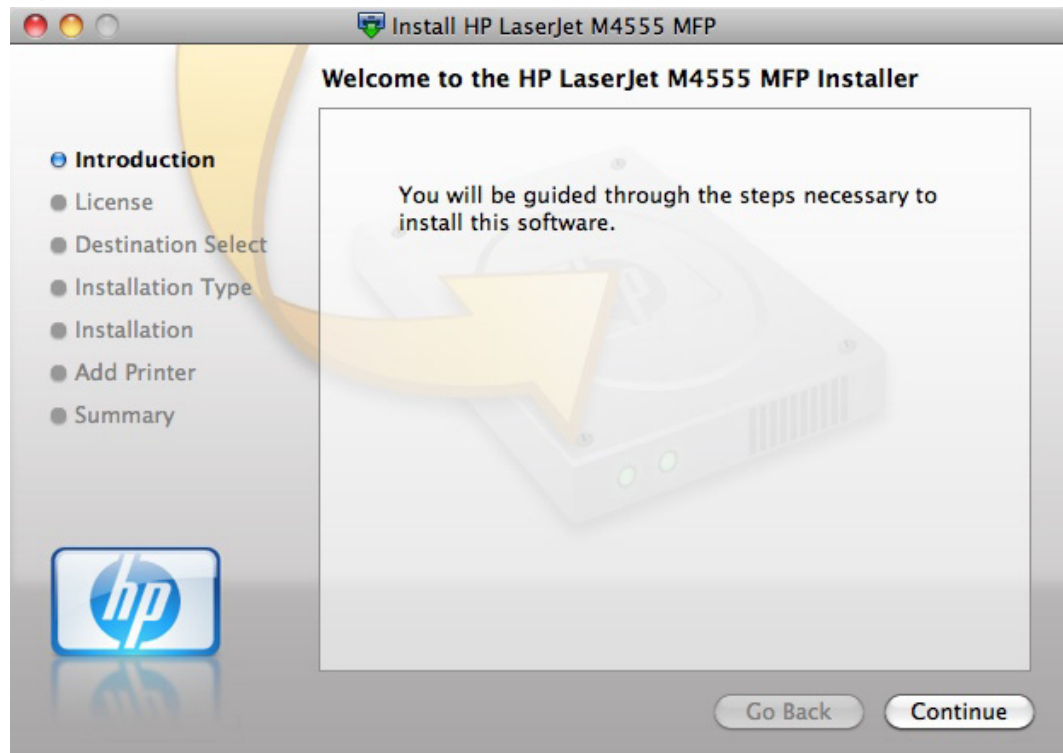

4. In the **License** screen, click the **Continue** button.

Figure 5-3 Mac installer License screen

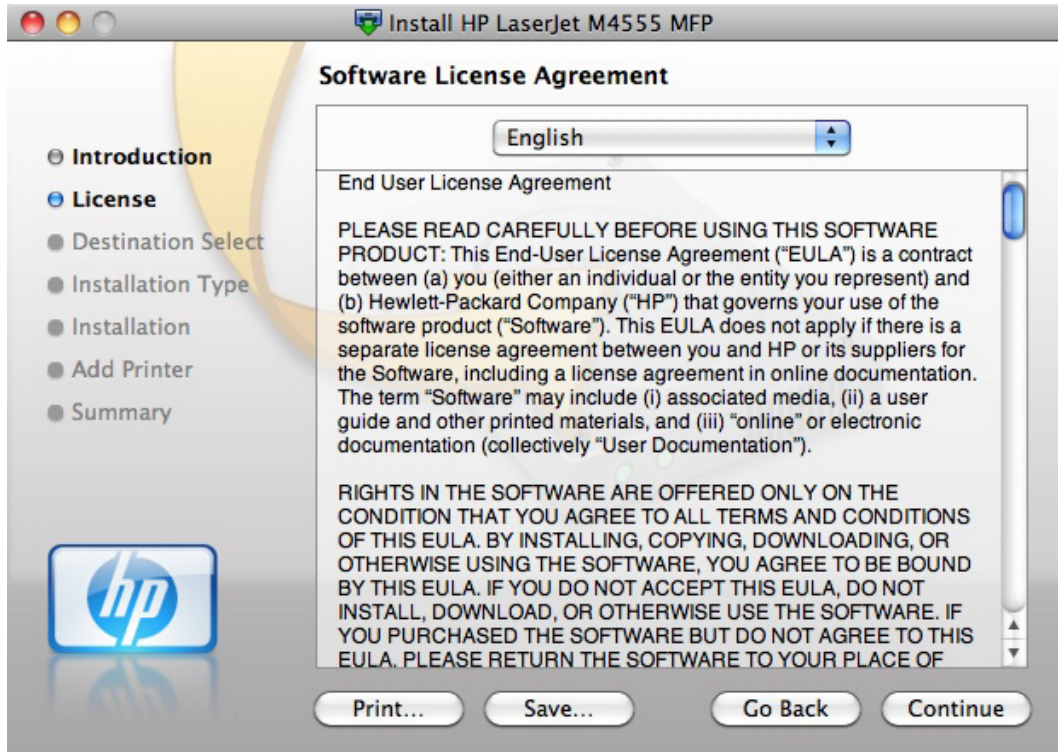



 **NOTE:** If the installer program is not in the correct language, click the correct language in the drop-down list at the top of the screen.

You can save or print the license file by clicking the **Save** button or the **Print** button.

5. In the license agreement popup, click the **Agree** button.

Figure 5-4 Mac installer license agreement screen

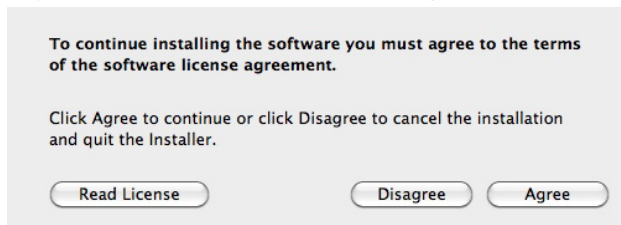

 **NOTE:** Click the **Disagree** button to end the installation and close the installer program.

6. In the **Destination Select** screen, click the correct installation destination, and then click the **Continue** button.


Figure 5-5 Mac installer Destination Select screen



Click the **Go Back** button to go back to the previous screen.

7. In the **Installation Type** screen, to perform a standard installation, click the **Install** button.

Figure 5-6 Mac installer Installation Type screen

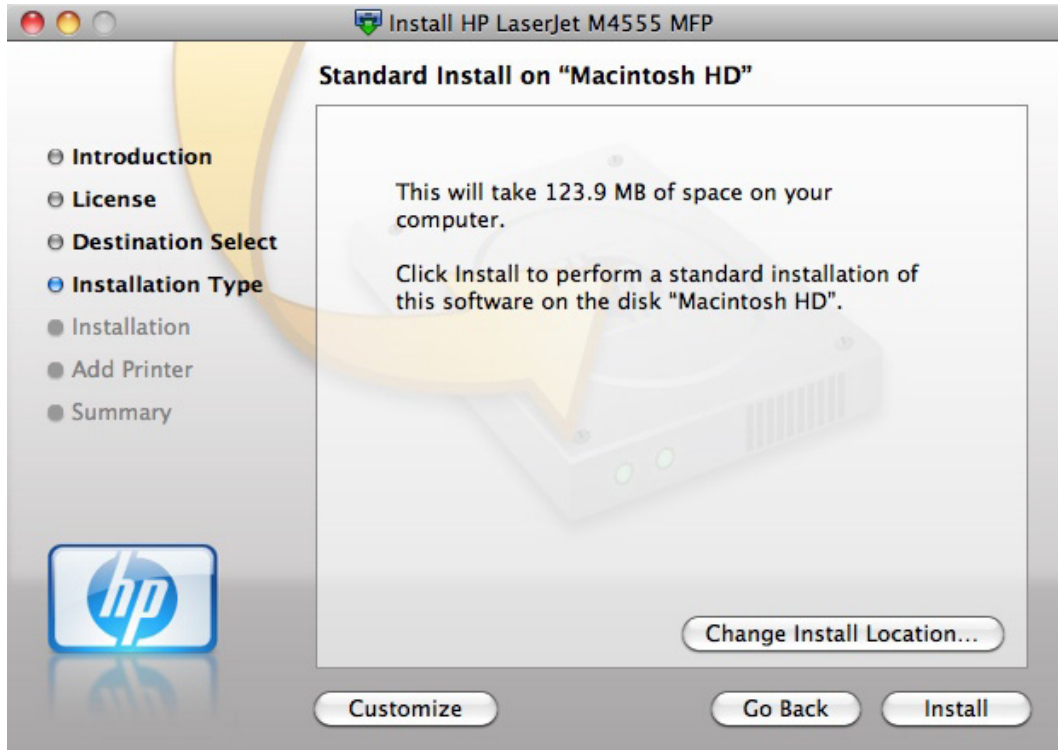


To perform a custom installation, click the **Customize** button, and then select the items that you want to install.

To change the installation location, click the **Change Install Location** button, navigate to the desired location, click the **Continue** button, and then click the **Install** button.


8. In the password popup, enter a user name and password to confirm administrative privileges on the computer, and then click the **OK** button.

Figure 5-7 Mac installer password popup

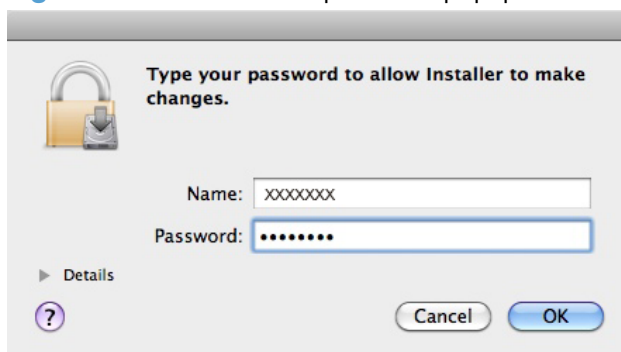

9. The installer program shows a progress bar. Wait several minutes for the installer program to install the product software components.

Figure 5-8 Mac installer Installation screen

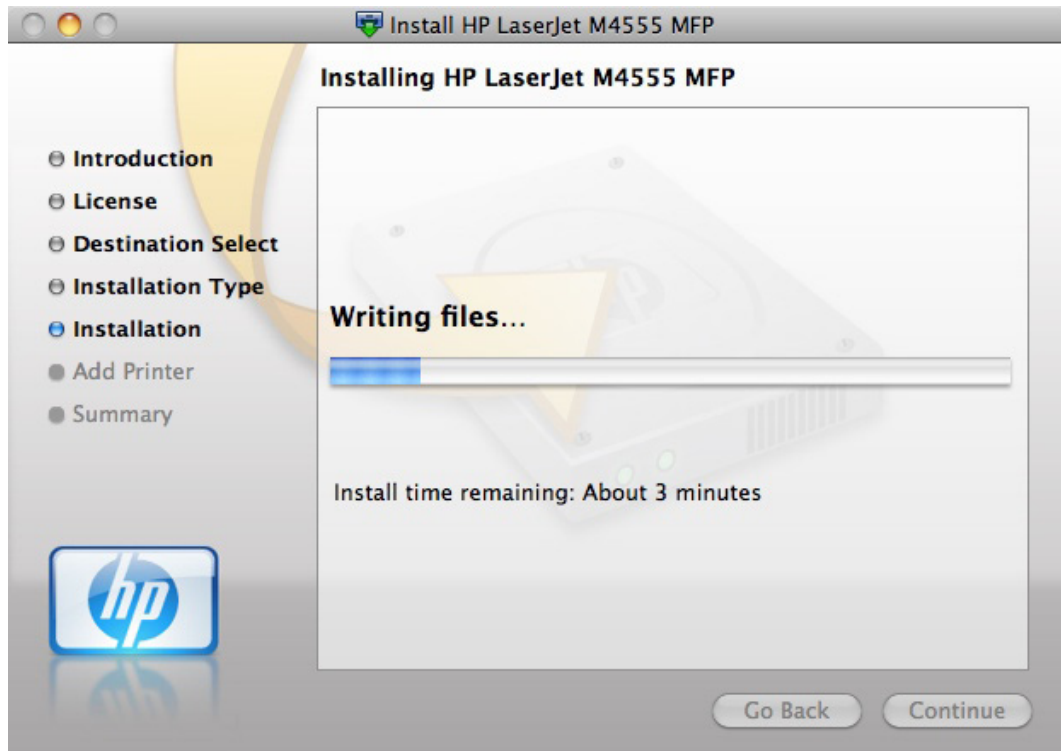

10. For network connections only: In the **Add Printer** screen, click the **Add Printer** button.


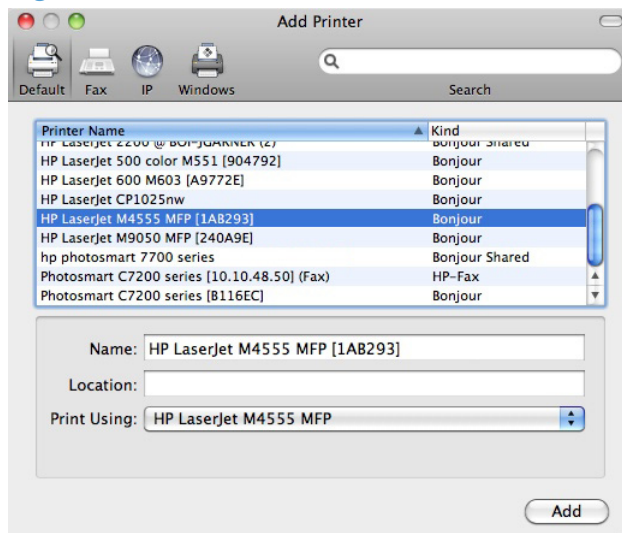
 **NOTE:** For USB connections, the installer program automatically sets up the product in the Printers list. Go to the next step.

Figure 5-9 Mac installer Add Printer screen



In the Add Printer list that appears, click the product to be installed, and then click the **Add** button.


Figure 5-10 Mac installer Add Printer list




After the installer program returns to the **Add Printer** screen, click the **Continue** button.

11. In the **Summary** screen, click the **Close** button to close the installer program.

Figure 5-11 Mac installer Summary screen

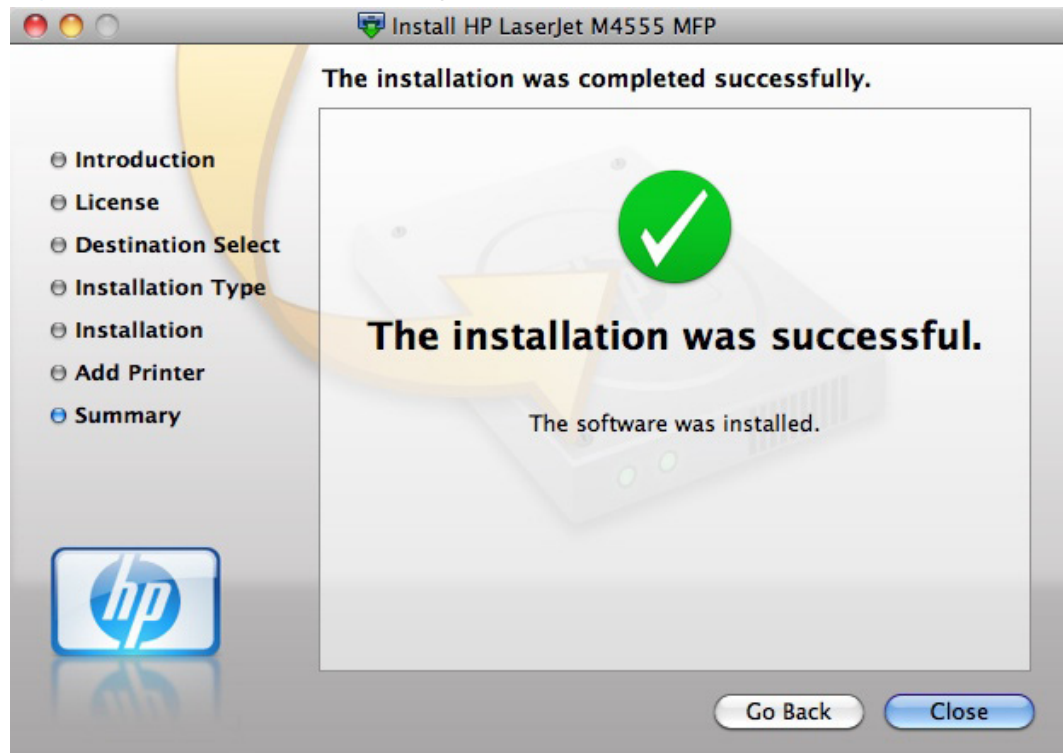

 **NOTE:** If you choose to not perform the setup process during the initial installation, you can complete the process later by performing the task in this section. Complete the instructions in the next section to set up a printer queue only if you did not do so during the initial installation process.


Setup instructions

This section contains information about the following topics:

- [Setting up a printer with Mac OS X 10.5 and later](#)
- [Troubleshooting the product setup](#)

Setting up a printer with Mac OS X 10.5 and later

Complete these steps after completing the printing-system software installation if you did not click the **Add Printer** button during the initial installation process.


1. If you are installing the product using a USB connection, connect the USB cable between the product and the computer. Turn on the product. If you are installing using a network connection, verify that the network cable is connected to the product and that the product is on.
2. From the Apple menu , click the **System Preferences** menu, and then click the **Print & Fax** icon.

3. If you are installing the product using a USB connection, verify that the product appears in the printer list. The **Name** column in the printer list should display the product name. If this is the case, the USB setup is complete.

If the product does not appear, or if the correct information does not appear in the field, see [Troubleshooting the product setup on page 136](#).

If you are installing the product using a network connection, continue with the following steps.


4. Click the plus symbol in the **Printer List** to open the **Printer Browser** screen.
5. You can use either Bonjour (default browser) or IP Printing for the network connection.


 **NOTE:** Bonjour is the easiest method and is the best method to use if the product is installed on your local network.

IP Printing *must* be used if you are installing the product on a different network.

If you are using Bonjour, complete the following steps:

- a. Click the **Default Browser** tab.
- b. Select the product from the list. The software verifies that the product is connected to the network and the **Print Using** field is automatically populated with the correct PPD for the product.

 **NOTE:** If you are on a network that has more than one product, print a configuration page and match the Bonjour Printer Name to the name on the list to identify the product that you are installing.

 **NOTE:** If the product does not appear in the list, verify that the product is on and connected to the network, then try turning the product off and then on again. If the product PPD does not appear in the **Print Using** pull-down list, turn the computer off and then on again, and then restart the setup process. For more troubleshooting information, see [Troubleshooting the product setup on page 136](#).

- c. Click the **Add** button.
- d. You are finished with the setup process.

If you are using the IP Printing method, complete the following steps:


- a. Click the **IP Printer** tab.
- b. Choose **HP Jet Direct – Socket** from the **Protocol** pull-down menu. This is the recommended setting for HP products.

- c. At the product control panel, touch the **Network Address** button to identify the product IP address or host name.

If the **Network Address** button is not visible, you can find the IP address or host name by printing a configuration page.

- i. At the product control panel, scroll to and touch the **Administration** button.
- ii. Open the following menus:
 - Reports
 - Configuration/Status Pages
 - Configuration Page
- iii. Touch the **View** button to view the information on the control panel, or touch the **Print** button to print the pages.
- iv. Find the IP address on the Jetdirect page.

Figure 5-12 IP location on the Jetdirect page

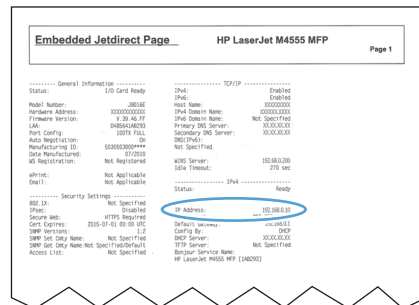

- v. IPv4: If the IP address is 0.0.0.0, or 192.0.0.192, or 169.254.x.x, you must manually configure the IP address. Otherwise, the network configuration was successful.

IPv6: If the IP address begins with "fe80:", the product should be able to print. If not, you must manually configure the IP address.

- d. Type the IP address into the **Address** field on the add printer screen.
 - e. The **Name**, **Location**, and **Print Using** information will automatically be filled in. If the product PPD does not appear in the **Print Using** field, turn the computer off and then on again, and then restart the setup process.
6. Select the product, click the **Options and Supplies** button, and then click the **Driver** button.
 7. In the **Optional Trays** drop-down menu, select the trays that are installed on the product.
 8. In the **Collation in Printer** drop-down menu, select the check box next to the printer disk. The amount of memory is set automatically.
 9. If the product has a hard disk, select **Installed** from the **Printer Hard Disk** drop-down menu.
 10. If the product has a duplex unit, select the **Duplex Unit** check box.

11. In the **Accessory Output Bins** drop-down menu, select the output bins that are installed on the product.
12. In the **Paper Matching** drop-down menu, select one of the following options:
 - **Prompt User for correct size**
 - **Nearest Size & Scale**
 - **Nearest Size & Crop**
13. After you have selected the settings in the **Installable Options** screen, click the **Continue** button. The product name appears in the **Printer List** and the setup process is complete.

Troubleshooting the product setup

If the product does not appear in the printer list after an installation:

Complete each one of these solutions in the order given, and restart the setup process after each one to see if the issue has been resolved.

- Verify that the USB or network cable is connected between the product and the computer and that the product is powered on.
- Try disconnecting and reconnecting the cable. If the computer has more than one USB port, try a different USB port.
- Turn the product off and then back on.
- Turn the computer off and then back on.
- If you are using a USB hub on the computer, disconnect any other USB devices from the hub.

If the wrong PPD appears in the Kind column in the printer list after installation:

1. Unplug the USB cable.
2. Delete the print queue with the incorrect type (for example, Generic PostScript Printer).
3. Reinstall the printing-system software.
4. Turn the computer off and then on.
5. Reconnect the USB cable from the computer to the product.

If these steps do not resolve the problem, delete the incorrect print queue, click **Add**, choose the product from the list, and then browse manually for the product PPD.

Remove software from Mac operating systems

You must have administrator rights to remove the software.

1. From the Apple menu , click the **System Preferences** menu, and then click the **Print & Fax** icon.
2. Highlight the product.

3. Click the minus (-) symbol.
4. Delete the print queue, if necessary.
5. Delete the .GZ file from the following hard-drive folder: `Library/Printers/PPDs/Contents/Resources`.

HP Utility for Mac

The HP Utility is a software program that gives you access to the product in Mac OS X.

The HP Utility does not work when it is installed by using the AppleTalk protocol. Use IP, Bonjour, or Rendezvous to enable the HP Utility.

The following topics are discussed:


- [Open the HP Utility](#)
- [Supplies Status](#)
- [Device Information](#)
- [File Upload](#)
- [Update Firmware](#)
- [Upload Fonts](#)
- [Commands](#)
- [HP ePrint Center](#)
- [Duplex Mode](#)
- [Trays Configuration](#)
- [Stored Jobs](#)
- [Economode & Toner Density](#)
- [Resolution](#)
- [E-mail Alerts](#)
- [Network Settings](#)
- [Supplies Management](#)
- [Protect Direct Ports](#)
- [Additional Settings](#)
- [Output Devices](#)

Click the **HP Support** button to go to the **HP Online Support** Web site for more help on any of these topics.

Open the HP Utility

1. Perform one of the following steps:
 - From the **Printer Browser** menu, click the **Printer Utility** button.
 - From the **Print Queue**, click the **Utility** icon.
 - From the Finder, click the **Applications** item, click the **HP** item, and then click the **HP Utility** item.
2. The main **HP Utility** screen appears. Click the product in the **Printers** list.

Figure 5-13 HP Utility main screen

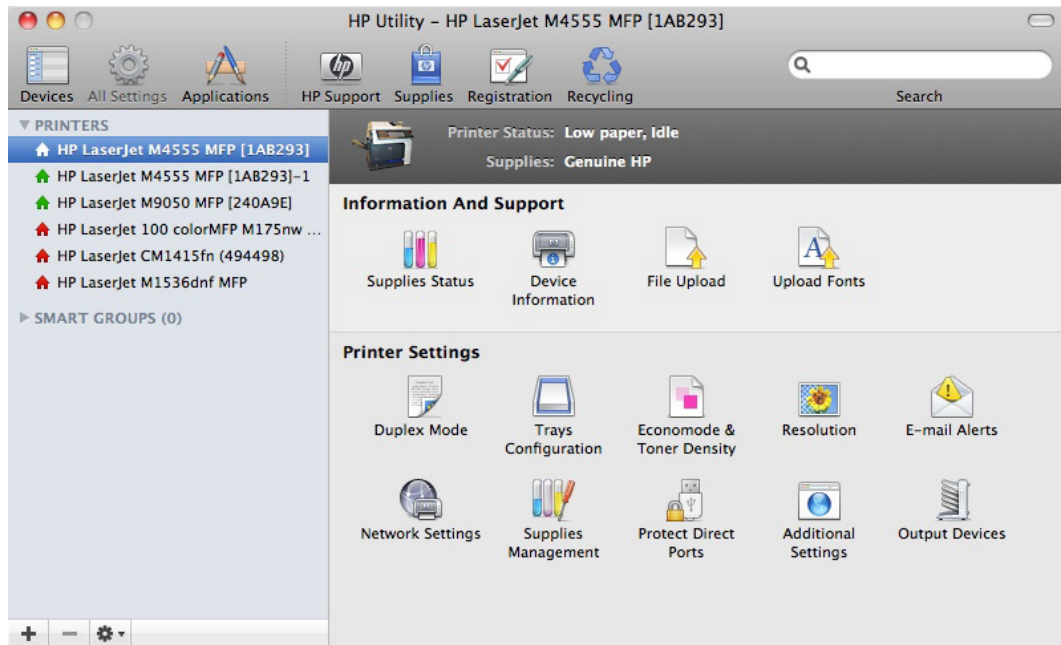


The following sections describe the screens and features that are available in the HP Utility.

Supplies Status

In the **Information And Support** section, click the **Supplies Status** icon to open the **Supplies Status** screen.

Figure 5-14 Supplies Status screen

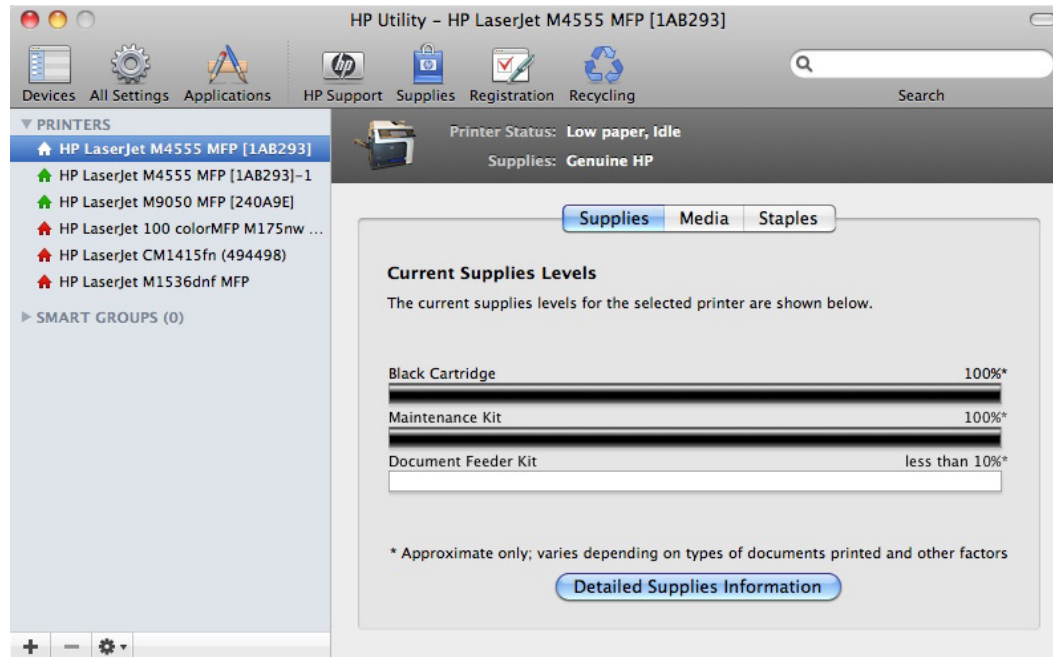

Click the **Detailed Supplies Information** button to open the **Supplies Status** details screen.

Use the scroll button to see information about the print cartridge.


On the **Supplies Status** screen, click the **Media** button to see the status of the trays.

You can also order supplies by clicking the **Supplies** link in the toolbar on the HP Utility main screen.

Device Information

In the **Information And Support** section, click the **Device Information** icon to open the **Device Information** screen.

Figure 5-15 Device Information screen

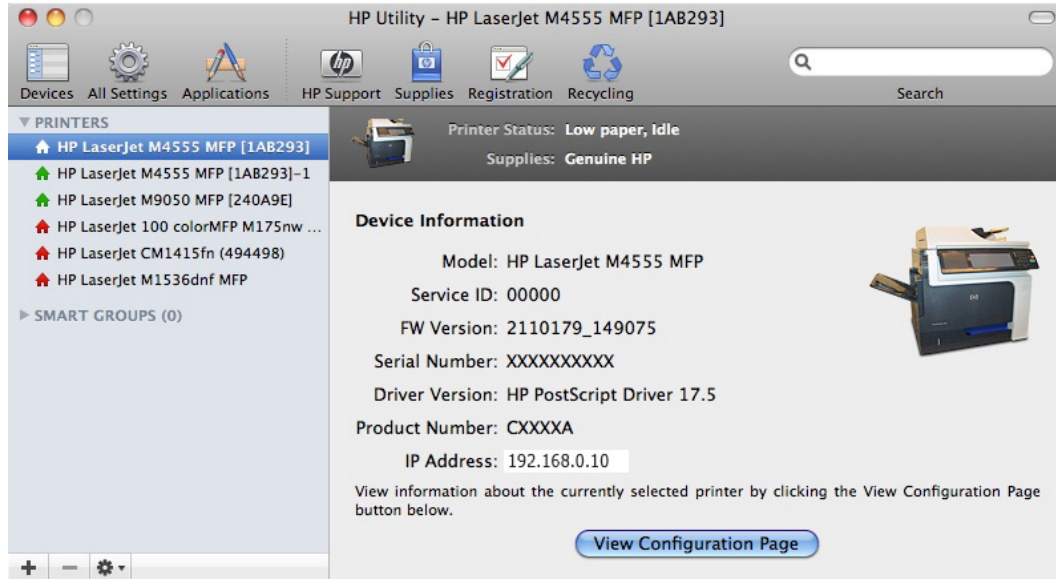

The screen identifies several key items for the product:


- The product model
- The product service ID
- The firmware version
- The serial number
- The printer driver version
- The product number
- The product IP address (if the product is on a network)

The product configuration page shows other settings; click the **View Configuration Page** button to view an online version of the page.

File Upload

In the **Information And Support** section, click the **File Upload** icon to open the **File Upload** screen.

Figure 5-16 File Upload screen

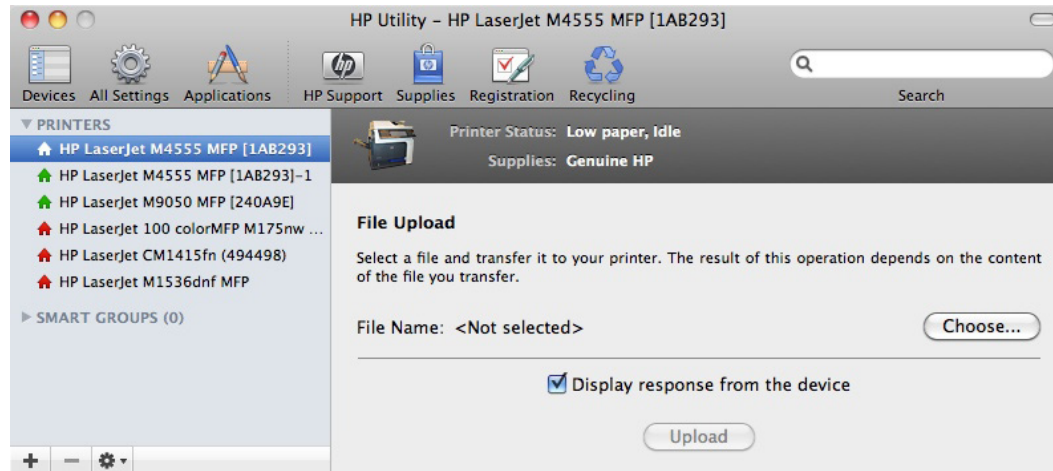

The **File Upload** command is supported for file types that can be sent directly to the product without first being opened through a software program. Some files can be uploaded to the product, but some cannot.

Documents in the following file formats can be printed by using a command line. That is, they do not need to be opened in a software program that supports the file format (such as the Adobe Acrobat or Acrobat Reader programs for .PDF files), but can be sent directly to the product by using the **File Upload** command.


- HP LaserJet printer command language (.PRN)
- Portable document format (.PDF)
- Postscript (.PS)
- Text (.TXT)

On the **File Upload** screen, click the **Choose** button to open a navigation screen. Locate the file you want to upload and click the **Open** button.

On the **File Upload** screen, click the **Display response from the device** option to verify that the upload was successful. If the file loads successfully, no message appears.


On the navigation screen, select the file and click the **Open** button. The file name appears in the **File Upload** screen. Click the **Upload** button.

Update Firmware

 **NOTE:** This option is available only after you open the **View** menu and select the **Show Advanced** option.


The firmware file can be downloaded from the following Web site:

Figure 5-17 Update Firmware screen

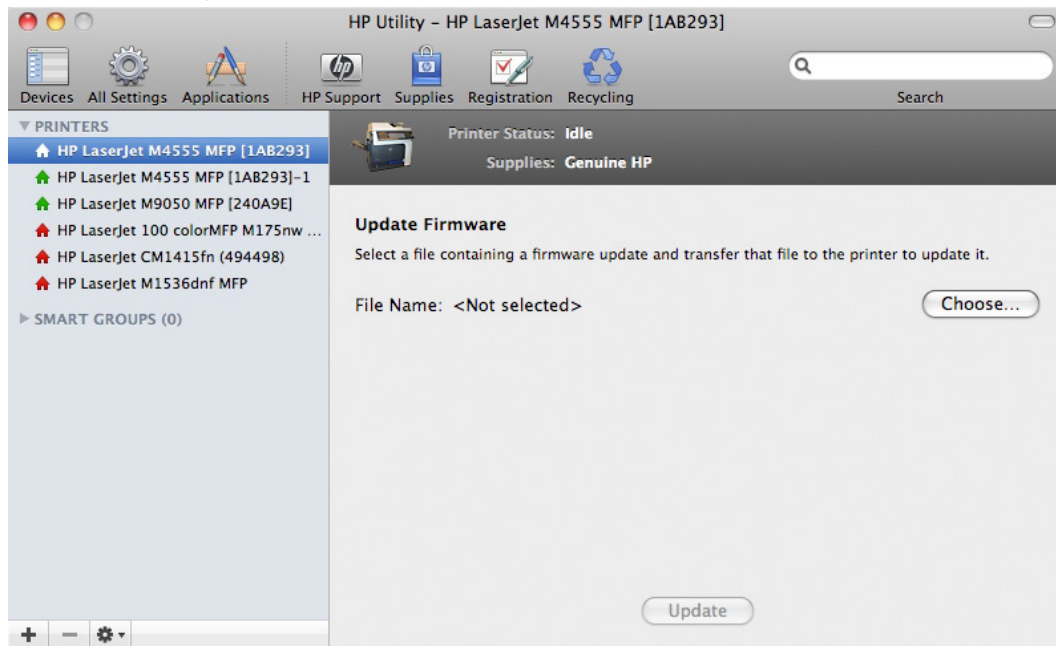


After you have the firmware file, you are ready to begin the update process. Complete the following steps:

1. In the **Information And Support** section of the HP Utility, select **Update Firmware**, click **Choose**, browse to firmware upgrade file, and then click **Open**.
2. On the **Update Firmware** screen, click **Upload**.

 **NOTE:** You might receive an error message on the screen indicating that the product is offline. Verify that the product is turned on. If it is, ignore the message. The **Updating** screen appears and the update proceeds as expected.

3. The update process can take several minutes. Let the process finish without further interaction with the product or the computer.


 **NOTE:** The product automatically turns off and then on again to activate the update; this can happen more than once. At the end of the update process, the **READY** message appears on the control panel. Do *not* turn off the product or interfere with the update until you see this message.

4. Print a configuration page and verify that the firmware revision number matches the revision of the current update.

Upload Fonts

In the **Information And Support** section, click the **Upload Fonts** icon to gain access to fonts that you can upload to the product.


Figure 5-18 Upload Fonts screen

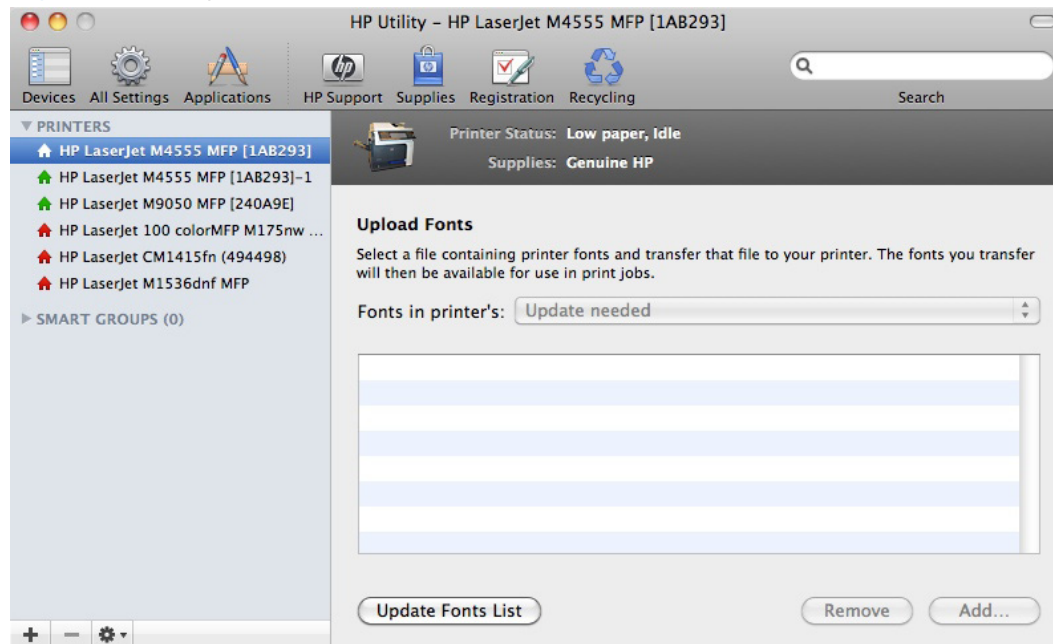

The drop-down menu in the **Upload Fonts** screen has the following options:


- **Memory.** Fonts that are available in the product memory are listed.
- **Disk.** Select this option to show any fonts that are installed on the product hard disk or flash disk. By default, no fonts are stored on either of these disks. To upload fonts, select the font name, and then click the **Add** button.

Commands

 **NOTE:** This option is available only after you open the **View** menu and select the **Show Advanced** option.

The **Commands** screens gives the user the ability to send special characters or print commands to the product after the print job.

Figure 5-19 Commands screen

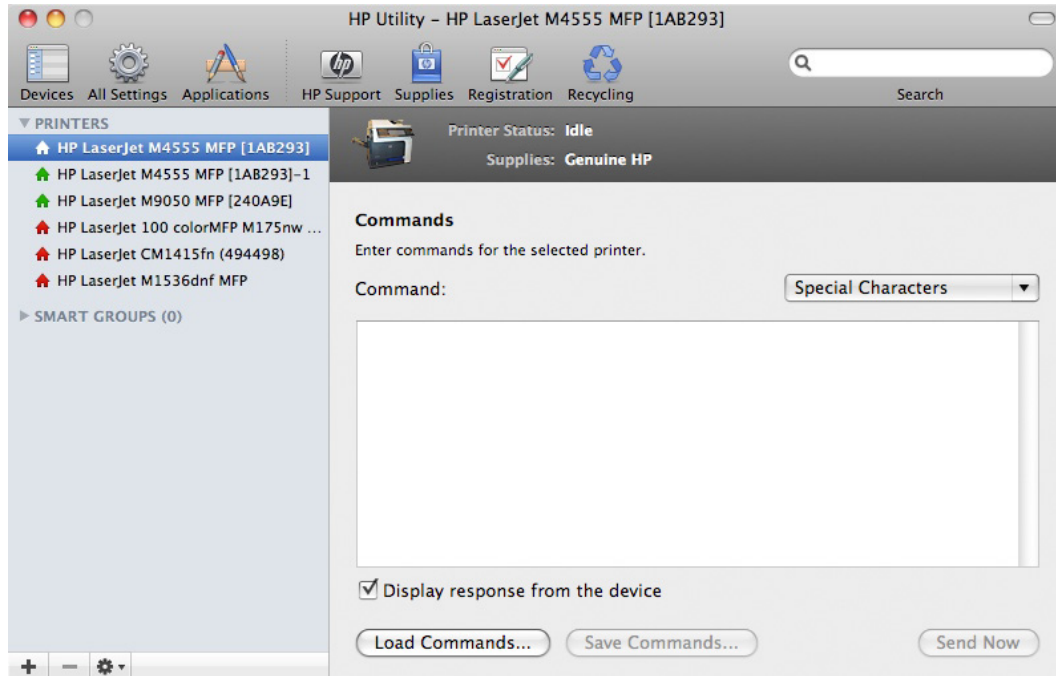


HP ePrint Center


The HP ePrint service offers simplified printing for internet-connected products from anywhere.

For instructions on how to enable HP Web Services and configure HP ePrint, go to:

www.hp.com/go/ePrint

Figure 5-20 HP ePrint Center screen

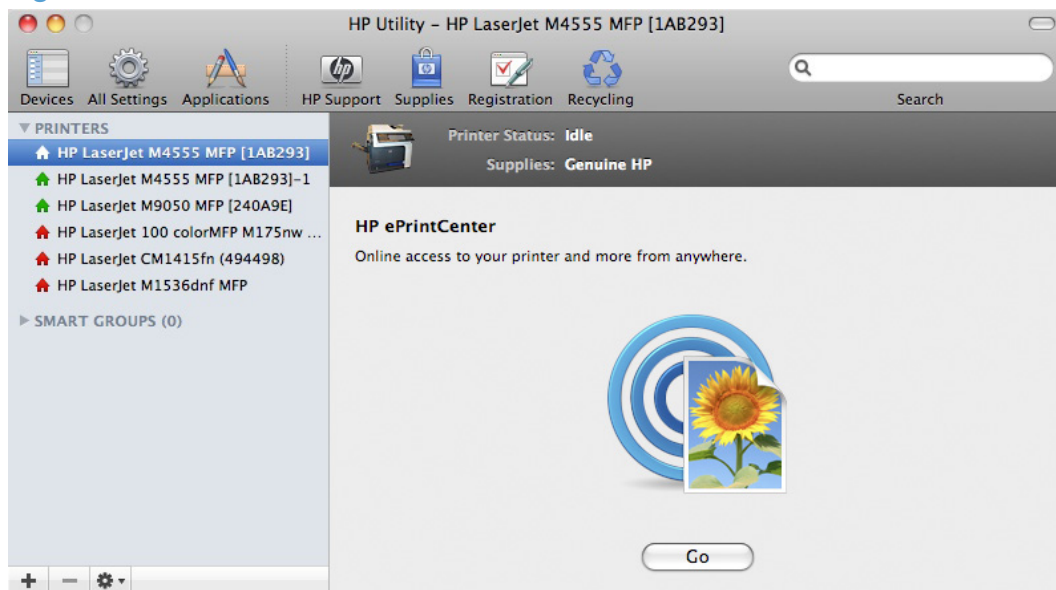


 **NOTE:** You might have to upgrade the product firmware before this feature appears in the HP Utility.

Duplex Mode

In the **Printer Settings** section, click the **Duplex Mode** icon to open the **Duplex Mode** screen.

Figure 5-21 Duplex Mode screen

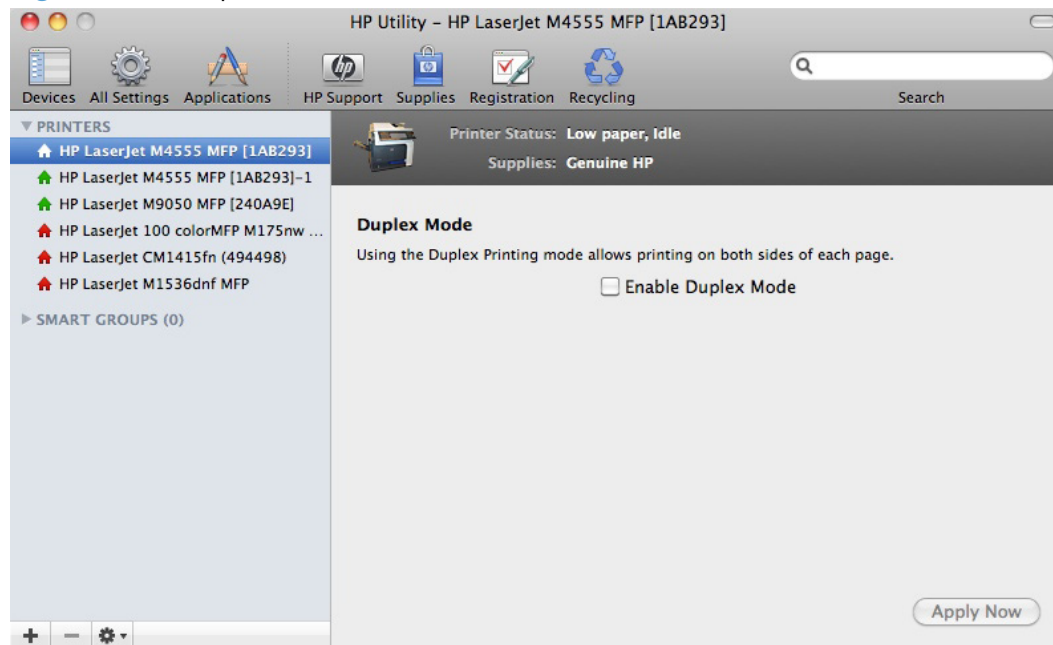


Use the **Enable Duplex Mode** option to print pages on both sides of the page.

1. Click the **Enable Duplex Mode** check box. This box is clear by default.
2. Click the **Apply Now** button to enable printing on both sides of the page.

Trays Configuration


Use the **Trays Configuration** screen to change paper size and type for each of the trays installed on the product.

Figure 5-22 Trays Configuration screen

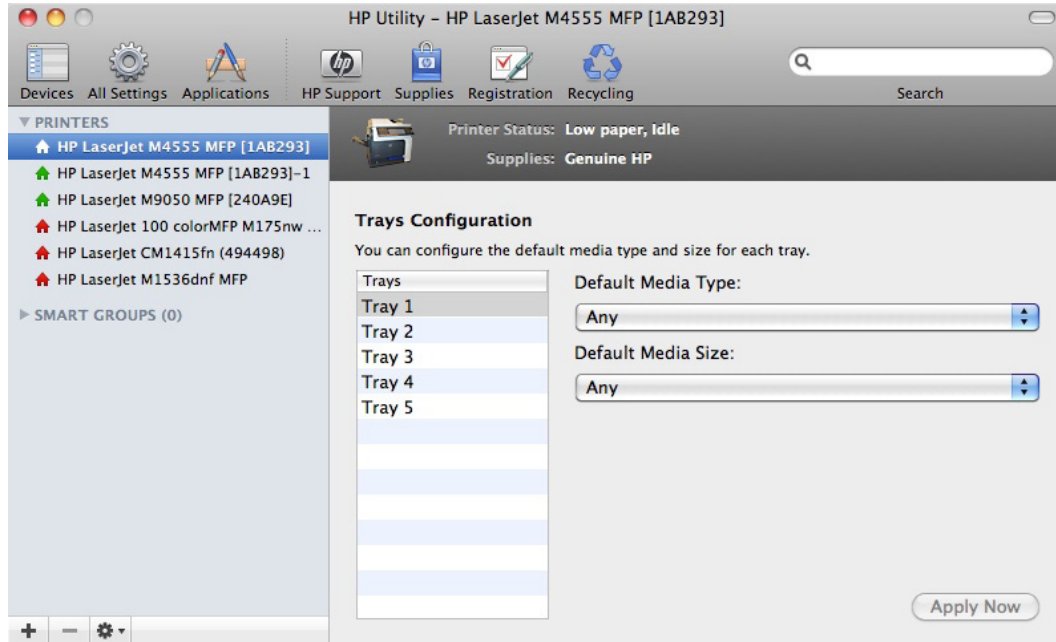


1. In the **Printer Settings** section, click the **Trays Configuration** icon.
2. To change the paper type, select a tray and then select a different paper type in the **Default Media Type** drop-down menu.
3. To change the paper size, select a tray and then select a different paper size in the **Default Media Size** drop-down menu.
4. Click the **Apply Now** button to save the settings.

Stored Jobs

 **NOTE:** Functionality for this option is not supported on this product in the HP Printer Utility for Mac. Use the embedded web server to use this functionality.

In the **Printer Settings** section of the HP Utility, select **Stored Job** to change the **Enable Job Storing** setting. This setting is selected by default. Click to clear the check box to disable the job-storing feature.

Figure 5-23 Enable Job Storing screen

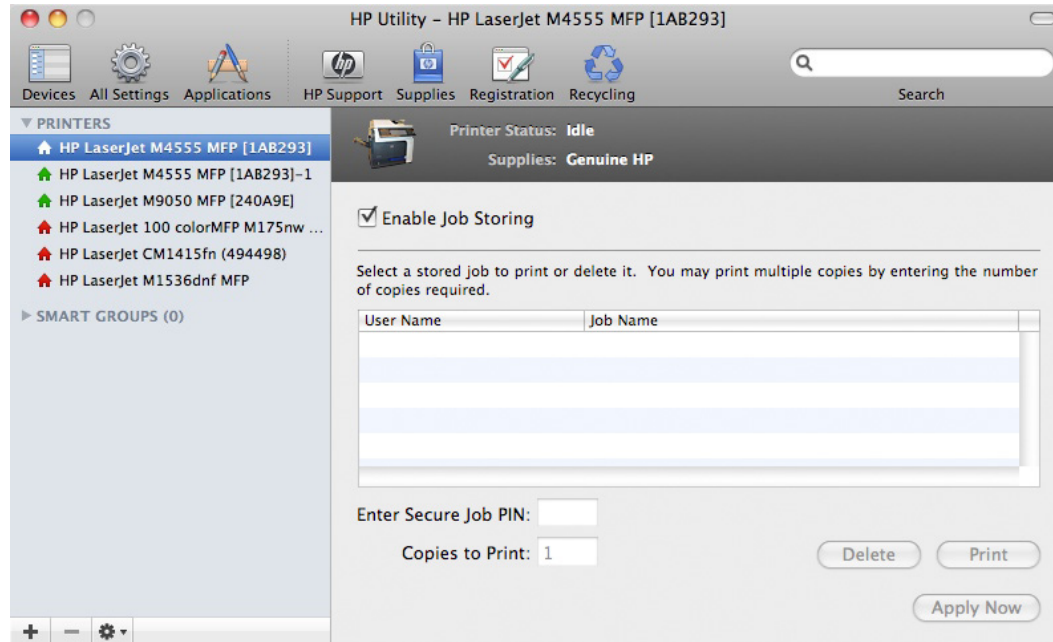

You can type a PIN for your job in the **Enter Secure Job PIN** field.

Select the number of copies in the **Copies to Print** field.


Select a stored job and click **Print** to print the job.

Select a stored job and click **Delete** to delete the job.

Economode & Toner Density

In the **Printer Settings** section, click the **Economode & Toner Density** icon to open the **Economode & Toner Density** screen.

Figure 5-24 Economode & Toner Density screen

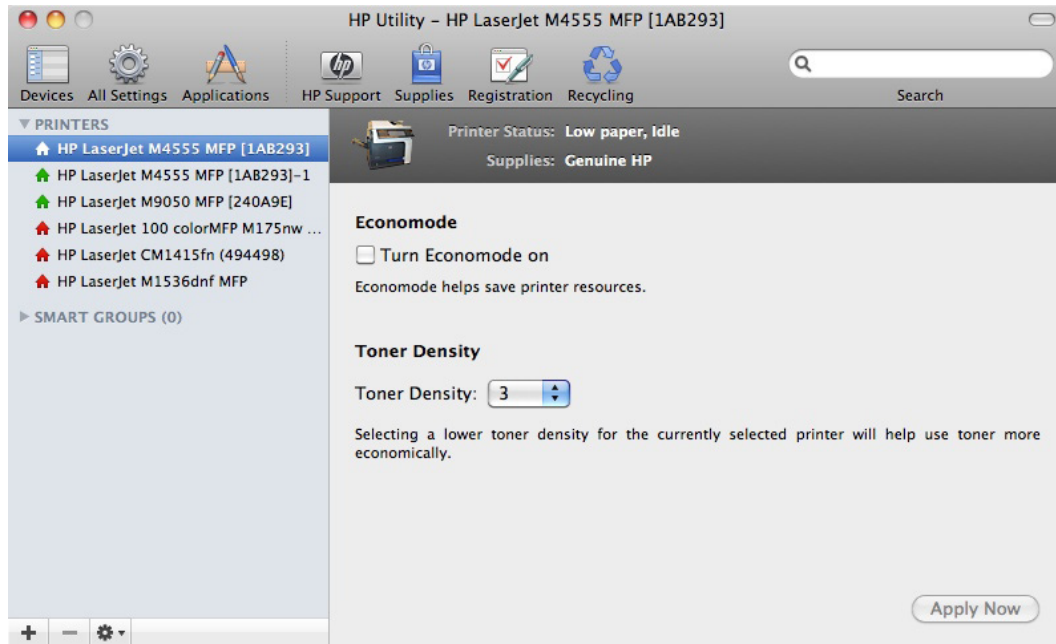


Use the **Economode & Toner Density** screen to enable or disable the Economode setting, or adjust the **Toner Density** setting.

Resolution

In the **Printer Settings** section, click the **Resolution** icon to open the **Resolution** screen.

Figure 5-25 Resolution screen

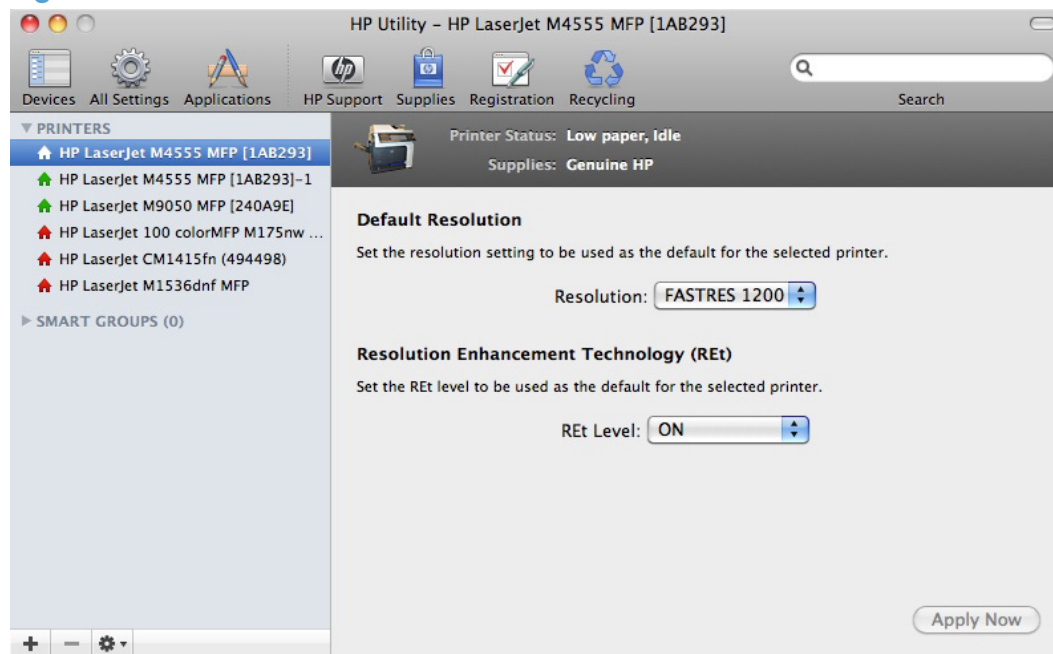

Use the **Resolution** screen to set the default resolution setting and to set the Resolution Enhancement Technology (REt) level.


- **FastRes 1200:** This is the default setting. This setting produces a resolution of 1200 x 600 dots per inch (dpi). This mode is faster than 1200 x 1200 resolution, but has slightly lower print quality.
- **300 dpi:** This setting prints using standard 300 dpi resolution.
- **600 dpi:** This setting prints using standard 600 dpi resolution.
- **ProRes1200:** This setting prints using 1200 x 1200 resolution. It prints more slowly than the other resolution settings, but it has the best print quality.

E-mail Alerts

In the **Printer Settings** section, click the **E-mail Alerts** icon to configure the product to send e-mail notifications to users.

If a user name and password have been set, you might need to obtain them from the IT administrator. For more information, see the HP EWS online help.

Figure 5-26 E-mail Alerts screen

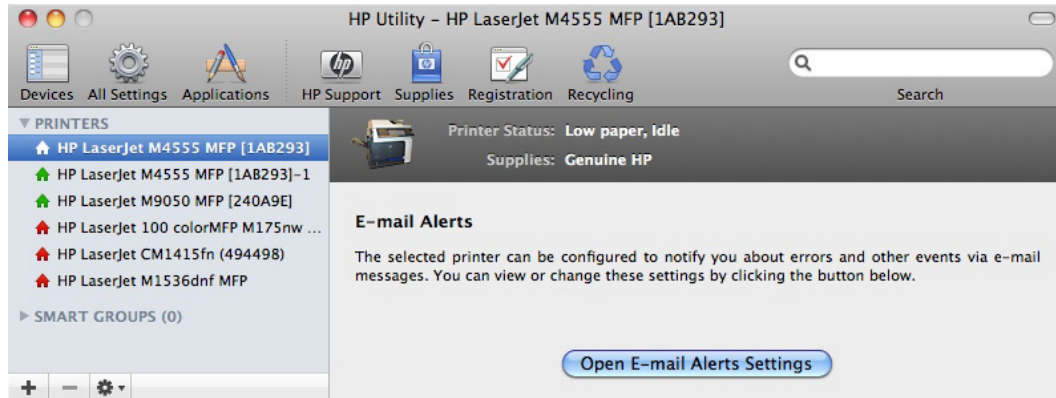


Click the **Open E-mail Alerts Settings** button to open the HP EWS. The HP EWS opens to the **Setup** screen on the **Alerts** tab, where you can set notifications.

Network Settings

In the **Printer Settings** section, click the **Network Settings** icon to open the **Network Settings** screen.

Figure 5-27 Network Settings screen

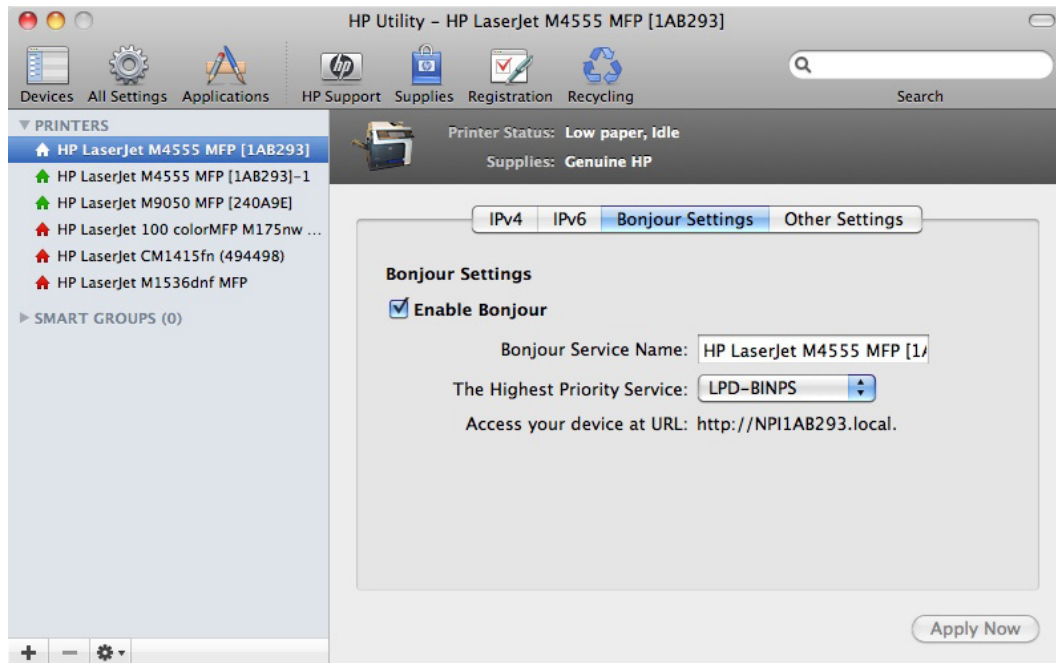

This screen provides access to the **IPv4**, **IPv6**, **Bonjour Settings**, and **Other Settings** panes.

If a user name and password have been set, you might need to obtain them from an IT administrator. For more information, see the HP EWS online help.

To view and change the Bonjour network settings, click the **Bonjour Settings** button.

Bonjour is enabled by default. To disable Bonjour, click to clear the **Enable Bonjour** check box, and then click the **Apply Now** button.

The following options are available in the **The Highest Priority Service** drop-down menu:


- **Port 9100**
- **IPP**
- **LPD-RAW**
- **LPD-TEXT**
- **LPD-AUTO**
- **LPD-BINPS** (default)

After you select a new setting, click the **Apply Now** button to save it.

Supplies Management

In the **Printer Settings** section, click the **Supplies Management** icon to open the **Supplies Management** screen.

Figure 5-28 Supplies Management screen

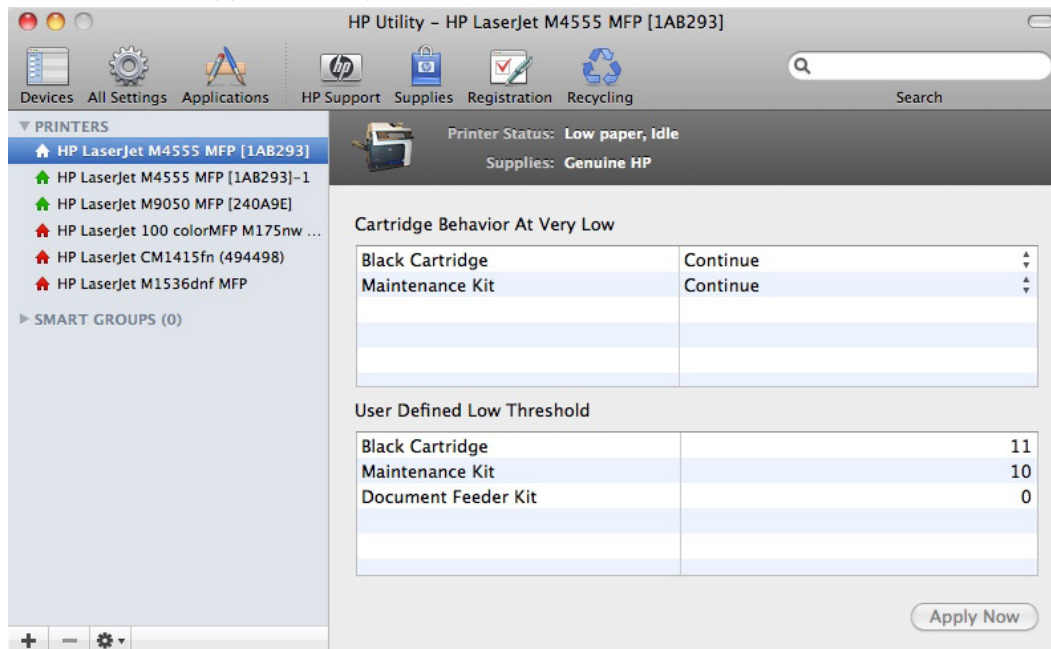

The **Supplies Management** screen allows you to define how the product responds when the supply states are **At Very Low** for the print cartridge. The **Supplies Management** screen also allows you to define when that very low message state or alert is given by setting the **User Defined Low**

Threshold (the percentage of estimated supply life left, at which you want the product to alert you that the supply is low).

In the **Cartridge Behavior at Very Low** area, select one of the following actions for the product to take when the print cartridge is at Very Low status.

- **Stop**
- **Prompt to Continue** (default)
- **Continue**


In the **User Defined Low Threshold** area, select a percentage life remaining next to the print cartridge to define the low threshold alert level.

Click the **Apply Now** button to save the new settings.

Protect Direct Ports

In the **Printer Settings** section, click the **Protect Direct Ports** icon to disable printing over USB and parallel ports. HP JetDirect, embedded network connectivity, and third-party add-on cards, such as FireWire, will not be affected by this setting.

Figure 5-29 Protect Direct Ports screen

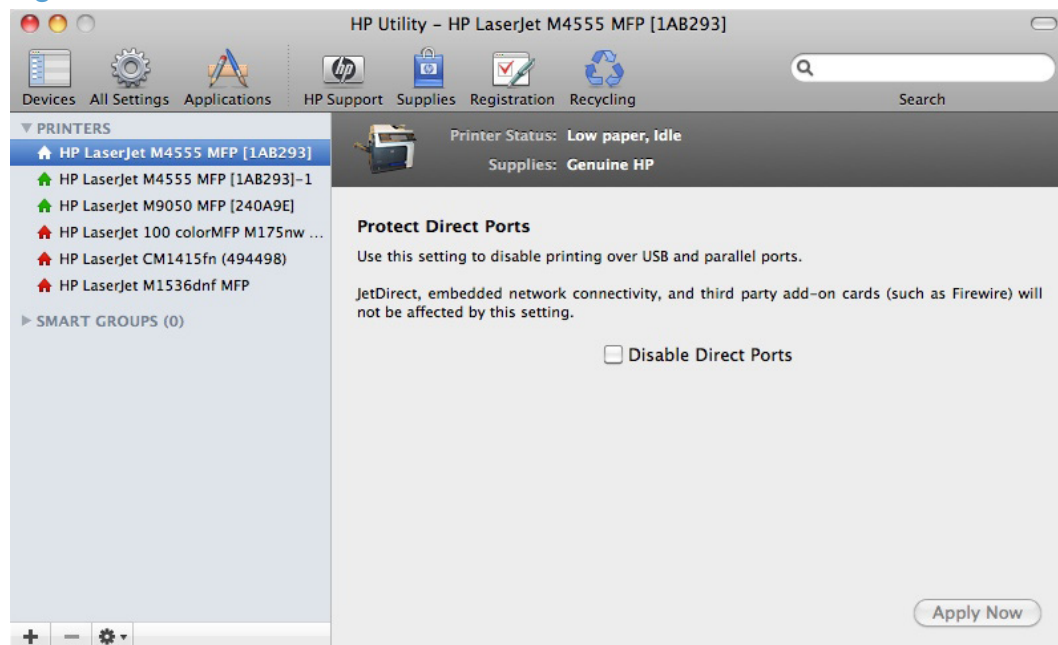


Click the **Disable Direct Ports** check box to disable the ports.

Additional Settings

In the **Printer Settings** section, click the **Additional Settings** icon to open the HP EWS.

Figure 5-30 Additional Settings screen

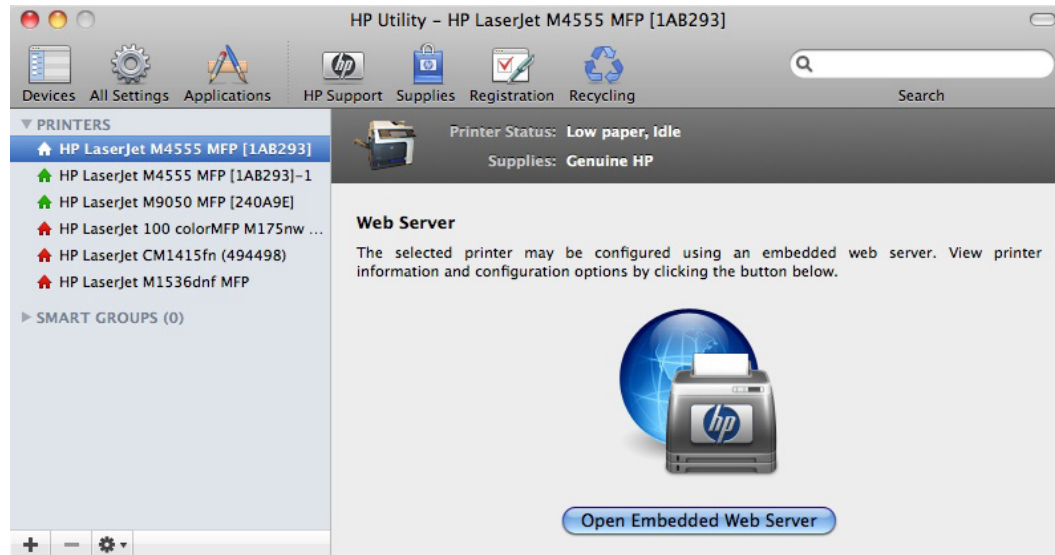


To open the HP EWS, click the **Open Embedded Web Server** button.

For information about HP EWS settings, consult the HP EWS online help.

Output Devices

In the **Printer Settings** section, click the **Output Devices** icon to open the **Output Devices** screen. The screen shows the paper handling devices on the product and allows configuration.

Figure 5-31 Output Devices screen

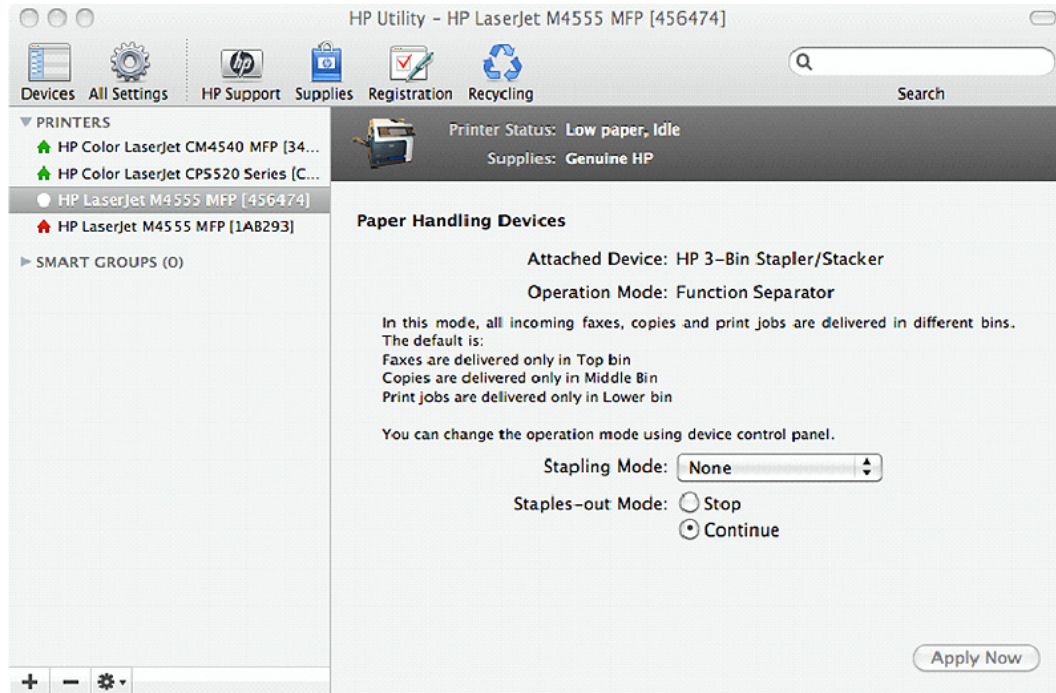

Click the **Stapling Mode** drop-down list to change the stapler/stacker stapling mode.

Click one of the **Staple-out Mode** options to change the product behavior when the staple cartridge runs out of staples.

6 Engineering details


Introduction

This chapter presents engineering detail for the following topics:

- [Remote firmware update](#)
- [Paper attributes and commands](#)
- [File to E-mail utility](#)

Remote firmware update

The product features remote firmware update capability. The method for downloading remote firmware updates from the Web site is similar to that used to download the latest printing-system software and printer drivers.

 **NOTE:** Firmware for the embedded Jetdirect print server updates when the product firmware is updated.

The process for remotely upgrading firmware involves three steps:

1. Determine the current level of firmware that is installed on the product.
2. Go to the HP Web site and download the latest firmware to the computer.
3. Download the new firmware to the product.

Determine the current level of firmware

To determine the current level of firmware, print the configuration page.

1. From the Home screen on the product control panel, touch the [Administration](#) button.
2. Open the following menus:
 - [Reports](#)
 - [Configuration/Status Pages](#)
3. Touch the [Configuration Page](#) item, and then touch the [Print](#) button.

On the printed configuration page, look in the section marked "Device (or Printer) Information" for the firmware date code and version. It will look similar to the following examples:


- Firmware Datecode: 20100831
- Firmware Revision: 103067_104746


Download the new firmware from the HP Web site

The firmware update file and an associated readme file are packaged together as a self-extracting .EXE file. For detailed instructions about how to download the .EXE file, go to the following Web site:

www.hp.com/go/ljm4555mfp_firmware

The .EXE file consists of a readme file and the .bdl upgrade file.


 **NOTE:** You cannot update the product firmware using the traditional FTP, LPR or Port 9100 methods. Only the following methods can be used to update the firmware of the product.


 **IMPORTANT:** Make sure that the product is ready to receive the firmware file and that no error messages are being displayed on the control panel.

Use the HP Embedded Web Server


1. Open a browser window.
2. Enter the product IP address in the URL line to open the HP Embedded Web Server.
3. Click the **Troubleshooting** tab, and then click the **Firmware Upgrade** link.


Figure 6-1 HP EWS Firmware Upgrade page

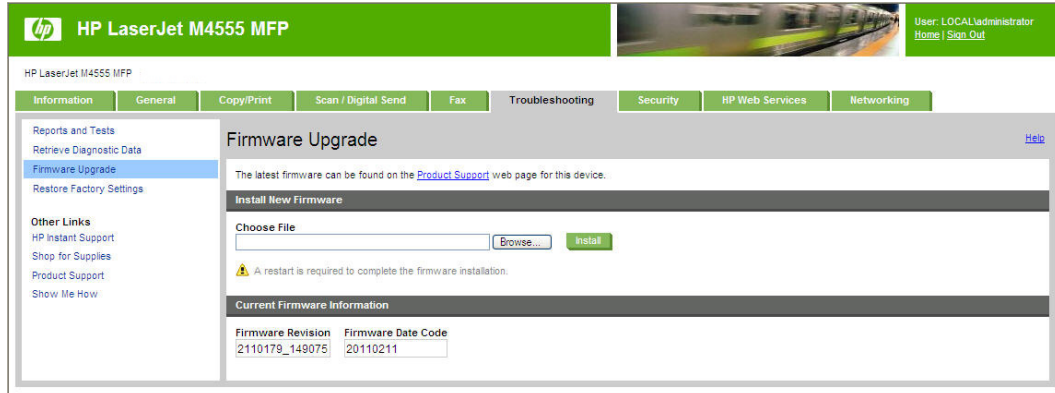

 **NOTE:** If you get a warning screen, follow the instructions for setting an administrator password from the **Security** tab.


4. Browse to the location that the firmware upgrade file was downloaded to, and then select the firmware file (the file with the .bdl extension). Click the **Install** button to perform the upgrade.

 **IMPORTANT:** Do not close the browser window until the HP Embedded Web Server (EWS) displays the confirmation page.

 **NOTE:** The upgrade process might take some time, as the file size is large.


5. Perform one of the following steps:
 - Click the **Restart Now** button on the EWS confirmation page, or turn the product off, and then on again using the power switch. This is the recommended action, as the restart process completes the firmware upgrade.
 - Click the **Restart Later** button on the EWS confirmation page to restart the product at a later time. If you click this button, the update will not be complete until the product is restarted.

Figure 6-2 HP EWS Firmware Upgrade page

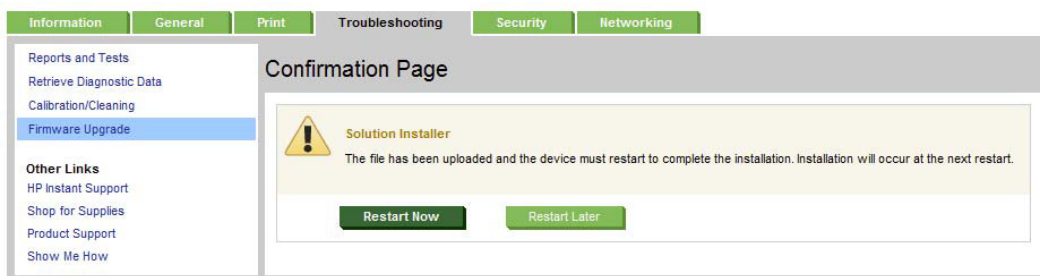

Use the walkup USB port on the product control panel

1. Download the .EXE file from the Web, and then uncompress the .EXE file to gain access to the readme file and the .bdl upgrade file.
2. Copy the .bdl firmware upgrade file to a portable USB flash memory storage device (thumb drive).
3. Turn the product on, and then wait until it reaches the **Ready** state.
4. Touch the [Device Maintenance](#) button.
5. Insert the portable USB storage device with the firmware upgrade file on it into the USB port on the front of the product, and then touch the [OK](#) button.
6. Touch the [USB Firmware Upgrade](#) menu.
7. Touch the firmware update file, and then touch the [Upgrade](#) button.

 **TIP:** If there is more than one firmware upgrade file on the storage device, make sure that you select the correct file for this product.

If you touch the **Details** button, the screen that opens can be used to determine if the version on the USB thumb drive is newer, older, or the same as the firmware that is currently installed on the product.


8. Depending on the file that you selected to upload, the product displays one of the following controls:
 - If you selected a firmware version that is newer than the current version, the **Upgrade** button appears. Touch it to start the upgrade process.
 - If you selected a firmware version that is the same version as the current version, the **Reinstall** button appears. Touch it to start the reinstallation process.
 - If you selected a firmware version that is older than the current version, the **Rollback** button appears. Touch it to start the rollback process.

The product will start to update the firmware from the USB storage device. When the upgrade is complete, the product will initialize.

 **NOTE:** Do not interrupt the updating process. The product will restart automatically.

9. When the upgrade process has completed, the product will restart. Once the product is back online, print a configuration page and verify that the new firmware has been installed.

Use HP Web Jetadmin

 **NOTE:** The latest version of HP Web Jetadmin can be configured to get firmware details from HP.com directly. HP Web Jetadmin might be able to get firmware listing and firmware image files directly from HP.com, if this is allowed on the network on which HP Web Jetadmin is installed.


1. Start HP Web Jetadmin.
2. From the **Device Management** section, select **All Devices** (or the appropriate device group). An **All Devices** list will appear in the center window.

3. Find your product in the list, or type the IP address of the product in the **Quick Device Discovery** section in the lower-left of the screen (this will highlight your product in the device list). You can sort the product list by clicking on a column name at the top.
4. If your product list is sorted by model number, you may select multiple products with the same model number by Control-Click or Shift-Click.
5. Right-click on the product and select the **Upgrade firmware** item.
6. An **Upgrade Firmware** window will appear. Select **Device firmware**, and then click **Next**.
7. A list of available firmware will appear. If the correct version is listed, click **Next**, and the upgrade process will start.

If the correct firmware version does not appear on the list, perform a manual upload. New firmware may be available on an FTP site prior to appearing on HP.com. The instructions below allow you to upload a RFU file from your local PC to WJA 10.

Perform a manual firmware upload

1. Click on **Firmware/Firmware Repository** in the **Device Management** pane.
2. A Firmware Repository window displays in the center of the screen.
3. Click **Upload** in the upper-right of the window.
4. Browse to the .bdl file on the computer.
5. Click **Upload**.
6. Once the .bdl file is uploaded, perform steps 2 through 6 in the previous section.

 **NOTE:** Do not turn the product off during the update process. When the update process is complete, the product will automatically restart. If the firmware update process fails, HP Web JetAdmin will provide notification with a page (screen) of information regarding the reason(s) for failure. A link will be provided to attempt the process again.

Paper attributes and commands

This section includes the following information about paper attributes:

- [Paper-source commands](#)
- [Paper-type commands examples](#)

Paper-source commands

The PCL 6 printer driver attribute for paper source is `ubyte # MediaSource` or `ubyte_array "string" MediaSource`. See the following table for values of #. For example, "ubyte 4 MediaSource" is the command for Tray 2.

The PCL 5 printer driver escape sequence for paper source is `Esc&l#H` (the "l" is a lowercase "L" rather than the numeral "1"). See the following table for values of #. For example, `Esc&l1H` is the command for Tray 2.


 **NOTE:** The HP LaserJet Enterprise M4555 MFP Series products support Tray 1, Tray 2, and Tray 3, Tray 4, and Tray 5.

Table 6-1 Paper-source commands

Input source	PCL 5 <code>Esc&l#H</code>	PCL 6 <code>ubyte # MediaSource</code>	PCL 6 <code>ubyte_array "string" MediaSource</code>	PostScript <code>/MediaPosition # or null/ ManualFeed true or false</code>
Automatically select	NA	NA	NA	NA
Printer auto select	7	1	AUTOSELECT	null false
Manual feed in tray 1	2	2	MANUALFEED	3 true
Tray 1 (100-sheet)	4	3	TRAY1	3 false
Tray 2 (250-sheet)	1	4	TRAY2	0 false
Tray 3 (500-sheet)	5	5	TRAY3	1 false
Tray 4	8	7	TRAY4	4 false
Tray 5	9	None	TRAY5	38 false
Tray 6	10	None	TRAY6	39 false
Tray 7	11	None	TRAY7	40 false
Tray 8	12	None	TRAY8	41 false
Tray 9	13	None	TRAY9	42 false

Paper-type commands examples

The PCL 5 printer driver escape sequence for paper type is "Esc&n#Wdpapertype", where "n#" is the number of characters in the paper type plus 1. For example, in the sequence "Esc&n6WdPlain", "Plain" has 5 letters plus 1, for a total of 6.

Table 6-2 Paper-type commands

Esc&	n#	Wd	Paper type
Esc&	6	Wd	Plain
Esc&	11	Wd	Preprinted
Esc&	11	Wd	Letterhead
Esc&	13	Wd	Transparency ¹
Esc&	11	Wd	Prepunched
Esc&	7	Wd	Labels
Esc&	5	Wd	Bond
Esc&	9	Wd	Recycled
Esc&	6	Wd	Color
Esc&	6	Wd	Light
Esc&	13	Wd	Intermediate
Esc&	6	Wd	Heavy
Esc&	12	Wd	Extra Heavy
Esc&	11	Wd	Cardstock ²
Esc&	6	Wd	Rough
Esc&	7	Wd	Glossy
Esc&	12	Wd	Tough Paper
Esc&	9	Wd	Envelope

¹ You must spell out the word "Transparency" in the string, although it is abbreviated as TRANSPRNCY on the control panel.

² The correct command for cardstock is "Esc&n11WdCard Stock", with a space between the "d" and the "S", and with an uppercase "S".

File to E-mail utility

The File to E-mail utility collects the data specified in an .INI file and then attaches the data files to an e-mail that can be sent to HP Customer Support to assist troubleshooting. The utility runs on the computer, but does not interact with the product.

The tool is included on the installer CD, but is *not* copied to the computer during the software installation. HP Customer Support can also send the utility by e-mail or by posting it to an HP Web site.

The tool is compatible with Windows XP, Windows Vista, and Windows 7.

The File to E-mail utility runs with any MAPI-compliant e-mail applications. It does not run with Web-based e-mail services such as Yahoo, Hotmail, or AOL.

Depending on the speed of the computer, it might take a few minutes for the utility to gather the log files and attach them to an e-mail message.

The File to E-mail utility consists of two files that are located in the util folder on the product printing-system software CD:

- <CD-ROM drive>Utilities\FileToEmail.exe
- <CD-ROM drive>Utilities\FileToEmail.ini

To use the File to E-mail utility, copy these files to the desktop, navigate to them in Explorer, and double-click **FileToEmail.exe** to open the utility. The utility generates files, opens an e-mail message, and attaches the files so that you can send them to the system administrator.

If the File to E-mail utility is not successful for any reason (for instance, if you cancel the new message or you are using Web-based e-mail software), all the files are copied to a folder on the desktop that is named HpCCC, possibly with strings of zeros attached to the end. You can zip these files and e-mail them separately.

Index

A

- accessories, automatic configuration 11
- alerts, e-mail
 - Mac 151
- Alternative Letterhead Mode
 - supported products 69
- autoconfiguration, driver support for 11

B

- Back button, Windows installation dialog boxes 30
- bidirectional communication
 - about 11
- blank or preprinted pages 83
 - options 84
- booklet printing
 - Booklet Layout settings 98

C

- Cancel button, Windows installation dialog boxes 30
- cardstock, paper type commands 163
- CD
 - directory structure, Mac 125
 - directory structure, Windows 3
 - languages 4
 - Mac printing-system software installation 125
- chapter separator pages 84
- components, software
 - Mac 123
 - Windows 9
- connection type
 - installation 25

- connectivity
 - bidirectional communication support 11
- constraint messages
 - printer drivers 64
- copies
 - Quick Copy setting 105
- covers
 - settings 82
- custom paper types
 - adding 81

D

- DCU
 - see HP Driver Configuration Utility 17
- DDU
 - see HP Driver Deployment Utility 16
- default printer, setting 30
- Device Status screen
 - EWS 112
- diagnostics
 - troubleshoot 111
- dialog boxes, printing-system software installation
 - Mac OS X 126
- directory structure, software CD
 - Mac 125
 - Windows 3
- disk space requirements
 - Mac 122
- document preview image 63
- documentation
 - installing (Windows) 54
 - languages 7
- download
 - firmware 158

drivers

- accessory configuration 11
- Automatic Configuration
 - setting 117
- changing settings (Mac) 123
- document preview image 63
- languages 6
- Linux OS 21
- Printing Preferences tab 63
- scan 10
- UNIX OS 21
- Update Now, bidirectional communication 117
- drivers, Windows
 - change settings 62
- duplex
 - Duplex Mode, HP Utility 146
- duplexing 95
 - Tray 3 117

E

- e-mail
 - troubleshooting File to E-mail utility 164
- e-mail alerts
 - Mac 151
- envelopes, paper type commands 163
- escape sequences
 - paper source 162
 - paper type 163
- EWS (Windows)
 - accessing 12

F

- fax driver. See HP Send Fax Driver
- File to E-mail utility 164
- File Upload, Mac 142

- firmware
 - determine current level 158
 - download 158
 - HP Web Jetadmin updates 160
 - Macintosh updates 142
 - remote update, Macintosh 142
 - update remotely 158
 - upload, HP Printer Utility 142
- fonts
 - install/remove external fonts 114
 - Mac 124
 - Send True Type as Bitmap, printer drivers 68
 - supported by Windows 15
 - True Type, printer drivers 67
 - Upload Fonts, HP Utility 144
- H**
 - heavy paper, paper type commands 163
 - help
 - Mac 124
 - printer drivers 64
 - Help button, Windows installation dialog boxes 30
 - host-based driver
 - document preview image 63
 - Printing Preferences tab 63
 - HP Driver Configuration Utility (DCU) 17
 - HP Driver Deployment Utility (DDU) 16
 - HP Driver Installation Utility (HPDIU) 24
 - HP Embedded Web Server
 - HP Utility, accessing from 154
 - Mac support 123
 - HP Embedded Web Server (Windows)
 - accessing 12
 - HP PCL 6 printer driver
 - features 61
 - settings 61
 - HP Printer Utility for Macintosh
 - firmware update 142
 - HP Printer Utility, Macintosh 142

- HP Send Fax Driver
 - install with the Add Printer Wizard 36
 - install with the HP Driver Installation Utility 32
 - installation 14, 31
- HP Utility, Mac
 - about 138
 - access 139
 - Device Information 141
 - Duplex Mode 146
 - E-mail Alerts 151
 - Embedded Web Server
 - access 154
 - File Upload 142
 - Network Settings 151
 - Supplies Management 152
 - Supplies Status 140
 - trays configuration 147
 - Upload Fonts 144
- HP Web Jetadmin
 - firmware updates 160
- I**
 - Incompatible Print Settings messages. See constraint messages
 - installation
 - connection type 25
 - dialog boxes, Mac OS X 126
 - fax driver 14, 31
 - File to E-mail utility 164
 - HP Driver Installation Utility 24
 - Mac printing-system software 125
 - options 22
 - system requirements for Mac 122
 - troubleshooting Mac 136

- J**
 - Jetadmin. See HP Web Jetadmin
 - Job storage
 - Macintosh 147
 - job storage mode
 - personal job 105
 - proof and hold 104

- L**
 - languages
 - CD 4
 - driver 6
 - Linux OS
 - driver availability 21
 - localized CD 4
- M**
 - Mac
 - driver settings 123
 - hardware requirements 122
 - removing software 136
 - software components 123
 - supported operating systems 122
 - Mac OS
 - Device Information 141
 - dialog boxes, Mac OS X printing-system software installation 126
 - directory structure, software CD 125
 - e-mail alerts 151
 - File Upload command 142
 - fonts supported 124
 - HP EWS 123
 - HP Utility 138
 - install notes 123
 - network settings 151
 - network setup 125
 - online help 124
 - PDEs 123
 - set duplex mode 146
 - software installation 125
 - Supplies Management 152
 - supplies status 140
 - trays configuration 147
 - troubleshooting setup 136
 - Upload Fonts 144
 - Macintosh OS
 - firmware upgrades 142
 - stored jobs 147
 - memory
 - Mac requirements 122
 - messages, constraint printer drivers 64
 - Microsoft Windows
 - installation options 22
 - model scripts, UNIX 21

mopy 118
multiple-original print. See mopy

N

networks

- HP Embedded Web Server,
accessing 12
- Mac settings 151
- Mac setup 125
- Web Jetadmin, downloading
12

O

OCR

- Windows software 11

operating systems

- supported 20

OS. See operating systems

Output

- features, printer drivers 109

output

- bin settings 110

P

pages

- blank or preprinted 83

paper

- adding custom types 81
- Alternative Letterhead Mode
69
- custom sizes 79
- duplex binding settings, printer
drivers 98
- orientation 101
- settings, printer drivers 77
- source commands 162
- source setting 80
- type commands 163
- type setting 80
- types and sizes supported 162

PDEs (Printer Dialog Extensions)

- 123

PDF files

- Mac, File Upload command
142

personal job option

- job storage 105

PIN

- Personal Job setting 105
- PIN to print setting 106

PPDs, Mac

- troubleshooting 136

preview image 63

print job

- delete stored job 108
- hard disk, job storage 118
- job name settings 107
- job separator 118
- job storage 118
- Personal Job setting 105
- Proof and Hold setting 104
- Quick Copy setting 105
- release stored job 108
- Stored Job setting 106
- user name 107

print on both sides 95

- automatically 96

- manually 96

- Tray 3 117

print pages on different paper
settings 84

Printer Dialog Extensions (PDEs)
123

printer drivers

- About tab contents 120
- Advanced Printing Features
settings, printer drivers 68
- Advanced tab content 66
- Allow Manual Duplexing
setting, Device Settings tab
117
- Alternative Letterhead Mode,
Advanced tab 69
- Automatic Configuration setting,
Device Settings tab 117
- Booklet Layout settings, Finishing
tab 98
- collation settings 119
- Copy Count settings, Advanced
tab 67
- Device Services, Services tab
112
- Device Settings tab content
113
- Document Options setting,
Advanced tab 67
- Document Options settings,
Finishing tab 94
- document preview image 85,
89, 100, 110

duplex unit, Device Settings

- tab 117

Effects tab content 87

Factory Defaults setting, Printing
Shortcuts tab 74

Finishing tab contents 94

Flip Pages Up setting, Finishing
tab 98

Font Substitution Table settings,
Device Settings tab 114

Form to Tray Assignment setting,
Device Settings tab 113

General Everyday Printing
setting, Printing Shortcuts
tab 71

Graphic setting, Advanced
tab 67

Help system 64

incompatible print settings
messages 64

install, license agreement 32

installable options, Device
Settings tab 116

Internet Services options,
Services tab 111

job name settings, Job Storage
tab 107

job notification options, Job
Storage tab 106

Job Separator setting, Device
Settings tab 118

Job Storage Mode settings, Job
Storage tab 104

job storage settings, Job Storage
tab 108

Job Storage tab contents 102

Layout Options setting,
Advanced tab 69

Mac 123

mopier mode, Device Settings
tab 118

Orientation settings, Finishing
tab 101

Output tab contents 109

Page Order settings, Finishing
tab 100

Pages per Sheet setting,
Finishing tab 99, 100

Paper Options settings, Paper/
Quality tab 77

- paper source commands 162
 - Paper source setting, Paper/Quality tab 80
 - paper supported 162
 - paper type commands 163
 - Paper type setting, Paper/Quality tab 80
 - Paper/Output settings, Advanced tab 66
 - Paper/Quality tab contents 76
 - Personal Job setting, Job Storage tab 105
 - PIN to print setting, Job Storage tab 106
 - Print All Text as Black setting, Advanced tab 68
 - Print on Both Sides settings, Finishing tab 95
 - Print Optimizations setting, Advanced tab 68
 - Print Quality settings, Paper/Quality tab 86
 - Printer Features setting, Advanced tab 68
 - printer hard disk, Device Settings tab 118
 - Printing Shortcuts tab contents 70
 - Proof and Hold setting, Job Storage tab 104
 - Quick Copy setting, Job Storage tab 105
 - Raster Compression feature, Advanced tab 68
 - Resizing Options settings, Effects tab 88
 - Send True Type as Bitmap setting, Advanced tab 68
 - Services tab content 111
 - settings, Output tab 110
 - status message, Job Storage tab 104
 - Stored Job setting, Job Storage tab 106
 - Tray 3, Device Settings tab 117
 - Tray 4, Device Settings tab 117
 - Tray 5, Device Settings tab 117
 - True Type font settings, Advanced tab 67
 - two-sided (duplex) printing, Printing Shortcuts tab 74
 - uninstall, Add/Remove Programs 57
 - uninstall, Server Properties 59
 - user name settings, Job Storage tab 107
 - Watermarks settings, Effects tab 90
 - What's this? Help 64
 - printer drivers (Mac)
 - changing settings 123
 - printer, setting default 30
 - Printing Preferences tab set 63
 - Printing Shortcuts tab
 - paper size options 71
 - paper type options 73
 - printing-system software
 - availability 3
 - installation, Mac 125
 - requirements 21
 - printing-system software, install
 - license agreement 32
 - printing-system software, uninstall
 - Add/Remove Programs 57
 - Server Properties 59
 - proof and hold 104
 - Properties tab 63
- R**
- Readiris software
 - Windows 11
 - regional versions, CD 4
 - remote firmware updates
 - about 158
 - determine current firmware level 158
 - downloading 158
 - HP Web Jetadmin 160
 - Macintosh 142
 - removing Mac software 136
- S**
- Scan Driver
 - Windows 10
 - Scan Setup Wizard
 - create network folder 43
 - settings
 - drivers (Mac) 123
 - software
 - license agreement 32
 - option install (Windows) 54
 - removing 56
 - uninstall, component list 56
 - uninstalling 56
 - uninstalling Mac 136
 - Special Pages
 - covers 82
 - status
 - Mac supplies 140, 152
 - storage, job
 - Macintosh 147
 - supplies
 - Mac status 140, 152
 - system requirements
 - printing-system software 21
- T**
- transparencies, paper type
 - commands 163
 - trays
 - Alternative Letterhead Mode 69
 - duplex unit 117
 - Mac configuration 147
 - paper source commands 162
 - paper type commands 163
 - specify paper size 113
 - Tray 3 117
 - Tray 4 117
 - Tray 5 117
 - troubleshoot
 - diagnostics 111
 - troubleshooting
 - File to E-mail utility 164
 - Mac setup 136
 - TWAIN
 - driver 10
- U**
- uninstall
 - component list 56
 - Windows software 56
 - uninstalling Mac software 136
 - UNIX OS
 - driver availability 21

updating firmware remotely. See
remote firmware update

W

Web Jetadmin
 downloading 12

Web sites
 download software 3
 firmware download 158
 Internet Services options,
 Services tab 111
 other OS support links 21

WIA driver 10

Windows
 components, software 9
 drivers supported 10
 installation options 22

Windows operating systems
 change driver settings 62
 default printer, setting 30
 fonts supported 15

Windows OS
 directory structure, software
 CD 3
 HP PCL 6 printer driver
 features 61
 supported 20

© 2011 Hewlett-Packard Development Company, L.P.

www.hp.com

