

Getting Started

快速入門

Copyright and License

© Copyright 2011 Hewlett-Packard Development Company, L.P. The information contained herein is subject to change without notice.

The only warranties for Hewlett-Packard products and services are set forth in the express statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

HP assumes no responsibility for the use or reliability of its software on equipment that is not furnished by HP.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of HP.

Hewlett-Packard Company

P.O. Box 4010

Cupertino, CA 95015-4010

USA

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Microsoft and Windows are trademarks of Microsoft Corporation in the U.S. and other countries.

HP supports lawful use of technology and does not endorse or encourage the use of our

products for purposes other than those permitted by copyright law.

The information in this document is subject to change without notice.

Understanding hard disk drive space

The hard disk drive on the Hewlett-Packard and Compaq computers with the Microsoft® Windows® operating system preinstalled may appear to be smaller than the size stated in the product specifications, in the documentation, or on the box. Hard disk drives are described and advertised by manufacturers in terms of decimal (base 10) capacity. Microsoft Windows and other programs, such as FDISK, use the binary (base 2) numbering system.

In decimal notation, one megabyte (MB) is equal to 1,000,000 bytes, and one gigabyte (GB) is equal to 1,000,000,000 bytes. In the binary numbering system, one megabyte is equal to 1,048,576 bytes, and one gigabyte is equal to 1,073,741,824 bytes. Because of the different measuring systems, you may see a difference between the size reported by Microsoft Windows and the size advertised. The storage capacity of the hard disk drive is as advertised.

Microsoft Windows reports smaller capacity in the Windows Explorer tool and in the computer window because it shows information about one partition on the hard disk drive at a time. One of the partitions contains the System Recovery information.

Note about systems configured with 4 GB of memory

For computers with a 32 bit operating system, all memory above 3 GB may not be available because of system resource requirements.

This limitation is not limited to HP and Compaq systems. The memory above 3 GB is used for system resources.

Confirming total memory

The system BIOS displays the full 4 GB of installed memory.

1. Turn on the PC.

2. Press F10. The BIOS menu is displayed. Confirm the Total Installed Memory.

Table of contents

1 Getting information	1
Safety information	2
2 Setting up your computer	3
Protecting your computer	4
Connecting to the Internet	5
Transferring files and settings to your new computer	6
3 Troubleshooting and maintenance	6
Computer does not start	7
Power	8
Display (monitor)	8
Keyboard and mouse (with cable)	10
Keyboard and mouse (wireless)	11
Speakers and sound	12
Internet access	12
Software troubleshooting	13
Maintenance	16
System recovery	18
4 Customer care	23
Product information	23
Support information	24
Warranty print on demand statement	26

1 Getting information

Type of information	Where to find
<ul style="list-style-type: none">• Set up your computer.	Setup poster included with your computer.
<ul style="list-style-type: none">• See how-to videos about using the features of your computer.	Visit http://www.hp.com/support/videos (English only)
<ul style="list-style-type: none">• Use the computer.• Connect to the Internet.• Recover factory settings.	<i>Getting Started</i> (this guide)
<ul style="list-style-type: none">• Learn how to use the Microsoft Windows 7 operating system.• Find Windows 7 password information.• Troubleshoot the most common computer hardware and software issues.• Find links to driver updates.• Read frequently asked questions.	Help and Support Click Start , and then click Help and Support or visit http://www.hp.com/go/win7 . <hr/> Windows 7 troubleshooting tools <ol style="list-style-type: none">1. Click Start, click Control Panel, and then click System and Security.2. Under Action Center, click Find and fix problems (troubleshooting).
<ul style="list-style-type: none">• Find electronic user guides and specifications for your computer model.• Order parts and find additional troubleshooting help.	HP Support website: http://www.hp.com/support
<ul style="list-style-type: none">• Upgrade or replace components of your computer.	<i>Upgrading and Servicing Guide</i> Click Start , click All Programs , and then click HP User Manuals . <hr/> If the guide is not available there, visit http://www.hp.com/support

Type of information	Where to find
<ul style="list-style-type: none"> Find computer warranty information. Get technical support. 	<p><i>Limited Warranty and Support Guide</i> or the <i>Warranty and Support Information</i> included with your computer.</p> <p>Or</p> <p>Click Start, click All Programs, and then click HP User Manuals.</p>
<ul style="list-style-type: none"> Get up-to-date information and help from the Windows community. 	<p>http://www.hp.com/support/consumer-forum</p>
<ul style="list-style-type: none"> Connect to a TV. 	<p><i>Watching and Recording TV</i></p> <p>Click Start, click All Programs, and then click HP User Manuals.</p> <p>If the guide is not available there, visit http://www.hp.com/support</p>
<ul style="list-style-type: none"> Get special utilities for computer owners. 	<p>PC Help & Tools folder</p> <p>Click Start, click All Programs, and then click PC Help & Tools.</p>
<ul style="list-style-type: none"> Maintain your computer. 	<p>HP Support Assistant — Maintains your computer performance and resolve problems faster by using automated updates, on-board diagnostics, and guided assistance.</p> <p>Click Start, click All Programs, click HP, and then click HP Support Assistant.</p>
<ul style="list-style-type: none"> Find safety and regulatory notices. 	<p><i>Safety & Regulatory Information</i></p> <p>Click Start, click All Programs, and then click HP User Manuals or visit http://www.hp.com/ergo.</p>
<ul style="list-style-type: none"> Find ergonomic information. 	<p><i>Safety & Comfort Guide</i></p> <p>Click Start, click All Programs, and then click HP User Manuals or visit http://www.hp.com/ergo.</p>

Safety information

For more information, refer to the *Regulatory and Safety Information* document in the **HP User Manuals** folder. Click **Start**, **All Programs**, and then click **HP User Manuals**.



WARNING! To reduce the risk of electrical shock or damage to your equipment:

- Place the computer in a location away from water, dust, moisture, and soot. These can increase the inside temperature, or can cause fire or electrocution.
- Do not disable the power cord grounding plug. The grounding plug is an important safety feature.
- Plug the power cord in a grounded (earthed) outlet that is easily accessible at all times.
- Disconnect power from the equipment by unplugging the power cord from the electrical outlet. To prevent direct exposure to laser beam, do not try to open the enclosure of the CD or DVD drives.
- The power supply is preset for the country/region in which you purchased your computer. If you move, check the voltage requirements for your new location before plugging the computer into an AC power outlet.

WARNING! The computer may be heavy; be sure to use ergonomically correct lifting procedures when moving the computer.

To reduce the risk of serious injury read the Safety & Comfort Guide. The guide is located on the web at <http://www.hp.com/ergo>.

2 Setting up your computer



NOTE: Some features might not be available on systems that are shipped without a version of Microsoft Windows.

1. Place the computer so that all ventilation openings are unobstructed and cabling is not in a walkway or where it can be stepped on or damaged by placing furniture on it.
2. Connect all power cords from the monitor, computer, and accessories to a power surge protection device that is specifically labeled as having surge protection, an uninterruptible power supply (UPS), or a similar device. If the computer has a television tuner, or a modem or telephone connection, protect the computer by using surge protection with these signal inputs as well. Connect the television cable or the telephone line cord to the surge protection device, and then connect the device to the computer.
3. Download and install operating system updates.
 - a. Find out what operating system and version your computer is currently running.
(Click **Start** > **Control Panel** and double-click **System**. The operating system and version are shown under Windows edition.)
 - b. Open your internet browser and go to <http://www.hp.com/support>.

- c. Select your country and language, if necessary, and click **Support & Drivers**.
 - d. Select **Download drivers and software (and firmware)**, type your computer model name and number in the product field, and press Enter.
 - e. If necessary, select your computer model from **Product search results**.
 - f. Select your computer operating system.
 - g. Click **Download** next to each update you wish to download.
 - h. Follow the on-screen instructions to install each downloaded update.
4. Look in the computer box for additional printed details or updates.
 5. Read the *Safety and Regulatory Information* document in the HP User Manuals folder.
 6. Read the *Safety & Comfort Guide* for proper workstation setup, posture, health and work habits, and electrical and mechanical safety information. Click **Start**, click **All Programs**, and then click **HP User Manuals** or visit <http://www.hp.com/ergo>.

Protecting your computer

Computer risk	Computer feature
Unauthorized use of the computer or user account	User password A <i>password</i> is a group of characters that you choose to secure computer information.
Unauthorized access to Setup Utility, BIOS settings, and other system identification information	Administrator password
Computer viruses	Antivirus software The free trial antivirus software that is preinstalled on your computer can detect most viruses, remove them, and, in most cases, repair damage caused by viruses. For protection against new viruses beyond the trial period, purchase an extended update service.

Computer risk	Computer feature
Unauthorized access to data and ongoing threats to the computer	Firewall software <ul style="list-style-type: none"> Windows 7 includes firewall software preinstalled on the computer. The antivirus software, which is preinstalled on the computer, includes firewall software.
	Windows 7 critical security updates Microsoft continually updates the Windows 7 operating system.

After you complete the initial computer setup, you might want to install additional software programs or hardware devices. Check the operating system, memory, and other requirements listed before purchasing new software or hardware for your computer. Follow the software manufacturer's directions to install the new software.



NOTE: Use only licensed original software. Installing copied software could result in an unstable installation, infect the computer with a virus, or be illegal.

Security solutions can deter theft, mishandling, and software attacks, but cannot prevent them.

Connecting to the Internet

Steps to connect to the Internet:

1. Connect the hardware as shown on the setup poster.
2. Get Internet service.
 - Sign up with an Internet Service Provider (ISP). If you already have an account with an ISP, skip this step and follow the instructions provided by the ISP.
 - If you did not set up the computer for Internet service during the initial setup, do so now by using Online Services:
 - a. Click **Start**, click **All Programs**, click **Online Services**, and then click **Get Online**.
 - b. Follow the on-screen instructions to select an ISP and set up Internet service.



NOTE: Online Services provides a list of ISPs; however, you might choose another ISP or transfer an existing account to this computer. To transfer existing accounts, follow the instructions provided by the ISP.

3. Using your Internet connection through your ISP, open a web browser and browse the Internet.



NOTE: If you have issues connecting to the Internet, see [Internet access on page 12](#).

Transferring files and settings to your new computer

You can copy files from another computer to your new computer by using CDs or DVDs, memory sticks, and external hard drives. You can also use Windows Easy Transfer software, which is included with Windows 7 (select models only), to copy files and settings to a storage device or, using an Easy Transfer Cable, directly from another computer to the new computer. The Easy Transfer Cable is a USB cable designed specifically to connect two computers and to work with the Windows Easy Transfer software.



NOTE: The Easy Transfer Cable is sold separately. A standard USB cable does *not* work.

To transfer your files and settings:

1. Click **Start**, type `Windows Easy Transfer` into the **Start Search** box, and then click **Windows Easy Transfer**.
2. Follow the on-screen instructions in the Windows Easy Transfer wizard to transfer your files to your new computer.



NOTE: Some features might not be available on systems that are shipped without a version of Microsoft Windows.

3 Troubleshooting and maintenance

Refer to the documentation provided by the product manufacturer for information about peripheral-specific problems, such as issues with a monitor or a printer. The following tables present some issues you might encounter while installing, starting up, or using your computer and possible solutions.

For more information or for additional troubleshooting options, see [Getting information on page 1](#).

Computer does not start

Symptom	Possible solution
Error message: Hard disk drive error.	<p>Restart the computer.</p> <ol style="list-style-type: none">1. Press the Ctrl+Alt+Delete keys on the keyboard simultaneously.2. Click the Arrow button next to the red Shut Down button, and then click Restart. <i>Or, press and hold the Power button on the computer for 5 or more seconds to turn off the computer, and then press the Power button to restart the computer.</i>3. If Windows opens, immediately back up all important data to a backup hard disk drive.4. Contact Support, whether it was possible or not to start up Windows. <i>Either the hard disk drive or the system board may need to be replaced.</i>
Computer will not turn on or start.	<p>Ensure that the cables connecting the computer to the external power source are plugged in properly. When the cables connecting the computer to the external power source are plugged in properly, and the wall outlet is functioning, the green power supply light on the back of the computer should be on; if it is not, contact Support.</p> <hr/> <p>If the display (monitor) is blank, the monitor might not be properly connected. Connect the monitor to the computer, plug it in, and turn it on. See Display (monitor) on page 8.</p> <hr/> <p>Test the wall outlet by connecting a different electrical device to it.</p>
Computer seems to be locked up and is not responding.	<p>Use the Windows Task Manager to close any programs not responding, or restart the computer:</p> <ol style="list-style-type: none">1. Press the Ctrl+Alt+Delete keys on the keyboard simultaneously.2. Click Start Task Manager.3. Select the program that is not responding, and then click End Task. <hr/> <p>If closing programs does not work, restart the computer:</p> <ol style="list-style-type: none">1. Press the Ctrl+Alt+Delete keys on the keyboard simultaneously.2. Click the Arrow button next to the red Shut Down button, and then click Restart. <i>Or, press and hold the Power button on the computer for 5 or more seconds to turn off the computer, and then press the Power button to restart the computer.</i>

Power

Symptom	Possible solution
Error message: Invalid system disk or Non-System disk or Disk error.	When drive activity stops, remove the disc and press the spacebar on the keyboard. The computer should start up.
Computer does not turn off when the Power button is pressed.	Press and hold the Power button until the computer turns off. Check Power Settings.
Computer shuts down automatically.	<ul style="list-style-type: none">• The computer might be in an exceedingly hot environment. Let it cool down.• Ensure that computer air vents are not blocked and that the internal fan is running — see <i>Keeping the computer free of dust, dirt, and heat</i> under Maintenance on page 16. (Your computer might not have an internal fan.)

Display (monitor)

Symptom	Possible solution
Screen is blank, and monitor power light is not lit.	Reconnect the power plug to the back of the monitor and to the wall outlet.
	Press the Power button on the monitor.
Screen is blank.	Press the space bar on the keyboard or move the mouse to make the screen display visible again.
	Press the Sleep button (select models only), or Esc on the keyboard, to resume from Sleep mode.
	Press the Power button to turn on the computer.
	Inspect the monitor video connector for bent pins: <ul style="list-style-type: none">• If any of the pins are bent, replace the monitor connector cable.• If no pins are bent, reconnect the monitor connector cable to the computer.

Symptom	Possible solution
Images on the screen are too large or too small, or the images are fuzzy.	Adjust the monitor resolution setting in Windows 7: <ol style="list-style-type: none"><li data-bbox="281 228 669 250">1. Click Start, and then click Control Panel.<li data-bbox="281 264 953 287">2. Under Appearance and Personalization, click Adjust Screen Resolution.<li data-bbox="281 301 762 323">3. Adjust resolution as necessary, and then click Apply.

NOTE: In addition to the information listed here, also refer to the documentation that came with your monitor.

Keyboard and mouse (with cable)

Symptom	Possible solution
Keyboard commands and typing are not recognized by the computer.	Use the mouse to turn off the computer, unplug and reconnect the keyboard to the back of your computer, and then restart your computer.
Mouse (with cable) does not work or is not detected.	Unplug and reconnect the mouse cable to your computer. If the mouse is still not detected, turn off the computer, unplug and reconnect the mouse cable, and then restart the computer.
Cursor does not move using the arrow keys on the number keypad.	Press Num Lock on the keyboard to turn off Num Lock, so that the arrow keys on the number keypad can be used.
Cursor does not respond to mouse movement.	Use the keyboard to save changes in all open programs, and then restart your computer: <ol style="list-style-type: none">1. Press the Alt+Tab keys simultaneously to navigate to an open program.2. Press Ctrl+S simultaneously to save your changes in the selected program (Ctrl+S is the keyboard shortcut for Save on most—not all—programs).3. Repeat step 1 and step 2 to save changes in all open programs.4. After saving changes in all open programs, press the Ctrl+Esc keys on the keyboard simultaneously to display the Windows Start menu.5. Use the arrow keys to select the Arrow button that is next to Shut Down. Select Shut Down, and then press Enter.6. After the shutdown is complete, unplug and reconnect the mouse connector to the back of your computer, and then restart your computer.

Keyboard and mouse (wireless)

Symptom	Possible solution
Wireless keyboard or mouse does not work or is not detected.	<ul style="list-style-type: none">• Ensure that you are using the wireless keyboard or wireless mouse within range of the receiver, approximately 10 meters (32 feet) for normal use, and within 30 cm (12 inches) during initial setup or for re-synchronization.• Ensure that the mouse is not in Suspend mode, which occurs after 20 minutes of inactivity. Click the left mouse button to reactivate it.• Replace the batteries in the keyboard and mouse.• Re-synchronize the keyboard and mouse to the receiver using the following steps.

The receiver, wireless keyboard, and wireless mouse shown in the following illustrations are examples; your models might vary. **IMPORTANT:** During these steps, place the wireless keyboard and wireless mouse on the same level as the receiver, within 30 cm (12 inches) of the receiver, and away from interference from other devices.

1. Unplug the receiver from a USB connector on the computer, and then reconnect it. Your computer model might have a connector dedicated to the receiver. If you have a choice, use a USB connector on the front of the computer.



2. Check that the mouse is on (A), and push and hold the **Connect** button (B) on the underside of the mouse for 5 to 10 seconds until the LED on the receiver lights or stops flashing. The receiver connection session times out after 60 seconds. To ensure that the connection was established, and that the receiver did not time out instead, move the mouse and check for response on the screen.



3. After the mouse connection is established, continue by using the steps that follow to repeat the procedure for the keyboard.
4. Push and hold the **Connect** button (C) on the underside of the keyboard for 5 to 10 seconds until the LED on the receiver lights or stops flashing.



Speakers and sound

Symptom	Possible solution
Volume is very low or unsatisfactory.	<p>Ensure that you connected the speakers to the Audio Out (lime green) connector on the back of the computer. (Additional audio connectors are used for multiple-channel speakers.)</p> <p>Detached non-powered speakers (speakers without a separate power source, such as batteries or a power cord) do not produce satisfactory sound. Replace the non-powered speakers with powered speakers.</p>
No sound is produced.	<p>For Windows 7:</p> <ol style="list-style-type: none">1. Click Start, click Control Panel, click Action Center, and then click Troubleshooting.2. Under Hardware and Sound, click Troubleshoot and audio playback. <hr/> <p>If you use an High-Definition Multimedia Interface (HDMI) connector on the graphics card (select models only) to connect your monitor to the computer, you should also connect analog speakers to the computer Audio Line Out connector if you want to hear sound during the initial setup of the computer. Refer to the Setup Poster to connect analog speakers.</p> <hr/> <p>If you are using built-in monitor speakers, use the monitor front-panel Volume button to adjust volume. Use the front-panel buttons to enter the on-screen display (OSD) and ensure that audio is enabled and that the volume is set appropriately.</p> <hr/> <p>Ensure that you connected powered (active) speakers and that they are turned on.</p> <hr/> <p>Turn off your computer, and then unplug and reconnect the speakers. Ensure that the speakers are connected to an audio connector, not a Line In or headphone connector.</p> <hr/> <p>To resume from Sleep mode, press the Sleep button (select models only), or press Esc.</p> <hr/> <p>Unplug headphones if they are connected to your computer (or speaker system).</p>

Internet access

Symptom	Possible solution
Internet programs do not start automatically.	<p>Log in to your ISP, and start the desired program.</p>

Symptom	Possible solution
I cannot connect to the Internet.	<p>For Windows 7:</p> <ol style="list-style-type: none"> 1. Click Start, click Control Panel, click Action Center, and then click Troubleshooting. 2. Under Network and Internet, click Connect to the Internet. <hr/> <p>Verify that you are using the proper cables for your Internet connection type. Your computer might have a dial-up modem and an Ethernet network adapter (also called a network interface card, or NIC). A modem uses a standard telephone cable, whereas the network adapter uses a network cable, to connect to a local area network (LAN). Do not connect a telephone cable to the network adapter, and do not plug a network cable into a telephone service line; doing so might damage the network adapter.</p> <hr/> <p>Run the wireless setup wizard:</p> <ol style="list-style-type: none"> 1. Click Start, click Control Panel, click Network and Internet, and then click Network and Sharing Center. 2. In the Network and Sharing Center window, click Set up a connection or network to open the wizard, and then follow the on-screen instructions. <hr/> <p>If your system has an external antenna, try to move the antenna to a better position. If the antenna is internal, try to move the computer.</p> <hr/> <p>Try to connect again later, or contact your Internet service provider (ISP) for assistance.</p>

Software troubleshooting

To repair software problems, try these methods:	<ul style="list-style-type: none"> • Turn the computer off completely and then turn it on again. This is the easiest (and sometimes the best) way. • Update the drivers (see Updating device drivers, following). • Use Microsoft System Restore Software program and hardware driver reinstallation (see Microsoft System Restore, later in this table). — Restores your computer to a configuration that was in use before the software was installed. • Reinstall the software program or hardware driver (see Software program and hardware driver reinstallation, later in this table). — Restores the software (if it came with the product) or hardware driver to factory defaults. • System Recovery (see System recovery on page 18) — Erase and reformat the hard disk drive, and then reinstall the operating system, programs, and drivers. This erases all data files you have created.
-------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Updating device drivers

Complete the following procedure to update a driver, or to revert to an earlier version of the driver if the new one does not solve your problem:

1. Click **Start**.
 2. Type `Device Manager` into the **Start Search** box, and then click **Device Manager** to open the **Device Manager** window.
 3. Click the plus sign (+) to expand the type of device you want to update or rollback. (For example, DVD/CD-ROM drives).
 4. Double-click the specific item (for example, HP DVD Writer 640b).
 5. Click the **Driver** tab.
 6. To update a driver, click **Update Driver**, and then follow the on-screen instructions.
Or, to revert to an earlier version of a driver, click **Rollback Driver**, and then follow the on-screen instructions.
-

Microsoft System Restore

If you have a problem that might be due to software that was installed on your computer, use System Restore to return the computer to a previous restore point. You can also set restore points manually.

NOTE: Always use this System Restore procedure before you use the System Recovery program.

Some features might not be available on systems that are shipped without a version of Microsoft Windows.

To start a **System Restore**:

1. Close all open programs.
 2. Click **Start**, right-click **Computer**, and then click **Properties**.
 3. Click **System protection**, **System Restore**, click **Next**, and then follow the on-screen instructions.
-

To add restore points manually:

1. Close all open programs.
 2. Click **Start**, right-click **Computer**, click **Properties**, and then click **System protection**.
 3. Under **Protection Settings**, select the disk for which you want to create a restore point.
 4. Click **Create**, and then follow the on-screen instructions.
-

Software program
and hardware
driver
reinstallation

If any of your factory-installed software programs or hardware drivers are damaged, you can reinstall it by using the Recovery Manager program (select models only).

NOTE: Do not use the Recovery Manager program to reinstall software programs that came on CDs or DVDs included in the computer box. Reinstall these programs directly from the CDs or DVDs.

Before you uninstall a program, be sure you have a way to reinstall it. Check to be sure that it is still available from where you initially installed it (for example, discs or the Internet). Or check to be sure that the program is in the list of programs you can reinstall from the Recovery Manager.

NOTE: Some features might not be available on systems that are shipped without a version of Microsoft Windows.

To check the list of installable programs in the Recovery Manager:

1. Click **Start, All Programs, Recovery Manager**, and then click **Recovery Manager**. If prompted, click **Yes** to allow the program to continue.
 2. Under **I need help immediately**, click **Software Program Reinstallation**.
 3. Click **Next** at the Welcome screen. A list of programs opens. Check whether your program is there.
-

To reinstall a program using the **Recovery Manager**:

1. Click **Start**, click **All Programs**, click **Recovery Manager**, and then click **Recovery Manager**.
 2. Click **Software Program Reinstallation**, and then click **Next** at the **Welcome** screen.
 3. Choose the program you want to install, click **Next**, and follow the on-screen instructions.
 4. When you have finished reinstalling, restart the computer. **Do not skip this last step.** You must restart the computer after recovering software programs or hardware drivers.
-

To uninstall a program:

1. Close all software programs and folders.
 2. Uninstall the damaged program:
 - a. Click **Start**, and then click **Control Panel**.
 - b. Under **Programs**, click **Uninstall a program**.
 - c. Select the program you want to remove, and then click **Uninstall**.
 - d. Click **Yes** if you want to continue with the uninstall process.
-

Maintenance

It is important that you perform simple maintenance of your computer to ensure that it works at peak performance.

Weekly	Software cleanup	Use Disk Cleanup or safe third-party cleaning tools to remove junk files and temporary files that accumulate and slow down your system. Also, check for programs you no longer need and uninstall them.
	Defragmentation	Run Disk Defragmenter to keep your hard disk in good condition and improve system performance. Frequently performing this task does not harm your system.
	Virus scan	Perform a full virus scan every week to catch viruses that might have slipped through unnoticed. Most antivirus products have a scheduling feature to keep track of this automatically.
Monthly	Hardware cleanup	Thoroughly clean the inside and outside of your computer.
	Software updates	Use Windows Update to fix operating system bugs and improve performance. Also, be sure to check for driver updates for your hardware and new versions of your favorite programs.
	Windows Update	Run Windows Update monthly to install updates.
	Hard disk diagnostic	Sometimes a failing hard disk can be caught beforehand by using Hard Disk Diagnostic .
Yearly	System Recovery	In time, your system might still get bogged down, depending on the computer usage. Use System Recovery to wipe your Windows operating system installation clean, restoring it to the original configuration when you first started your system. Make a backup of important data files before proceeding with a System Recovery. See System recovery on page 18 for further details.
As needed	Backing up your data	Use CD or DVD recording software that is installed on your computer to create (or “burn”) backup discs of important information, including personal files, e-mail messages, and website bookmarks. You can also move data to an external hard disk drive.

Keeping the computer free of dust, dirt, and heat

Keeping your computer system free of dust, dirt, and heat will prolong its life. Dust, pet hair, and other particles can build up, creating a blanket effect; as a result, components can overheat, or, in the case of the keyboard and mouse, not work smoothly and effectively. Check your system once a month for visible signs of dust and debris, and clean it about once every three months. Visit <http://www.hp.com/support> for additional cleaning instructions.

Cleaning the computer vents

Air vents keep the computer and monitor cool. Keep these vents clean by using a small, battery-powered vacuum cleaner. (A battery-powered vacuum cleaner eliminates the risk of electric shock.)

1. Vacuum the vents on the computer case and the monitor case.
2. Remove any debris that has accumulated in and around the computer connectors (for example, the Ethernet and USB connectors).

Cleaning the computer and monitor

Follow these steps to clean the computer and monitor:

1. Unplug the power to the computer and the monitor.
2. To clean the monitor screen, use a clean, dry cloth. **Do not use water on the monitor screen.** For more thorough cleaning, use a clean cloth and antistatic screen cleaner.
3. Use a clean, dry cloth to dust the computer case and the monitor case.

NOTE: To remove sticker residue or a spill on the computer or monitor case, use isopropyl (rubbing) alcohol and a lint-free cloth.

Cleaning the keyboard and mouse

When cleaning the keyboard keys, use a low setting on a battery-powered vacuum cleaner to avoid removing key caps and springs.

1. Vacuum between the keys of the keyboard and along the grooves.
2. Use a clean, dry cloth and isopropyl (rubbing) alcohol to clean buildup on the keyboard keys and along its edges.
3. Wipe the body of the mouse and the mouse cord by using cleaning wipes.

If you have a roller-ball mouse, clean the ball and rollers inside:

1. Turn the mouse upside down, and rotate the ball-cover ring counterclockwise to remove the ring and release the roller ball.
 2. Rinse the roller ball with soap and warm water.
 3. Clean the rollers inside the mouse with a cotton swab dampened with isopropyl (rubbing) alcohol.
 4. After the roller ball and rollers are completely dry, replace the ball and ball-cover ring.
-

System recovery

System Recovery completely erases and reformats the hard disk drive, deleting all data files you have created, and then reinstalls the operating system, programs, and drivers. However, you must reinstall any software that was not installed on the computer at the factory. This includes software that came on media included in the computer accessory box, and any software programs you installed after purchase.



NOTE: Always use the System Restore procedure before you use the System Recovery program — see *Microsoft System Restore* under [Software troubleshooting on page 13](#).

Some features might not be available on systems that are shipped without a version of Microsoft Windows.

You must choose one of the following methods to perform a System Recovery:

- **Recovery Image** — Run the System Recovery from a recovery image stored on your hard disk drive. The recovery image is a file that contains a copy of the original factory-shipped software. To perform a System Recovery from a recovery image, see *System Recovery from the Windows 7 Start Menu* under [System recovery on page 18](#).



NOTE: The recovery image uses a portion of the hard disk drive that cannot be used for data storage.

- **Recovery Media** — Run the System Recovery from recovery media that you create from files stored on your hard disk drive or purchased separately. To create recovery media, see *Creating recovery media* under [System recovery on page 18](#).

System Recovery options

You should attempt a **System Recovery** in the following order:

1. Through the hard disk drive, from the Windows 7 Start menu.
 2. Through the hard disk drive, by pressing F11 on the keyboard during system startup.
 3. Through recovery media that you create.
 4. Through recovery discs purchased from HP Support. To purchase recovery discs, visit <http://www.hp.com/support>.
-

CAUTION: System Recovery deletes all data and programs you created or installed. Back up any important data to a removable disc or USB flash drive.

If the computer is working and Windows 7 is responding, use these steps to perform a **System Recovery**.

1. Turn off the computer.
2. Disconnect all peripheral devices from the computer except the monitor, keyboard, and mouse.
3. Turn on the computer.
4. Click **Start**, click **All Programs**, click **Recovery Manager**, and then click **Recovery Manager**. If prompted, click **Yes** to allow the program to continue.
5. Under **I need help immediately**, click **System Recovery**.
6. Select **Yes**, and then click **Next**. Your computer restarts.

NOTE: If your system does *not* detect a recovery partition, it prompts you to insert recovery media. Insert the disc or USB flash drive, select **Yes**, and then click **Next** to restart the computer and run Recovery Manager from the recovery disc or USB flash drive. If using discs, insert the next system-recovery disc when prompted.

7. When the computer restarts, you see the Recovery Manager welcome screen again. Under **I need help immediately**, select **System Recovery**. If you are prompted to back up your files, and you have not done so, select **Back up your files first (recommended)**, and then click **Next**. Otherwise, select **Recover without backing up your files**, and then click **Next**.
 8. System Recovery begins. After System Recovery is complete, click **Finish** to restart the computer.
 9. Complete the registration process, and wait until you see the desktop.
 10. Turn off the computer, reconnect all peripheral devices, and turn the computer back on.
-

CAUTION: System Recovery deletes all data and programs you created or installed.
Back up any important data to a removable disc or USB flash drive.

If Windows 7 is not responding, but the computer is working, follow these steps to perform a **System Recovery**.

1. Turn off the computer. If necessary, press and hold the **Power** button until the computer turns off.
 2. Disconnect all peripheral devices from the computer, except the monitor, keyboard, and mouse.
 3. Press the **Power** button to turn on the computer.
 4. As soon as you see the initial company logo screen appear, repeatedly press F11 on your keyboard until the **Windows is Loading Files...** message appears on the screen.
 5. Under **I need help immediately**, click **System Recovery**.
 6. If you are prompted to back up your files, and you have not done so, select **Back up your files first (recommended)**, and then click **Next**. Otherwise, select **Recover without backing up your files**, and then click **Next**.
 7. System Recovery begins. After System Recovery is complete, click **Finish** to restart the computer.
 8. Complete the registration process, and wait until you see the desktop.
 9. Turn off the computer, reconnect all peripheral devices, and turn the computer back on.
-

CAUTION: System Recovery deletes all data and programs you created or installed. Back up any important data to a removable disc or USB flash drive.

To create recovery media, see *Creating recovery media* under [System recovery on page 18](#).

To perform a **System Recovery** using recovery media:

1. If the computer is working, create a backup DVD or backup USB flash drive containing all the data files you want to save, and then remove the backup media from the drive tray.
2. If using recovery DVDs, insert recovery disc #1 into the DVD drive tray, and close the tray. If using a recovery USB flash drive, insert it into a USB port.
3. If the computer works, click **Start**, click the Arrow button next to Shut Down, and then click **Shut Down**. Or, if the computer is not responding, press and hold the **Power** button for approximately 5 seconds, or until the computer turns off.
4. Disconnect all peripheral devices from the computer except the monitor, keyboard, and mouse.
5. Press the **Power** button to turn on the computer. If you are using a recovery DVD, the computer automatically runs Recovery Manager from the disc. Skip to step 7.
6. If you are running System Recovery from a USB flash drive, press Esc as the computer is powering on to bring up the boot menu. Use the arrow keys to select the USB device and press Enter to boot from that device.
7. If you are prompted to choose between running System Recovery from media or from hard drive, select media, and then click **Next**.
8. Under **I need help immediately**, click **Factory Reset**.
9. If you are prompted to back up your files, and you have not done so, select **Back up your files first (recommended)**, and then click **Next**. Otherwise, select **Recover without backing up your files**, and then click **Next**.
10. If you are prompted to insert the next recovery disc, do so.
11. When the Recovery Manager is finished, remove all recovery media from the system.
12. Click **Finish** to restart the computer.

Recovery media can be created on either blank DVD discs or a USB flash drive (one or the other, but not both). Create recovery media from the recovery image stored on your hard disk drive. This image contains the operating system and software program files that were originally installed on your computer at the factory. You can create only one set of recovery media for your computer, and the media can be used *only* with this computer. Store the recovery media in a safe place.

NOTE: Some features might not be available on systems that are shipped without a version of Microsoft Windows.

Choosing
recovery media

- To create recovery discs, your computer must have a DVD writer, and you must use only high-quality blank DVD+R or DVD-R discs.

NOTE: You *cannot* use CDs or DVD+RW, DVD-RW, DVD+RW DL, DVD-RW DL, DVD+R DL, or DVD-R DL discs to create recovery discs.

- If you are creating recovery discs, be sure to use high-quality discs to create your set of recovery discs. It is normal for discs to be rejected if they are not defect-free. You will be prompted to insert a new blank disc to try again.
- The number of discs in the recovery-disc set depends on your computer model (typically 1–3 DVD discs). The Recovery Disc Creator program will tell you the specific number of blank discs needed to make the set.
- You may choose to create a recovery USB flash drive instead, using a high-quality blank USB drive. If you are using a USB flash drive, the program will tell you the size of the drive required to store all the data (minimum of 8 GB).

NOTE: The process of creating recovery media takes some time to verify that the information written on the media is correct. You can quit the process at any time. The next time you run the program, it will resume where it left off.

Creating recovery
media

To create recovery discs:

1. Close all open programs.
2. Click **Start > All Programs**, select **Recovery Manager**, and then select **Recovery Media Creation**. If prompted, click **Yes** to allow the program to continue.
3. Select **Create recovery media using blank DVD(s)**, and then click **Next**.
4. Follow the on-screen instructions. Label each disc as you make it (for example, Recovery 1, Recovery 2).

To create a recovery USB flash drive:

1. Close all open programs.
2. Insert the USB flash drive into a USB port on the computer.
3. Click **Start > All Programs**, select **Recovery Manager**, and then select **Recovery Media Creation**.
4. Select **Create recovery media with a USB flash drive**, and then click **Next**.
5. Select the USB flash drive from the list of media. The program lets you know how much storage is required to create the recovery drive. If the USB flash drive does not have enough storage capacity (8 GB is the minimum), it is grayed out on the screen. Click **Next**.

NOTE: Recovery Media Creation formats the flash drive and deletes all on files on it.

6. Follow the on-screen instructions. Be sure to label the USB flash drive and store it in a secure place.

NOTE: Do not use media cards for creating recovery media. The system may not be able to boot up from a media card and you may not be able to run system recovery.

4 Customer care

Product information

Before contacting the HP Customer Care Center, it's important to have the following information handy.

- Model number
- System (product) number
- Serial number
- Software build number
- Operating system

- Purchase date

Please take a moment to write down your product information for future reference.

The first four items on the list (model number, product number, serial number, and software build number) can be viewed by pressing the Ctrl+Alt+S keys on the keyboard at the same time.

Support information

Don't forget to register!

Go to: <http://www.hp.com/apac/register>.

Where to get help

Follow these steps when you need help

1. Check the setup poster and product documentation for help with setting up and using your computer.
2. Use the Help and Support Center for help with hardware and software questions. Click **Start**, and then click **Help and Support**. The Help and Support Center provides useful troubleshooting information and includes the following:
 - E-mail support
 - HP Real Time Chat with qualified support specialists
 - Support phone numbers
3. If you think you have a hardware issue, before calling the Customer Care Center, run the hardware diagnostic tools that are preinstalled on your computer. Click **Start, All Programs, PC Help & Tools**, and then click **Hardware Diagnostic Tools**.
4. For help online, go to the HP Customer Care Center website at <http://www.hp.com/support>.

To our valued customer

Congratulations on your decision to purchase a desktop computer! During development, the computer must pass extensive quality tests to meet the rigorous standards that have made us famous for quality and reliability.

All of our computers go through a comprehensive quality test to ensure the computer is working correctly before it leaves our factory. In addition, we have placed a security seal on your computer to indicate that it has not been tampered with since it left our factory.

We know that expanding and upgrading are key benefits for all customers. We are proud to make this a key differentiator for our computers and understand that you may wish to upgrade your computer to meet your specific needs.

Any hardware upgrades that you intend to do should only be done after you have completely set up your new computer. Refer to the setup poster included with your system for help with setting up. If you have any problems setting up your system and turning it on, immediately contact the HP Customer Care Center listed earlier in this guide, and a HP Customer Representative will assist you. This must be done first before attempting to upgrade your system.

By breaking the security seal on the back of the computer, you are confirming that the computer was working properly before you attempted to upgrade your system. Once the security seal has been broken, your computer is then, to the extent allowed by local law, covered under the terms and conditions listed in the *Hardware Limited Warranty* section of the *Limited Warranty and Support Guide*.

Thank you for choosing this computer. We hope you enjoy discovering the exciting things you can do with it!

Customer support

Easy to reach. Easy to use. Award-winning HP Customer Support is our promise to help you get the most from your computer. Whether with tools located on your computer, from information on the web, by phone, or through your local retailer, you'll find what you need.

Problems? HP will help

Your new computer is built to work right now — and for many years to come. But it is a complex, powerful machine, and sometimes things go wrong. If that happens to your computer, HP is ready to help.

Getting started

Follow the setup poster for help with setting up and using your computer.

See what you can do

There's lots of helpful information included with your computer. First look at Help on your Windows desktop (to access it, click **Start**, then click **Help and Support**). It contains more detailed help and will give you suggestions on how to fix the problem.

Within the Help and Support Center, you can get the latest news from HP about your computer. Be sure to also check the updates from HP that are sent to your desktop from time to time.

Next, try a little surfing! The HP website has updated software, tips and tricks, answers for common problems, and other information. Go to the Support website listed earlier in this document and search for your computer model.

Call HP Customer Care Center

Finally, if these steps don't help, you can reach a real, knowledgeable person by calling the HP Customer Care Center in your area. Phone assistance to get you up and running is covered for thirty (30) days from the time you purchased your

computer. After thirty (30) days, there may be a charge, but the helpful support is still available.

And, if necessary: get repair

If your computer needs to be repaired or to have parts replaced, you have two choices:

- You can easily replace many of your computer parts that are considered consumer replaceable. This is the fastest method of repair, as many times we can send the part directly to your home or business in a few days.
- If a repair is necessary, the HP Customer Care Center will make arrangements to fix your computer.

These services are covered during the warranty period.

There are a few limitations and exclusions to the warranty (as well as some important details), which are described in the *Hardware Limited Warranty* section of the *Limited Warranty and Support Guide*.

Warranty print on demand statement

You can find the expressly provided HP Limited Warranty applicable to your product in the start menu on your PC and/or in the CD/DVD provided in the box. For some countries/regions, a printed HP Limited Warranty is provided in the box. In countries/regions where the warranty is not provided in printed format, you may request a printed copy from hp.com/go/orderdocuments or write to HP at: Hewlett-Packard, MS POD, 11311 Chinden Blvd., Boise, ID 83714, U.S.A.; Hewlett Packard, POD, P.O. Box 200, Alexandra Post Office, Singapore 911507. Please include your product name, warranty period, name, and postal address.

版權與授權

© Copyright 2011 Hewlett-Packard Development Company, L.P. 此文件所包含資訊如有更改，恕不另行通知。

Hewlett-Packard 產品和服務的唯一擔保列於隨產品和服務所附的明示保證聲明中。本文件的任何部分都不可構成任何額外的擔保。HP 對於本文件在技術上或編輯上的錯誤或疏失不負擔任何責任。

HP 不承擔在非 HP 提供的設備上使用其軟體時的任何責任。

本文件包含的專屬資訊受到著作權法的保護。未經 HP 事先書面許可，不得影印、複製本文件之任何部份，或將其翻譯成其他語言。

Hewlett-Packard Company

P.O. Box 4010

Cupertino, CA 95015-4010

USA

本產品採用受美國專利權和智慧財產權保護的版權保護技術。此版權保護技術的使用需經 Macrovision 授權，且僅限於家庭和其他有限的觀賞使用。未經 Macrovision 授權，不得在其他場合使用。嚴格禁止反向工程或反向組譯。

Microsoft and Windows 是 Microsoft Corporation 在美國及其他國家/地區的商標。

HP 支持您合法使用科技，但不認可或鼓勵在違反著作權法的情況下使用我方產品。

本文件所包含之資訊可隨時更改，恕不另行通知。

了解硬碟空間

預先安裝 Microsoft® Windows® 作業系統的 Hewlett-Packard 和 Compaq 電腦，其硬碟可能比產品規格、說明文件或包裝箱上所陳述的規格還小。製造商所描述及宣稱的硬碟空間是以十進制 (base 10) 來計算的。Windows 與其他程式 (例如 FDISK) 是則採用二進位 (base 2) 計算系統。Microsoft Windows 與其他程式 (例如 FDISK) 是使用二進位 (base 2) 計算系統。

在十進位記數法中，1 個 Megabyte (MB) 等於 1,000,000 個位元組，而 1 個 Gigabyte (GB) 等於 1,000,000,000 個位元組。在二進位記數系統中，1 個 Megabyte 等於 1,048,576 個位元組，而 1 個 Gigabyte 等於 1,073,741,824 個位元組。因為記數系統不同，所以 Microsoft Window 記錄的大小與製造商宣稱的不同。其實兩者所描述的硬碟儲存空間是相同的。

Microsoft Windows 在 [Windows 檔案總管] 工具與 [電腦] 視窗中報告的容量較小，因為它一次只顯示硬碟內一個分割區的資料。其中一個磁碟分割區會包含系統復原資訊。

系統記憶體設為 4 GB 時的注意事項

若為使用 32 位元作業系統的電腦，基於系統資源需求，記憶體超過 3 GB 時，您可能無法使用所有記憶體。

HP 和 Compaq 系統並沒有上述的限制。超過 3 GB 的記憶體將做為系統資源使用。

確認總記憶體

系統 BIOS 會顯示所有已安裝的 4 GB 記憶體。

1. 開啟電腦電源。
2. 按下 F10。會顯示 BIOS 功能表。確認 [總安裝記憶體]。

目錄

1 資訊索引	1
安全資訊	2
2 安裝電腦	3
保護您的電腦	3
連線到網際網路	4
傳輸檔案和設定至新電腦	5
3 疑難排解與維護	5
電腦無法開機	5
電源	6
螢幕（顯示器）	7
鍵盤與滑鼠（有線）	7
鍵盤與滑鼠（無線）	9
喇叭與音效	9
網際網路連線	10
軟體疑難排解	11
維護	13
系統復原	15
4 顧客貼心服務	21
產品資訊	21
支援資訊	21
取得紙本保固聲明	23

1 資訊索引

資訊類型	尋找位置
<ul style="list-style-type: none">安裝電腦。	電腦隨附的安裝海報。
<ul style="list-style-type: none">觀看說明影片，講解有關使用電腦各項功能的方法。	參閱 http://www.hp.com/support/videos （僅提供英文）
<ul style="list-style-type: none">使用電腦。連線到網際網路。回復原廠設定。	《快速入門》 （本手冊）
<ul style="list-style-type: none">學習如何使用 Microsoft Windows 7 作業系統。尋找有關 Windows 7 密碼的資訊。解決最常見的電腦軟硬體問題。尋找驅動程式更新的連結。閱讀常見問題。	說明及支援 按一下 【開始】 ，然後再按一下 【說明及支援】 或前往 http://www.hp.com/go/win7 。 Windows 7 疑難排解工具 <ol style="list-style-type: none">按一下 【開始】、【控制台】，然後按一下 【系統及安全性】。在 【行動作業中心】 下方，按一下 【檢視電腦的狀態和解決問題】。
<ul style="list-style-type: none">尋找您電腦型號的電子使用手冊與規格。訂購零件與尋找其他疑難排解支援。	HP 支援網站： http://www.hp.com/support
<ul style="list-style-type: none">為您的電腦升級或替換組件。	《升級與維護手冊》 按一下 【開始】 、 【所有程式】 ，然後再按一下 【HP 使用手冊】 。 如果找不到手冊，請前往 http://www.hp.com/support
<ul style="list-style-type: none">尋找電腦保固資訊。取得技術支援。	電腦隨附的 《有限保固及支援手冊》 或 《保固及支援資訊》 。 或 按一下 【開始】 、 【所有程式】 ，然後再按一下 【HP 使用手冊】 。
<ul style="list-style-type: none">從 Windows 社群取得最新的資訊與說明。	http://www.hp.com/support/consumer-forum

資訊類型	尋找位置
<ul style="list-style-type: none"> 連接到電視。 	<p>《觀賞和錄製電視節目》</p> <p>按一下 [開始]、[所有程式]，然後再按一下 [HP 使用手冊]。</p> <hr/> <p>如果找不到手冊，請前往 http://www.hp.com/support</p>
<ul style="list-style-type: none"> 取得為電腦用戶準備的特殊公用程式。 	<p>[PC 說明和工具] 資料夾</p> <p>按一下 [開始]、[所有程式]，然後按一下 [PC 說明和工具]。</p>
<ul style="list-style-type: none"> 維護您的電腦。 	<p>HP Support Assistant — 可維護電腦效能，並可透過自動化更新、機上診斷與引導協助來更快解決問題。</p> <p>按一下 [開始]、[所有程式]、[HP]，然後按一下 [HP Support Assistant]。</p>
<ul style="list-style-type: none"> 檢視安全及法規訊息。 	<p>安全與法規資訊</p> <p>按一下 [開始]、[所有程式]，然後按一下 [HP 使用手冊] 或前往 http://www.hp.com/ergo。</p>
<ul style="list-style-type: none"> 尋找人體工學相關資訊。 	<p>《安全與舒適指南》</p> <p>按一下 [開始]、[所有程式]，然後按一下 [HP 使用手冊] 或前往 http://www.hp.com/ergo。</p>

安全資訊

如需更多資訊，請參閱 [HP 使用手冊] 資料夾中的《法規及安全資訊》文件。按一下 [開始]、[所有程式]，然後再按一下 [HP 使用手冊]。

警告！ 若要降低觸電或損壞設備的風險：

- 請將電腦放置於遠離水、灰塵、潮濕、油煙的位置。上述情況可能會增加電腦內部溫度，也可能造成起火或漏電。
- 勿拔除電源線接地插頭。接地插頭是重要的安全功能。
- 將電源線插在有接地且任何時間都方便使用的插座上。
- 請從電源插座中拔除電源線，以中斷設備的電源。為了避免暴露在雷射光束下，請勿打開 CD 或 DVD 光碟機的外殼。
- 電源供應器預設適用於您購買電腦的國家/地區。如果您前往其他地區，在您將電腦插頭插入 AC 電源插座之前，請先檢查該地區的電壓需求。

警告！ 由於電腦非常重；搬動電腦時，請使用符合人體工學的搬運方法。

要降低嚴重傷害的風險，請參閱《安全與舒適指南》。您可在網站上找到本指南，網址為 <http://www.hp.com/ergo>。

2 安裝電腦



附註： 如果電腦未隨附任何 Microsoft Windows 版本，某些功能可能無法在系統上使用。


1. 將電腦放置在通風良好的位置，且勿將連接線放置於走道或是會被傢俱壓到或損壞的地方。
2. 請將顯示器、電腦和週邊設備的電源線，連接至特別標有避雷保護的電源裝置、不斷電系統 (UPS) 或類似的裝置。如果您的電腦有電視調諧器，或是連接數據機或電話，請同樣為這類訊號輸入使用避雷保護以保護電腦。將電視連接線或電話線連接到避雷保護裝置，再將裝置連接至電腦。
3. 下載並安裝作業系統更新。
 - a. 檢視電腦目前使用的作業系統及版本。
(按一下 **[開始]** > **[控制台]**，然後連接兩下 **[系統]**。電腦的 Windows 版本下會顯示作業系統及版本。)
 - b. 開啟網際網路瀏覽器並前往 <http://www.hp.com/support>。
 - c. 視需要選取國家及語言，然後按一下 **[支援與驅動程式]**。
 - d. 選取 **[下載驅動程式與軟體 (包含韌體)]**，在 **[產品型號]** 欄位中輸入您的電腦產品名稱和型號，然後按 **Enter** 鍵。
 - e. 視需要從 **[產品搜尋結果]** 中選取您的電腦型號。
 - f. 選取您電腦的作業系統。
 - g. 在每個您想要下載的更新旁，按一下 **[下載]**。
 - h. 遵循螢幕上的指示安裝下載好的更新。
4. 您可在電腦包裝箱中找到其他書面詳細資訊和更新訊息。
5. 閱讀 **[HP 使用手冊]** 資料夾中的 **《法規及安全資訊》** 文件。
6. 閱讀 **《安全與舒適指南》**，瞭解有關正確設置工作站、姿勢、健康和工作習慣以及電源與機械安全資訊。按一下 **[開始]**、**[所有程式]**，然後按一下 **[HP 使用手冊]** 或前往 <http://www.hp.com/ergo>。

保護您的電腦

電腦遭遇的風險	電腦功能
未經授權使用電腦或使用者帳號	使用者密碼 密碼 是一組由您選擇，可用來保護電腦資訊的字元。
未經授權存取「設定公用程式」、BIOS 設定和其他系統識別資訊	管理員密碼

電腦遭遇的風險	電腦功能
電腦病毒	防毒軟體 預先安裝在電腦中的免費試用防毒軟體可以偵測並移除大部分病毒，而且在多數情況下可以修復病毒所造成的損害。如需在試用期過後繼續保護電腦不受新病毒的入侵，請購買延長更新服務。
未經授權存取資料以及電腦目前面的威脅	防火牆軟體 <ul style="list-style-type: none">Windows 7 內含的防火牆軟體已預先安裝在電腦中。已預先安裝在電腦的防毒軟體中包含防火牆軟體。
	Windows 7 重大安全性更新 Microsoft 持續更新 Windows 7 作業系統。

完成電腦初步安裝後，您可能想要安裝其他軟體程式或硬體裝置。為您的電腦購買新軟體或硬體之前，請檢查作業系統、記憶體和其他列出的需求。請依照軟體製造商的指示安裝新軟體。


 **附註：** 請只使用原廠授權的軟體。安裝複製的軟體可能導致安裝不穩定、使您的電腦感染病毒或是觸犯法律。

安全性解決方案可預防資料遭竊、不當處理資料以及軟體攻擊，但無法完全阻止這些動作。


連線到網際網路

連線到網際網路的步驟：

1. 按照安裝海報的指示來連接硬體。
2. 取得網際網路服務。
 - 向網際網路服務供應商 (ISP) 申請註冊。如果您已有 ISP 提供的帳戶，請略過這個步驟，並按照 ISP 的指示進行。
 - 如果您在第一次設定電腦時沒有設定網際網路服務，現在請使用 [線上服務] 進行設定：
 - a. 按一下 **[開始]**、**[所有程式]**、**[線上服務]**，然後按一下 **[連接上網]**。
 - b. 遵循螢幕上的指示選擇一個 ISP 並設定網際網路服務。

 **附註：** [線上服務] 會提供 ISP 清單，不過，您可選擇另一個 ISP 或是將現有的帳戶移轉到此電腦中。若要移轉現有帳戶，請按照 ISP 提供的指示進行。

3. 使用 ISP 所提供的網際網路連線，開啟網路瀏覽器並瀏覽網際網路。

 **附註：** 如果您有連線到網際網路的問題，請參閱位於第 10 頁的網際網路連線。

傳輸檔案和設定至新電腦

您可以使用 CD 或 DVD、隨身碟和外接式硬碟，將另一台電腦的檔案複製到新電腦。您也可以使用 Windows 7 隨附的「Windows 輕鬆傳輸」軟體（僅限部分型號），來複製檔案和設定至儲存裝置，或使用「輕鬆傳輸纜線」直接從其他電腦傳送檔案至新電腦。「輕鬆傳輸纜線」為 USB 連接線，專供連接兩台電腦並搭配「Windows 輕鬆傳輸」軟體一起使用。



附註：「輕鬆傳輸纜線」為另行販售。**無法**使用一般的 USB 連接線。

若要傳輸檔案與設定：

1. 按一下 **[開始]**，在 **[開始搜尋]** 方塊中輸入 Windows 輕鬆傳輸，然後按一下 **[Windows 輕鬆傳輸]**。
2. 遵循 **[Windows 輕鬆傳輸]** 精靈顯示在螢幕上的指示，將舊電腦的檔案傳輸到新電腦。



附註：如果電腦未隨附任何 Microsoft Windows 版本，某些功能可能無法在系統上使用。

3 疑難排解與維護

請參閱產品製造商所提供的說明文件，取得特定週邊裝置的資訊，例如：與顯示器或印表機有關的問題。下列表格說明您在安裝、開機或使用電腦時可能遭遇到的部分問題，並提供解決方案。

如需詳細資訊或是額外的疑難排解選項，請參閱位於第 1 頁的資訊索引。

電腦無法開機

徵兆	可能的解決方法
錯誤訊息：硬碟錯誤。	重新開機。 <ol style="list-style-type: none">1. 同時按下鍵盤上的 Ctrl+Alt+Delete 鍵。2. 按一下紅色 [關機] 按鈕旁的 箭號 按鈕，然後按一下 [重新啟動]。 或是按住電腦的 電源 按鈕 5 秒以上以關閉電腦，然後按下 電源 按鈕重新啟動電腦。3. Windows 啟動後，立刻將所有重要資料備份至備份硬碟中。4. 不論是否能啟動 Windows，請連絡支援服務。 可能需要更換硬碟或系統主機板。

徵兆	可能的解決方法
電腦無法開機或啟動。	<p>確認已插妥連接電腦至外部電源的連接線。插妥連接電腦到外部電源的連接線且牆上插座也運作正常時，電腦背面的綠色電源供應器指示燈應會亮起；如果指示燈沒有亮起，請連絡支援中心。</p> <p>如果螢幕（顯示器）沒有畫面，則表示顯示器可能沒有接好。將顯示器連接到電腦，插好之後再開啟電源。請參閱位於第 7 頁的螢幕（顯示器）。</p> <p>將不同的電源裝置連接到牆上插座以測試插座是否故障。</p>
電腦似乎被鎖定且沒有回應。	<p>使用 [Windows 工作管理員] 關閉任何沒有回應的程式，或重新開機：</p> <ol style="list-style-type: none"> 1. 同時按下鍵盤上的 Ctrl+Alt+Delete 鍵。 2. 按一下 [啟動工作管理員]。 3. 選取沒有回應的程式，然後按一下 [結束工作]。 <p>如果無法關閉程式，請重新開機：</p> <ol style="list-style-type: none"> 1. 同時按下鍵盤上的 Ctrl+Alt+Delete 鍵。 2. 按一下紅色 [關機] 按鈕旁的 箭號 按鈕，然後按一下 [重新啟動]。 或是按住電腦的 電源 按鈕 5 秒以上以關閉電腦，然後按下 電源 按鈕重新啟動電腦。

電源

徵兆	可能的解決方法
錯誤訊息：無效系統磁碟或非系統磁碟或磁碟錯誤。	磁碟機作業停止時，請取出磁碟並按下鍵盤上的空白鍵，即可啟動電腦。
按下電源按鈕時電腦不會關機。	按住 電源 按鈕直到電腦關機為止。檢查 [電源設定] 。
電腦自動關機。	<ul style="list-style-type: none"> ● 電腦可能處於超高溫的環境。請讓它冷卻一下。 ● 確定電腦通風口未阻塞且內部風扇正在運作 — 請參閱位於第 13 頁的維護中的〈保持電腦遠離灰塵與高溫〉。（您的電腦可能沒有配備內部風扇。）

螢幕（顯示器）

徵兆	可能的解決方法
螢幕變黑，而且顯示器電源燈不亮。	重新接好在顯示器背面和牆上插座兩端的電源插頭。 按下顯示器上的 電源 按鈕。
螢幕變黑。	按下鍵盤上的空白鍵或是移動滑鼠讓螢幕再度顯示畫面。 按下 [Sleep] 按鈕（僅限部分型號）或鍵盤上的 Esc 鍵離開睡眠模式。 按下 電源 按鈕啟動電腦。 檢查顯示器視訊接頭的針腳是否彎曲： <ul style="list-style-type: none">● 若發現任何彎曲的針腳，請更換顯示器接頭連接線。● 如果未發現彎曲的針腳，請重新將顯示器接頭連接線連接到電腦。
螢幕上的影像太大、太小或模糊不清。	在 Windows 7 調整螢幕解析度設定： <ol style="list-style-type: none">1. 按一下 [開始]，再按一下 [控制台]。2. 在 [外觀及個人化] 下，按一下 [調整螢幕解析度]。3. 視需要調整解析度，然後按一下 [套用]。
附註：	除了此處所列出的資訊以外，請同時參閱顯示器隨附的說明文件。

鍵盤與滑鼠（有線）

徵兆	可能的解決方法
電腦無法辨識鍵盤輸入的指令及文字。	使用滑鼠關閉電腦，拔除並重新連接鍵盤到電腦背面，然後重新啟動電腦。
無法使用或偵測不到有線滑鼠。	拔除並重新連接滑鼠連接線至您的電腦。 如果仍偵測不到滑鼠，請關閉電腦、拔除並重新連接滑鼠連接線，接著重新開機。

徵兆	可能的解決方法
無法使用數字鍵盤的方向鍵移動游標。	按下鍵盤上的 Num Lock 鍵以關閉 Num Lock ，便可以使用數字鍵盤上的方向鍵。
游標無法回應滑鼠動作。	使用鍵盤儲存所有已開啟應用程式中的變更，然後重新啟動電腦： <ol style="list-style-type: none">1. 同時按下 Alt+Tab 鍵瀏覽開啟的應用程式。2. 同時按下 Ctrl+S 來儲存選擇程式中的變更（大部份程式可使用 Ctrl+S 鍵盤快捷鍵執行儲存，但並非所有程式都可使用。）3. 重複步驟 1 與步驟 2 以儲存所有已開啟應用程式中的變更。4. 儲存所有已開啟程式中的變更後，請同時按下鍵盤上的 Ctrl+Esc 鍵顯示 Windows [開始] 功能表。5. 使用方向鍵選取 [關機] 旁的箭號按鈕。選取 [關機] 然後按 Enter 鍵。6. 關閉電腦後，請拔除並重新連接滑鼠接頭至電腦後方，接著重新啟動電腦。

鍵盤與滑鼠（無線）

徵兆	可能的解決方法
無法使用或偵測不到無線鍵盤或滑鼠。	<ul style="list-style-type: none">請確定無線鍵盤或滑鼠位於接收器的範圍內，正常使用時大約為 10 公尺，初始設定或是進行重新同步化時，則需要在 30 公分之內。滑鼠在停止使用 20 分鐘後會進入暫停模式，請確定滑鼠不是處於暫停模式。按一下滑鼠左鍵使其重新啟動。更換鍵盤和滑鼠的電池。使用下列步驟，將鍵盤和滑鼠重新與接收器同步化。

下列圖中所示的接收器、無線鍵盤與無線滑鼠皆為範例，您的型號可能會有不同。**重要：**在這些步驟中，請將無線鍵盤與滑鼠置於與接收器同高的平面上，距離接收器 30 公分以內，並遠離其他裝置的干擾。

1. 將接收器從電腦上的 USB 接頭拔除，然後再重新接上。您的電腦型號可能有接收器專屬的接頭。如果可以，請使用電腦前面的 USB 接頭。



2. 確認滑鼠的電源已開啟 (A)，按住滑鼠底部的 [Connect] 按鈕 (B) 5 至 10 秒，直到接收器上的 LED 燈亮起或停止閃爍。接收器的連線逾時時間為 60 秒。若要確定已建立連線且接收器未逾時，請移動滑鼠以檢查螢幕上是否有反應。



3. 建立滑鼠連線後，請繼續接下來的步驟，重複建立鍵盤連線的程序。
4. 按住鍵盤背面的 [Connect] 按鈕 (C) 5 到 10 秒，直到接收器的 LED 燈亮起或停止閃爍。



喇叭與音效

徵兆	可能的解決方法
音量太小或音質不佳。	確認已將喇叭連接到電腦背面的音訊輸出（萊姆綠）接頭。（多聲道喇叭必須使用額外的音訊接頭。）分離式無電源喇叭（沒有個別電源的喇叭，例如電池或電源線）無法產生令人滿意的聲音。請以主動式喇叭來替換無電源喇叭。

徵兆	可能的解決方法
無法發出聲音。	<p>若為 Windows 7：</p> <ol style="list-style-type: none"> 按一下 [開始]、[控制台]、[行動作業中心]，然後按一下 [疑難排解]。 在 [硬體和音效] 中，按一下 [疑難排解音訊播放]。
	<p>如果您使用顯示卡上的高畫質多媒體介面 (HDMI) 接頭 (僅限部分型號) 將顯示器連接至電腦，而且您想在電腦初始安裝期間聽見聲音，您應該將類比喇叭連接至電腦的音訊源輸出接頭。請參閱安裝海報以連接類比喇叭。</p>
	<p>如果您使用顯示器內建的喇叭，那麼請使用顯示器前面板的音量按鈕來調整音量。使用前面板按鈕進入螢幕視控顯示 (OSD) 以確保音訊已開啟且設定適當音量。</p>
	<p>確認已連接有電源鈕的 (主動式) 喇叭，而且已經開啟。</p>
	<p>關閉電腦，拔除並重新連接喇叭。確定喇叭已連接到音訊接頭，而非連接到音源輸入或耳機接頭。</p>
	<p>若要離開睡眠模式，請按下 [Sleep] 按鈕 (僅限部分型號) 或 Esc 鍵。</p>
	<p>若有耳機連接在電腦 (或喇叭系統) 上，請拔下耳機。</p>

網際網路連線

徵兆	可能的解決方法
網際網路程式無法自動啟動。	<p>登入您的 ISP，然後啟動要使用的程式。</p>

徵兆	可能的解決方法
無法連線上網。	<p>若為 Windows 7：</p> <ol style="list-style-type: none"> 按一下 [開始]、[控制台]、[行動作業中心]，然後按一下 [疑難排解]。 在 [網路和網際網路] 中，按一下 [連線到網際網路]。 <p>請檢查您的網際網路連線類型是否使用正確的連接線。您的電腦可能會有一組撥接數據機與乙太網路配接卡（亦稱為網路介面卡或 NIC）。數據機使用標準電話線，而網路介面卡則使用網路線來連接區域網路 (LAN)。請勿將電話線連接至網路介面卡，也不要將網路線插入電話線路中；否則可能會損壞網路介面卡。</p> <p>執行無線網路安裝精靈：</p> <ol style="list-style-type: none"> 按一下 [開始]、[控制台]、[網路和網際網路]，然後按一下[網路和共用中心]。 在 [網路和共用中心] 視窗中，按一下 [設定新的連線或網路] 以開啟精靈並按照螢幕上的指示操作。 <p>如果您的系統有外接式天線，請試著將天線移到更好的收訊位置。如果為內建天線，請嘗試移動電腦。</p> <p>稍後再試著連接網路，或是連絡您的網際網路服務供應商 (ISP) 以尋求協助。</p>

軟體疑難排解

若要修復軟體問題，可嘗試下列方法：	<ul style="list-style-type: none"> ● 完全關閉電腦再重新開機。這是最簡單卻也最有效的方法。 ● 更新驅動程式（參閱下列〈更新裝置驅動程式〉）。 ● 使用「Microsoft 系統還原」軟體程式並重新安裝硬體驅動程式（參閱此表下方的〈Microsoft 系統還原〉）。— 將您的電腦還原至安裝軟體之前所使用的設定。 ● 重新安裝軟體程式或硬體驅動程式（參閱此表下方的〈重新安裝軟體程式及硬體驅動程式〉）。— 將軟體（如果於產品出廠時預設安裝）或硬體驅動程式還原為原廠預設值。 ● 「系統復原」（請參閱位於第 15 頁的系統復原）— 清除及重新格式化硬碟，然後重新安裝作業系統、程式與驅動程式。將會您所建立的所有資料檔案。
-------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

-
- 更新裝置驅動程式 請完成下列程序更新驅動程式；如果新的驅動程式無法解決您的問題，請回復舊版的驅動程式。
1. 按一下 **[開始]**。
 2. 在 **[開始搜尋]** 方塊輸入 **[裝置管理員]**，然後按一下 **[裝置管理員]** 以開啟 **[裝置管理員]** 視窗。
 3. 按一下加號 (+) 展開您要更新或回復的裝置類型。（例如，DVD/CD-ROM 光碟機）。
 4. 連接兩下特定的項目（例如：HP DVD Writer 640b）。
 5. 按一下 **[驅動程式]** 標籤。
 6. 若要更新驅動程式，請按一下 **[更新驅動程式]** 並按照螢幕上指示進行操作。
若要回復到較早的驅動程式版本，請按一下 **[回復驅動程式]** 並按照螢幕上指示進行操作。
-

Microsoft 系統還原 如果出現可能是安裝在電腦中軟體所產生的問題，請使用「系統還原」將電腦還原到先前的還原點。您也可以手動設定還原點。

附註： 在您使用「系統復原」程式前，請務必使用「系統還原」程序。

如果電腦未隨任何 Microsoft Windows 版本，某些功能可能無法在系統上使用。

若要啟動「系統還原」：

1. 關閉所有開啟的程式。
 2. 按一下 **[開始]**，在 **[電腦]** 上按一下滑鼠右鍵，然後按一下 **[內容]**。
 3. 按一下 **[系統保護]**、**[系統還原]**，然後按一下 **[下一步]** 之後再按照螢幕指示進行。
-

若要手動新增還原點：

1. 關閉所有開啟的程式。
 2. 按一下 **[開始]**，在 **[電腦]** 上按一下滑鼠右鍵，按一下 **[內容]**，然後再按一下 **[系統保護]**。
 3. 在 **[保護設定]** 下，選取您想建立還原點的磁碟。
 4. 按一下 **[建立]**，然後按照螢幕指示進行。
-

重新安裝軟體程式 與硬體驅動程式

如果任何原廠安裝的軟體程式或硬體驅動程式損毀，您可以使用「復原管理員」程式來重新安裝程式（僅限部分型號）。

附註： 請勿使用「復原管理員」程式重新安裝電腦包裝箱中隨附 CD 或 DVD 上的軟體程式。請直接從 CD 或 DVD 重新安裝這些程式。

解除安裝某一程式前，請確定您知道如何重新安裝該程式。確認仍可從您原本進行安裝的位置（例如：光碟或網際網路）取得該程式。或者確認該程式出現在可由「復原管理員」重新安裝的程式清單中。

附註： 如果電腦未隨附任何 Microsoft Windows 版本，某些功能可能無法在系統上使用。

若要確認「復原管理員」中可安裝程式的清單：

1. 按一下 **[開始]**、**[所有程式]**、**[復原管理員]**，然後按一下 **[復原管理員]**。若系統提示，請按一下 **[是]** 允許程式繼續執行。
 2. 在 **[我現在就需要協助]** 下方，按一下 **[軟體程式重新安裝]**。
 3. 在「歡迎使用」畫面中按一下 **[下一步]**。接著會開啟程式清單。確定您的程式出現在清單中。
-

若要使用「復原管理員」重新安裝程式：

1. 按一下 **[開始]**、**[所有程式]**、**[復原管理員]**，然後按一下 **[復原管理員]**。
 2. 按一下 **[軟體程式重新安裝]**，然後在 **[歡迎]** 畫面中按一下 **[下一步]**。
 3. 選擇您要安裝的程式，按一下 **[下一步]**，然後按照螢幕上的指示進行操作。
 4. 完成重新安裝後，請重新啟動電腦。**請勿省略最後一個步驟。**您必須在復原軟體程式或硬體驅動程式後重新開機。
-

若要解除安裝程式：

1. 關閉所有軟體程式及資料夾。
 2. 解除安裝毀損的程式：
 - a. 按一下 **[開始]**，然後再按一下 **[控制台]**。
 - b. 在 **[程式]** 中，按一下 **[移除安裝程式]**。
 - c. 選取您想要移除的程式，然後按一下 **[解除安裝]**。
 - d. 如果您想繼續解除安裝程序，請按一下 **[是]**。
-

維護

請務必對電腦執行簡易的維護以確保電腦擁有最佳的效能。

每週	軟體清理	使用「 清理磁碟 」或安全的協力廠商清理工具，移除累積在系統且讓系統變慢的廢棄與暫存檔案。另外，請檢查並解除安裝您不需要使用的程式。
	磁碟重組	執行「 磁碟重組工具 」可保持磁碟的良好狀態，並改善系統效能。經常執行此作業不會損害您的系統。
	病毒掃描	每週執行完整的病毒掃描可偵測任何趁隙進入系統的病毒。大部分的防毒產品擁有排程的功能，可自動追蹤此情形。
每月	硬體清理	徹底清理電腦的內外。
	軟體更新	使用 Windows Update 可修復作業系統的錯誤並改善效能。另外，請確定檢查硬體是否有更新版驅動程式，以及您常用的程式是否有可用的新版本。
	Windows Update	每月執行 Windows Update 以安裝更新。
	硬碟診斷	在某些情況下，您可以使用「 硬碟診斷 」來預防磁碟損壞。
每年	系統復原	電腦使用一段時間後，按照電腦的使用頻率，系統作業速度仍然可能會變慢。請使用「 系統復原 」清理 Windows 作業系統，將其復原到首次開啟系統的原始配置狀態。 執行系統復原之前請備份所有重要的資料檔案。 如需詳細資料，請參閱位於第 15 頁的系統復原。
依個人需求	備份您的資料	使用電腦上安裝的 CD 或 DVD 錄製軟體，製作（或燒錄）重要資訊的備份光碟，其中包括個人檔案、電子郵件訊息以及網站書籤。您也可以將資料移動到外接硬碟。

保持電腦遠離灰塵與高溫，可延長電腦使用壽命。灰塵、動物毛髮和其他塵埃會不斷堆積，因而產生毛毯效應；如此一來，電腦組件會過熱，如果是鍵盤和滑鼠，則無法順利且有效率地使用。請每個月檢查一次您的系統，查看是否明顯覆蓋一層灰塵和堆積物，並大約每三個月清潔一次。請參閱 <http://www.hp.com/support> 以取得詳細的清潔指示。

清潔電腦通風孔 通風孔可以冷卻電腦和顯示器的溫度。請使用電池式小型吸塵器來清潔通風孔，維持通風孔暢通。（電池式吸塵器可減少電擊的危險性。）

1. 使用吸塵器清潔電腦外殼和顯示器外殼的通風孔。
2. 吸除任何堆積在電腦連接埠（例如：乙太網路與 USB 連接埠）周圍的堆積物。

清潔電腦和顯示器 請按照下列指示來清潔電腦和顯示器：

1. 拔下電腦和顯示器的插頭。
2. 使用乾淨的乾布清潔顯示器螢幕。**請勿用水清潔顯示器螢幕。**若要加強清潔效果，請使用防靜電螢幕清潔劑和乾淨的布。
3. 使用乾淨的乾布來擦除電腦外殼和顯示器上的灰塵。

附註： 若要去除電腦或顯示器外殼上撕除貼紙或濺到液體的痕跡，請使用異丙醇（外用）酒精和不含絨毛的布擦拭。

清潔鍵盤和滑鼠 清潔鍵盤時，請使用設為低速的電池式吸塵器，以防按鍵帽與彈簧脫落。

1. 沿著鍵盤按鍵間的溝槽吸除灰塵。
2. 使用乾淨的乾布和異丙醇（外用）酒精來清潔鍵盤按鍵上以及按鍵邊緣的堆積物。
3. 使用清潔抹布來擦拭滑鼠與滑鼠連接線。

如果您使用的是滾球式滑鼠，請清潔滾球和滾輪內部：

1. 將滑鼠的底部朝上，以逆時針方向旋轉滾球蓋以取下外蓋和滾球。
 2. 使用肥皂溫水沖洗滾球。
 3. 使用沾異丙酮（外用）酒精的棉花棒清潔滑鼠內的滾輪。
 4. 滾球與滾輪完全乾燥後，裝回滾球與滾球外蓋。
-

系統復原

「系統復原」會完全清除及重新格式化硬碟，同時刪除您建立的所有資料檔案，然後重新安裝作業系統、程式與驅動程式。不過，您必須重新安裝所有非原廠安裝的軟體。這包含電腦配件箱中媒體隨附的軟體，以及在您購買電腦後所安裝的軟體程式。



附註： 在您使用「系統復原」程式前，請務必使用「系統還原」程序 — 請參閱位於第 11 頁的軟體疑難排解中的〈Microsoft 系統還原〉。

如果電腦未隨附任何 Microsoft Windows 版本，某些功能可能無法在系統上使用。

您必須選擇下列其中一個方法來執行「系統復原」：

- 復原映像 — 從儲存在您硬碟的復原映像執行「系統復原」。復原映像是包含原始原廠隨附軟體副本的檔案。若要從復原映像執行系統復原，請參閱位於第 15 頁的系統復原中的〈從 Windows 7 [開始] 功能表執行「系統復原」〉。



附註： 復原映像會佔據部分硬碟空間而且無法儲存資料。

- 復原媒體 — 從復原媒體執行「系統復原」，這些媒體是您從儲存在硬碟的檔案所建立或另行購買的光碟。若要建立復原媒體，請參閱位於第 15 頁的系統復原中的〈建立復原媒體〉。

系統復原選項

您應該按照以下順序嘗試執行「**系統復原**」：

1. 透過硬碟，從 Windows 7 [開始] 功能表執行。
2. 透過硬碟，在系統開啟時按下鍵盤的 F11 鍵執行。
3. 透過您建立的復原媒體執行。
4. 透過從 HP 支援中心購買復原光碟。若要購買復原光碟，請至 <http://www.hp.com/support>。

從 Windows 7 [開始] 功能表啟動「系統復原」

注意：「系統復原」會刪除您建立或安裝的所有資料和程式，請將所有重要資料備份至卸除式磁碟或 USB 隨身碟。

如果電腦正常運作中且 Windows 7 正常回應，請使用下列步驟來執行「系統復原」。

1. 關閉電腦。
2. 除了顯示器、鍵盤和滑鼠以外，中斷電腦與所有週邊裝置的連接。
3. 啟動電腦。
4. 按一下 **[開始]**、**[所有程式]**、**[復原管理員]**，然後按一下 **[復原管理員]**。若系統提示，請按一下 **[是]** 允許程式繼續執行。
5. 在 **[我現在就需要協助]** 下方，按一下 **[系統復原]**。
6. 選取 **[是]**，然後按一下 **[下一步]**。接著會重新開機。

附註： 如果您的系統**沒有**偵測到修復磁碟分割，則會提示您插入復原媒體。插入光碟或 USB 隨身碟，選取 **[是]** 然後按一下 **[下一步]** 重新啟動電腦，並從復原光碟或 USB 隨身碟執行「復原管理員」。若使用光碟，請在出現提示時插入下一張系統復原光碟。

7. 重新啟動電腦時，您會再次看見 **[歡迎使用復原管理員]** 畫面。在 **[我現在就需要協助]** 中，選取 **[系統復原]**。如果系統提示您備份檔案且您還沒有備份檔案，請選取 **[首先備份您的檔案 (建議的動作)]**，然後按一下 **[下一步]**。否則，請選取 **[恢復但不備份您的檔案]**，然後按一下 **[下一步]**。
 8. 接著，就會開始執行「系統復原」。「系統復原」執行完畢後，按一下 **[結束]** 以重新開機。
 9. 完成註冊程序，然後等到桌面出現為止。
 10. 關閉電腦、重新連接所有週邊設備，然後再重新啟動電腦。
-

系統啟動時執行
「系統復原」

注意：「系統復原」會刪除您建立或安裝的所有資料和程式，請將所有重要資料備份至卸除式磁碟或 USB 隨身碟。

如果 Windows 7 沒有回應，但電腦正常運作中，請按照下列步驟執行「系統復原」。

1. 關閉電腦。如有需要，請按住**電源**按鈕直到電腦關閉為止。
 2. 除了顯示器、鍵盤和滑鼠以外，中斷電腦與所有週邊裝置的連接。
 3. 按下**電源**按鈕啟動電腦。
 4. 當您看見原廠公司標誌畫面出現時，請重複按鍵盤上的 F11 鍵，直到畫面上出現「Windows 正在載入檔案...」的訊息。
 5. 在【我現在就需要協助】下方，按一下【系統復原】。
 6. 如果系統提示您備份檔案且您還沒有備份檔案，請選取【**首先備份您的檔案（建議的動作）**】，然後按一下【**下一步**】。否則，請選取【**恢復但不備份您的檔案**】，然後按一下【**下一步**】。
 7. 接著，就會開始執行「系統復原」。「系統復原」執行完畢後，按一下【**結束**】以重新開機。
 8. 完成註冊程序，然後等到桌面出現為止。
 9. 關閉電腦、重新連接所有週邊設備，然後再重新啟動電腦。
-

從復原媒體啟動
「系統復原」

注意：「系統復原」會刪除您建立或安裝的所有資料和程式，請將所有重要資料備份至卸除式磁碟或 USB 隨身碟。

若要建立復原媒體，請參閱位於第 15 頁的系統復原中的〈**建立復原媒體**〉。

使用復原媒體執行「**系統復原**」：

1. 如果電腦正常運作中，請建立備份 DVD 或備份 USB 隨身碟，將所有您要儲存的資料檔案存放進去，然後從磁碟托槽中取出備份媒體。
2. 若使用復原 DVD，請將第一張復原光碟插入 DVD 光碟機托槽，然後關閉托槽。若使用復原 USB 隨身碟，請將隨身碟插入 USB 連接埠。
3. 如果電腦正在運作中，請按一下【**開始**】、【**關機**】旁的箭號按鈕，然後按一下【**關機**】。如果電腦沒有回應，請按住【**電源**】按鈕約 5 秒鐘或者直到電腦關機為止。
4. 除了顯示器、鍵盤和滑鼠以外，中斷電腦與所有週邊裝置的連接。
5. 按下**電源**按鈕啟動電腦。如果使用復原 DVD，電腦會自動從光碟執行【復原管理員】。請跳至步驟 7。
6. 如果您是從 USB 隨身碟執行【系統復原】，請在電腦開機時按 **Esc** 鍵，進入開機功能表。使用方向鍵選取 USB 裝置並按 **Enter** 從裝置開機。
7. 如果系統提示您選擇從媒體或硬碟執行「系統復原」，請選取媒體，然後再按一下【**下一步**】。
8. 在【**我現在就需要協助**】中，按一下【**原廠重設**】。
9. 如果系統提示您備份檔案且您還沒有備份檔案，請選取【**首先備份您的檔案（建議的動作）**】，然後按一下【**下一步**】。否則，請選取【**恢復但不備份您的檔案**】，然後按一下【**下一步**】。
10. 如果電腦提示您插入下一片回復光碟，請遵照指示進行。
11. 結束「復原管理員」後，請從系統取出所有復原媒體。
12. 按一下【**完成**】以重新啟動電腦。

復原媒體

您可以在空白 DVD 光碟或 USB 隨身碟上建立復原媒體（兩者擇一，不得同時使用）。您應該從儲存在硬碟中的復原映像製作復原媒體。此映像包含您電腦原廠安裝的作業系統和軟體程式檔案。您只能為電腦建立一組復原媒體，且此媒體僅供這台電腦使用。請將復原媒體置於安全的地方。

附註： 如果電腦未隨附任何 Microsoft Windows 版本，某些功能可能無法在系統上使用。

選擇復原媒體

- 若要建立復原光碟，您的電腦必須具備 DVD 燒錄機，且必須使用高品質空白 DVD+R 或 DVD-R 光碟。

附註： 無法使用 CD 或 DVD+RW、DVD-RW、DVD+RW DL、DVD-RW DL、DVD+R DL 或 DVD-R DL 光碟來建立復原光碟。

- 如果您要建立復原光碟，請使用高品質光碟來建立復原光碟組。如果光碟品質不佳，光碟機退片是正常情況。系統會提示您插入新的空白光碟，重新再試一次。
- 復原光碟組的光碟數量視您電腦的型號而定（通常為 1 至 3 片 DVD）。建立復原光碟組時，「恢復碟片建立程式」程式會告訴您需要使用多少片空白光碟。
- 您可以選擇用高品質的空白 USB 磁碟機來建立復原 USB 隨身碟。如果使用 USB 隨身碟，程式會告訴您儲存所有資料需要多少空間（至少 8 GB）。

附註： 建立復原媒體的程序需要一些時間，確認寫入到媒體的資訊是否正確。您可隨時離開這項處理作業。下次再執行此程式時，會從上次結束的地方重新繼續。

建立復原媒體

若要建立復原光碟：

1. 關閉所有開啟的程式。
 2. 按一下 **[開始]** > **[所有程式]**，選取**[復原管理員]**，然後選取**[復原媒體建立]**。若系統提示，請按一下**[是]**允許程式繼續執行。
 3. 選取**[使用空白 DVD 建立復原媒體]**，然後按一下**[下一步]**。
 4. 遵循螢幕上顯示的指示操作。依照製作的順序標示每片光碟（例如：Recovery 1、Recovery 2）。
-

建立復原 USB 隨身碟：

1. 關閉所有開啟的程式。
2. 將 USB 隨身碟插入電腦的 USB 連接埠。
3. 按一下 **[開始]** > **[所有程式]**，選取**[復原管理員]**，然後選取**[復原媒體建立]**。
4. 選取**[使用 USB 隨身碟建立復原媒體]**，然後按一下**[下一步]**。
5. 從媒體清單中選取 USB 隨身碟。程式會通知您建立復原磁碟所需的儲存空間。若 USB 隨身碟儲存空間不足（至少 8 GB），畫面中的隨身碟選項就會變成灰色。按一下**[下一步]**。

附註： 「復原媒體建立」會格式化隨身碟並刪除隨身碟中的所有檔案。

6. 遵循螢幕上顯示的指示操作。務必為 USB 隨身碟貼上標籤，並將隨身碟存放在安全處。

附註： 請勿使用記憶卡建立復原媒體。系統可能無法從記憶卡開機，因此您將無法執行系統復原。

4 顧客貼心服務

產品資訊

在洽詢「HP 顧客貼心服務」之前，請務必備妥下列資訊。

- 型號
- 系統（產品）編號
- 序號
- 軟體組建編號
- 作業系統
- 購買日期

請花些時間填寫您電腦的產品資訊，以供日後參考。

您可以在鍵盤上同時按下 **Ctrl + Alt + S** 鍵即可檢視清單中的前四個項目（型號、產品編號、序號和軟體組建編號）。

支援資訊

別忘了註冊！

造訪：<http://www.hp.com/apac/register>。

如何取得協助

當您需要協助時，請依下列步驟處理

1. 查看安裝海報和產品手冊中關於設定及使用電腦的說明。
2. 使用「說明及支援中心」取得硬體和軟體問題的說明。按一下 **[開始]**，然後再按一下 **[說明及支援]**。「說明及支援中心」提供有用的疑難排解資訊並包括下列：
 - 電子郵件支援
 - 與合格的支援專員進行「HP 即時線上對談」。
 - 支援專線
3. 若您有關於硬體的問題，請在連絡「HP 顧客貼心服務」前，執行預先安裝在電腦的硬體診斷工具。按一下 **[開始]**、**[所有程式]**、**[PC 說明和工具]**，然後按一下 **[硬體診斷工具]**。
4. 如需線上協助，請前往「HP 顧客貼心服務」網站，網址為 <http://www.hp.com/support>。

致尊貴的客戶

恭喜您做了購買桌上型電腦的決定！在開發過程中，電腦必須通過全面的品質測試，以符合以品質及可靠度著稱的嚴格標準。

在出廠前，所有的電腦都會通過全面的品質測試，以確保電腦運作正常。此外，我們還在您的電腦上加貼安全封條，以表示電腦出廠後未受到任何的損害。

我們深知客戶最重視的權益是擴充和升級。擴充性及升級能力是我們的電腦讓人引以為傲、有別於其他產品之處。我們也了解您希望將電腦升級，以符合個人的特殊需求。

您應該在完成新電腦的安裝後，再進行任何硬體的升級。請參照系統隨附的安裝海報以協助您進行安裝。若您在安裝及啟動系統時遇到任何問題，請立刻連絡本手冊先前列出的「HP 顧客貼心服務」，HP 的客服代表會協助您解決所遭遇的問題。您必須在試圖升級您的系統前，完成此項動作。

撕開電腦背面安全封條的動作，代表您確認電腦在試圖升級前運作正常。安全封條撕開之後，您的電腦（在當地法律許可的範圍下）將會受到列於《有限保固及支援手冊》中〈硬體有限保固〉一節的條款與條件之保障。

感謝您購買這台電腦。希望您能在探索這部電腦所有功能的過程中找到樂趣！

顧客支援服務

取得容易、輕鬆使用。曾獲獎項肯定的「HP 顧客支援服務」是我們協助您充分利用電腦的承諾。無論是透過電腦上的工具、網路上的資訊、電話還是您當地的經銷商，您都可以得到滿意的結果。

有問題嗎？HP 會幫您解決

您新電腦已經準備就緒，將供您現在和未來的若干年使用。但它仍是一部複雜、功能強大的機器，有時也會發生故障。如果您的電腦發生故障，HP 會隨時提供協助。

快速入門

遵循安裝海報中關於安裝及使用電腦的說明。

瀏覽您可以進行的操作

電腦中包含許多有用的資訊。請先查看在 Windows 桌面上的 [說明]（按一下 [開始]，然後按一下 [說明及支援] 即可找到）。此功能擁有更詳細的說明，並提供解決問題的建議。

在「說明及支援中心」之中，您可以從 HP 獲得與您電腦有關的最新消息。也請您務必查看 HP 不定期傳送至您桌面的更新消息。

接下來，不妨上網逛逛！HP 網站有更新的軟體、提示和技巧、一般問題解答以及其他資訊。請到本文件之前所列的支援網站搜尋您的電腦型號。

打電話到「HP 顧客貼心服務」

最後，如果這些步驟都沒有幫助，您可以打電話到當地的「HP 顧客貼心服務」，即可獲得專業的專人服務。自購買本電腦之日起三十 (30) 天內，您可免費獲得電話諮詢協助，使您順暢地操作電腦。超過三十 (30) 天後這項服務便須收費，但您仍可獲得其他令人滿意的服務。

如果需要：進行維修

如果您的電腦需要維修或更換零件，您有兩種選擇：

- 您可以輕鬆更換許多被視為可由客戶自行更換的電腦零件。這是最快的維修方式，因為通常我們在幾天內即可將零件直接送到您的家裏或公司。
- 如果需要維修，「HP 顧客貼心服務」將會安排維修電腦的相關事宜。

在保固期內這些服務都是免費的。

這項保固服務有幾點限制和例外（以及一些重要細節），將在《有限保固及支援手冊》的〈硬體有限保固〉一節中說明。

取得紙本保固聲明

您可以在電腦的 [開始] 功能表中與/或箱中隨附的 CD/DVD 中，找到標示明顯且符合您產品的《HP 有限保固》。在某些國家/地區，包裝箱中隨附有紙本的《HP 有限保固》手冊。如果您所在的國家/地區不提供紙本的保固手冊，可前往 hp.com/go/orderdocuments 網頁索取紙本手冊，或寫信至 HP，地址為：Hewlett-Packard, MS POD, 11311 Chinden Blvd., Boise, ID 83714, U.S.A.; Hewlett Packard, POD, P.O. Box 200, Alexandra Post Office, Singapore 911507。來信請附上產品名稱、保固期、您的大名以及郵寄地址。

The power to make a change

Thank you for your purchase. HP is dedicated to producing the highest quality, best performing, and easiest to use computers in the world. HP also designed this product with the environment in mind. If this computer is a replacement for an older computer you no longer need, go to www.hp.com/go/recycle to find out if HP can help you dispose of your old computer with minimum impact on the planet.

發揮改變的力量

感謝您購買本產品。HP 致力於生產全球最高品質、最佳效能以及最容易使用的電腦。HP 同時秉持環保理念設計本產品。如果您購買此電腦是為了替換不再使用的舊電腦，請前往：www.hp.com/go/recycle 以瞭解 HP 是否能協助您處理舊電腦，將對地球的衝擊降到最少。

Printed in



5 1 7 2 1 5 - A C 5