

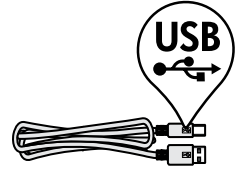


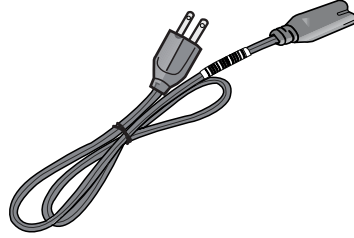

从这里开始
Start Here
Mulai Dari Sini

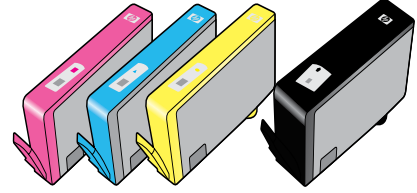

CN
EN
ID

1

1 2 3 4

撕除封胶带，取出橙色塑料墨盒容器。
Remove tape and orange restraint.
Lepas pita dan pengekang plastik oranye.

2

1 2

连接电源。
Connect power.
Hubungkan kabel daya printer.

3

按 “开/关机”按钮。
Press On button.
Tekan tombol Hidup .

4

设置语言和地区。
Set language and region.
Set bahasa dan wilayah.

5


1 2 3

撕掉保护胶带。
Remove protective cap.
Lepas kap pelindung.

转动橙色帽将其拧下。
Twist orange cap to remove it.
Putar kap oranye untuk melepasnya.


5.4

5 4

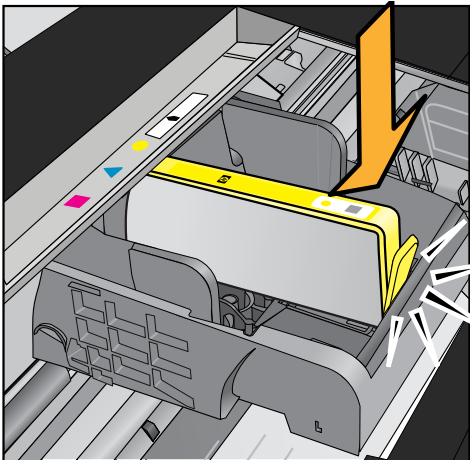


将墨盒推入托架，直到卡入到位。
Push cartridges into carriage until they snap.
Dorong kartrid ke dalam kereta sampai terkunci.

5

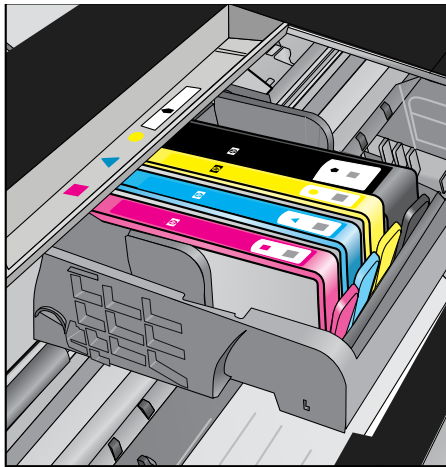


6

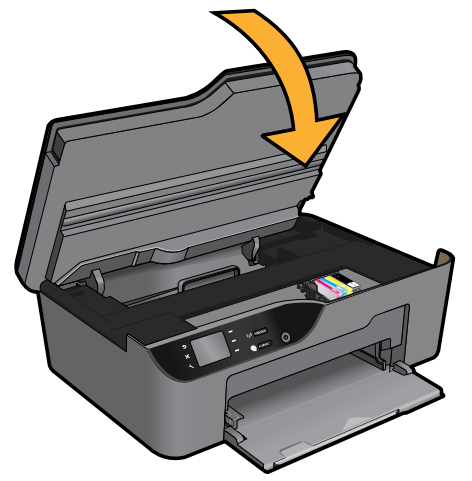


关闭墨盒门。
Close cartridge door.
Tutup pintu kartrid.

6 1

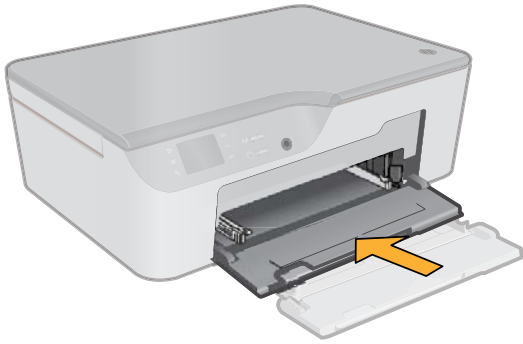


推入出纸纸盒。
Push in output tray.
Dorong masuk baki keluaran.

2

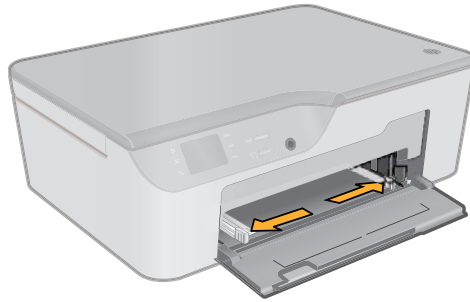


滑动导轨放入白纸。
Slide guides. Load white paper.
Geser pemandu kertas. Muatkan kertas putih.

3

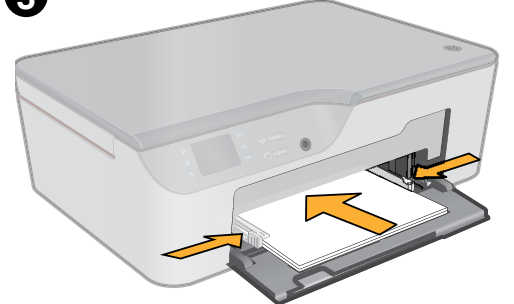


4

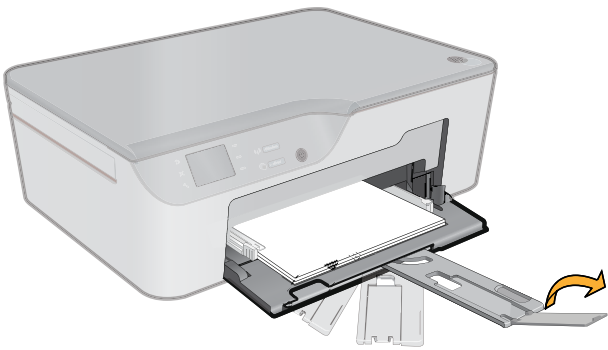

将纸盒延长板旋转方向，然后向外拉出。
Rotate, and then lift out tray extender.
Putar, kemudian angkat keluar pemanjang baki.


5

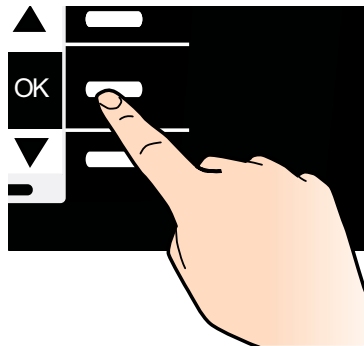

7 1




2


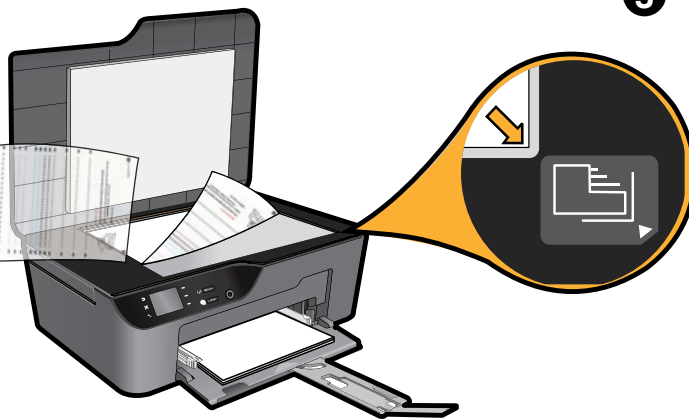


将校准页正面朝下放入。
Place alignment page face down.
Letakkan halaman penyelarasan menghadap ke bawah.

3

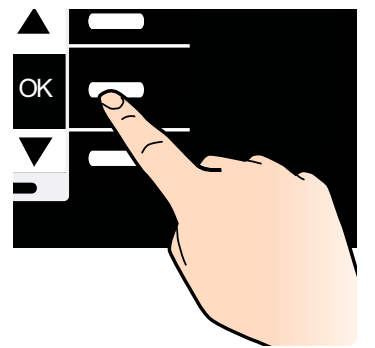

8

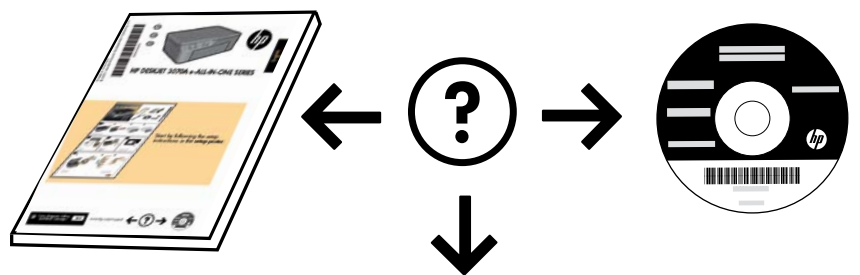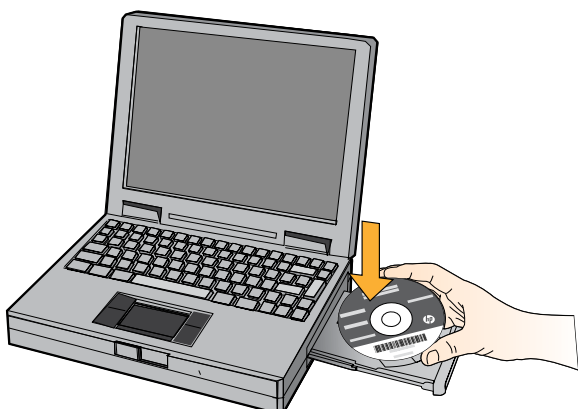

www.hp.com/support

Printed in [English]
Printed in [Simplified Chinese]

© 2010 Hewlett-Packard Development Company, L.P.