





HP 11.3" Digital Picture Frame

Quick Start Guide

What's inside the box...

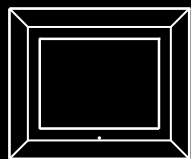


Digital Picture Frame

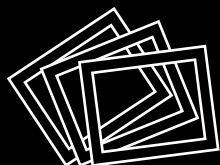

Interchangeable mats



 Remote Control



USB Cable



Power Adapter



Declaration of Conformity




Warranty Card




User Manual


Getting started

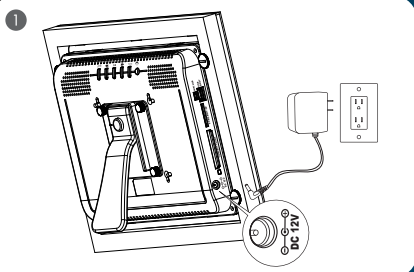


1 Connect the power adapter

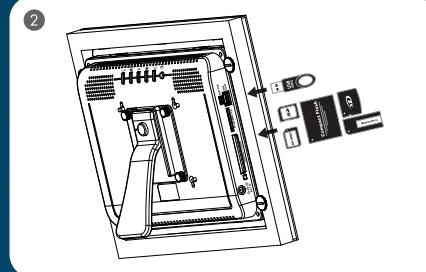

2 Insert memory card or USB storage device (external)

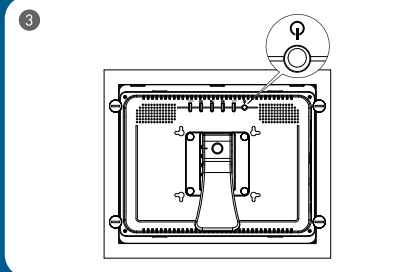


3 Push the **POWER** button

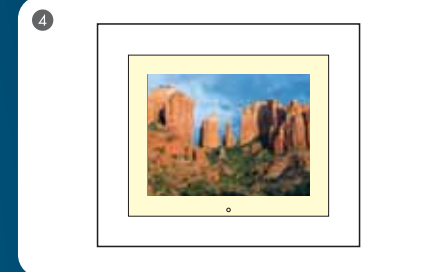


4 **Enjoy!** A slideshow of your pictures will begin in a few seconds


How to change the mat

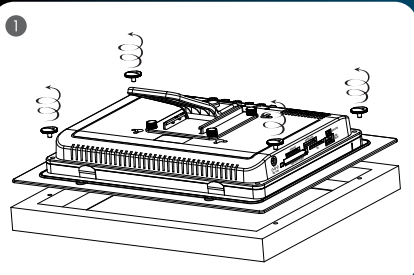


1 Place frame face down on table. Remove the four screws and lift up the digital picture frame.
Note: use caution when handling glass panel to avoid possible breakage.

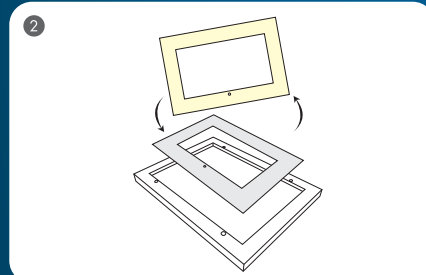

2 Replace the mat with different color mat to match your décor.

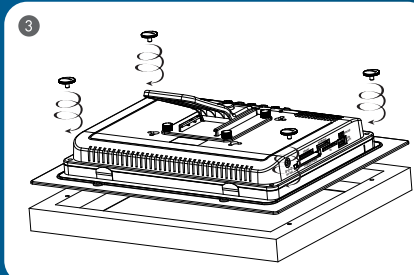

3 Put all the screws back and make sure the digital picture frame is firmly fastened.

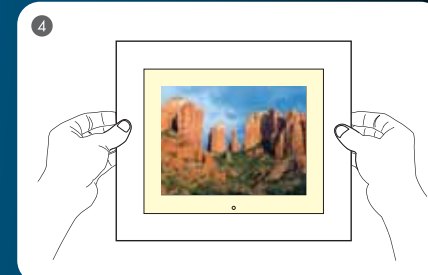

4 Enjoy the new look.