




# Quick Start Guide

## Initial Setup

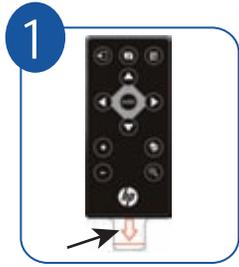

Remove



Extend




Plug in



Slideshow begins  
(from internal memory)




Insert memory card

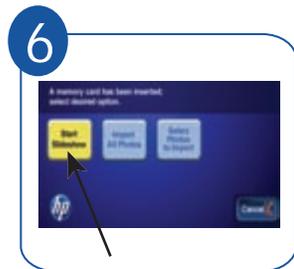

Select **Start Slideshow**



Slideshow begins  
(from memory card)

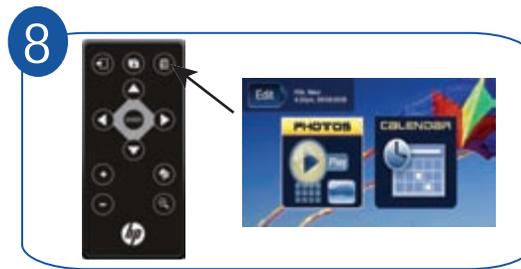


Press  to display the **HOME** screen

## Import Photos into Internal Memory



Insert memory card

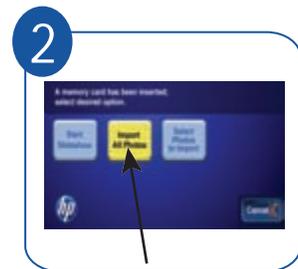

**Import All Photos** Or **Select Photos to Import**



Press  to select photos  
and then press **MENU**



Select **Import Selected**

## Delete Files from Internal Memory




Select the **PHOTOS-Manage**  
button



Press  to select photos  
and then press **MENU**



Select **Delete Selected**

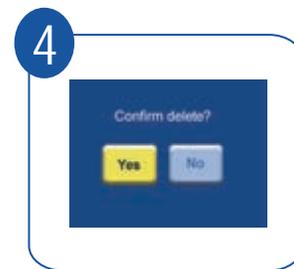

Confirm delete

## CUSTOMER SUPPORT

Call 1-800-715-5354 or visit [www.hp.com/support](http://www.hp.com/support)

*Note: Your frame style and features may vary slightly from those pictured here.*  
QSG-E\_DF730P1-DF840P1-DF940P1-DF1010P1-DF1200P1\_v1.0\_02-11