

# Getting Started

HP Notebook

© Copyright 2011 Hewlett-Packard Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Microsoft, Windows, and Windows Vista are U.S. registered trademarks of Microsoft Corporation. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Second Edition: July 2011

First Edition: May 2011

Document Part Number: 637953-002

### **Product notice**

This guide describes features that are common to most models. Some features may not be available on your computer.


### **Software terms**

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a refund subject to the refund policy of your place of purchase.

For any further information or for requesting a full refund of the computer, please contact your local point of sale (the seller).

## Safety warning notice

---

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

---



---

# Table of contents

<b>1 Welcome</b> .....	<b>1</b>
Beats Audio .....	1
Finding information .....	3
<b>2 Getting to know your computer</b> .....	<b>5</b>
Top .....	6
TouchPad .....	6
Lights .....	7
Buttons and fingerprint reader (select models only) .....	8
Keys .....	10
Front .....	11
Right .....	12
Left .....	13
Display .....	14
Bottom .....	15
<b>3 Networking</b> .....	<b>17</b>
Using an Internet service provider (ISP) .....	18
Connecting to a wireless network .....	18
Connecting to an existing WLAN .....	19
Setting up a new WLAN network .....	20
Configuring a wireless router .....	20
Protecting your WLAN .....	20
<b>4 HP QuickWeb</b> .....	<b>21</b>
Getting started .....	21
Starting HP QuickWeb .....	21
<b>5 Keyboard and pointing devices</b> .....	<b>23</b>
Using the keyboard .....	24
Identifying the hotkeys .....	24

Using keypads .....	25
Using the embedded numeric keypad .....	26
Turning the embedded numeric keypad on and off .....	27
Switching key functions on the embedded numeric keypad .....	27
Using pointing devices .....	27
Setting pointing device preferences .....	27
Using the TouchPad .....	27
Turning the TouchPad off and on .....	28
Navigating .....	29
Selecting .....	29
Using TouchPad gestures .....	30
Scrolling .....	31
Pinching/Zooming .....	31
<b>6 Maintenance .....</b>	<b>33</b>
Inserting or removing the battery .....	33
Replacing or upgrading the hard drive .....	37
Removing the hard drive .....	37
Installing a hard drive .....	38
Adding or replacing memory modules .....	40
Updating programs and drivers .....	42
Using SoftPaq Download Manager .....	43
Cleaning your computer .....	44
Cleaning products .....	44
Cleaning procedures .....	44
Cleaning the display .....	44
Cleaning the sides and cover .....	44
Cleaning the TouchPad and keyboard .....	45
<b>7 Backup and recovery .....</b>	<b>46</b>
Windows 7 .....	46
Backing up your information .....	46
Performing a system recovery .....	47
Using the Windows recovery tools .....	48
Using f11 recovery tools .....	48
Using a Windows 7 operating system DVD (purchased separately) .....	49
Windows Vista .....	50
Backing up your information .....	50
Performing a recovery .....	51
Using the Windows recovery tools .....	51
Using f11 recovery tools .....	52

Using a Windows Vista operating system DVD (purchased separately) .....	52
<b>8 Customer support .....</b>	<b>54</b>
Contacting customer support .....	54
Labels .....	55
<b>9 Specifications .....</b>	<b>56</b>
Input power .....	57
Operating environment .....	58
<b>Index .....</b>	<b>59</b>





---

# 1 Welcome

- [Beats Audio](#)
- [Finding information](#)

 
After you set up and register the computer, it is important to take the following steps:

- **Set up HP QuickWeb**—Immediately access the Internet, widgets, e-mail, and communication programs without launching your main operating system. For more information, refer to [HP QuickWeb on page 21](#).
- **Connect to the Internet**—Set up your wired or wireless network so that you can connect to the Internet. For more information, refer to [Networking on page 17](#).
- **Update your antivirus software**—Protect your computer from damage caused by viruses. The software is preinstalled on the computer and includes a limited subscription for free updates. For more information, refer to the *HP Notebook Reference Guide*. For instructions on accessing this guide, refer to [Finding information on page 3](#).
- **Get to know your computer**—Learn about your computer features. Refer to [Getting to know your computer on page 5](#) and [Keyboard and pointing devices on page 23](#) for additional information.
- **Find installed software**—Access a list of the software preinstalled on the computer. Select **Start > All Programs**. For details about using the software included with the computer, refer to the software manufacturer's instructions, which may be provided with the software or on the manufacturer's Web site.


## Beats Audio

Beats Audio is an enhanced audio profile that provides a deep, controlled bass while maintaining a clear sound. Beats Audio is enabled by default.

- ▲ To increase or decrease the Beats Audio bass settings, press the **fn** key (1) and the **b** key (2).

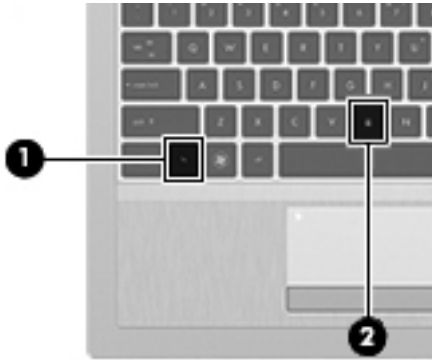

---

 **NOTE:** You can also view and control the bass settings through your Windows operating system. Select **Start > Control Panel > Hardware and Sound > Beats Audio > Listening Experience** to view and control the bass properties.

---

# Finding information

The computer comes with several resources to help you perform various tasks.

Resources	For information about
<i>Setup Instructions</i> poster	<ul style="list-style-type: none"><li>• How to set up the computer</li><li>• Help to identify computer components</li></ul>
<i>Getting Started</i> To access this guide: Select <b>Start &gt; Help and Support &gt; User Guides</b> . – or – Select <b>Start &gt; All Programs &gt; HP &gt; HP Documentation</b> .	<ul style="list-style-type: none"><li>• Computer features</li><li>• How to connect to a wireless network specifications</li><li>• How to use the keyboard and pointing devices</li><li>• How to replace or upgrade the hard drive and memory modules</li><li>• How to perform a backup and recovery</li><li>• How to contact customer support</li><li>• Computer specifications</li></ul>
<i>HP Notebook Reference Guide</i> To access this guide: Select <b>Start &gt; Help and Support &gt; User Guides</b> . – or – Select <b>Start &gt; All Programs &gt; HP &gt; HP Documentation</b> .	<ul style="list-style-type: none"><li>• Power management features</li><li>• How to maximize battery life</li><li>• How to use the multimedia features of the computer</li><li>• How to protect the computer</li><li>• How to care for the computer</li><li>• How to update the software</li></ul>
Help and Support To access Help and Support, select <b>Start &gt; Help and Support</b> . <b>NOTE:</b> For country- or region-specific support, go to <a href="http://www.hp.com/support">http://www.hp.com/support</a> , select your country or region, and follow the on-screen instructions.	<ul style="list-style-type: none"><li>• Operating system information</li><li>• Software, driver, and BIOS updates</li><li>• Troubleshooting tools</li><li>• How to access technical support</li></ul>
<i>Regulatory, Safety, and Environmental Notices</i> To access this guide: Select <b>Start &gt; Help and Support &gt; User Guides</b> . – or – Select <b>Start &gt; All Programs &gt; HP &gt; HP Documentation</b> .	<ul style="list-style-type: none"><li>• Regulatory and safety information</li><li>• Battery disposal information</li></ul>

Resources	For information about
<p><i>Safety &amp; Comfort Guide</i></p> <p>To access this guide:</p> <p>Select <b>Start &gt; Help and Support &gt; User Guides</b>.</p> <p>– or –</p> <p>Select <b>Start &gt; All Programs &gt; HP &gt; HP Documentation</b>.</p> <p>– or –</p> <p>Go to <a href="http://www.hp.com/ergo">http://www.hp.com/ergo</a>.</p>	<ul style="list-style-type: none"> <li>• Proper workstation setup, posture, health, and work habits</li> <li>• Electrical and mechanical safety information</li> </ul>
<p><i>Worldwide Telephone Numbers</i> booklet</p> <p>This booklet is provided with your computer.</p>	<p>HP support telephone numbers</p>
<p>HP Web site</p> <p>To access this Web site, go to <a href="http://www.hp.com/support">http://www.hp.com/support</a>.</p>	<ul style="list-style-type: none"> <li>• Support information</li> <li>• Ordering parts and finding additional help</li> <li>• Accessories available for the device</li> </ul>
<p><i>Limited Warranty*</i></p> <p>To access the warranty:</p> <p>Select <b>Start &gt; Help and Support &gt; User Guides &gt; View Warranty Information</b>.</p> <p>– or –</p> <p>Select <b>Start &gt; All Programs &gt; HP &gt; HP Documentation &gt; View Warranty Information</b>.</p> <p>– or –</p> <p>Go to <a href="http://www.hp.com/go/orderdocuments">http://www.hp.com/go/orderdocuments</a>.</p>	<p>Warranty information</p>
<p>*You can find the expressly provided HP Limited Warranty applicable to your product located with the electronic guides on your computer and/or on the CD/DVD provided in the box. In some countries/regions, HP may provide a printed HP Limited Warranty in the box. For some countries/regions where the warranty is not provided in printed format, you may request a printed copy at <a href="http://www.hp.com/go/orderdocuments">http://www.hp.com/go/orderdocuments</a> or write to:</p>	
<ul style="list-style-type: none"> <li>• <b>North America:</b> Hewlett-Packard, MS POD, 11311 Chinden Blvd, Boise, ID 83714, USA</li> <li>• <b>Europe, Middle East, Africa:</b> Hewlett-Packard, POD, Via G. Di Vittorio, 9, 20063, Cernusco s/Naviglio (MI), Italy</li> <li>• <b>Asia Pacific:</b> Hewlett-Packard, POD, P.O. Box 200, Alexandra Post Office, Singapore 911507</li> </ul>	
<p>Please include your product number, warranty period (found on your serial number label), name, and postal address.</p>	

 
---

## 2 Getting to know your computer

- [Top](#)
- [Front](#)
- [Right](#)
- [Left](#)
- [Display](#)
- [Bottom](#)


# Top



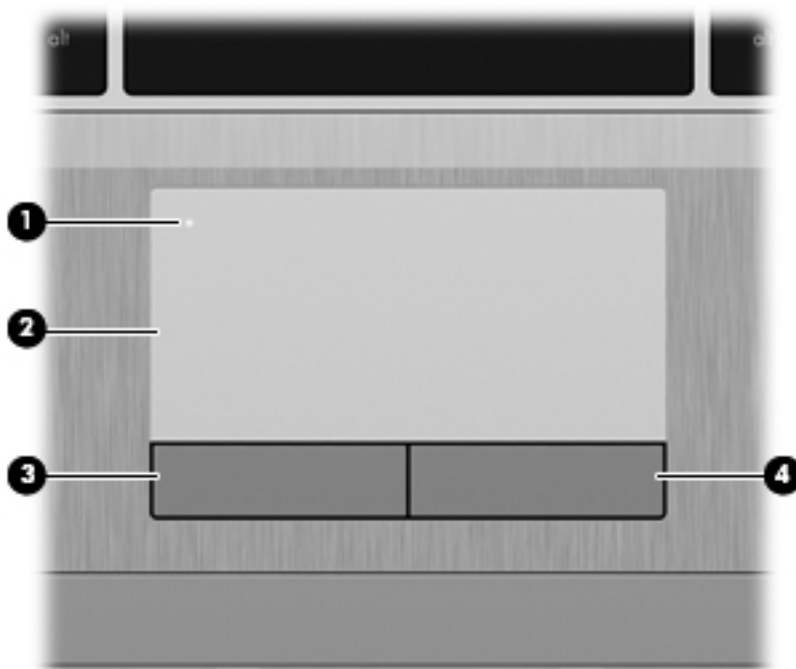

## TouchPad

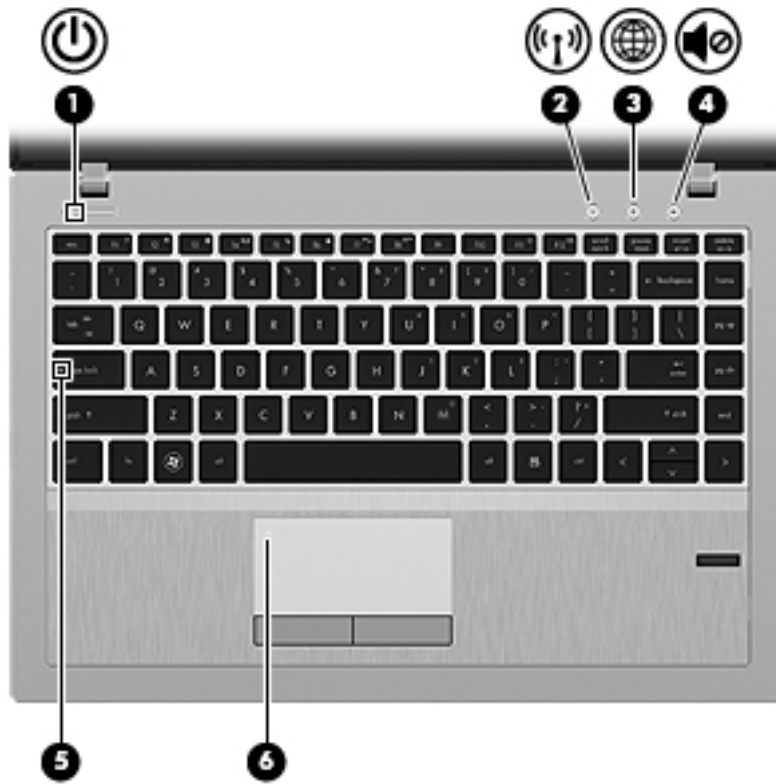 

Component	Description
(1) TouchPad on/off button	Turns the TouchPad on and off.
(2) TouchPad	Moves the pointer and selects or activates items on the screen.
(3) Left TouchPad button	Functions like the left button on an external mouse.
(4) Right TouchPad button	Functions like the right button on an external mouse.


 
## Lights





Component	Description
(1)  Power light	<ul style="list-style-type: none"> <li>On: The computer is on.</li> <li>Blinking: The computer is in the Sleep state.</li> <li>Off: The computer is off or in Hibernation.</li> </ul>
(2)  Wireless light	<ul style="list-style-type: none"> <li>White: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is on.</li> <li>Amber: All wireless devices are off.</li> </ul>
(3)  QuickWeb light	<ul style="list-style-type: none"> <li>On: The computer is on.</li> <li>Off: The computer is off or in Hibernation.</li> </ul> <p><b>NOTE:</b> For more information, refer to <a href="#">HP QuickWeb on page 21</a> in this guide and to the HP QuickWeb software Help.</p>
(4)  Mute light	<ul style="list-style-type: none"> <li>Amber: Computer sound is off.</li> <li>Off: Computer sound is on.</li> </ul>
(5) Caps lock light	On: Caps lock is on.
(6) TouchPad light	<ul style="list-style-type: none"> <li>Amber: The TouchPad is off.</li> <li>Off: The TouchPad is on.</li> </ul>

## Buttons and fingerprint reader (select models only)

 




Component	Description
(1)  Power button	<ul style="list-style-type: none"> <li>• When the computer is off, press the button to turn on the computer.</li> <li>• When the computer is on, press the button briefly to initiate Sleep.</li> <li>• When the computer is in the Sleep state, press the button briefly to exit Sleep.</li> <li>• When the computer is in Hibernation, press the button briefly to exit Hibernation.</li> </ul> <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings:</p> <ul style="list-style-type: none"> <li>• <b>Windows 7</b>—Select <b>Start &gt; Control Panel &gt; System and Security &gt; Power Options</b>.</li> <li>– or –</li> <li>• <b>Windows Vista</b>—Select <b>Start &gt; Control Panel &gt; System and Maintenance &gt; Power Options</b>.</li> <li>• Refer to the <i>HP Notebook Reference Guide</i>.</li> </ul>
(2)  Wireless button	<p>Turns the wireless feature on or off but does not establish a wireless connection.</p>



Component	Description
(3)  QuickWeb button	<ul style="list-style-type: none"><li>• When the computer is off or in Hibernation, press the button to open HP QuickWeb.</li><li>• When the computer is in Microsoft Windows, press the button to open the default Web browser.</li><li>• When the computer is in HP QuickWeb, press the button to open the default Web browser.</li></ul> <p><b>NOTE:</b> For more information, refer to <a href="#">HP QuickWeb on page 21</a> in this guide and to the HP QuickWeb software Help. If your computer does not have HP QuickWeb software, the button does not perform any action or function.</p>
(4)  Volume mute button	Mutes and restores speaker sound.
(5) Fingerprint reader (select models only)	Allows a fingerprint logon to Windows, instead of a password logon.

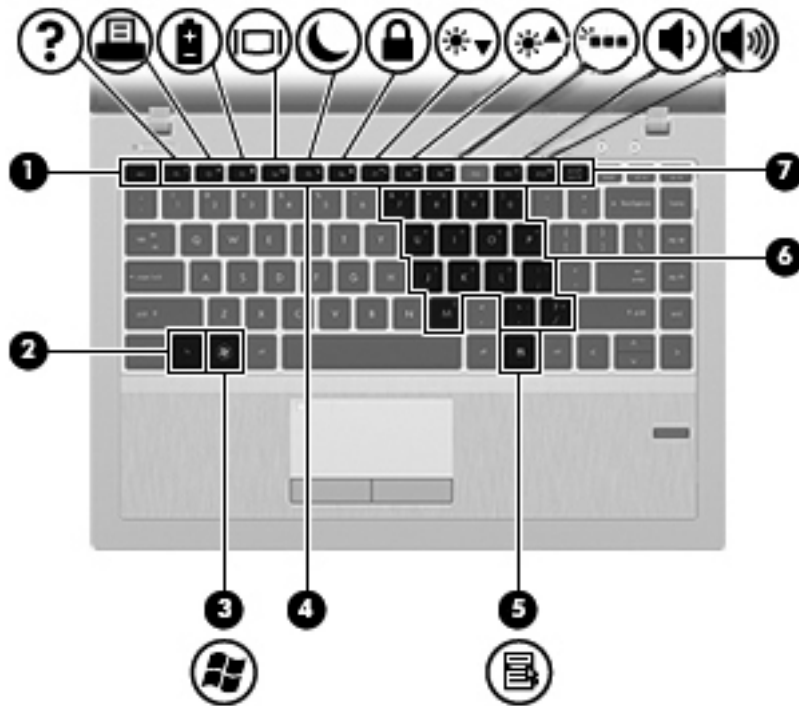

## Keys



 
Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes frequently used system functions when pressed in combination with a function key, the <code>num lk</code> key, or the <code>esc</code> key.
(3)  Windows logo key	Displays the Windows Start menu.
(4) Function keys	Execute frequently used system functions when pressed in combination with the <code>fn</code> key.
(5)  Windows applications key	Displays a shortcut menu for items beneath the pointer.
(6) Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad when pressed in combination with the <code>fn</code> and <code>num lk</code> keys.
(7) <code>num lk</code> key	Turns the embedded numeric keypad on and off when pressed in combination with the <code>fn</code> key.







# Front

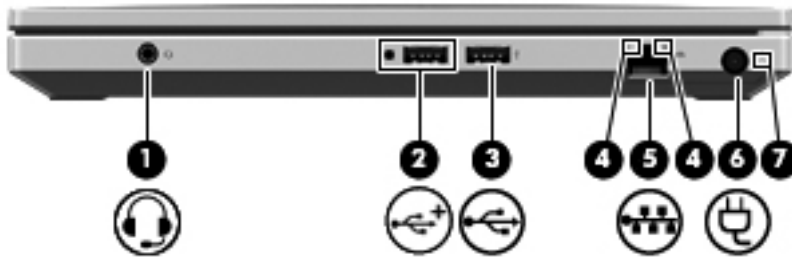


Component	Description
(1)  Power light	<ul style="list-style-type: none"><li>• On: The computer is on.</li><li>• Blinking: The computer is in the Sleep state.</li><li>• Off: The computer is off or in Hibernation.</li></ul>
(2)  Hard drive light	<ul style="list-style-type: none"><li>• Blinking white: The hard drive is being accessed.</li><li>• Amber: HP 3D DriveGuard has temporarily parked the hard drive.</li></ul>
(3) Speakers (2)	Produce sound.





# Right

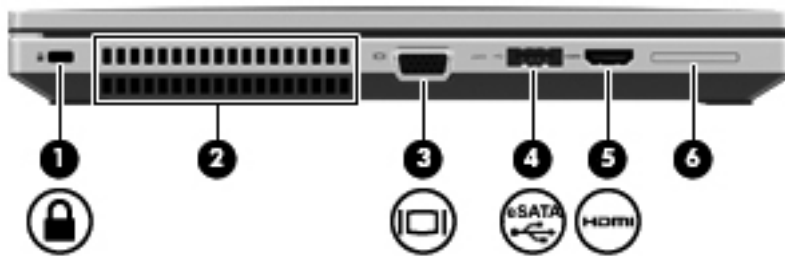 


Component	Description
<p>(1)  Audio-out (headphone) jack/Audio-in (microphone) jack</p>	<p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or television audio. Also connects an optional headset microphone.</p> <p><b>WARNING!</b> To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i>.</p> <p><b>NOTE:</b> When a device is connected to the jack, the computer speakers are disabled.</p> <p><b>NOTE:</b> Be sure that the device cable has a 4-conductor connector that supports both audio-out (headphone) and audio-in (microphone).</p>
<p>(2)  USB charging port</p>	<p>Connects optional USB devices. The USB charging port can also charge select models of cell phones and MP3 players, even when the computer is off.</p>
<p>(3)  USB port</p>	<p>Connects optional USB devices.</p>
<p>(4)  RJ-45 (network) lights (2)</p>	<ul style="list-style-type: none"> <li>Green (left): The network is connected.</li> <li>Amber (right): The network is showing activity.</li> </ul>
<p>(5)  RJ-45 (network) jack</p>	<p>Connects a network cable.</p>
<p>(6)  Power connector</p>	<p>Connects an AC adapter.</p>
<p>(7) Battery light</p>	<ul style="list-style-type: none"> <li>Amber: The computer is connected to external power and the battery is charged from 0 to 90 percent.</li> <li>White: The computer is connected to external power and the battery is charged from 90 to 99 percent.</li> <li>Blinking amber: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly.</li> <li>Off: The battery is fully charged.</li> </ul>

## Left



 Component	Description
(1)  Security cable slot	Attaches an optional security cable to the computer. <b>NOTE:</b> The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.
(2) Vent	Enables airflow to cool internal components. <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(3)  External monitor port	Connects an external VGA monitor or projector.
(4)  eSATA/USB port	Connects a high-performance eSATA component, such as an eSATA external hard drive, or connects an optional USB device.
(5)  HDMI port	Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio component.
(6) Media Card Reader	Supports the following digital card formats: <ul style="list-style-type: none"><li>• MultiMediaCard</li><li>• Secure Digital (SD) Memory Card</li></ul>


# Display

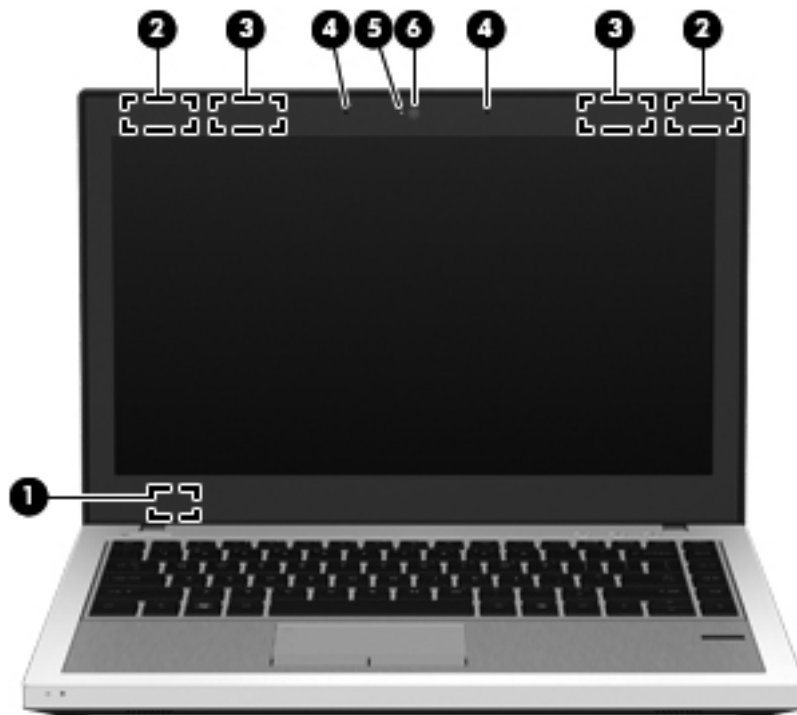



Component	Description
(1) Internal display switch	Turns off the display or initiates Sleep if the display is closed while the power is on.  <b>NOTE:</b> The display switch is not visible from the outside of the computer.
(2) WLAN antennas (2)*	Send and receive wireless signals to communicate with wireless local area networks (WLAN).
(3) WWAN antennas (2)*	Send and receive wireless signals to communicate with wireless wide-area networks (WWAN).
(4) Internal microphones (2)	Record sound.
(5) Webcam light	On: The webcam is in use.
(6) Webcam	Records video and captures still photographs.  To use the webcam, select <b>Start &gt; All Programs &gt; HP &gt; HP Webcam</b> .

 
\*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. To see wireless regulatory notices, refer to the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.
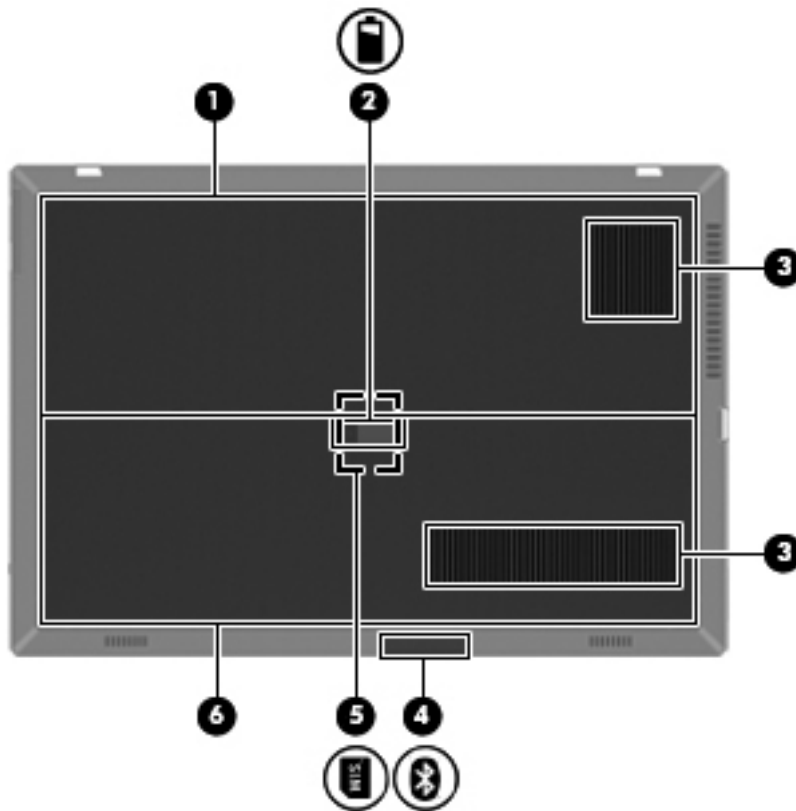
# Bottom



Component	Description
(1)	Battery bay Holds the battery.
(2) 	Battery cover release latch Releases the battery cover over the battery bay.
(3)	Vents (2) Enable airflow to cool internal components.  <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4) 	Bluetooth compartment Contains a Bluetooth device.

---

Component	Description
(5)  SIM slot	Supports a wireless subscriber identity module (SIM). The SIM slot is located inside the battery bay.
(6) Hard drive bay	Holds the hard drive, and also contains the wireless LAN module slot, the WWAN module slot, and the memory module slots.  <b>CAUTION:</b> To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.

---



---

## 3 Networking

- [Using an Internet service provider \(ISP\)](#)
- [Connecting to a wireless network](#)



---

**NOTE:** Internet hardware and software features vary depending on computer model and your location.

---


Your computer may support one or both of the following types of Internet access:

- **Wireless**—For mobile Internet access, you can use a wireless connection. Refer to [Connecting to an existing WLAN on page 19](#) or [Setting up a new WLAN network on page 20](#).
- **Wired**—You can access the Internet by connecting to a wired network. For information on connecting to a wired network, refer to the *HP Notebook Reference Guide*.

## Using an Internet service provider (ISP)

Before you can connect to the Internet, you must establish an ISP account. Contact a local ISP to purchase Internet service and a modem. The ISP will help set up the modem, install a network cable to connect your wireless computer to the modem, and test the Internet service.

---

 **NOTE:** Your ISP will give you a user ID and password to access the Internet. Record this information and store it in a safe place.


---

The following features will help you set up a new Internet account or configure the computer to use an existing account:

- **Internet Services & Offers (available in some locations)**—This utility assists with signing up for a new Internet account and configuring the computer to use an existing account. To access this utility, select **Start > All Programs > Online Services > Get Online**.
- **ISP-provided icons (available in some locations)**—These icons may be displayed either individually on the Windows desktop or grouped in a desktop folder named Online Services. To set up a new Internet account or configure the computer to use an existing account, double-click an icon, and then follow the on-screen instructions.
- **Windows Connect to the Internet Wizard**—You can use the Windows Connect to the Internet Wizard to connect to the Internet in any of these situations:
  - You already have an account with an ISP.
  - You do not have an Internet account and want to select an ISP from the list provided within the wizard. (The list of ISP providers is not available in all regions.)
  - You have selected an unlisted ISP, and the ISP has provided you with information such as a specific IP address and POP3 and SMTP settings.

To access the Windows Connect to the Internet Wizard and instructions for using it, select **Start > Control Panel > Network and Internet > Network and Sharing Center**.

---

 **NOTE:** If you are prompted within the wizard to choose between enabling or disabling Windows Firewall, choose to enable the firewall.

---

## Connecting to a wireless network

Wireless technology transfers data across radio waves instead of wires. Your computer may be equipped with one or more of the following wireless devices:

- Wireless local area network (WLAN) device
- HP Mobile Broadband Module, a wireless wide area network (WWAN) device
- Bluetooth device


For more information on wireless technology and connecting to a wireless network, refer to the *HP Notebook Reference Guide* and information and Web site links provided in Help and Support.


## Connecting to an existing WLAN

### Windows 7

1. Turn on the computer.
2. Be sure that the WLAN device is on.
3. Click the network icon in the notification area, at the far right of the taskbar.
4. Select a network to connect to.
5. Click **Connect**.
6. If the network is a security-enabled WLAN, you are prompted to enter a network security code. Type the code, and then click **OK** to complete the connection.

---

 **NOTE:** If no WLANs are listed, you may be out of range of a wireless router or access point.


 **NOTE:** If you do not see the WLAN you want to connect to, click **Open Network and Sharing Center**, and then click **Set up a new connection or network**. A list of options is displayed. You can choose to manually search for and connect to a network or to create a new network connection.


---

### Windows Vista


1. Turn on the computer.
2. Be sure that the WLAN device is on.
3. Select **Start > Connect to**.
4. Select your WLAN from the list.
  - If the network is unsecured, a warning is displayed. Click **Connect Anyway** to accept the warning and complete the connection.
  - If the network is a security-enabled WLAN, you are prompted to enter a network security code. Type the code, and then click **Connect** to complete the connection.

---

 **NOTE:** If no WLANs are listed, you may be out of range of a wireless router or access point.

 **NOTE:** If you do not see the WLAN you want to connect to, click **Show all connections**. A list of available networks is displayed. You can choose to connect to an existing network or you can create a new network connection.

After the connection is made, you can place the mouse pointer over the network icon in the notification area, at the far right of the taskbar, to verify the name and status of the connection.


 **NOTE:** The functional range (how far your wireless signals travel) depends on WLAN implementation, router manufacturer, and interference from other electronic devices or structural barriers such as walls and floors.

---

## Setting up a new WLAN network

Required equipment:

- A broadband modem (either DSL or cable) **(1)** and high-speed Internet service purchased from an Internet service provider (ISP)
- A wireless router (purchased separately) **(2)**
- Your new wireless computer **(3)**

 **NOTE:** Some modems have a built-in wireless router. Check with your ISP to determine what type of modem you have.

The illustration shows an example of a completed WLAN network installation that is connected to the Internet. As your network grows, additional wireless and wired computers can be connected to the network to access the Internet.




## Configuring a wireless router

For help in setting up a WLAN, refer to the information provided by your router manufacturer or your ISP.

The Windows operating system also provides tools to help you set up a new wireless network. To use the Windows tools to set up your network:

- **Windows 7**—Select **Start > Control Panel > Network and Internet > Network and Sharing Center > Set up a new connection or network > Set up a network**. Then follow the on-screen instructions.
- **Windows Vista**—Select **Start > Control Panel > Network and Internet > Network and Sharing Center > Set up a connection or network > Set up a wireless router or access point**. Then follow the on-screen instructions.

 **NOTE:** It is recommended that you initially connect your new wireless computer to the router by using the network cable provided with the router. When the computer successfully connects to the Internet, you can disconnect the cable, and then access the Internet through your wireless network.

## Protecting your WLAN

When you set up a WLAN or access an existing WLAN, always turn on security features to protect your network from unauthorized access.

For information on protecting your WLAN, refer to the *HP Notebook Reference Guide*.

---

# 4 HP QuickWeb

## Getting started

The HP QuickWeb environment provides a fun and engaging way to perform many of your favorite activities. Your computer is ready to go within seconds of starting QuickWeb, allowing you to rapidly access the Internet, widgets, and communication programs. Simply press the QuickWeb button on your computer, and then start browsing the Internet, communicating with Skype, and exploring other HP QuickWeb programs.

Your HP QuickWeb Home screen includes the following features:

- Web browser—Search and browse the Internet, and create links to your favorite Web sites.
- Skype—Communicate using Skype, an application that uses voice over Internet protocol (VoIP). Skype lets you make conference calls or have video chats with one or more people at a time. You can also make long-distance phone calls to land lines.
- QuickWeb E-Mail—Read and send e-mail by connecting to Web-based e-mail providers or to your own mail server.
- Widgets—Start using widgets for news, weather, social networking, stocks, a calculator, sticky notes, and more. You can also use Widget Manager to add more widgets to the HP QuickWeb Home screen.



---

**NOTE:** For additional information about using HP QuickWeb, refer to the HP QuickWeb software Help.

---

## Starting HP QuickWeb

- ▲ To start HP QuickWeb, press the QuickWeb button when the computer is off or in Hibernation.

The following table explains the different behaviors of the QuickWeb button.

---

Button	Behavior
QuickWeb button	<ul style="list-style-type: none"><li data-bbox="858 226 1433 279">• When the computer is off or in Hibernation, opens HP QuickWeb.</li><li data-bbox="858 304 1433 357">• When the computer is in Microsoft Windows, opens the default Web browser.</li><li data-bbox="858 382 1433 434">• When the computer is in HP QuickWeb, opens the default Web browser.</li></ul> <p data-bbox="906 459 1433 533"><b>NOTE:</b> If your computer does not have HP QuickWeb software, the button does not perform any action or function.</p>

---



**NOTE:** For more information, refer to the HP QuickWeb software Help.

---

---

 
# 5 Keyboard and pointing devices

- [Using the keyboard](#)
- [Using pointing devices](#)

# Using the keyboard



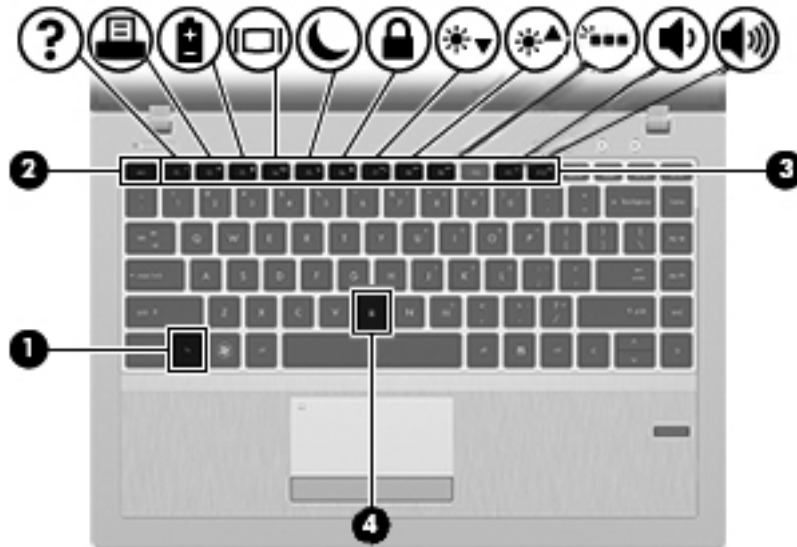

## Identifying the hotkeys

A hotkey is a combination of the **fn** key (1) and either the **esc** key (2), one of the function keys (3), or the **b** key (4).










To use a hotkey:

- ▲ Briefly press the **fn** key, and then briefly press the second key of the hotkey combination.

Hotkey combination	Description
<b>fn+esc</b>	Displays system information.
 <b>fn+f1</b>	Opens Help and Support. Help and Support provides tutorials, answers to questions, and product updates.
 <b>fn+f2</b>	Opens the Print Options window of the active Windows program.
 <b>fn+f3</b>	Displays charge information for all installed batteries. The display indicates which batteries are charging and reports the amount of charge remaining in each battery.
 <b>fn+f4</b>	Switches the screen image among display devices connected to the system. For example, if a monitor is connected to the computer, <b>fn+f4</b> alternates the screen image from computer display to monitor display to simultaneous display on both the computer and the monitor.  Most external monitors receive video information from the computer using the external VGA video standard. The <b>fn+f4</b> hotkey can also alternate images among other devices that are receiving video information from the computer.

 


Hotkey combination	Description
 <a href="#">fn+f5</a>	<p>Initiates Sleep, which saves your information in system memory. The display and other system components turn off and power is conserved.</p> <p>To exit Sleep, briefly press the power button.</p> <p><b>CAUTION:</b> To reduce the risk of information loss, save your work before initiating Sleep.</p> <p><b>NOTE:</b> If a critical battery level occurs while the computer is in the Sleep state, the computer initiates Hibernation and the information stored in system memory is saved to the hard drive.</p> <p>The function of the <a href="#">fn+f5</a> hotkey can be changed. For example, you can set the <a href="#">fn+f5</a> hotkey to initiate Hibernation instead of Sleep. In all Windows operating system windows, references to the <i>sleep button</i> apply to the <a href="#">fn+f5</a> hotkey.</p>
 <a href="#">fn+f6</a>	<p>Initiates the QuickLock security feature. QuickLock protects your information by displaying the operating system Log On window. While the Log On window is displayed, the computer cannot be accessed until a Windows user password or a Windows administrator password is entered.</p> <p><b>NOTE:</b> Before you can use QuickLock, you must set a Windows user password or a Windows administrator password. For instructions, refer to Help and Support.</p>
 <a href="#">fn+f7</a>	Decreases the screen brightness level.
 <a href="#">fn+f8</a>	Increases the screen brightness level.
 <a href="#">fn+f9</a>	<p>Turns the keyboard backlight on and off.</p> <p><b>NOTE:</b> The keyboard backlight is turned on at the factory. To extend battery life, turn off the keyboard backlight.</p>
 <a href="#">fn+f11</a>	Decreases speaker volume.
 <a href="#">fn+f12</a>	Increases speaker volume.
<a href="#">fn+b</a>	<p>Increases or decreases the Beats Audio bass settings.</p> <p>Beats Audio is an enhanced audio profile that provides a deep, controlled bass while maintaining a clear sound. Beats Audio is enabled by default.</p> <p>You can also view and control the bass settings through the Windows operating system. Select <b>Start &gt; Control Panel &gt; Hardware and Sound &gt; Beats Audio &gt; Listening Experience</b> to view and control the bass properties.</p>

## Using keypads

The computer includes an embedded numeric keypad. The computer also supports an optional external numeric keypad or an optional external keyboard that includes a numeric keypad.

## Using the embedded numeric keypad

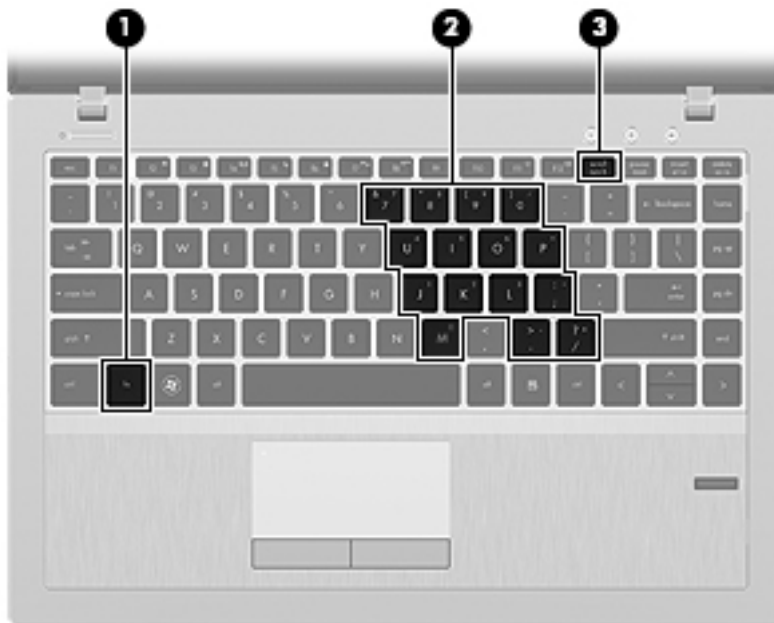

Component	Description
(1) <code>fn</code> key	Turns the embedded numeric keypad on and off when pressed in combination with the <code>num lk</code> key.
(2) Embedded numeric keypad	When the keypad is turned on, it can be used like an external numeric keypad.  Each key on the keypad performs the function indicated by the icon in the upper-right corner of the key.
(3) <code>num lk</code> key	Turns the embedded numeric keypad on and off when pressed in combination with the <code>fn</code> key.

**NOTE:** The keypad function that is active when the computer is turned off is reinstated when the computer is turned back on.

## Turning the embedded numeric keypad on and off

Press **fn+num lk** to turn on the embedded numeric keypad. Press **fn+num lk** again to turn off the keypad.



**NOTE:** The embedded numeric keypad is turned off while an external keyboard or numeric keypad is connected to the computer.

## Switching key functions on the embedded numeric keypad

You can temporarily alternate the functions of keys on the embedded numeric keypad between their standard keyboard functions and their keypad functions:

- To use the numeric function of a keypad key while the keypad is off, press and hold the **fn** key while pressing the keypad key.
- To use the standard function of a keypad key while the keypad is on:
  - Press and hold the **fn** key to type in lowercase.
  - Press and hold **fn+shift** to type in uppercase.

## Using pointing devices



**NOTE:** In addition to the pointing devices included with your computer, you can use an external USB mouse (purchased separately) by connecting it to one of the USB ports on the computer.

## Setting pointing device preferences

Use Mouse Properties in Windows to customize settings for pointing devices, such as button configuration, click speed, and pointer options.

To access Mouse Properties:

- **Windows 7**—Select **Start > Devices and Printers**. Then right-click the device representing your computer, and select **Mouse settings**.
- **Windows Vista**—Select **Start > Control Panel > Hardware and Sound > Mouse**.



## Using the TouchPad

 
To move the pointer, slide one finger across the TouchPad in the direction you want the pointer to go. Use the left and right TouchPad buttons like the buttons on an external mouse.

## Turning the TouchPad off and on

To turn the TouchPad off and on, quickly double-tap the TouchPad on/off button.


The following table shows and describes the TouchPad display icons.

TouchPad light	Item	Description
Amber		Indicates that the TouchPad is off.
Off		Indicates that the TouchPad is on.

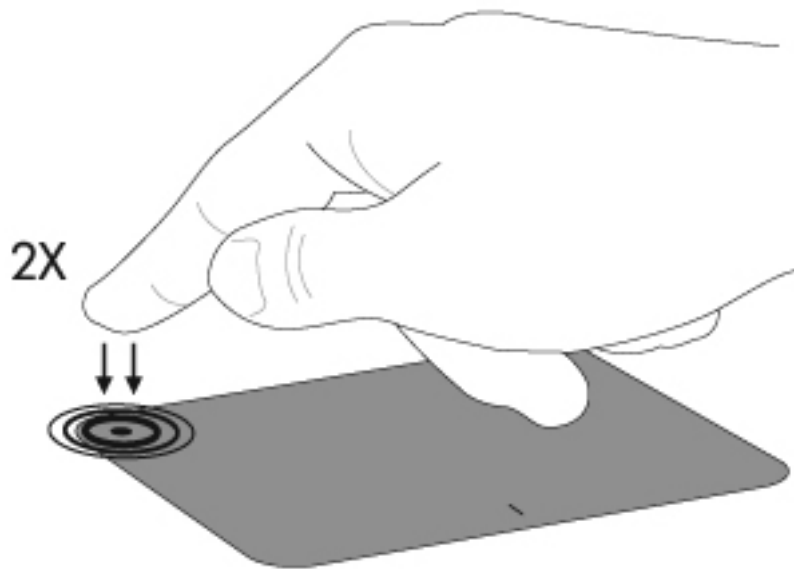


## Navigating

 To move the pointer, slide one finger across the TouchPad in the direction you want the pointer to go.

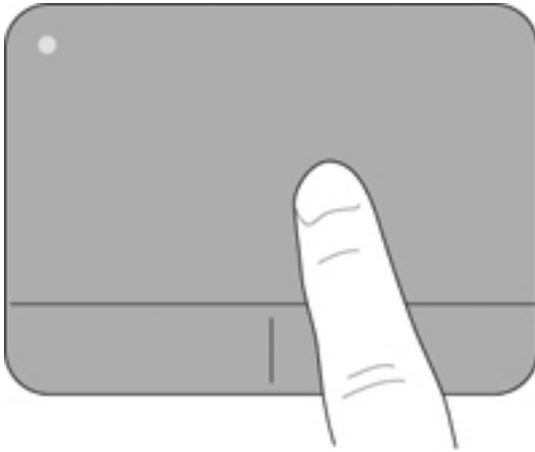

## Selecting

 Use the left and right TouchPad buttons like the corresponding buttons on an external mouse.

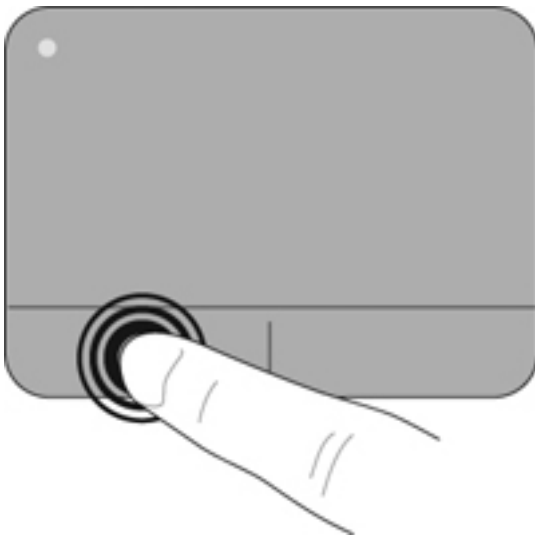

## Using TouchPad gestures

The TouchPad supports a variety of gestures. To use TouchPad gestures, place two fingers on the TouchPad at the same time.




---


**NOTE:** TouchPad gestures are not supported in all programs.

---

To view the demonstration of a gesture:


1. Click the **Show hidden icons** icon in the notification area, at the far right of the taskbar.
2. Click the Synaptics Pointing Device icon , and then click **Pointing Device Properties**.
3. Click the **Device Settings** tab, select the device in the window that is displayed, and then click **Settings**.
4. Select the check box next to a gesture to activate the demonstration.

To turn the gestures on and off:

 
1. Click the **Show hidden icons** icon in the notification area, at the far right of the taskbar.
2. Click the Synaptics Pointing Device icon , and then click **Pointing Device Properties**.
3. Click the **Device Settings** tab, select the device in the window that is displayed, and then click **Settings**.
4. Select the check box next to the gesture that you want to turn on or off.
5. Click **Apply**, and then click **OK**.

## Scrolling

Scrolling is useful for moving up, down, or sideways on a page or image. To scroll, place two fingers slightly apart on the TouchPad, and then drag them across the TouchPad in an up, down, left, or right motion.

 **NOTE:** Scrolling speed is controlled by finger speed.


---

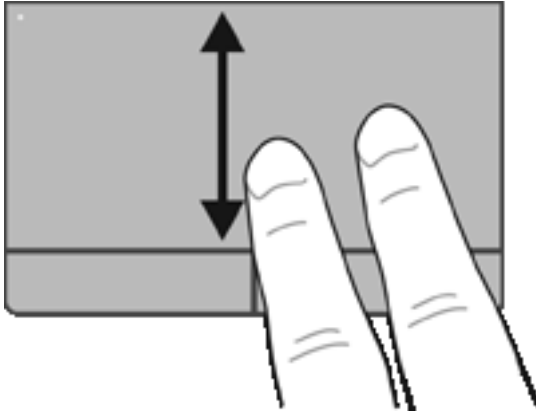


## Pinching/Zooming

Pinching allows you to zoom in or out on images or text.

 - Zoom in by placing two fingers together on the TouchPad, and then moving them apart.

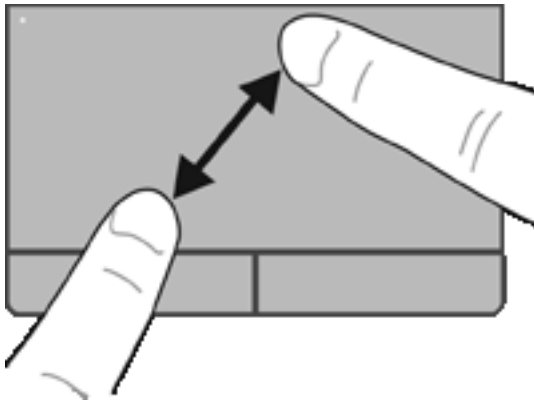

 - Zoom out by placing two fingers apart on the TouchPad, and then moving them together.

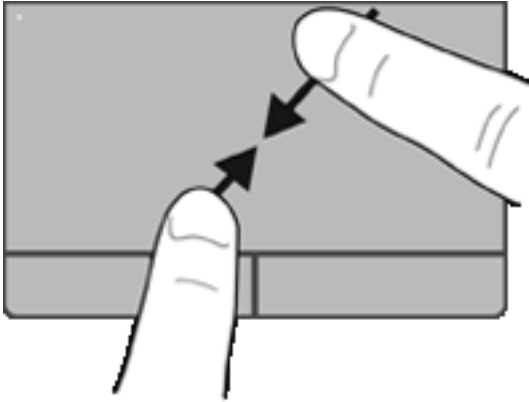




---

# 6 Maintenance

- [Inserting or removing the battery](#)
- [Replacing or upgrading the hard drive](#)
- [Adding or replacing memory modules](#)
- [Updating programs and drivers](#)
- [Using SoftPaq Download Manager](#)
- [Cleaning your computer](#)

## Inserting or removing the battery

---

 
 **NOTE:** For additional information on using the battery, refer to the *HP Notebook Reference Guide*.

---


To insert the battery:

1. Insert the battery into the battery bay, aligning the tabs on the battery **(1)** with the notches on the computer, and then press the battery **(2)** down until it is seated.

- Slide the right battery release latch **(3)** and then the left battery release latch **(4)** to lock the battery into place.

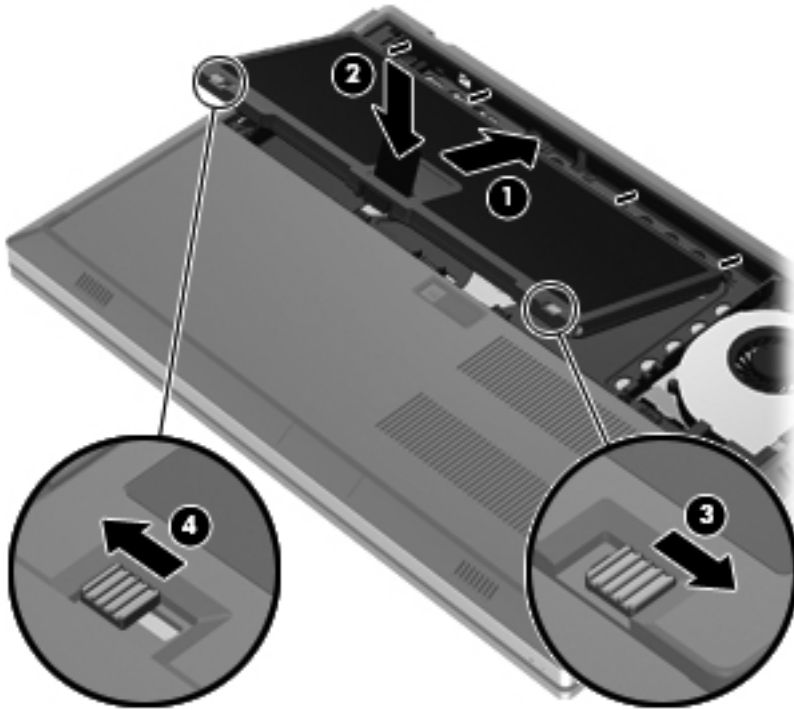

 
- Align the notches on the battery cover **(1)** with the tabs on the computer, and then press down to close the battery cover **(2)**. The battery cover automatically locks into place.

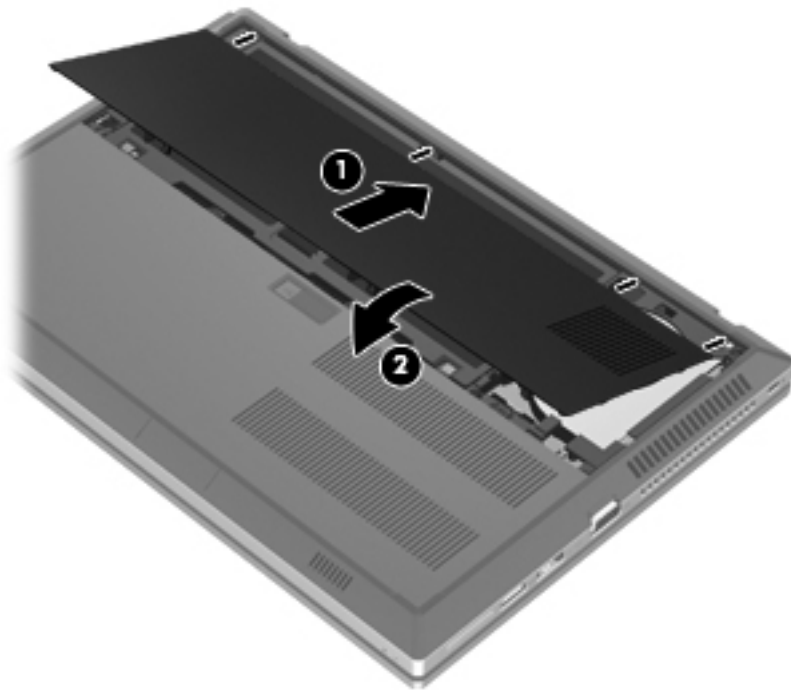

To remove the battery:


**⚠ CAUTION:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work and initiate Hibernation or shut down the computer through Windows before removing the battery.

 1. Slide the battery cover release latch **(1)**, and then pull the battery cover **(2)** upward. Remove the battery cover **(3)**.

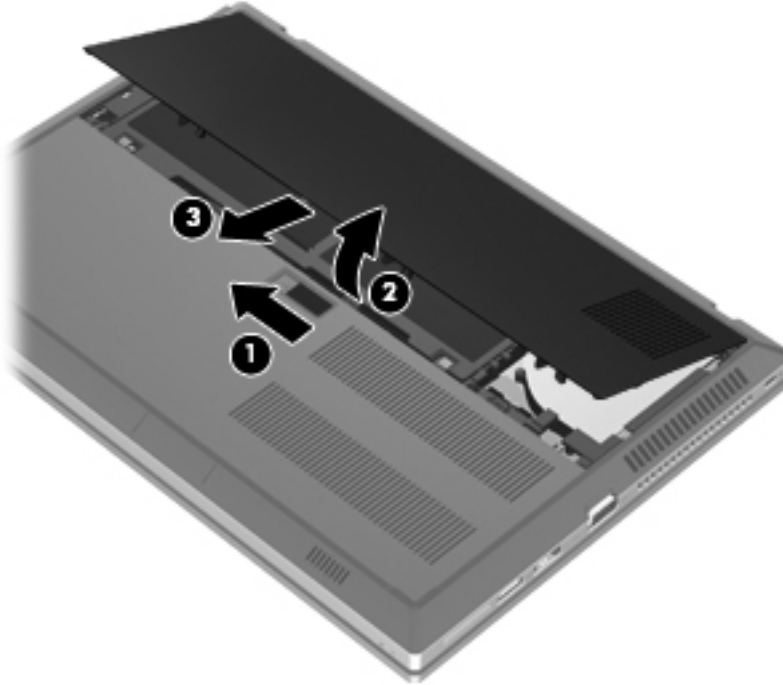

2. Slide the left battery release latch **(1)** and then the right battery release latch **(2)** to release the battery.

 3. Pull the battery tab (3) upward and remove the battery (4) from the computer.

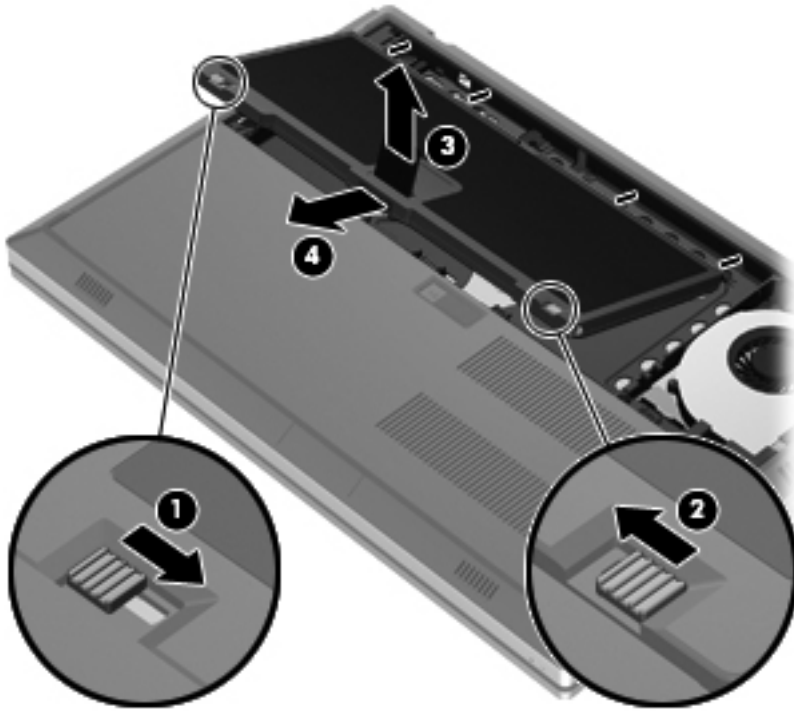

## Replacing or upgrading the hard drive

 
**⚠ CAUTION:** To prevent information loss or an unresponsive system:

Shut down the computer before removing the hard drive from the hard drive bay. Do not remove the hard drive while the computer is on, in the Sleep state, or in Hibernation.

If you are not sure whether the computer is off or in Hibernation, turn the computer on by pressing the power button. Then shut down the computer through the operating system.


### Removing the hard drive

1. Save your work and shut down the computer.
2. Disconnect AC power and external devices connected to the computer.
3. Turn the computer upside down on a flat surface.
4. Remove the battery cover and the battery. (Refer to [Inserting or removing the battery on page 33.](#))
5. Loosen the 3 hard drive cover screws (1). Pull the hard drive cover (2) upward, and then remove the cover (3).

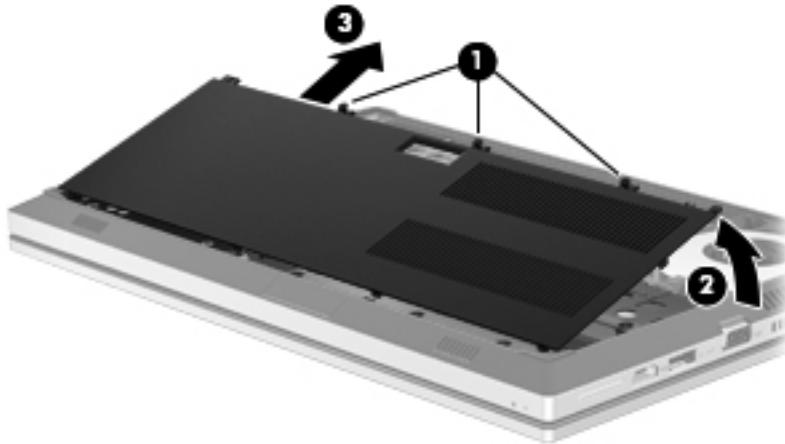

6. Loosen the 3 hard drive screws (1). Pull the hard drive tab (2) to the left to disconnect the hard drive.

 
7. Lift the hard drive (3), and then pull the hard drive (4) out of the hard drive bay.

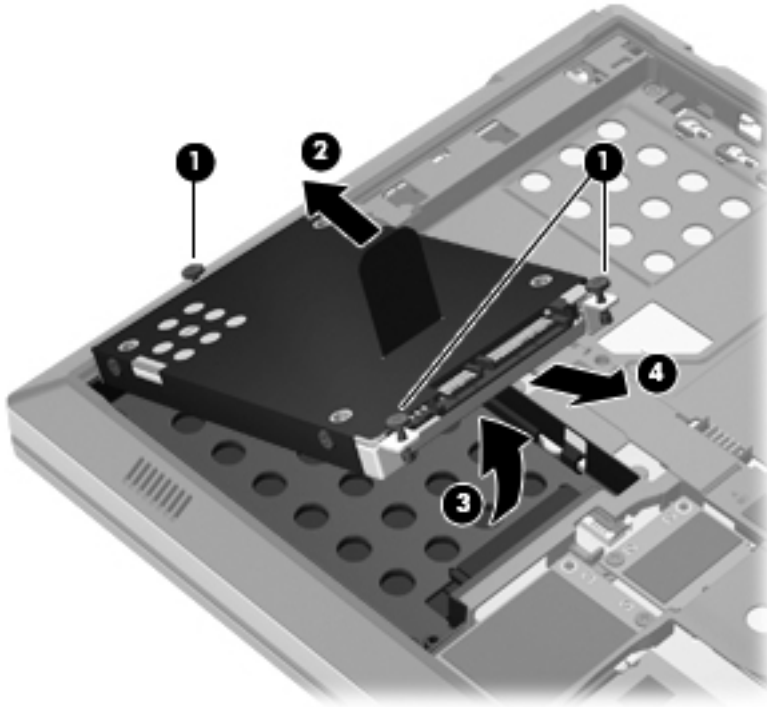


## Installing a hard drive

1. Angle the hard drive (1) into the hard drive bay, and then lower the hard drive (2) into the hard drive bay.

 - 
2. Pull the hard drive tab (3) to the right until the hard drive is seated. Tighten the 3 screws (4) to secure the hard drive.

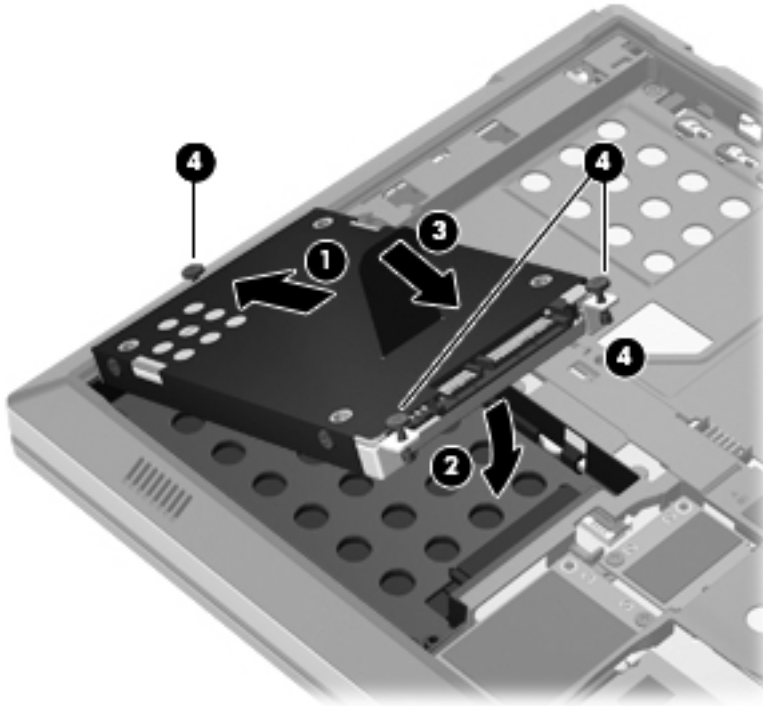

 - 
- 
3. Align the tabs on the hard drive cover (1) with the notches on the computer.
4. Close the hard drive cover (2), and then tighten the 3 screws (3).

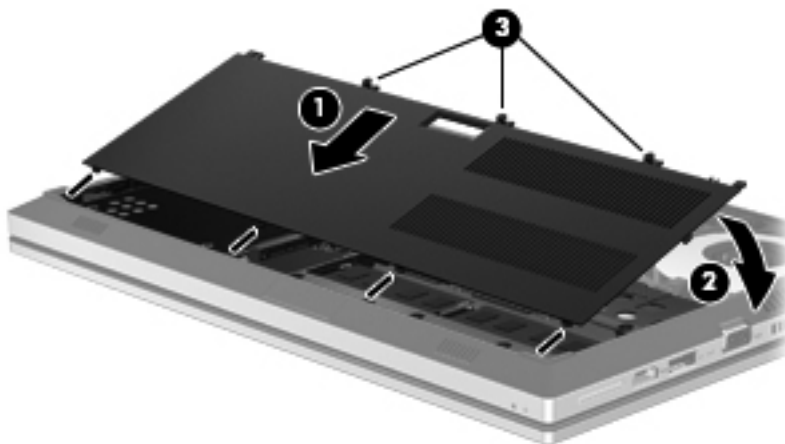



- 
- 
- 
- 
5. Replace the battery cover and the battery. (Refer to [Inserting or removing the battery on page 33.](#))
6. Turn the computer right-side up, and then reconnect AC power and external devices to the computer.
7. Turn on the computer.


## Adding or replacing memory modules

The computer has two memory module slots. The capacity of the computer can be upgraded by adding a memory module to the vacant expansion memory module slot or by upgrading the existing memory module in the primary memory module slot.

---

 **WARNING!** To reduce the risk of electric shock and damage to the equipment, unplug the power cord and remove all batteries before installing a memory module.


 **CAUTION:** Electrostatic discharge (ESD) can damage electronic components. Before beginning any procedure, ensure that you are discharged of static electricity by touching a grounded metal object.

 **NOTE:** To use a dual-channel configuration when adding a second memory module, be sure that both memory modules are identical.

---

To add or replace a memory module:

---

 **CAUTION:** To prevent information loss or an unresponsive system:

Shut down the computer before adding or replacing memory modules. Do not remove a memory module while the computer is on, in the Sleep state, or in Hibernation.

If you are not sure whether the computer is off or in Hibernation, turn the computer on by pressing the power button. Then shut down the computer through the operating system.

---

 
1. Save your work and shut down the computer.
2. Disconnect AC power and external devices connected to the computer.
3. Turn the computer upside down on a flat surface.
4. Remove the battery cover and the battery. (Refer to [Inserting or removing the battery on page 33.](#))
5. Remove the hard drive cover. (Refer to [Removing the hard drive on page 37.](#))
6. If you are replacing a memory module, remove the existing memory module:
  - a. Pull away the retention clips **(1)** on each side of the memory module.

The memory module tilts up.



- b. Grasp the edge of the memory module (2), and then gently pull the memory module out of the memory module slot.

**CAUTION:** To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

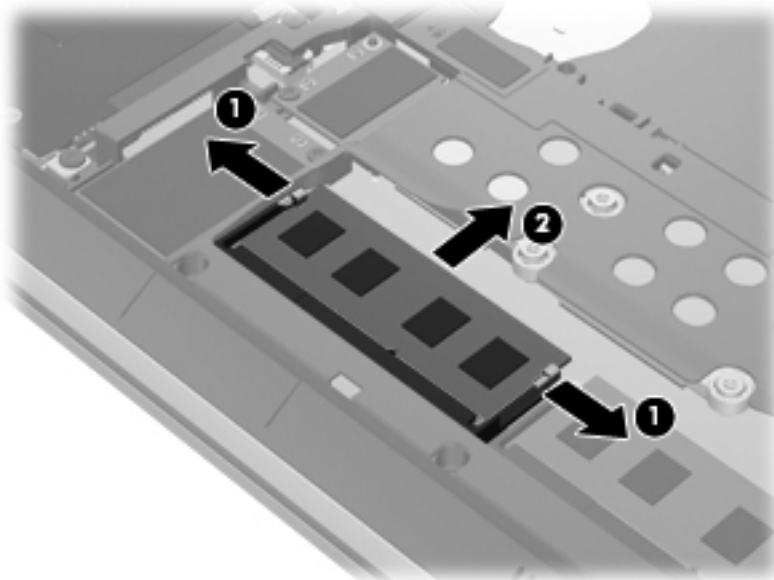

To protect a memory module after removal, place it in an electrostatic-safe container.

 
7. Insert a new memory module:

**CAUTION:** To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

- a. Align the notched edge (1) of the memory module with the tab in the memory module slot.
- b. With the memory module at a 45-degree angle from the surface of the memory module compartment, press the module (2) into the memory module slot until it is seated.

- c. Gently press the memory module **(3)** down, applying pressure to both the left and right edges of the memory module, until the retention clips snap into place.

**⚠ CAUTION:** To prevent damage to the memory module, be sure that you do not bend the memory module.

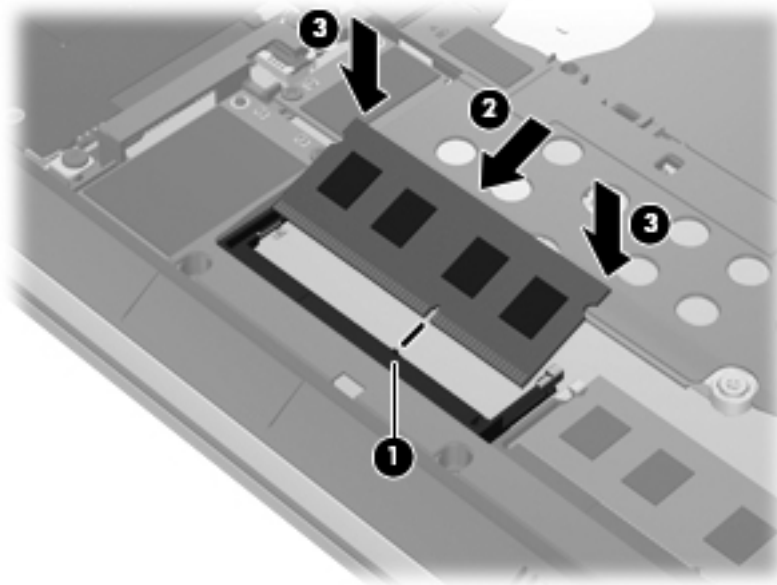

8. Replace the hard drive cover. (Refer to [Replacing or upgrading the hard drive on page 37.](#))
9. Replace the battery and the battery cover. (Refer to [Inserting or removing the battery on page 33.](#))
10. Turn the computer right-side up, and then reconnect AC power and external devices to the computer.
11. Turn on the computer.

## Updating programs and drivers

HP recommends that you update your programs and drivers on a regular basis with the latest versions. Go to <http://www.hp.com/support> to download the latest versions. You can also register to receive automatic update notifications when they become available.

# Using SoftPaq Download Manager

HP SoftPaq Download Manager (SDM) is a tool that provides quick access to SoftPaq information for HP business computers without requiring the SoftPaq number. Using this tool, you can easily search for SoftPaqs, and then download and unpack them.

SoftPaq Download Manager works by reading and downloading, from the HP FTP site, a published database file containing computer model and SoftPaq information. SoftPaq Download Manager allows you to specify one or more computer models to determine which SoftPaqs are available for download.

SoftPaq Download Manager checks the HP FTP site for updates to the database and software. If updates are found, they are downloaded and applied automatically.

SoftPaq Download Manager is available on the HP Web site. To use SoftPaq Download Manager to download SoftPaqs, you must first download and install the program. Go to the HP Web site at <http://www.hp.com/go/sdm>, and follow the instructions to download and install SoftPaq Download Manager.

To download SoftPaqs:

1. Select **Start > All Programs > HP Software Setup > HP SoftPaq Download Manager**.
2. When SoftPaq Download Manager opens for the first time, a window is displayed asking if you want to show only software for the computer you are using or to show the software for all supported models. Select **Show software for all supported models**. If you have used HP SoftPaq Download Manager previously, go to Step 3.
  - a. Select your operating system and language filters in the Configuration Options window. The filters limit the number of options that are listed in the Product Catalog pane. For example, if only Windows 7 Professional is selected in the operating system filter, the only operating system that is displayed in the Product Catalog is Windows 7 Professional.
  - b. To add other operating systems, change the filter settings in the Configuration Options window. Refer to the HP SoftPaq Download Manager software Help for more information.
3. In the left pane, click the plus sign (+) to expand the model list, and then select the model or models of the products you want to update.
4. Click **Find Available SoftPaqs** to download a list of available SoftPaqs for the selected computer.
5. Select from the list of available SoftPaqs, and then click **Download Only** if you have many SoftPaqs to download, because the SoftPaq selection and Internet connection speed determine how long the download process will take.

If you want to download only one or two SoftPaqs and have a high-speed Internet connection, click **Download & Unpack**.

6. Right-click **Install SoftPaq** in the SoftPaq Download Manager software to install the selected SoftPaqs on the computer.

# Cleaning your computer


- [Cleaning products](#)
- [Cleaning procedures](#)

## Cleaning products

Use the following products to safely clean and disinfect your computer:

- Dimethyl benzyl ammonium chloride 0.3 percent maximum concentration (For example: germicidal disposable wipes. These wipes come in a variety of brand names.)
- Alcohol-free glass cleaning fluid
- Water with mild soap solution
- Dry microfiber cleaning cloth or a chamois (static-free cloth without oil)
- Static-free cloth wipes

---

 **CAUTION:** Avoid the following cleaning products:

Strong solvents, such as alcohol, acetone, ammonium chloride, methylene chloride, and hydrocarbons, which can permanently damage the surface of the computer.


Fibrous materials, such as paper towels, which can scratch the computer. Over time, dirt particles and cleaning agents can get trapped in the scratches.

---

## Cleaning procedures

Follow the procedures in this section to safely clean your computer.


---

 **WARNING!** To prevent electric shock or damage to components, do not attempt to clean your computer while it is turned on:

Turn off the computer.

Disconnect external power.

Disconnect all powered external devices.

 **CAUTION:** Do not spray cleaning agents or liquids directly on any computer surface. Liquids dripped on the surface can permanently damage internal components.

---


## Cleaning the display

Gently wipe the display using a soft, lint-free cloth moistened with an *alcohol-free* glass cleaner. Be sure that the display is dry before closing the display.

## Cleaning the sides and cover


To clean and disinfect the sides and cover, use a soft microfiber cloth or chamois moistened with one of the cleaning solutions listed previously or use an acceptable germicidal disposable wipe.


---

 **NOTE:** When cleaning the cover of the computer, use a circular motion to aid in removing dirt and debris.

---

## Cleaning the TouchPad and keyboard

 **WARNING!** To reduce the risk of electric shock or damage to internal components, do not use a vacuum cleaner attachment to clean the keyboard. A vacuum cleaner can deposit household debris on the keyboard surface.

 **CAUTION:** When cleaning the TouchPad and keyboard, do not let liquids drip between the keys. This can permanently damage internal components.

---

- To clean and disinfect the TouchPad and keyboard, use a soft microfiber cloth or chamois moistened with one of the cleaning solutions listed previously or use an acceptable germicidal disposable wipe.
- To prevent keys from sticking and to remove dust, lint, and particles from the keyboard, use a can of compressed air with a straw extension.

---

# 7 Backup and recovery

## Windows 7


- [Backing up your information](#)
- [Performing a system recovery](#)

To protect your information, use Windows Backup and Restore to back up individual files and folders, back up your entire hard drive (select models only), create system repair discs (select models only) by using an optional external optical drive, or create system restore points. In case of system failure, you can use the backup files to restore the contents of your computer.


Windows Backup and Restore provides the following options:

- Creating a system repair disc (select models only) by using an optional external optical drive
- Backing up your information
- Creating a system image (select models only)
- Scheduling automatic backups (select models only)
- Creating system restore points
- Recovering individual files
- Restoring the computer to a previous state
- Recovering information using recovery tools

---

 **NOTE:** For detailed instructions, perform a search for these topics in Help and Support.

In case of system instability, HP recommends that you print the recovery procedures and save them for later use.

 **NOTE:** Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

---

## Backing up your information

Recovery after a system failure is as good as your most recent backup. You should create system repair discs (select models only) by using an optional external optical drive, and your initial backup immediately after software setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup. The system repair discs (select models only) are used to start up (boot) the computer and repair the operating system in


case of system instability or failure. Your initial and subsequent backups allow you to restore your data and settings if a failure occurs.

You can back up your information to an optional external hard drive, a network drive, or discs.

Note the following when backing up:

- Store personal files in the Documents library, and back it up regularly.
- Back up templates that are stored in their associated programs.
- Save customized settings that appear in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time-saver if you have to reset your preferences.
- When backing up to discs, use any of the following types of discs (purchased separately): CD-R, CD-RW, DVD+R, DVD+R DL, DVD-R, DVD-R DL, or DVD±RW. The discs you use will depend on the type of external optical drive you are using.

---


 **NOTE:** DVDs and DVDs with double-layer (DL) support store more information than CDs, so using them for backup reduces the number of recovery discs required.

---


- When backing up to discs, number each disc before inserting it into the external drive.

To create a backup using Backup and Restore:

---

 **NOTE:** Be sure that the computer is connected to AC power before you start the backup process.

---

 **NOTE:** The backup process may take over an hour, depending on file size and the speed of the computer.

---


1. Select **Start > All Programs > Maintenance > Backup and Restore**.
2. Follow the on-screen instructions to set up your backup, create a system image (select models only), or create a system repair disc (select models only).

## Performing a system recovery

In case of system failure or instability, the computer provides the following tools to recover your files:

- Windows recovery tools: You can use Windows Backup and Restore to recover information you have previously backed up. You can also use Windows Startup Repair to fix problems that might prevent Windows from starting correctly.
- f11 recovery tools: You can use the f11 recovery tools to recover your original hard drive image. The image includes the Windows operating system and software programs installed at the factory.

---

 **NOTE:** If you are unable to boot (start up) your computer and you cannot use the system repair discs you previously created (select models only), you must purchase a Windows 7 operating system DVD to reboot the computer and repair the operating system. For additional information, refer to [Using a Windows 7 operating system DVD \(purchased separately\) on page 49](#).

---


## Using the Windows recovery tools

To recover information you previously backed up:

1. Select **Start > All Programs > Maintenance > Backup and Restore**.
2. Follow the on-screen instructions to recover your system settings, your computer (select models only), or your files.

To recover your information using Startup Repair, follow these steps:

---

 **CAUTION:** Using Startup Repair completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process restores the operating system, as well as the drivers, software, and utilities from the backup used for recovery.


---

1. If possible, back up all personal files.
2. If possible, check for the presence of the Windows partition and the HP Recovery partition.

To check for the Windows partition, select **Start > Computer**.

To check for the HP Recovery partition, click **Start**, right-click **Computer**, click **Manage**, and then click **Disk Management**.


---

 **NOTE:** If the Windows partition and the HP Recovery partition are not listed, you must recover your operating system and programs using the Windows 7 operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to [Using a Windows 7 operating system DVD \(purchased separately\) on page 49](#).

---

3. If the Windows partition and the HP Recovery partition are listed, restart the computer, and then press **F8** before the Windows operating system loads.
4. Select **Startup Repair**.
5. Follow the on-screen instructions.


---

 **NOTE:** For additional information on recovering information using the Windows tools, perform a search for these topics in Help and Support.

---

## Using f11 recovery tools

---


 **CAUTION:** Using **F11** completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The **F11** recovery tool reinstalls the operating system and HP programs and drivers that were installed at the factory. Software not installed at the factory must be reinstalled.

---

To recover the original hard drive image using **F11**:

1. If possible, back up all personal files.
2. If possible, check for the presence of the HP Recovery partition: click **Start**, right-click **Computer**, click **Manage**, and then click **Disk Management**.

---

 **NOTE:** If the HP Recovery partition is not listed, you must recover your operating system and programs using the Windows 7 operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to [Using a Windows 7 operating system DVD \(purchased separately\) on page 49](#).

---




3. If the HP Recovery partition is listed, restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
4. Press **f11** while the “Press <F11> for recovery” message is displayed on the screen.
5. Follow the on-screen instructions.

## Using a Windows 7 operating system DVD (purchased separately)

To order a Windows 7 operating system DVD, go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions. You can also order the DVD by calling technical support. For contact information, refer to the *Worldwide Telephone Numbers* booklet included with the computer.


---

 **CAUTION:** Using a Windows 7 operating system DVD completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process helps you restore the operating system, as well as drivers, software, and utilities.

---

To initiate recovery using a Windows 7 operating system DVD:

---

 **NOTE:** This process takes several minutes.

---

1. If possible, back up all personal files.
2. Restart the computer, and then insert the Windows 7 operating system DVD into the optical drive before the Windows operating system loads.
3. When prompted, press any keyboard key.
4. Follow the on-screen instructions.
5. Click **Next**.
6. Select **Repair your computer**.
7. Follow the on-screen instructions.

After the repair is completed:

1. Eject the Windows 7 operating system DVD, and then insert the *Driver Recovery* disc.
2. Install the Hardware Enabling Drivers first, and then install Recommended Applications.


# Windows Vista


To protect your information, use the Backup and Restore Center to back up individual files and folders, back up your entire hard drive (select models only), or create system restore points. In case of system failure, you can use the backup files to restore the contents of your computer.


The Backup and Restore Center provides the following options:

- Backing up individual files and folders
- Backing up the entire hard drive (select models only)
- Scheduling automatic backups (select models only)
- Creating system restore points
- Recovering individual files
- Restoring the computer to a previous state
- Recovering information using recovery tools

---

 **NOTE:** For detailed instructions, perform a search for these topics in Help and Support.

 **NOTE:** In case of system instability, HP recommends that you print the recovery procedures and save them for later use.

 **NOTE:** Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

---

## Backing up your information

 
Recovery after a system failure is as complete as your most current backup. You should create your initial backup immediately after software setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

You can back up your information to an optional external hard drive, a network drive, or discs.

Note the following when backing up:

- Store personal files in the Documents folder, and back it up regularly.
- Back up templates that are stored in their associated programs.
- Save customized settings that appear in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time-saver if you have to reset your preferences.
- When backing up to discs, use any of the following types of discs (purchased separately): CD-R, CD-RW, DVD+R, DVD+R DL, DVD-R, DVD-R DL, or DVD±RW. The discs you use will depend on the type of optical drive installed in your computer.

---


 **NOTE:** DVDs and DVDs with double-layer (DL) support store more information than CDs, so using them for backup reduces the number of recovery discs required.


---

- When backing up to discs, number each disc before inserting it into the optical drive of the computer.

To create a backup using Backup and Restore Center:

---

 **NOTE:** Be sure that the computer is connected to AC power before you start the backup process.

 **NOTE:** The backup process may take over an hour, depending on file size and the speed of the computer.

---


1. Select **Start > All Programs > Maintenance > Backup and Restore Center**.
2. Follow the on-screen instructions to back up your entire computer (select models only) or your files.

## Performing a recovery

In case of system failure or instability, the computer provides the following tools to recover your files:

- Windows recovery tools: You can use the Backup and Restore Center to recover information you have previously backed up. You can also use Windows Startup Repair to fix problems that might prevent Windows from starting correctly.
- f11 recovery tools: You can use the f11 recovery tools to recover your original hard drive image. The image includes the Windows operating system and software programs installed at the factory.

---

 **NOTE:** If you are unable to boot (start up) your computer, you must purchase a Windows Vista® operating system DVD to reboot the computer and repair the operating system. For additional information, refer to [Using a Windows Vista operating system DVD \(purchased separately\) on page 52](#).

---


## Using the Windows recovery tools

To recover information you previously backed up:

1. Select **Start > All Programs > Maintenance > Backup and Restore Center**.
2. Follow the on-screen instructions to recover your entire computer (select models only) or your files.

To recover your information using Startup Repair, follow these steps:


---

 **CAUTION:** Using Startup Repair completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process restores the operating system, as well as the drivers, software, and utilities from the backup used for recovery.

---

1. If possible, back up all personal files.
2. If possible, check for the presence of the Windows partition and the HP Recovery partition. To find the partitions, select **Start > Computer**.


---

 **NOTE:** If the Windows partition and the HP Recovery partition have been deleted, you must recover your operating system and programs using the Windows Vista operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to [Using a Windows Vista operating system DVD \(purchased separately\) on page 52](#).

---


3. Restart the computer, and then press **f8** before the Windows operating system loads.


4. Select **Repair your computer**.
5. Follow the on-screen instructions.

 **NOTE:** For additional information on recovering information using the Windows tools, perform a search for these topics in Help and Support.

---

## Using f11 recovery tools


 **CAUTION:** Using **f11** completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The **f11** recovery tool reinstalls the operating system and HP programs and drivers that were installed at the factory. Software not installed at the factory must be reinstalled. Personal files must be restored from a backup.

 **NOTE:** If your computer includes a solid-state drive (SSD), you may not have a recovery partition. Recovery discs have been included for computers that do not have a partition. Use these discs to recover your operating system and software. To check for the presence of a recovery partition, select **Start > Computer**. If the partition is present, an HP Recovery drive is listed in the Hard Disk Drives section of the window.

---

To recover the original hard drive image using **f11**, follow these steps:

1. If possible, back up all personal files.
2. If possible, check for the presence of the HP Recovery partition. To find the partition, select **Start > Computer**.


 **NOTE:** If the HP Recovery partition has been deleted, you must recover your operating system and programs using the Windows Vista operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to [Using a Windows Vista operating system DVD \(purchased separately\) on page 52](#).

---

3. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
4. Press **f11** while the “Press <F11> for recovery” message is displayed on the screen.
5. Follow the on-screen instructions.

## Using a Windows Vista operating system DVD (purchased separately)

To order a Windows Vista operating system DVD, go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions. You can also order the DVD by calling technical support. For contact information, refer to the *Worldwide Telephone Numbers* booklet included with the computer.

 **CAUTION:** Using a Windows Vista operating system DVD completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process helps you restore the operating system, as well as drivers, software, and utilities.

---

To initiate recovery using a Windows Vista operating system DVD:



---

**NOTE:** This process takes several minutes.

---

1. If possible, back up all personal files.
2. Restart the computer, and then insert the Windows Vista operating system DVD into the optical drive before the Windows operating system loads.
3. When prompted, press any keyboard key.
4. Follow the on-screen instructions.
5. Click **Next**.
6. Select **Repair your computer**.
7. Follow the on-screen instructions.

---

# 8 Customer support

- [Contacting customer support](#)
- [Labels](#)

## Contacting customer support

If the information provided in this user guide, in the *HP Notebook Reference Guide*, or in Help and Support does not address your questions, you can contact HP Customer Support at:

<http://www.hp.com/go/contactHP>



**NOTE:** For worldwide support, click **Contact HP worldwide** on the left side of the page, or go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

Here you can:

- Chat online with an HP technician.



 
**NOTE:** When technical support chat is not available in a particular language, it is available in English.

- E-mail HP Customer Support.
- Find HP Customer Support worldwide telephone numbers.
- Locate an HP service center.

# Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer:

- Serial number label—Provides important information, including the following:

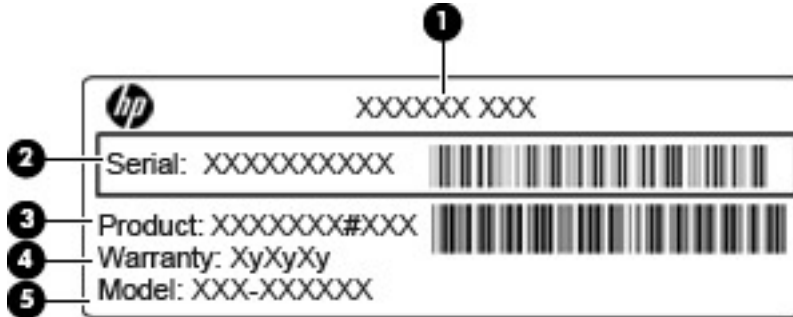

---

### Component

---

(1)	Product name
(2)	Serial number (s/n)
(3)	Part number/Product number (p/n)
(4)	Warranty period
(5)	Model description

---

Have this information available when you contact technical support. The serial number label is affixed inside the battery bay.

- Microsoft® Certificate of Authenticity—Contains the Windows Product Key. You may need the Product Key to update or troubleshoot the operating system. The Microsoft Certificate of Authenticity is affixed inside the battery bay.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Wireless certification label or labels (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries or regions in which the devices have been approved for use. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the battery bay.
- SIM (subscriber identity module) label (select models only)—Provides the ICCID (Integrated Circuit Card Identifier) of the SIM. This label is located inside the battery bay.
- HP Mobile Broadband Module serial number label (select models only)—Provides the serial number of the HP Mobile Broadband Module. This label is located inside the battery bay.

---

# 9 Specifications

- [Input power](#)
- [Operating environment](#)




## Input power


The power information in this section may be helpful if you plan to travel internationally with the computer.

The computer operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100–240 V, 50–60 Hz. Although the computer can be powered from a standalone DC power source, it should be powered only with an AC adapter or a DC power source supplied and approved by HP for use with this computer.

The computer can operate on DC power within the following specifications.

Input Power	Rating
Operating voltage and current	18.5 V dc @ 3.5 A - 65 W
	18.5 V dc @ 3.5 A - 65 W, Slim Adapter (select models only)

 **NOTE:** This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.

 **NOTE:** The computer operating voltage and current can be found on the system regulatory label.

# Operating environment

<b>Factor</b>	<b>Metric</b>	<b>U.S.</b>
<b>Temperature</b>		
Operating (writing to optical disc)	<b>5°C to 35°C</b>	41°F to 95°F
Nonoperating	<b>-20°C to 60°C</b>	-4°F to 140°F
<b>Relative humidity</b> (noncondensing)		
Operating	<b>10% to 90%</b>	10% to 90%
Nonoperating	<b>5% to 95%</b>	5% to 95%
<b>Maximum altitude</b> (unpressurized)		
Operating	<b>-15 m to 3,048 m</b>	-50 ft to 10,000 ft
Nonoperating	<b>-15 m to 12,192 m</b>	-50 ft to 40,000 ft

---

# Index

## A

audio-in (microphone) jack,  
identifying 12  
audio-out (headphone) jack,  
identifying 12

## B

Backup and Restore 47  
Backup and Restore Center 50,  
51  
battery bay 55  
battery cover release latch 15  
battery cover, identifying 15  
battery light 12  
battery, replacing 33  
Beats Audio 1  
Bluetooth label 55  
buttons  
left TouchPad 6  
power 8  
right TouchPad 6

## C

caps lock light, identifying 7  
caring for your computer 44  
Certificate of Authenticity label 55  
cleaning your computer 44  
components  
bottom 15  
display 14  
front 11  
left side 13  
right side 12  
top 6  
connector, power 12

## D

display image, switching 24

## E

embedded numeric keypad,  
identifying 10, 26  
eSATA port 13  
esc key, identifying 10  
external monitor port 13

## F

f11 recovery 48, 52  
fingerprint reader, identifying 9  
fn key, identifying 10, 24  
function keys, identifying 10

## H

hard drive  
installing 38  
removing 37  
hard drive cover, identifying 16  
hard drive light 11  
hard drive recovery 48, 52  
HDMI port, identifying 13  
headphone (audio-out) jack 12  
Help and Support hotkey 24  
hotkeys  
adjusting volume 25  
battery charge 24  
Beats Audio 25  
decrease screen brightness  
25  
description 24  
Help and Support 24  
increase screen brightness 25  
keyboard backlight 25  
Print Options 24  
QuickLock 25  
Sleep 25  
switching screen image 24  
using 24

## I

input power 57  
integrated webcam light,  
identifying 14  
internal display switch 14  
internal microphones, identifying  
14  
Internet connection setup 20  
ISP, using 18

## J

jacks  
audio-in (microphone) 12  
audio-out (headphone) 12  
network 12  
RJ-45 (network) 12

## K

keyboard backlight 25  
keyboard hotkeys, identifying 24  
keypad  
embedded numeric 10  
identifying 26  
keys  
esc 10  
fn 10  
function 10  
Windows applications 10  
Windows logo 10

## L

labels  
Bluetooth 55  
HP Mobile Broadband  
Module 55  
Microsoft Certificate of  
Authenticity 55  
regulatory 55  
serial number 55

- SIM 55
  - wireless certification 55
- WLAN 55
- latch, battery cover release 15
- lights
  - battery 12
  - caps lock 7
  - hard drive 11
  - power 7, 11
  - TouchPad 7
  - webcam 14
  - wireless 7

## M

- Media Card Reader, identifying 13
- memory module
  - inserting 41
  - removing 40
  - replacing 40
- microphone (audio-in) jack, identifying 12
- Microsoft Certificate of Authenticity label 55
- mouse, external
  - setting preferences 27

## N

- network jack, identifying 12
- num lk key, identifying 26

## O

- operating environment 58
- operating system
  - Microsoft Certificate of Authenticity label 55
  - Product Key 55

## P

- pinching TouchPad gesture 31
- pointing devices, setting preferences 27
- ports
  - external monitor 13
  - HDMI 13
  - USB 12, 13
- power button, identifying 8
- power connector, identifying 12
- power lights 7, 11
- Product Key 55

- product name and number, computer 55

## R

- recovery partition 48, 52
- regulatory information
  - regulatory label 55
  - wireless certification labels 55
- restoring the hard drive 48, 52
- RJ-45 (network) jack, identifying 12

## S

- screen brightness keys 25
- screen image, switching 24
- scrolling TouchPad gesture 31
- security cable slot, identifying 13
- serial number 55
- serial number, computer 55
- setup of WLAN 20
- SIM slot, identifying 16
- slots
  - security cable 13
  - SIM 16
- SoftPaqs, downloading 43
- speakers, identifying 11
- system repair disc 46
- system restore points 46

## T

- TouchPad
  - buttons 6
  - identifying 6
  - using 27
- TouchPad gestures
  - pinching 31
  - scrolling 31
  - zooming 31
- TouchPad light, identifying 7
- traveling with the computer 55

## U

- USB ports, identifying 12, 13

## V

- vents, identifying 13, 15
- volume keys, identifying 25

## W

- webcam 14
- webcam light, identifying 14

- webcam, identifying 14
- Windows 7 operating system
  - DVD 49
- Windows applications key, identifying 10
- Windows Backup and Restore 46
- Windows logo key, identifying 10
- Windows Vista operating system
  - DVD 52
- wireless antennas, identifying 14
- wireless certification label 55
- wireless light 7
- wireless network (WLAN),
  - equipment needed 20
- wireless network, connecting 18
- wireless router, configuring 20
- wireless set up 20
- WLAN
  - connecting 19
  - protecting 20
- WLAN antennas, identifying 14
- WLAN device 55
- WLAN label 55
- WWAN antennas, identifying 14

## Z

- zooming TouchPad gesture 31