

# hp HOTSPOT SETUP GUIDE

## LASERJET PRO M1210 SERIES



M1210

A hotspot-enabled product has the ability to provide wireless Internet access for your computer, smart phone, or tablet.

### This product supports the following types of connections:

**PPPoE** (Point-to-Point Protocol over Ethernet)



**Note:** This product does not support bridge or repeater modes.

**Dynamic or Static IP address with router**




Before continuing with this procedure, set up the product first by following the **Installation Guide**.

You have three options to set up the hotspot feature.

### Option 1: Configure hotspot at software installation


**1** After having installed the printer driver, select the option to **Enable Hotspot & Direct Print**, and then click **Next**.

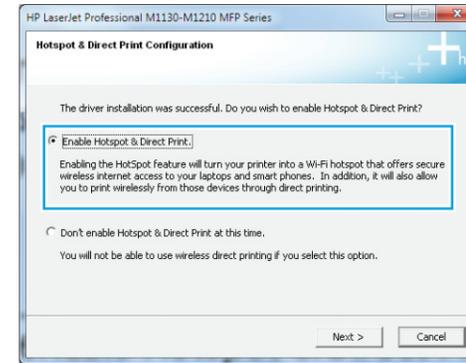

**2** Select one of the **Security Mode** options, and then click **Next**. The options include:

- **WPA/WPA2:** maximum security (recommended)
- **WEP:** medium security
- **Disable:** no security (not recommended)


You also have the option to set up a custom SSID.

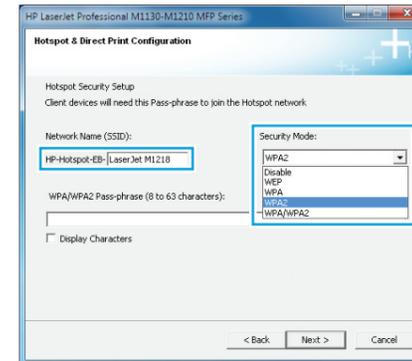



**3** Connect the product to a computer with the USB cable, and then click **Next**.



**4** Select the option that indicates how you connect to the Internet, and then click **Next**.

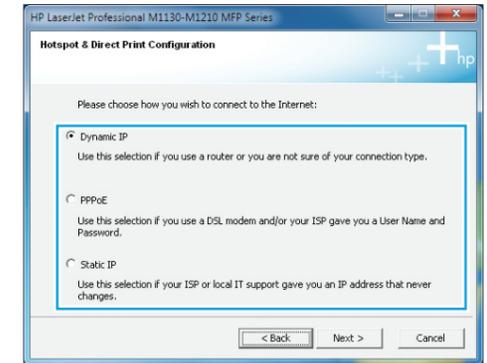

**5** If you selected **PPPoE** or **Static IP**, fill in the appropriate information, and then click **Next**.

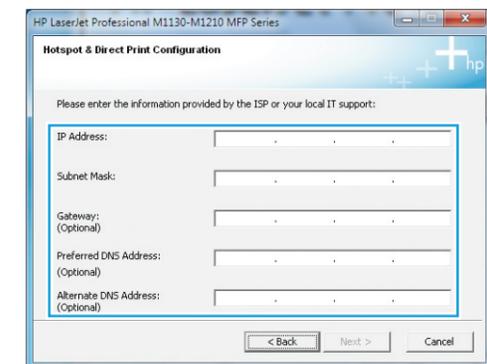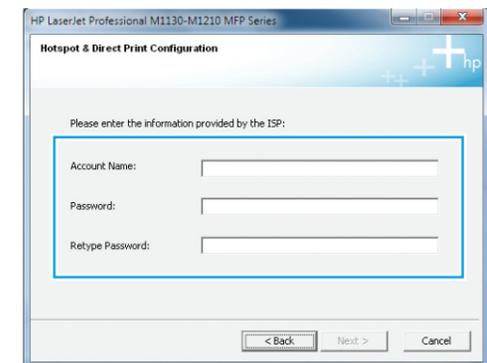

(This procedure is continued on the next page.)


Scan the QR code to download HP mobile apps.




B4K88-90902

© 2016 Copyright HP Development Company, L.P.  
www.hp.com

6 A summary of the current settings displays. Click **Next**.

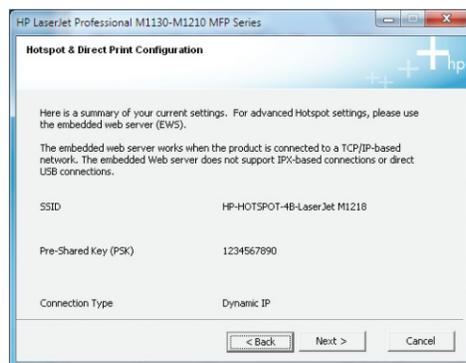

7 You have successfully set up the hotspot feature. To set up other product features, follow the on-screen instructions.

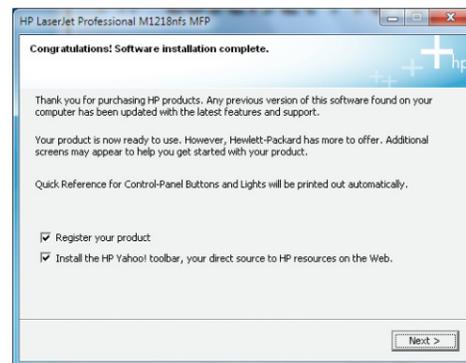


\*For additional security options, see **Set or change the printer admin password** at the end of this guide.

## Option 2: Configure hotspot through the Windows Wireless Configuration utility

(USB Required)

Open the Wireless Configuration utility:


- From the **Start Menu**, select **All Programs**.
- Select **HP**.
- Select the product.
- Select **Wireless Configuration**.

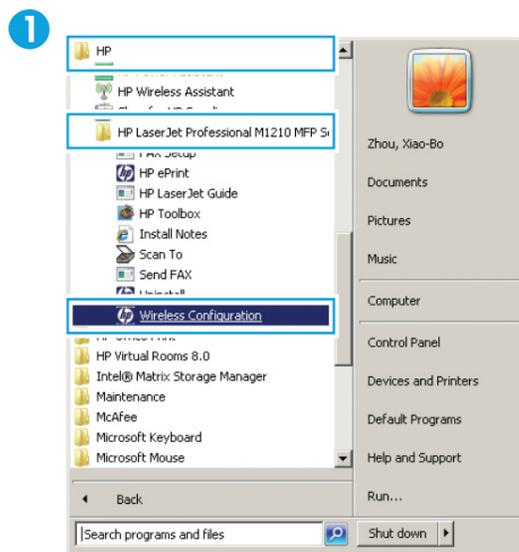

2 Select **Hotspot & Direct Print**, and then click **Next**.



3 Select the option **Enable Hotspot and Direct Print**, and then click **Next**. Then, follow the previous steps for Option 1 starting at step 2.

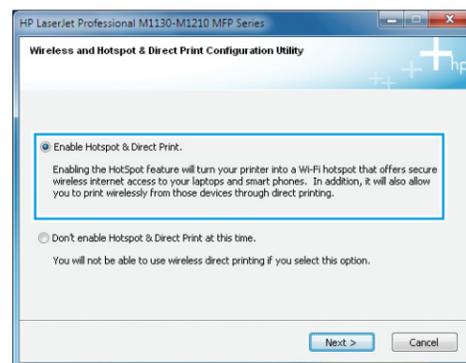


\*These instructions are subject to change and can vary by product.

## Option 3: Configure hotspot through the HP Embedded Web Server (EWS) (network connection required)

**Important:** Please make sure the product and computer are able to communicate with each other on the network. If this is not possible, configure hotspot using Option 1 or Option 2.


1 Locate the product's IP address. To find the IP address, print a configuration page from the product:

- Press the **Setup** button.
- Select the **Reports** menu.
- Select **Config Report**.
- Press **OK**.

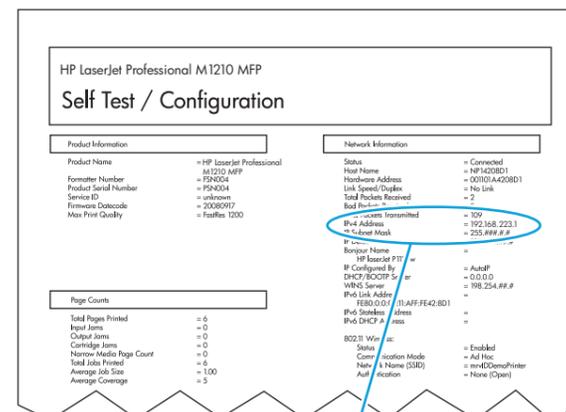

In this example, the product IP address is 192.168.223.1. This is the number you will need for the next step.

2 To open the EWS, type the IP address or host name of the product in the address field of a supported Web browser, and then press **Enter**.

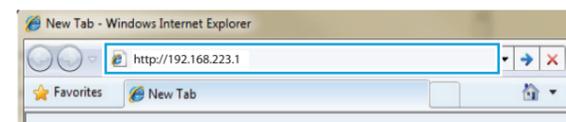

3 In the EWS, select the **Hotspot & Direct Print** tab. Select the **Enable** option, and then click **Apply**.

**Note:** If a printer admin password has been set in the EWS, type it here. If you do not know the password, contact the printer administrator. For more information about setting or changing the printer admin password, see **Set or change the printer admin password** at the end of this guide.



4 You also have the option to review and change Security, LAN, and PPPoE settings from the navigation menu on the left.




5 Click **Apply** to save the changes.

## Set or change the printer admin password

Use the HP Embedded Web Server to set a printer admin password or change an existing password.

**Note:** The admin password is different than the hotspot password. Use the admin password in the EWS to set up or change the product's configuration parameters.

- Open the EWS, and then click the **Admin Password** tab.
- Type the new password in the Password box and in the Confirm Password box.
- At the bottom of the window, click the **Apply** button to save the password.

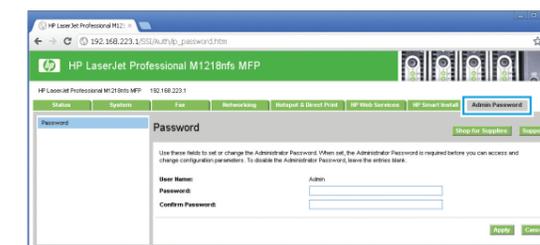

**NOTE:** If a password has previously been set, you are prompted to type the current password before you can change it.