



c150w


Digital Camera
Appareil numérique
Digitalkamera
Macchina Fotografica Digitale
Cámara Digital
Ψηφιακή Κάμερα
Cámara Digital
Digital Kamera
Aparat Cyfrowy
Digitale Camera
Dijital Kamera
Цифровая камера

Quick Start Guide
Guide de démarrage rapide
Kurzanleitung
Guida Veloce all'Avviamento
Guía de inicio rápido
Γρήγορος Οδηγός Εκκίνησης
Guia de Início Rápido
Hurtig Start Guide
Szybki Przewodnik
Beknopte handleiding
Hızlı Başlangıç Kılavuzu
Краткое руководство пользователя

For the full version of the c150w product user manual go to: www.hp.com/support
Pour la version complète du manuel d'utilisateur du modèle c150w, allez sur: www.hp.com/support
Für die vollständige Version der Bedienungsanleitung für das c150w-Produkt besuchen Sie die Webseite: www.hp.com/support
Per la versione completa del manuale dell'utente del prodotto c150w, andare a: www.hp.com/support
Para la ver la versión integra del manual del producto c150w visite: www.hp.com/support
Για την πλήρη έκδοση του εγχειριδίου χρήσης του προϊόντος c150w πηγαίετε στο: www.hp.com/support
Para a versão completa do manual do usuário do produto c150w ir para: www.hp.com/support
For fuld version af c150w produkt bruger manual gå til: www.hp.com/support
Pełna wersja instrukcji produktu c150w jest dostępna na stronie: www.hp.com/support
Ga voor de volledige versie van de handleiding van de c150w naar: www.hp.com/support
c150w ürün kullanım kılavuzunun tam sürümü için lütfen şu adresi ziyaret ediniz: www.hp.com/support
Полное руководство c150w можно найти здесь: www.hp.com/support

Functional Parts

Top view (1,2,3)

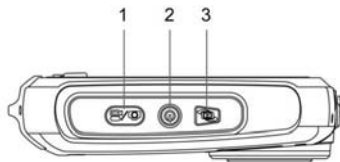


1. Shutter
2. Power on/off button
3. LCD switch button

Side view(4)




Front view (5,6,7,8)

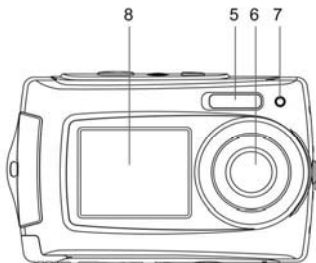


4. Strap hook
5. Flash light
6. Lens
7. Busy indicator
8. Small monitor

Side view (9)

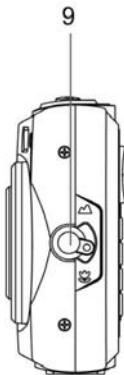



Back view (10,11,12,13,14,15,16) & Bottom view (17,18,19,20)

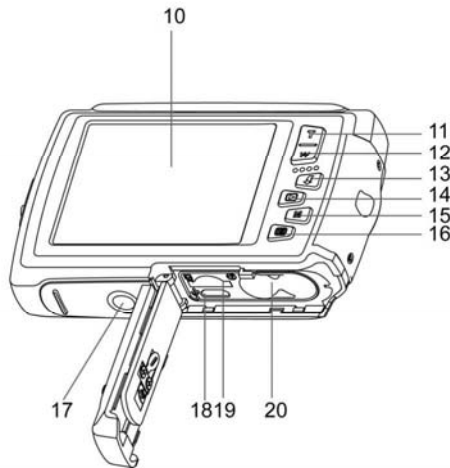

- 9. Macro/normal switch
- 10. LCD screen
- 11. Up/Tele
- 12. Down/Wide
- 13. Left / Flash light
- 14. Right / Playback
- 15. Mode Switch
- 16. Menu / Delete
- 17. Tripod connector
- 18. USB interface
- 19. Micro SD card slot
- 20. Battery compartment

Step 1. Insert the Batteries

1. Open the battery door

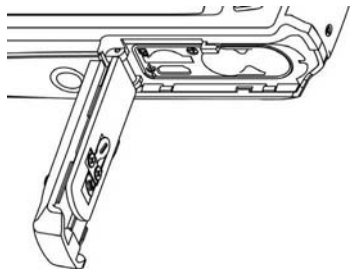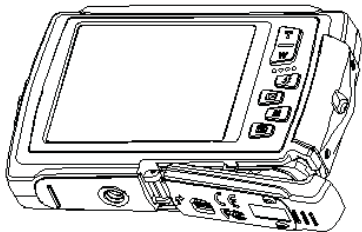

2. Insert 2 x AAA alkaline batteries into the camera.
3. Close the battery door.



Step 2. Insert a memory card

1. Turn off the camera first.
2. Open the battery door (please make sure the battery door was unlocked before open).
3. Insert the micro SD card into the camera.



Note: There is only one right direction to insert the micro SD memory card into the slot. Do not force the card into the memory card-slot, it may damage both the camera and the micro SD memory card.

Note: The micro SD memory card must be formatted before taking photographs.


Step 3. Setting Language / Date / Time

1. Power on the camera.
2. Press the Menu (☰) button to enter the settings mode.
3. Press the (▶) and W(∩) button to select language or date and time.
4. Press the shutter button to change setting.
5. Press the shutter button to confirm the selection.



Step 4. Use Auto Mode Capture

1. Power on the camera.
2. Use the LCD screen to compose your photograph.
3. Press the Shutter button and wait until the LCD display appears again with the photo you just captured.
 - a. Keep the camera steady until the photo is taken and displayed.
 - b. Taking pictures of fast-moving objects is not recommended.
 - c. The photo may be distorted when taking pictures in a moving vehicle.

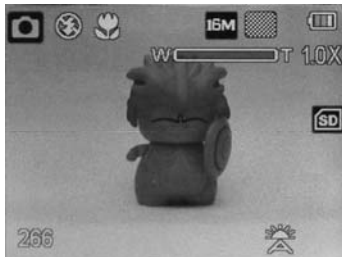


Step 5. Recording Video

1. Press the Mode button to put the camera in video recording mode. ()
2. Press the shutter button to start recording videos, press the right button to pause the recording or press the shutter button again to stop recording.



Step 6. Playback Photo / Video

1. Press the Playback (▶) button to get into Playback mode.
2. The last picture or video clip taken will be displayed. Press the W(☺) to get into the thumbnail mode. Press the Left /Right /Up /Down button to select the desired picture, and press the Shutter button to view.
3. When video clips are displayed, press the Up button to start playing the video and press the Up button again to pause the playback.

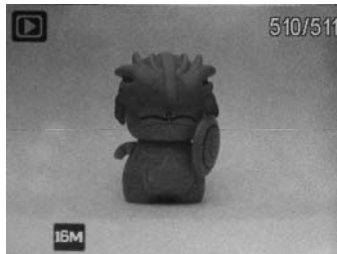

Step 7. Settings Mode

1. Press the Menu (☰) button to enter the settings mode.
2. Press the Left or Right button to select the setting menu.
3. Press the UP or Down button to select the function.
4. Press the shutter button to change setting.
5. Press the shutter button to confirm the selection.

