

More HP resources

Resource

HP support

For worldwide support, go to http://welcome.hp.com/country/us/en/wwwcontact_us.html.

Contents

- Online chat with an HP technician.
- Email support.
- Find telephone numbers.
- Locate HP service center locations.
- Select **Support**, and then select **Support and Troubleshooting** to access the User Guide.

Serial number, product number, model number, and IMEI number

- Back of tablet or on box.

Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100-240 V, 50/60 Hz, 0.3-1.0 A.

Note: The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

Temperature

Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

Relative humidity (noncondensing)

Operating: 10% to 90%

Product description

This product is a lightweight tablet and features a thin-panel display, a processor, RAM, integrated battery pack, and an external AC adapter. The printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. To access the latest user guide, go to <http://www.hp.com/support>, and select your country. Select **Drivers & Downloads**, and then follow the on-screen instructions.

Regulatory information

The *Product Notices* document provides country- and region-specific non-wireless and wireless regulatory notices and compliance information for the product. Some notices may not apply to your product.

One or more integrated wireless devices may be installed. In some environments, the use of wireless devices may be restricted. Such restrictions may apply aboard airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

Regulatory markings for your country or region may be located on the back of the tablet or may be located in the *Product Notices* document.

Regulatory Model Number

The Regulatory Model Number (RMN) is HSTNH-H410C. The RMN is located on the back of the tablet.



WARNING: To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.



WARNING: To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.




WARNING: To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).



WARNING! The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.



WARNING:  Listening to music at high volume levels and for extended durations can damage one's hearing. To reduce the risk of hearing damage, lower the volume to a safe, comfortable level and reduce the amount of time listening at high levels.

For your own safety, before using headsets or earphones, always reset the volume. Some headphones are louder than other headphones, even if the volume control setting is the same.

Changing the default audio or equalizer settings might lead to higher volume and should only be done with caution.

For your own safety, headsets or earphones used with this product should comply with the headphone limits in EN 50332-2.

 
If the product includes a headset or earphones, this combination is in compliance to EN 50332-1.

© Copyright 2014 Hewlett-Packard Development Company, L.P. Google is a trademark of Google Inc. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical and editorial errors or omissions contained herein.

Second Edition: April 2014

First Edition: April 2014


Quick Start

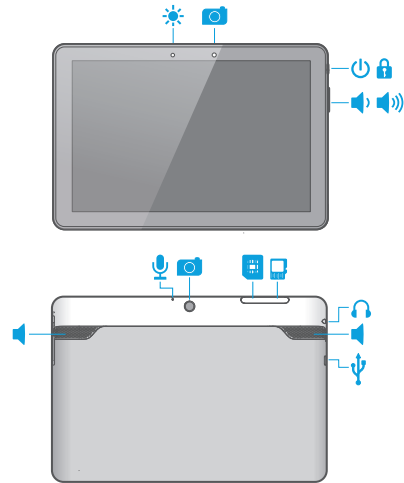

Note: Features may vary by model and country.


Setting up your tablet

 
- 1 If a SIM card is not preinstalled in the tablet, insert a SIM card (purchased separately) in the appropriate slot.

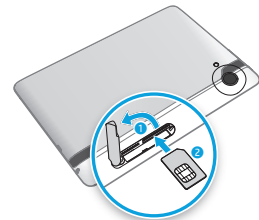

Lock and unlock

 - Lock**—Press the power button.
- Unlock**—Touch the screen and slide your finger in any direction to display the home screen.



- 3 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.









- 4 Follow the on-screen instructions to select a language and a wireless network.

Turn off the tablet

Press and hold the power button, touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button for several seconds to turn off the tablet.





Using your tablet

Home screen icons

-  **Phone**—Allows you to make a phone call.
-  **Contacts**—Allows you to store frequently called phone numbers.
-  **Search**—Allows you to type one or more keywords to search with the installed search app.
-  **Recent apps**—Opens a list of apps used recently.
-  **Home**—Opens or returns to the Home screen.
-  **Back**—Opens the previous screen.
-  **Voice search**—Allows you to touch , and then speak one or more keywords to search with the installed search app.

NOTE: The icons on the Home screen and the appearance of the Home screen may vary.

Make a call

Touch  on the Home screen, touch the keys to enter the phone number, and then touch .
— or —
Touch , touch a contact name, and then touch .

Answer a call

Slide  toward .

Reject a call

Slide  toward .


Reject a call with a message

Slide  toward .

End a call

 
Touch .

Return a recent call

Touch , and then touch a recent call.

Use gestures

The following gestures can be used with your tablet:



Display apps, widgets, and notification

Apps—All apps are displayed on the home screen.

Widgets—Long press the home screen to display the **Set Home Screen** menu, and then select **Widgets**.

Notification—Swipe down from the top of the screen to see your notifications.


Back up your data

HP strongly encourages that you periodically back up your personal data on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions. For more information, see the *User Guide* on the HP Web site.

 
Change your tablet's view

The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

NOTE: Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top, and then touch **Auto-rotate**  to lock or unlock the screen rotation.

Insert a SIM card or a micro SD card

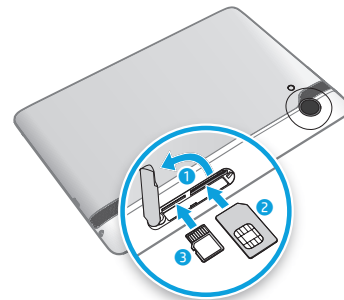

Printed in China
Imprimé en Chine
Stampato in Cina
Impreso en China
Impreso na China
中国印刷
중국에서 인쇄



768338-002