



Installation Instructions

HP Retail Integrated 2x20 Display



L6015tm
L6017tm



RP2 2000
RP2 2030



RP7 7800
RP7 7100

Copyright © 2014 Hewlett-Packard Development Company, L.P. The information contained herein is subject to change without notice. Printed in

First Edition: April 2014



765300-001

NOTE: Refer to the *HP L6015tm and L6017tm Retail Touch Monitors User Guide*, the *HP RP7 Retail System Model 7800 Hardware Reference Guide*, the *HP RP7 Retail System Model 7100 Hardware Reference Guide*, or the *HP RP2 Retail System Hardware Reference Guide* at www.hp.com for detailed instructions on installing USB modules.

Before You Begin

Before installing the 2x20 display, be sure to power off the system and disconnect the power cord from the power outlet.

WARNING! To avoid the risk of serious injury or damage to the system, ensure that the power cord is unplugged from the electrical outlet at the wall before installing the 2x20 display. Failure to do so may expose you to the risk of electric shock.

NOTE: For regulatory and safety notices, refer to the *Product Notices* included with your product.

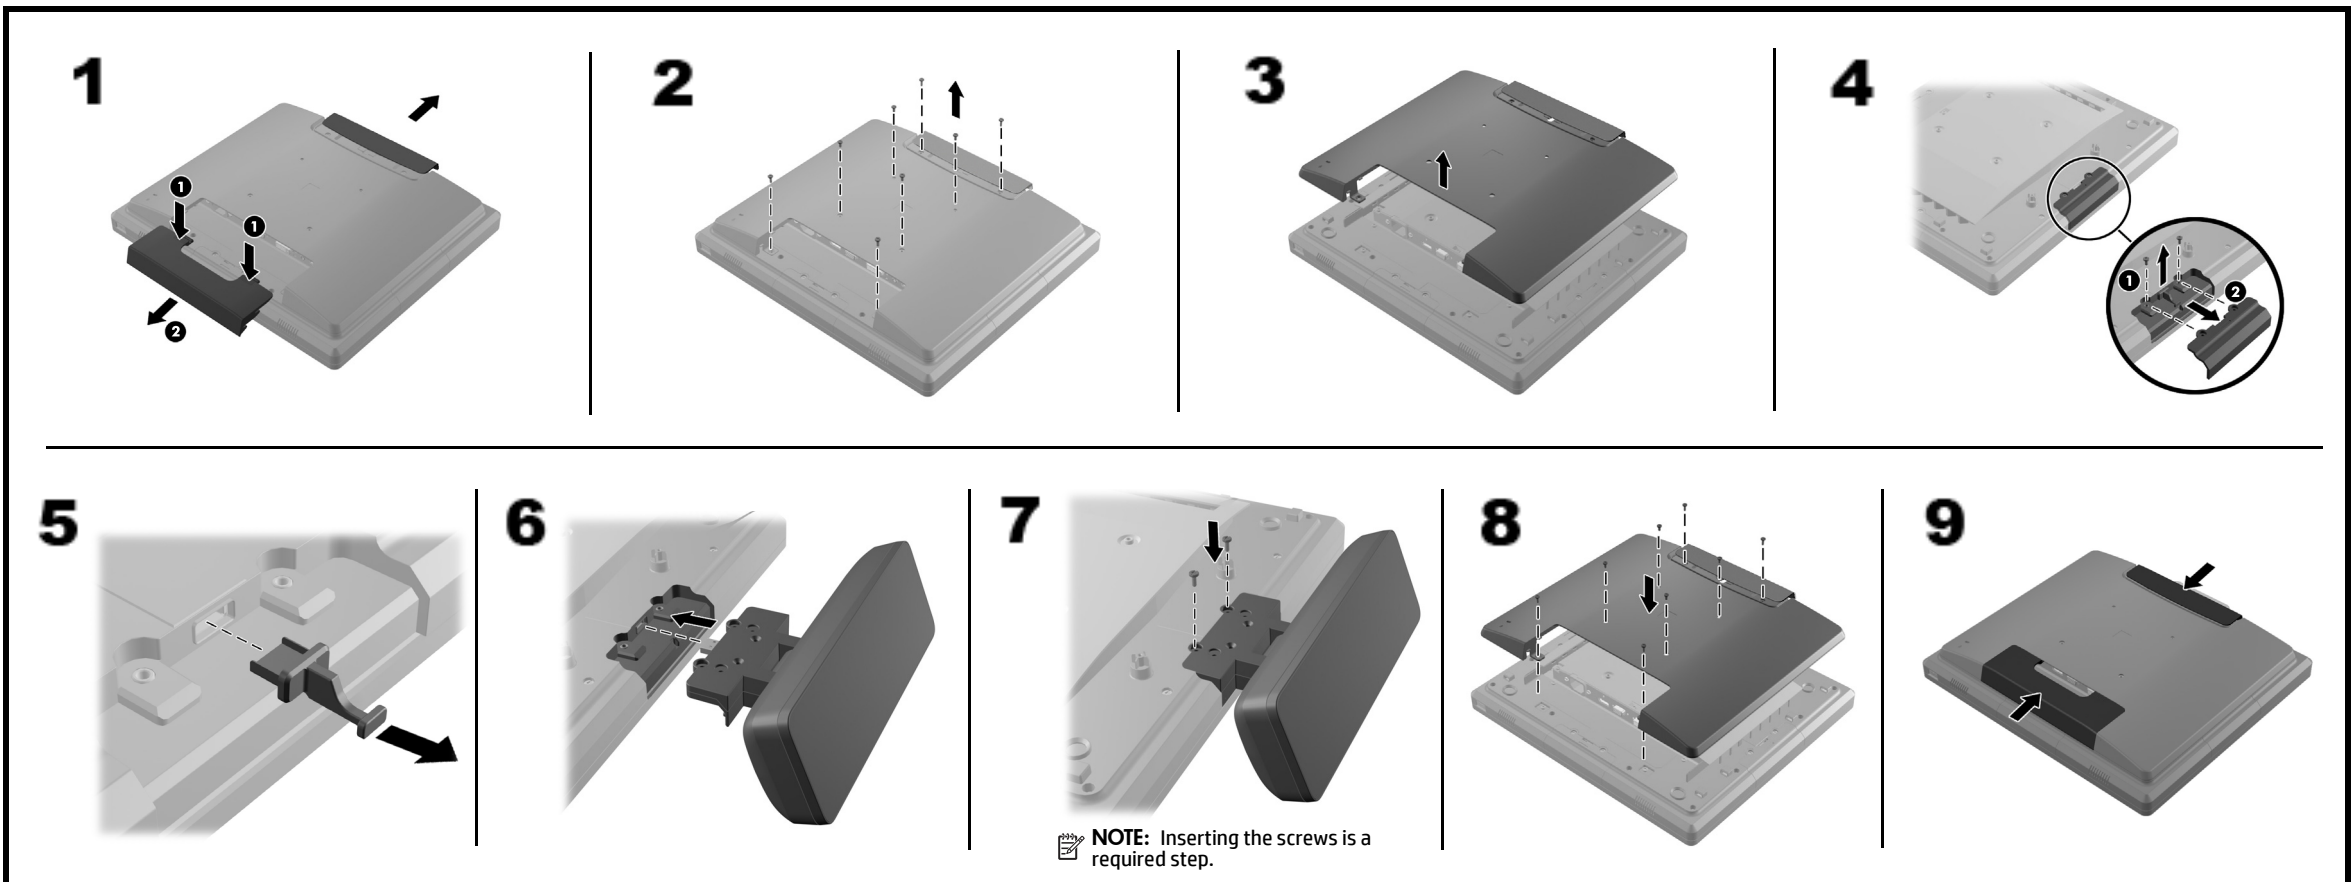
Configuring the Display

To configure the 2x20 display, refer to the *HP Point of Sale Configuration Guide* (available in English only). The guide is located with the documentation on your retail computer and at www.hp.com. To access the guide on the retail computer:

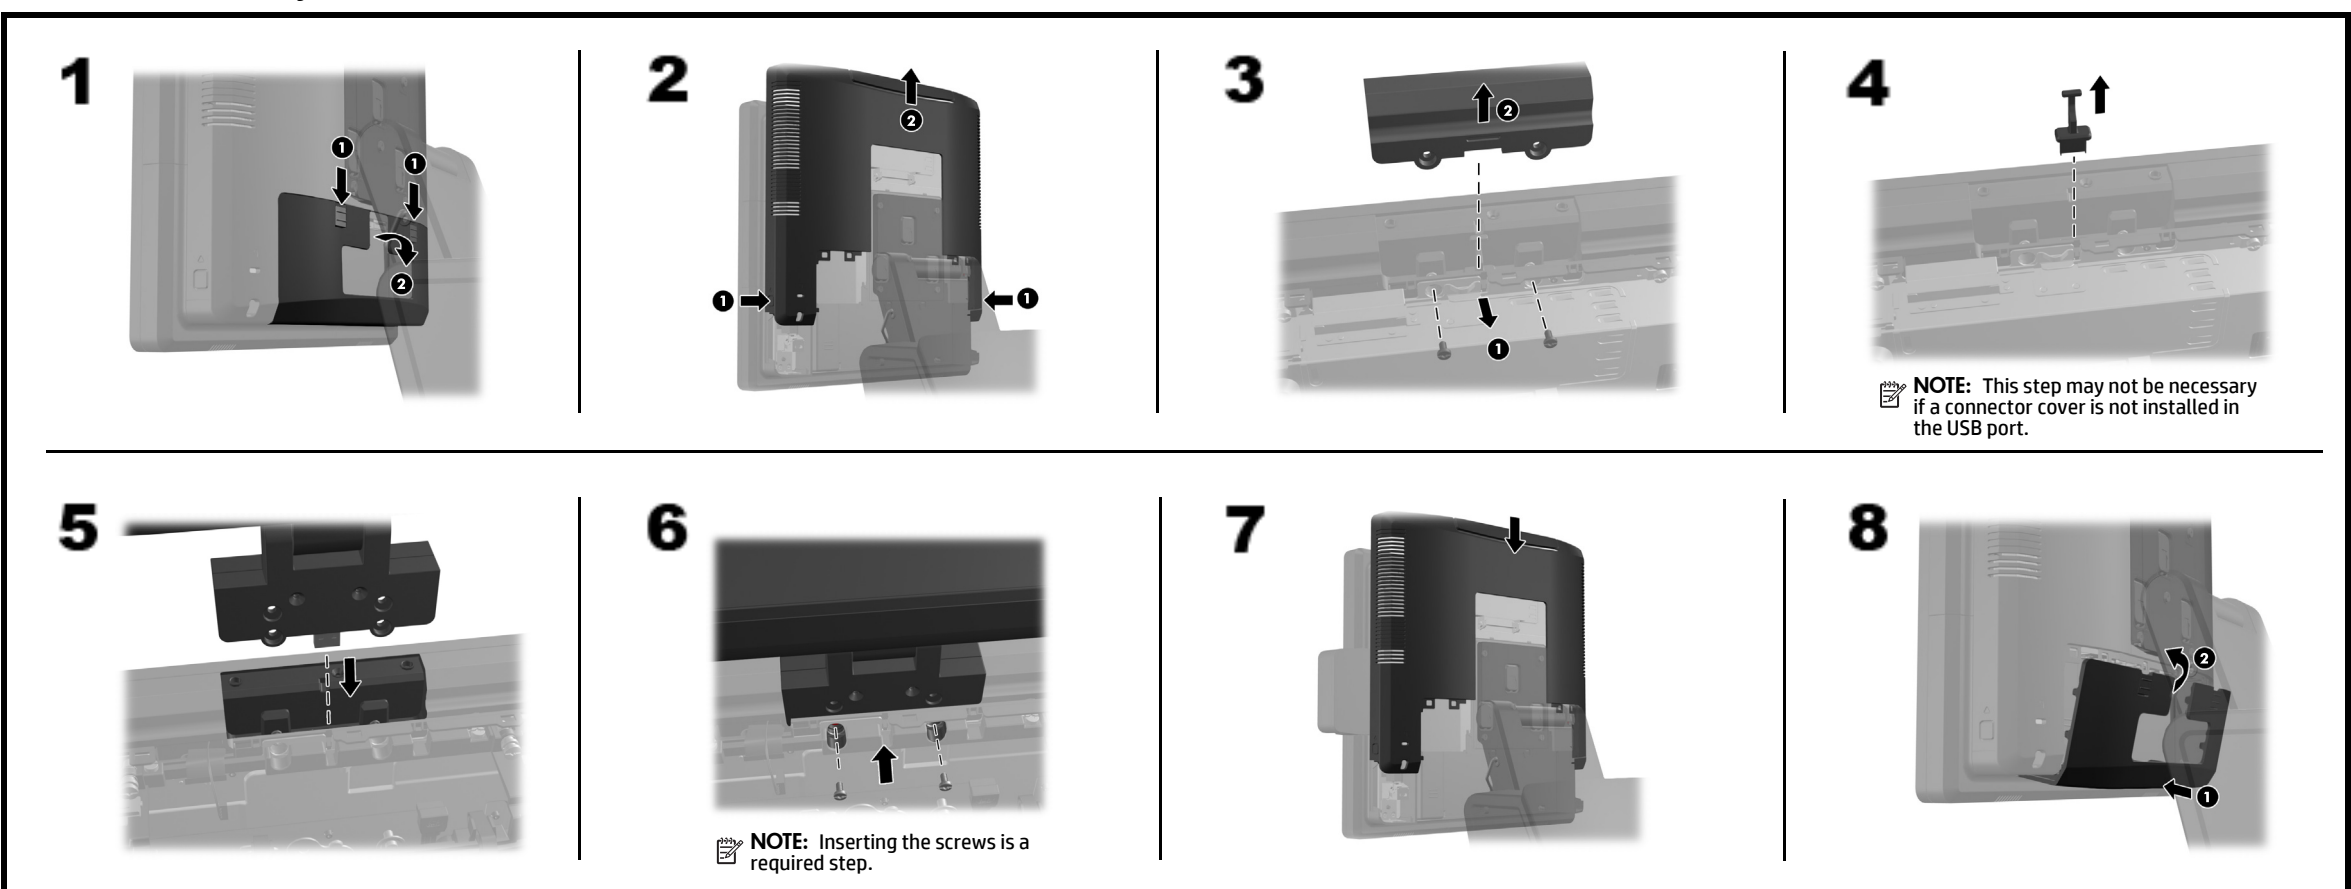
- In Microsoft Windows XP or Windows Embedded POSReady 2009, select **Start > All Programs > HP Point of Sale Information**.
- In Microsoft Windows 7, Windows Embedded POSReady 7, Windows 8.x, or Industry 8.1, select **Start > HP Point of Sale Information**.

Check www.hp.com/support for updated software or documentation that became available between the time your product was manufactured and delivered to you.

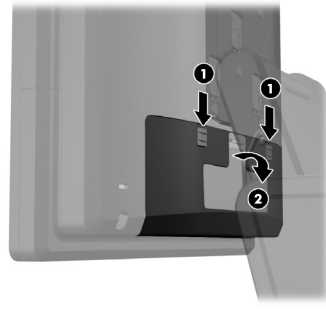
HP L6015tm and L6017tm Retail Touch Monitors

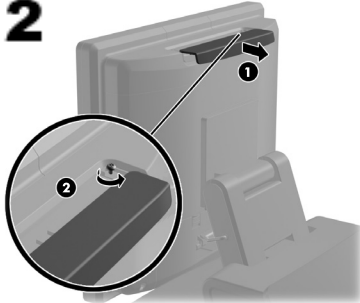


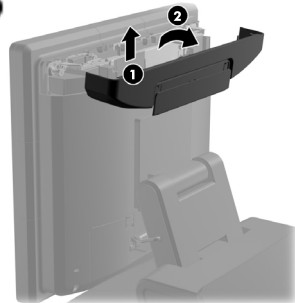
HP RP7 Retail System Model 7800

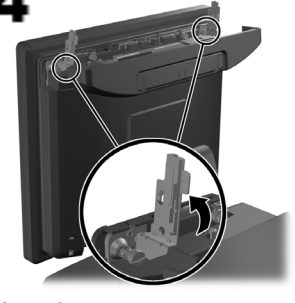


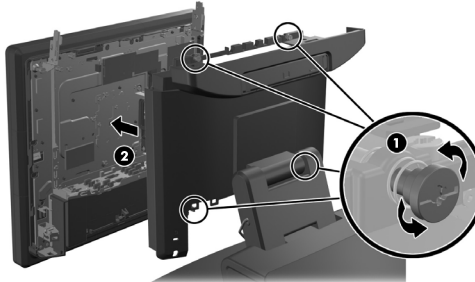
HP RP7 Retail System Model 7100

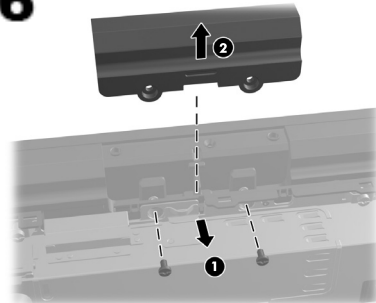
1 

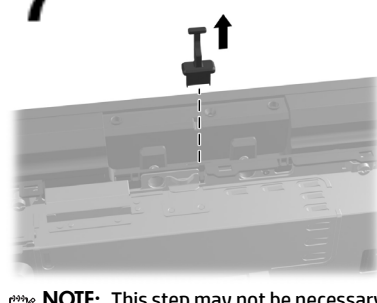
2 
NOTE: This step may not be necessary if the security screw is already loosened.


3 


4 
CAUTION: You must rotate antenna brackets up to remove front panel.

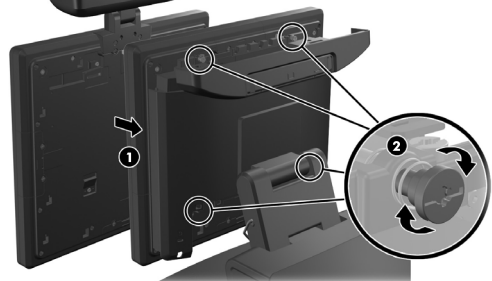
5 

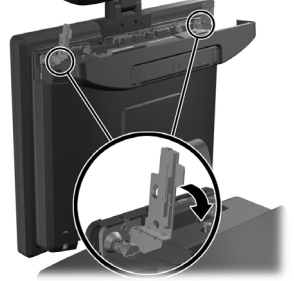
6 

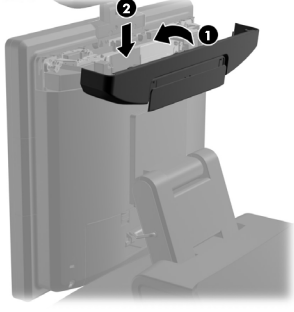
7 
NOTE: This step may not be necessary if a connector cover is not installed in the USB port.

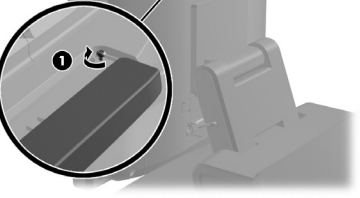
8 

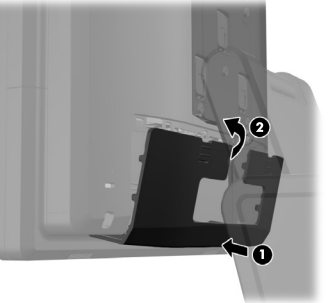
9 
NOTE: Inserting the screws is a required step.

10 

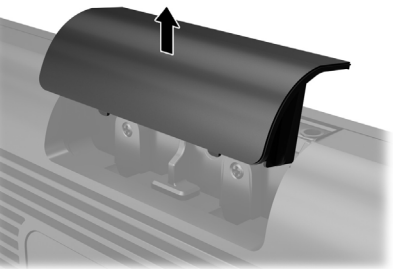
11 

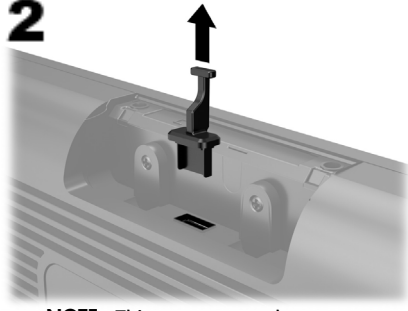
12 

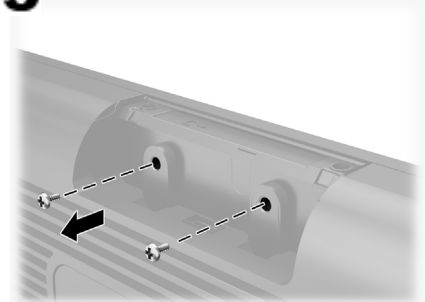
13 
NOTE: Tightening the security screw is optional.

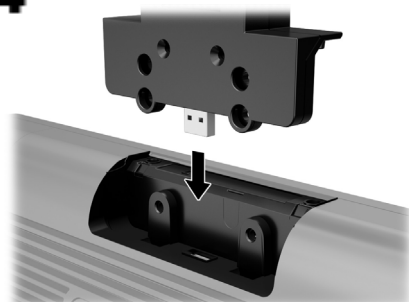
14 

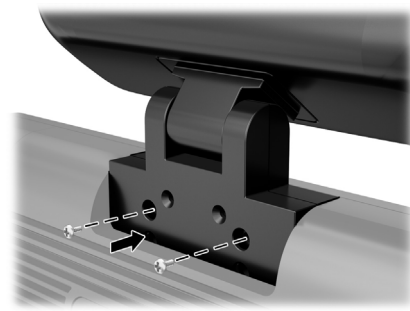
HP RP2 Retail System Models 2000 and 2030

1 

2 
NOTE: This step may not be necessary if a connector cover is not installed in the USB port.

3 

4 

5 
NOTE: Inserting the screws is a required step.

Online Technical Support

For the online access to technical support information, self-solve tools, online assistance, community forums or IT experts, broad multivendor knowledge base, monitoring and diagnostic tools, go to <http://www.hp.com/support>.

Documentation Feedback

HP is committed to providing documentation that meets your needs. To help us improve the documentation, please send any suggestions, comments, or errors to doc.feedback@hp.com. Include the document title and part number (located near the barcode) when submitting your feedback.