



HP Pavilion 15 Notebook PC
HP Pavilion TouchSmart 15 Notebook PC
Maintenance and Service Guide

© Copyright 2013, 2014 Hewlett-Packard Development Company, L.P.

AMD and AMD Radeon are trademarks of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Intel, Pentium, and Core are trademarks of Intel Corporation in the U.S. and other countries. Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation.

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions of Windows 8. This computer may require upgraded and/or separately purchased hardware, drivers and/or software to take full advantage of Windows 8 functionality. See <http://www.microsoft.com> for details.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Second Edition: August 2014

First Edition: November 2013

Document Part Number: 747432-002

Important Notice about Customer Self-Repair Parts

 **CAUTION:** Your computer includes Customer Self-Repair parts and parts that should only be accessed by an authorized service provider. See Chapter 5, "Removal and replacement procedures for Customer Self-Repair parts," for details. Accessing parts described in Chapter 6, "Removal and replacement procedures for Authorized Service Provider only parts," can damage the computer or void your warranty.

Safety warning notice

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

Table of contents

| | |
|--|-----------|
| 1 Product description | 1 |
| 2 External component identification | 6 |
| Finding your hardware and software information | 6 |
| Locating hardware | 6 |
| Locating software | 6 |
| Right side | 7 |
| Left side | 8 |
| Display | 9 |
| Top | 10 |
| TouchPad | 10 |
| Lights | 10 |
| Buttons and speakers | 11 |
| Keys | 13 |
| Bottom | 14 |
| Labels | 15 |
| 3 Illustrated parts catalog | 16 |
| Computer major components | 16 |
| Display assembly subcomponents | 23 |
| Miscellaneous parts | 24 |
| Mass storage devices | 26 |
| Sequential part number listing | 26 |
| 4 Removal and replacement procedures preliminary requirements | 34 |
| Tools required | 34 |
| Service considerations | 34 |
| Plastic parts | 34 |
| Cables and connectors | 35 |
| Drive handling | 35 |
| Grounding guidelines | 36 |
| Electrostatic discharge damage | 36 |
| Packaging and transporting guidelines | 37 |
| Workstation guidelines | 37 |
| Equipment guidelines | 38 |

| | |
|---|-----------|
| 5 Removal and replacement procedures for Customer Self-Repair parts | 39 |
| Component replacement procedures | 39 |
| Battery | 40 |
| Service door | 42 |
| Memory module | 42 |
| WLAN module | 44 |
| Optical drive | 45 |
| | |
| 6 Removal and replacement procedures for Authorized Service Provider parts | 48 |
| Component replacement procedures | 48 |
| Display panel | 49 |
| Keyboard | 51 |
| Top cover | 55 |
| Hard drive | 59 |
| Power button board | 62 |
| TouchPad button board | 64 |
| Optical drive connector cable | 66 |
| System board | 68 |
| RTC battery | 74 |
| Fan | 76 |
| Heat sink assembly | 78 |
| Power connector cable | 81 |
| Speakers | 83 |
| Display assembly | 84 |
| | |
| 7 Windows – Using Setup Utility (BIOS) and HP PC Hardware Diagnostics (UEFI) | 91 |
| Starting Setup Utility (BIOS) | 91 |
| Updating the BIOS | 91 |
| Determining the BIOS version | 91 |
| Downloading a BIOS update | 92 |
| Using HP PC Hardware Diagnostics (UEFI) | 93 |
| Downloading HP PC Hardware Diagnostics (UEFI) to a USB device | 93 |
| | |
| 8 Ubuntu Linux – Using Setup Utility (BIOS) and System Diagnostics | 94 |
| Starting Setup Utility | 94 |
| Using Setup Utility | 94 |
| Changing the language of Setup Utility | 94 |
| Navigating and selecting in Setup Utility | 94 |
| Displaying system information | 95 |
| Restoring factory default settings in Setup Utility | 95 |

| | |
|--|------------|
| Exiting Setup Utility | 95 |
| Updating the BIOS | 96 |
| Determining the BIOS version | 96 |
| Downloading a BIOS update | 96 |
| Using Advanced System Diagnostics | 97 |
| 9 Specifications | 98 |
| Computer specifications | 98 |
| 15.0-inch display specifications | 98 |
| Hard drive specifications | 99 |
| 10 Windows – Backing up, restoring, and recovering | 100 |
| Creating recovery media and backups | 100 |
| Creating HP Recovery media | 100 |
| Restore and recovery | 101 |
| Recovering using HP Recovery Manager | 102 |
| What you need to know | 102 |
| Using the HP Recovery partition (select models only) | 102 |
| Using HP Recovery media to recover | 103 |
| Changing the computer boot order | 103 |
| Removing the HP Recovery partition | 104 |
| 11 Ubuntu Linux Backing up, restoring, and recovering | 105 |
| Performing a system recovery | 105 |
| Creating the restore DVDs | 105 |
| Creating a restore image on a USB device | 105 |
| Performing recovery using the restore DVD | 106 |
| Backing up your information | 106 |
| 12 Power cord set requirements | 108 |
| Requirements for all countries | 108 |
| Requirements for specific countries and regions | 108 |
| 13 Recycling | 110 |
| Index | 111 |

1 Product description

| Category | Description | AMD | Intel |
|---------------------|---|-----|-------|
| Product Name | HP Pavilion 15 Notebook PC | √ | √ |
| | HP Pavilion TouchSmart 15 Notebook PC | | |
| Processors | Processors are attached to the system board. | | |
| Intel® | 4th generation processors: | | √ |
| | <ul style="list-style-type: none"> Intel Core® i7-4500U 1.8 GHz processor (2.0 GB L3 cache, 15 W) Intel Core i5-4200U 1.6 GHz processor (2.0 GB L3 cache, 15 W) 3rd generation processors: <ul style="list-style-type: none"> Intel Core i3-3217U DC (1.8 GHz, 3 MB L3 Cache, 1600MHz DDR3, 17 W) Intel Pentium 2117U DC (1.8 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) Intel Celeron 1007U DC (1.5 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) | | |
| AMD™ | <ul style="list-style-type: none"> AMD A10-5745M 2.9 GHz/2.1 GHz processor (4 MB L2, 1333MHz DDR3L) quad core, 25 W AMD A8-5545M 2.7 GHz/1.7 GHz (4 MB L2, 1333MHz DDR3L) quad core, 19 W AMD A10-4655M 2.8 GHz/2.0 GHz (4 MB L2, 1333MHz DDR3L) quad core, 25 W AMD A8-4555M (2.4 GHz/1.6 GHz, 4 MB L2, 1333MHz DDR3L) quad core, 19 W AMD A6-5200 2.0 GHz (2 MB L2, 1600MHz DDR3L), quad core 25 W AMD A4-5000 1.5 GHz (2 MB L2, 1600MHz DDR3L), quad core, 15 W AMD E1-2500 1.4 GHz (1 MB L2, 1600MHz DDR3L), dual core, 15 W AMD UMA A76M A10-5745M 8670M 2 GB dedicated video memory and A10-5745M processor (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L quad core, 25 W) AMD Radeon 8670M 1 GB dedicated video memory A6-5200 processor (2.6 GHz/2.1 GHz, 2 MB L2, 1600 MHz DDR3L, dual core, 17 W) | √ | |
| HP | HP A4-5050 (1.55 GHz, 2MB L2 1600 MHz DDR3L) quad core, 13.5 W | √ | |
| Chipset | Intel Lynx Point-LP PCH (Integrated in MCP), (ULT one chip solution) | | √ |
| | Intel Panther Point PCH, Intel HM76 Express Chipset, (ULV two chip solution) | | |
| | AMD A76M FCH | √ | |
| | AMD Integrated SoC FCH | | |
| Graphics | Internal graphics: | | √ |
| | Intel graphics: | | |
| | Intel HD Graphics 4400 (Intel Haswell) | | |
| | Intel HD Graphics 4000 (Intel Ivy Bridge), (on computer models equipped with an Intel Core i7/i5/i3 3000-series processor) | | |
| | Intel HD Graphics (for use with Intel Pentium and Celeron processors) | | |

| Category | Description | AMD | Intel |
|---------------|---|-----|-------|
| | Support HD decode, DX11/11.1, HDMI, and Optimus. Supports Px5.5 AMD Start Now (AMD IOIC) 1.0 and AMD Start Now (AMD IOIC) 2.0 | | |
| | AMD graphics: | √ | |
| | <ul style="list-style-type: none"> • AMD Radeon HD 8610G • AMD Radeon HD 8510G • AMD Radeon HD 8400G • AMD Radeon HD 8330 • AMD Radeon HD 8280 • AMD Radeon HD 8240 • AMD Radeon HD 7600G • AMD Radeon HD 7500G | | |
| | Switchable discrete graphics: | | √ |
| | <ul style="list-style-type: none"> • NVIDIA N14P-GV2 GeForce GT R 740M with 2 GB of dedicated video memory (258 MB×16 DDR3 900-MHz×4 PCs) | | |
| | <ul style="list-style-type: none"> • AMD Sun XT Radeon HD with 1024 MB of dedicated video memory (128 MB×16 DDR3 1 GHz x 4 pcs) • AMD Sun XT Radeon HD 8670M with 1 GB of dedicated video memory (256Mx16 DDR3 1 GHz x 4 pcs) • AMD Sun XT Radeon HD 8670M with 2 GB of dedicated video memory (256Mx16 DDR3 1 GHz x 4 pcs) | √ | √ |
| | Dual Graphics: | √ | |
| | <ul style="list-style-type: none"> • AMD Radeon HD 8610G + HD 8670M • AMD Radeon HD 8510G + HD 8670M • AMD Radeon HD 7620G + HD 8670M • AMD Radeon HD 7600G + HD 8670M | | |
| Panel | 15.6 in, light-emitting diode (LED), SVA, high-definition (HD), BrightView (1366×768) display, 3.6-mm; typical brightness: 200 nits 15.6 in, SVA, high-definition (HD), BrightView (1366×768) display, 3.0-mm; typical brightness: 200 nits SVA + eTP touch + Mutto G1F/GIS OGS (Multitouch) All display assemblies include 2 wireless local area network (WLAN) antenna cables 16:9 Ultra Wide Aspect Ratio | √ | √ |
| Memory | Two SODIMM customer-accessible/upgradable memory module slots DDR3L-1600-MHz dual channel support DDR3L-1600-MHz single channel support Supports up to 12 GB max system memory (DDR3L-1600MHz module), (select models only) Supports the following system RAM configurations: | √ | √ |
| | <ul style="list-style-type: none"> • 12288 MB (8192 MB×1+ 4096 MB×1) • 8192 MB (8192 MB×1 or 4096 MB×2); not supported on computer models equipped with a 32-bit operating system | | |

| Category | Description | AMD | Intel |
|------------------------|--|-----|-------|
| | <ul style="list-style-type: none"> 6144 MB (4096 MB×1 + 2048 MB×1); not supported on computer models equipped with a 32-bit operating system 4096 MB (4096 MB×1 or 2048 MB×2) 2048 MB (2048 MB×1) | | |
| Hard drive | <p>Supports 6.35-cm (2.5-in) hard drives in 9.5-mm (.37-in) and 7.0-mm (.28-in) thicknesses (all hard drives use the same bracket)</p> <p>Customer-accessible</p> <p>Serial ATA</p> <p>Accelerometer protection support</p> <p>Supports the following hard drives:</p> <ul style="list-style-type: none"> 1 TB, 5400 rpm, 9.5 mm 750 GB, 5400 rpm, 9.5 mm 500 GB, 5400 rpm, 9.5 mm and 7.0 mm <p>Supports 24 GB mSATA solid-state drive with system memory up to 8 GB (for use with select computer models with Intel processors and switchable discrete graphics)</p> | √ | √ |
| | <p>Supports the following hybrid drives:</p> <ul style="list-style-type: none"> 1 TB, 5400 rpm, + 8 GB NAND Hybrid HDD; 9.5 mm 750 GB, 5400 rpm, + 8 GB NAND Hybrid HDD; 9.5 mm 500 GB, 5400 rpm, + 8 GB NAND Hybrid HDD; 7 mm | | √ |
| Optical drive | <p>Fixed</p> <p>Serial ATA</p> <p>9.5 mm tray load</p> <ul style="list-style-type: none"> DVD±RW Double-Layer SuperMulti Drive BD combo for computer models with Intel processors, no support for Ubuntu Linux <p>Zero power Optical drive.</p> | √ | √ |
| Audio and video | <p>HD audio</p> <p>Dual speakers</p> <p>Supports Nuance Voice Recognition</p> <p>HP TrueVision HD webcam (fixed, no tilt with activity LED; 1280×720 by 30 frames per second)</p> <p>Two dual array, digital microphones with appropriate beam-forming, echo-cancellation, noise-reduction software</p> | √ | √ |
| Ethernet | Integrated 10/100 NIC | √ | √ |
| Wireless | <p>Integrated wireless local area network (WLAN) options by way of wireless module</p> <p>One half-size mini card/PCI Express (HMC/PCIe) slot</p> <p>Two WLAN antennas built into display assembly</p> | √ | √ |
| | <p>Support for the following WLAN formats:</p> <ul style="list-style-type: none"> Qualcomm Atheros AR9485 802.11bgn 1x1 Wi-Fi adapter (with single antenna) Realtek RTL8188EE 802.11bgn 1x1 Wi-Fi adapter (with single antenna) | √ | √ |

| Category | Description | AMD | Intel |
|-----------------------------------|---|-----|-------|
| | <ul style="list-style-type: none"> Qualcomm Atheros QCA9565 802.11 bgn 1x1 Wi-Fi + Bluetooth 4.0 combo adapter (with single antenna), no support for Ubuntu Linux A Qualcomm Atheros AR9485 802.11 bgn Wi-Fi adapter Ralink RT3290LE 802.11bgn 1x1 Wi-Fi + BT 4.0 Combo Adapter | | |
| | Intel Smart Connect Technology 4.1 | | √ |
| | Compatible with Miracast-certified devices | √ | |
| | Wireless display support (WiFi direct) | | |
| External media cards | HP Multi-Format Memory Card Reader slot with push-push technology, supporting the following digital card formats: <ul style="list-style-type: none"> Secure Digital (SD) Memory Card Secure Digital High Capacity (SDHC) Memory Card Secure Digital eXtended Capacity (SDXC) Memory Card | √ | √ |
| Ports | <ul style="list-style-type: none"> AC Smart Pin adapter plug (4.5 mm barrel) Combination audio-out (stereo headphone)/audio-in (mono microphone) RJ-45 (Ethernet) USB 3.0 (2 ports), USB 2.0 (1 port) | √ | √ |
| | <ul style="list-style-type: none"> HDMI 1.4 output supporting 1920x1200 @ 60Hz Hot Plug / Unplug and auto detect for correct output to wide-aspect vs. standard aspect video | √ | |
| | <ul style="list-style-type: none"> HDMI version 1.4 output supporting 1920 x 1080 @ 60 Hz Hot Plug / Unplug and auto detect for correct output to wide-aspect versus standard aspect video | | √ |
| Keyboard/ pointing devices | <p>Full-size (15.0-in), black textured Island-style, with numeric keypad with black keyboard frame.</p> <p>Full-size (15.0-in.), white painted Island-style, with numeric keypad with white keyboard frame.</p> <p>Multitouch gestures enabled.</p> <p>Supports Windows® 8 Modern TrackPad Gestures</p> <p>Support PS/2 interface</p> | √ | √ |
| Power requirements | <p>Supports the following AC adapters:</p> <p>1M length power cord</p> <p>65 W HP Smart AC adapter (nPFC, 3-wire, 4.5 mm)</p> <p>45 W HP Smart AC adapter (nPFC, 3-wire, 4.5 mm, nslim)</p> | √ | √ |
| | 90 W Smart AC adapter (PFC, 3-wire, 4.5 mm) | √ | |
| | <p>Supports the following batteries (battery is user-removable)</p> <p>Supports battery fast charge</p> <ul style="list-style-type: none"> 4 Cell battery - 41 Whr (2.8 AH) | √ | √ |
| Security | Security cable lock | √ | √ |
| | Intel IPT support | √ | √ |
| | Intel AT-p Ready support | | |

| Category | Description | AMD | Intel |
|-------------------------|--|-----|-------|
| Operating system | Preinstalled: | √ | √ |
| | • Windows 8.1 Standard 64-bit | | |
| | • Windows 8.1 Professional 64-bit | | |
| | FreeDOS 2.0 Ubuntu Linux | | |
| Serviceability | End user replaceable parts: | √ | √ |
| | • AC adapter | | |
| | • Battery | | |
| | • Keyboard (select model replacement only) | | |
| | • Memory module | | |
| | • Optical drive | | |
| | • WLAN module | | |

2 External component identification

Finding your hardware and software information

Locating hardware

To find out what hardware is installed on your computer:

1. From the Start screen, type **c**, and then select **Control Panel**.
2. Select **System and Security**, and then in the **System** area, click **Device Manager**.

A list reveals all the devices installed on your computer.

Locating software

To find out what software is installed on your computer:


1. From the Start screen, right-click using the mouse.

– or –

Swipe from the top of the TouchPad to reveal all apps.


2. Select the **All apps** icon.

Right side

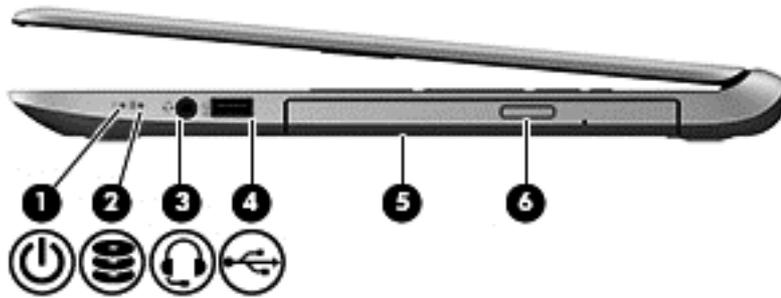

| Component | Description |
|--|---|
| (1)  Power light | <ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components. Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power. <p>NOTE: For select models, the Intel® Rapid Start Technology feature is enabled at the factory. Rapid Start Technology allows your computer to resume quickly from inactivity.</p> |
| (2)  Hard drive light | <ul style="list-style-type: none"> Blinking white: The hard drive is being accessed. |
| (3)  Audio-out (headphone)/Audio-in (microphone) jack | <p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable.</p> <p>WARNING! To reduce the risk of personal injury, adjust the volume before using headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety and Environmental Notices</i>. To access this guide, from the Start screen, type <code>support</code>, select the HP Support Assistant app, select My computer, and then select User guides.</p> <p>NOTE: When a device is connected to a headphone jack, the computer speakers are disabled.</p> |
| (4)  USB 2.0 port | <p>Connects an optional USB device, such as a keyboard, mouse, external drive, printer, scanner or USB hub.</p> |
| (5) Optical drive | <p>Reads and writes (select models only) to an optical disc.</p> |
| (6) Optical drive eject button | <p>Opens the optical drive.</p> |

Left side

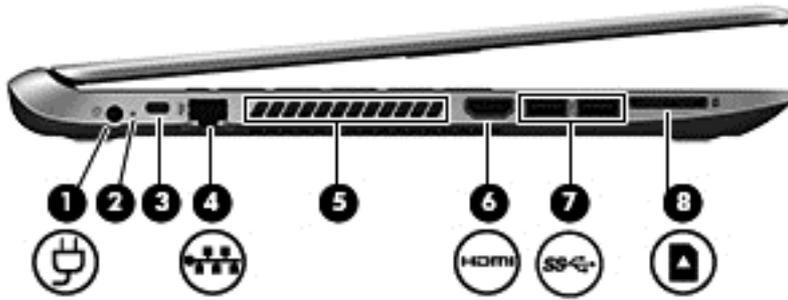

| Component | Description |
|---|---|
| (1) Power connector | Connects an AC adapter. |
| (2)  AC adapter light | <ul style="list-style-type: none"> White: The AC adapter is connected and the battery is charged. Amber: The AC adapter is connected and the battery is charging. Off: The computer is using battery power. |
| (3)  Security cable slot | Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen. |
| (4)  RJ-45 (network) jack RJ-45 (network) status lights (2) | Connects a network cable. RJ-45 status lights White: The network is connected. Amber: Activity is occurring on the network. |
| (5) Vent | Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation. |
| (6)  HDMI port | Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed HDMI device. |
| (7)  USB 3.0 ports (2) | Connect optional USB devices. |
| (8)  Memory card reader | Reads data from and writes data to memory cards such as Secure Digital (SD). |

Display




| Component | Description |
|------------------------------|--|
| (1) WLAN antennas (2)* | Send and receive wireless signals to communicate with wireless local area networks (WLANs). |
| (2) Internal microphones (2) | Records sound. |
| (3) Webcam light | On: The webcam is in use. |
| (4) Webcam | Records video, captures still photographs, and provides access to video conferences and online chat by means of streaming video. To use the webcam, from the Start screen, type c , and then select CyberLink YouCam from the list of applications. |

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.


Top

TouchPad

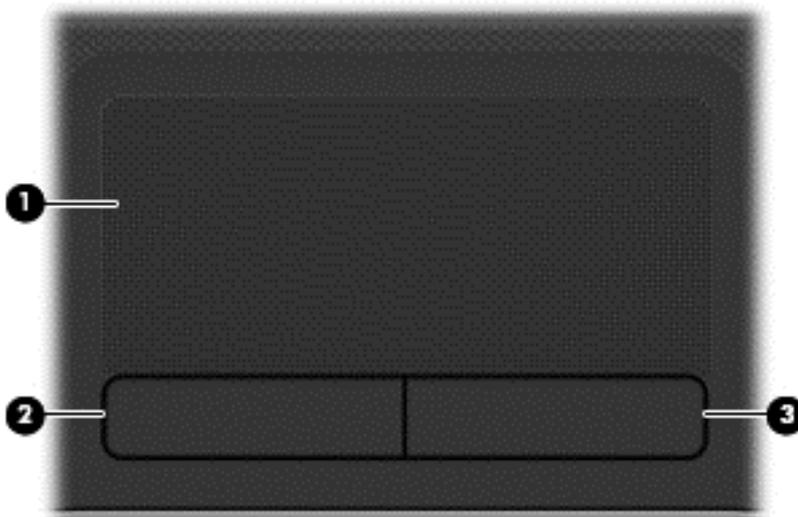


| Component | Description |
|---------------------------|---|
| (1) TouchPad zone | Moves the on-screen pointer and selects or activates items on the screen. NOTE: The TouchPad also supports edge-swipe gestures. |
| (2) Left TouchPad button | Functions like the left button on an external mouse. |
| (3) Right TouchPad button | Functions like the right button on an external mouse. |

Lights

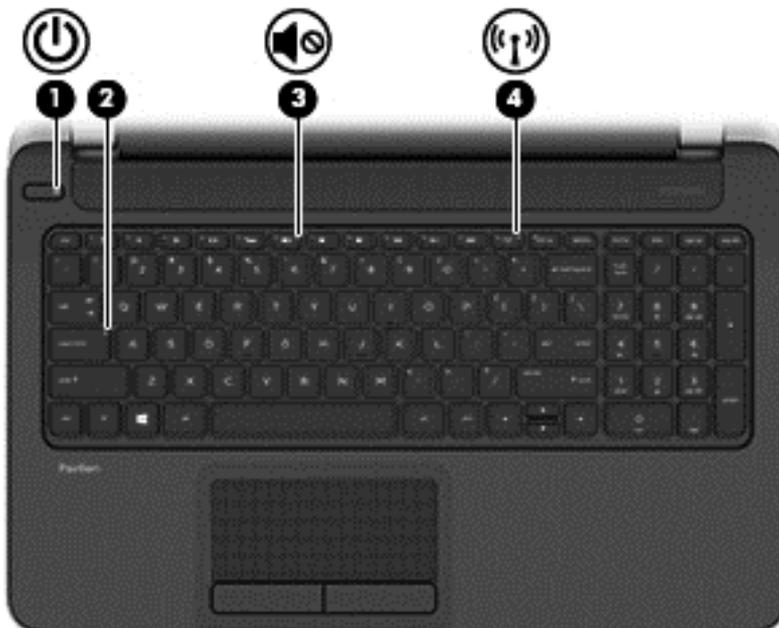

| Component | Description |
|--|--|
| (1)  Power light | <ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components. Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power. <p>NOTE: For select models, the Intel® Rapid Start Technology feature is enabled at the factory. Rapid Start Technology allows your computer to resume quickly from inactivity.</p> |
| (2) Caps lock light | On: Caps lock is on, which switches the keys to all capital letters. |
| (3)  Mute light | <ul style="list-style-type: none"> Amber: Computer sound is off. Off: Computer sound is on. |
| (4)  Wireless light | <p>On: An integrated wireless device, such as a wireless local area network (WLAN) device is on.</p> <p>NOTE: On some models, the wireless light is amber when all wireless devices are off.</p> |


Buttons and speakers

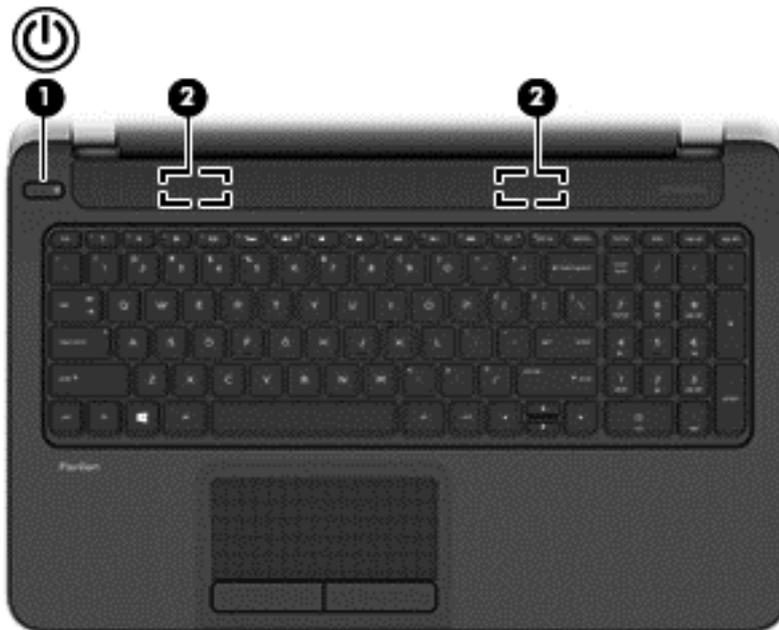

| Component | Description |
|--|---|
| (1)  Power button | <ul style="list-style-type: none"> When the computer is off, press the button to turn on the computer. When the computer is on, press the button briefly to initiate Sleep. |


| Component | Description |
|-------------------------|--|
| | <ul style="list-style-type: none"> • When the computer is in the Sleep state, press the button briefly to exit Sleep. • When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>CAUTION: Pressing and holding down the power button will result in the loss of unsaved information.</p> <p>If the computer has stopped responding and Microsoft® Windows® shutdown procedures are ineffective, press and hold the power button down for at least 5 seconds to turn off the computer.</p> <p>NOTE: For select models, the Intel® Rapid Start Technology feature is enabled at the factory. Rapid Start Technology allows your computer to resume quickly from inactivity.</p> <p>To learn more about your power settings, see your power options. From the Start screen, type <code>power</code>, select Settings, and then select Power Options from the list of applications.</p> |
| (2) Speakers (2) | Produce sound. |

Keys

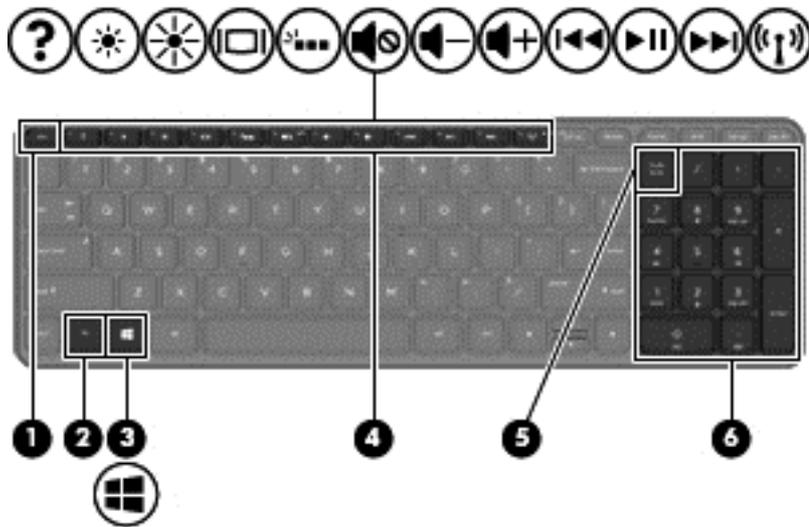

| Component | Description |
|--|--|
| (1) esc key | Reveals system information when pressed in combination with the fn key. |
| (2) fn key | Executes frequently used system functions when pressed in combination with the esc key. |
| (3)  Windows key | Returns you to the Start screen from an open app or the Windows desktop. NOTE: Pressing the Windows key again will return you to the previous screen. |
| (4) Action keys | Execute frequently used system functions. NOTE: On select models, the f5 action key turns the radiance backlight keyboard feature off or on. |
| (5) num lock key | Controls the function of the integrated numeric keypad. Press the key to alternate between the standard numeric function of an external keypad (selected the factory) and the navigational function (indicated by the directional arrows on the keys). NOTE: The keypad function that is active when the computer is turned off is reinstated when the computer is turned back on. |
| (6) Integrated numeric keypad | Set at the factory to function like an external numeric keypad. To alternate between this numeric function and the navigational function (indicated by the directional arrows on the keys), press the num lock key. |

Bottom

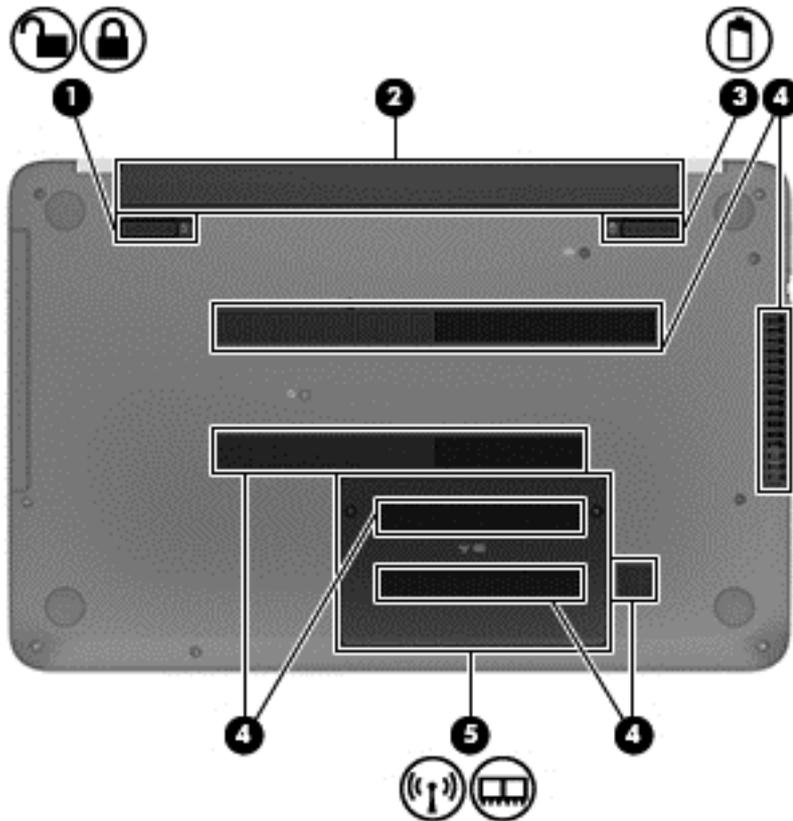

| Component | Description |
|--|---|
| (1)  | Battery lock latch Unlocks the battery. |
| (2) | Battery bay Holds the battery. |
| (3)  | Battery release latch Releases the battery from the battery bay, after the battery lock latch has been released. |
| (4) | Vents (6) Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation. |
| (5)   | Service door Provides access to the wireless LAN (WLAN) module slot and the memory module slots. CAUTION: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact support through Help and Support. From the Start screen, type h , and then select Help and Support . |

Labels


The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

IMPORTANT: All labels described in this section will be located in one of 3 places depending on your computer model: Affixed to the bottom of the computer, located in the battery bay, or under the service door.

For help finding these locations, refer to [Bottom on page 14](#).

- Service label—Provides important information to identify your computer. When contacting support, you will probably be asked for the serial number, and possibly for the product number or the model number. Locate these numbers before you contact support.

NOTE: Your service labels will resemble the example shown below.

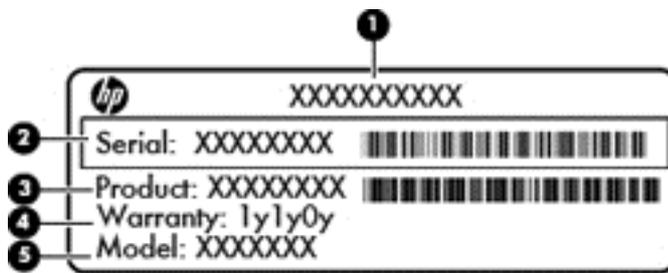

Component

- | Component |
|---------------------------------------|
| (1) Product name |
| (2) Serial number |
| (3) Product number |
| (4) Warranty period |
| (5) Model number (select models only) |


- Regulatory label(s)—Provide(s) regulatory information about the computer.
- Wireless certification label(s)—Provide(s) information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

3 Illustrated parts catalog

Computer major components

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Labels on page 15](#) for details.

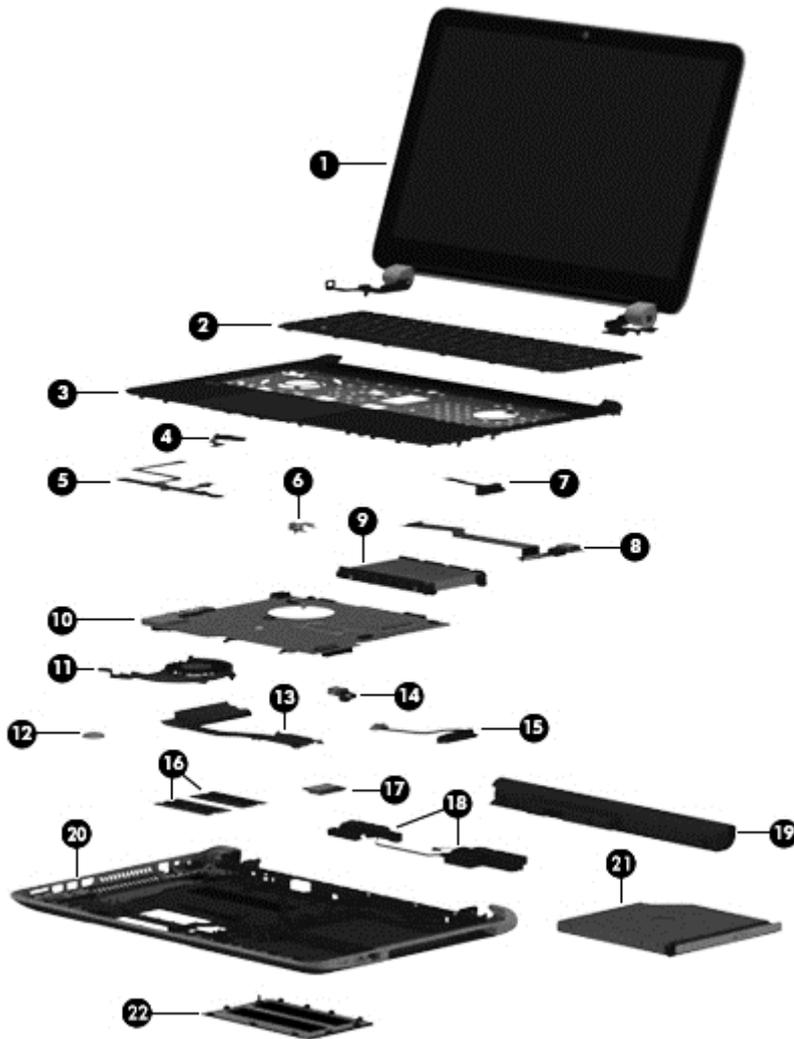

| Item | Component | Spare part number |
|------|---|-------------------|
| (1) | Display assembly: The display assembly is spared at the subcomponent level only. For more display assembly spare part information, see Display assembly subcomponents on page 23 . | |

| Item | Component | Spare part number |
|------------|---|-------------------|
| | Aluminum with midnight black | 732073-001 |
| | Sparkling black | 732074-001 |
| | Pearl white | 737170-001 |
| | Flyer red | 737171-001 |
| | Revolutionary blue | 737172-001 |
| | Regal purple | 737173-001 |
| | Mineral black | 737174-001 |
| | Goji berry | 737175-001 |
| | Hazel berry | 737176-001 |
| | Raspberry | 737177-001 |
| (2) | Keyboard (includes keyboard cable): | |
| | Textured island style black finish for use in Canada | 719853-DB1 |
| | Textured island style black finish for use in the United States | 719853-001 |
| | Textured island style black finish for use in Japan | 719853-291 |
| | Textured island style black finish for use in United Kingdom | 719853-031 |
| | Textured island style black finish for use in South Korea | 719853-AD1 |
| | Textured island style black finish for use in Taiwan | 719853-AB1 |
| | Textured island style black finish for use in Thailand | 719853-281 |
| | Textured island style black finish for use in Germany | 719853-041 |
| | Textured island style black finish for use in France | 719853-051 |
| | Textured island style black finish for use in Italy | 719853-061 |
| | Textured island style black finish for use in Spain | 719853-071 |
| | Textured island style black finish for use in Portugal | 719853-131 |
| | Textured island style black finish for use in Turkey | 719853-141 |
| | Textured island style black finish for use in Greece | 719853-151 |
| | Textured island style black finish for use in Latin America | 719853-161 |
| | Textured island style black finish for use in Saudi Arabia | 719853-171 |
| | Textured island style black finish for use in Hungary | 719853-211 |
| | Textured island style black finish for use in Russian | 719853-251 |
| | Textured island style black finish for use in Bulgaria | 719853-261 |
| | Textured island style black finish for use in Romania | 719853-271 |
| | Textured island style black finish for use in Belgium | 719853-A41 |
| | Textured island style black finish for International use | 719853-B31 |
| | Textured island style black finish for use in Slovenia | 719853-BA1 |

| Item | Component | Spare part number |
|-------------|--|--------------------------|
| | Textured island style black finish for use in Israel | 719853-BB1 |
| | Textured island style black finish for use in Switzerland | 719853-BG1 |
| | Textured island style black finish for use in Nordic regions | 719853-DH1 |
| | Textured island style black finish for use in Czech Republic and Slovakia | 719853-FL1 |
| | Textured island style black finish for use in Northwest Africa | 719853-FP1 |
| | Painted island style white finish for use in the United States | 720597-001 |
| | Painted island style white finish for use in the United Kingdom | 720597-031 |
| | Painted island style white finish for use in Greece | 720597-041 |
| | Painted island style white finish for use in France | 720597-051 |
| | Painted island style white finish for use in Italy | 720597-061 |
| | Painted island style white finish for use in Spain | 720597-071 |
| | Painted island style white finish for use in Portugal | 720597-131 |
| | Painted island style white finish for use in Turkey | 720597-141 |
| | Painted island style white finish for use in Greece | 720597-151 |
| | Painted island style white finish for use in Latin America | 720597-161 |
| | Painted island style white finish for use in Saudi Arabia | 720597-171 |
| | Painted island style white finish for use in Hungary | 720597-211 |
| | Painted island style white finish for use in Russia | 720597-251 |
| | Painted island style white finish for use in Bulgaria | 720597-261 |
| | Painted island style white finish for use in Romania | 720597-271 |
| | Painted island style white finish for use in Thailand | 720597-281 |
| | Painted island style white finish for use in Japan | 720597-291 |
| | Painted island style white finish for use in Belgium | 720597-A41 |
| | Painted island style white finish for use in Taiwan | 720597-AB1 |
| | Painted island style white finish for use in South Korea | 720597-AD1 |
| | Painted island style white finish for International use | 720597-B31 |
| | Painted island style white finish for use in Slovenia | 720597-BA1 |
| | Painted island style white finish for use in Israel | 720597-BB1 |
| | Painted island style white finish for use in Switzerland | 720597-BG1 |
| | Painted island style white finish for use in Canada | 720597-DB1 |
| | Painted island style white finish for use in Nordic regions | 720597-DH1 |
| | Painted island style white finish for use in the Czech Republic and Slovakia | 720597-FL1 |
| | Painted island style white finish for use in Northwest Africa | 720597-FP1 |
| (3) | Top cover (includes TouchPad board and cable): | |

| Item | Component | Spare part number |
|-------------|--|-------------------|
| | In pearl white finish | 732091-001 |
| | In flyer red finish | 732092-001 |
| | In revolutionary blue finish | 732093-001 |
| | In regal purple finish | 732094-001 |
| | In sparkling black finish | 732095-001 |
| | In aluminium metal finish | 732096-001 |
| | In mineral black finish | 737178-001 |
| | In Goji berry finish | 737179-001 |
| | In hazel berry finish | 737180-001 |
| | In raspberry finish | 737181-001 |
| (4) | Power button board (includes cable) | 732076-001 |
| (5) | TouchPad button board (includes cable) | 732078-001 |
| (6) | Power connector bracket is available with the power connector, (spare part number 732067-001) | |
| (7) | Optical drive connector cable is available with the optical drive, (spare part number 732075-001) | |
| (8) | Audio/USB port | 732077-001 |
| (9) | Hard drive (does not include hard drive connector cable or hard drive rubber bracket): | |
| | 1 TB, 5400 rpm, 7.0 mm/9.5 mm | 676521-005 |
| | 750 GB, 5400 rpm, 7.0 mm/9.5 mm | 634250-005 |
| | 500 GB, 5400 rpm, 7.0 mm | 683802-005 |
| | 500 GB, 5400 rpm, 9.5 mm | 669299-005 |
| | 1 TB, 5400 rpm + 8 GB NAND hybrid, 9.5 mm, for use with computer models with Intel processors | 731999-005 |
| | 750 GB 5400 rpm + 8 GB NAND hybrid, 9.5 mm, for use with computer models with Intel processors | 732001-005 |
| | 500 GB 5400 rpm + 8 GB NAND hybrid, 7 mm, for use with computer models with Intel processors | 732000-005 |
| | Hard Drive Hardware Kit (not illustrated, includes hard drive rubber bracket, 2 hard drive retention brackets, and hard drive connector cable). | 732071-001 |
| (10) | System board (includes replacement thermal material): | |
| | For computer models equipped with Intel processors and discrete graphics | |
| | 4th generation | |
| | Intel Core i7-4500U 1.8 GHz processor (4.0 MB L3 cache, 15 W) for use with FreeDOS and Ubuntu | 751493-001 |
| | Intel Core i7-4500U 1.8 GHz processor (4.0 MB L3 cache, 15 W for use with Windows Standard | 751493-501 |
| | Intel Core i7-4500U 1.8 GHz processor (4.0 MB L3 cache, 15 W for use with Windows Pro | 751493-601 |
| | Intel Core i5-4200U 740M 1.6-GHz (2 GB DC BGA 15 W) for use with FreeDOS and Ubuntu | 736377-001 |


| Item | Component | Spare part number |
|--|---|-------------------|
| | Intel Core i5-4200U 740M 1.6-GHz (2 GB DC BGA 15 W) for use with Windows Standard | 736377-501 |
| | Intel Core i5-4200U 740M 1.6-GHz (2 GB DC BGA 15 W) for use with Windows Professional | 736377-601 |
| | Intel Core i5-4200U 840M 1.6-GHz (2 GB DC BGA 15 W) for use with FreeDOS and Ubuntu | 751494-001 |
| | Intel Core i5-4200U 840M 1.6-GHz (2 GB DC BGA 15 W) for use with Windows Standard | 751494-501 |
| | Intel Core i5-4200U 840M 1.6-GHz (2 GB DC BGA 15 W) for use with Windows Professional | 751494-601 |
| | Intel Core i5-4200M 840M 1.6-GHz (2 GB DC BGA 15 W) for use with FreeDOS and Ubuntu | 754312-001 |
| | Intel Core i5-4200M 840M 1.6-GHz (2 GB DC BGA 15 W) for use with Windows Standard | 754312-501 |
| | Intel Core i5-4200U 8670M 1.6-GHz (2 GB DC BGA 15 W) for use with Windows Professional | 754312-601 |
| For computer models equipped with Intel 3rd generation processors | | |
| | Intel Celeron 1007U DC (1.5 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) for use with FreeDOS and Ubuntu | 737981-001 |
| | Intel Celeron 1007U DC (1.5 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Standard | 737981-501 |
| | Intel Celeron 1007U DC (1.5 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Professional | 737981-601 |
| | Intel Core i3-3217U DC (1.8 GHz, 3 MB L3 Cache, 1600MHz DDR3, 17 W) for use with FreeDOS and Ubuntu | 737982-001 |
| | Intel Core i3-3217U DC (1.8 GHz, 3 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Standard | 737982-501 |
| | Intel Core i3-3217U DC (1.8 GHz, 3 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Professional | 737982-601 |
| | Intel Pentium 2117U DC (1.8 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) for use with FreeDOS and Ubuntu | 737983-001 |
| | Intel Pentium 2117U DC (1.8 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Standard | 737983-501 |
| | Intel Pentium 2117U DC (1.8 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Professional | 737983-601 |
| For computer models equipped with AMD UMA processors | | |
| | AMD A4-5000 1.5 GHz (2 MB, L2, 1600MHz DDR3L, Quad 15 W) for use with FreeDOS and Ubuntu | 734826-001 |
| | AMD A4-5000 1.5 GHz (2 MB, L2, 1600MHz DDR3L, Quad 15 W) for use with Windows Standard | 734826-501 |
| | AMD A4-5000 1.5 GHz (2 MB, L2, 1600MHz DDR3L, Quad 15 W) for use with Windows Professional | 734826-601 |
| | AMD A6-5000 1.5 GHz (2 MB, L2, 1600MHz DDR3L, Quad 15 W) for use with FreeDOS and Ubuntu | 734827-001 |
| | AMD A6-5000 1.5 GHz (2 MB, L2, 1600MHz DDR3L, Quad 15 W) for use with Windows Standard | 734827-501 |
| | AMD A6-5000 1.5 GHz (2 MB, L2, 1600MHz DDR3L, Quad 15 W) for use with Windows Professional | 734827-601 |

| Item | Component | Spare part number |
|------|---|-------------------|
| | AMD A8-5545M A76M 2.7-GHz/1.7-GHz (4-MB L2, 1333MHz DDR3L Quad 19 W) for use with FreeDOS and Ubuntu. | 734829-001 |
| | AMD A8-5545M A76M 2.7-GHz/1.7-GHz (4-MB L2, 1333MHz DDR3L Quad 19 W) for use with Windows Standard | 734829-501 |
| | AMD A8-5545M A76M 2.7-GHz/1.7-GHz (4-MB L2, 1333MHz DDR3L Quad 19 W) for use with Windows Professional. | 734829-601 |
| | AMD A8- 4555M 2.4 GHz/1.6 GHz (4 MB, L2, 1333MHz DDR3L Quad 19 W) for use with FreeDOS and Ubuntu | 737140-001 |
| | AMD A8- 4555M 2.4 GHz/1.6 GHz (4 MB, L2, 1333MHz DDR3L Quad 19 W) for use with Windows Standard | 737140-501 |
| | AMD A8- 4555M 2.4 GHz/1.6 GHz (4 MB, L2, 1333MHz DDR3L Quad 19 W) for use with Windows Professional | 737140-601 |
| | AMD E1-2500 1.4 GHz (1 MB, L2, 1600MHz DDR3L, Dual 15 W) for use with FreeDOS and Ubuntu | 737141-001 |
| | AMD E1-2500 1.4 GHz (1 MB, L2, 1600MHz DDR3L, Dual 15 W) for use with Windows Standard | 737141-501 |
| | AMD E1-2500 1.4 GHz (1 MB, L2, 1600MHz DDR3L, Dual 15 W) for use with Windows Professional | 737141-601 |
| | AMD A10-5745M A76M 2.9 GHz/2.1 GHz (4 MB, L2, 1333MHz DDR3L Quad 25 W) for use with FreeDOS and Ubuntu | 738124-001 |
| | AMD A10-5745M A76M 2.9 GHz/2.1 GHz (4 MB, L2, 1333MHz DDR3L Quad 25 W) for use with Windows Standard | 738124-501 |
| | AMD A10-5745M A76M 2.9 GHz/2.1 GHz (4 MB, L2, 1333MHz DDR3L Quad 25 W) for use with Windows Professional | 738124-601 |
| | For computer models equipped with AMD Discrete processors | |
| | AMD A4-5000 8670M 1.5 GHz (1 GB, L2, 1600MHz DDR3L Quad 15 W) for use with FreeDOS and Ubuntu | 734820-001 |
| | AMD A4-5000 8670M 1.5 GHz (1 GB, L2, 1600MHz DDR3L Quad 15 W) for use with Windows Standard | 734820-501 |
| | AMD A4-5000 8670M 1.5 GHz (1 GB, L2, 1600MHz DDR3L Quad 15 W) for use with Windows Professional | 734820-601 |
| | AMD A6-5200 8670M 2.0 GHz (1 GB, L2, 1600MHz DDR3L, Quad 25 W) for use with FreeDOS and Ubuntu | 734821-001 |
| | AMD A6-5200 8670M 2.0 GHz (1 GB, L2, 1600MHz DDR3L, Quad 25 W) for use with Windows Standard | 734821-501 |
| | AMD A6-5200 8670M 2.0 GHz, L2 (1 GB, 1600MHz DDR3L, Quad 25 W) for use with Windows Professional | 734821-601 |
| | AMD A10-5745M 8670M 2 GB (2.9-GHz/2.1-GHz, L2, 1333MHz DDR3L Quad 25 W) for use with FreeDOS and Ubuntu. | 734824-001 |
| | AMD A10-5745M 8670M 2.9 GHz/2.1 GHz (2 GB L2, 1333MHz DDR3L Quad 25 W) for use with Windows Standard. | 734824-501 |
| | AMD A10-5745M 8670M 2.9 GHz/2.1 GHz (2 GB L2, 1333MHz DDR3L Quad 25 W) for use with Windows Professional. | 734824-601 |

| Item | Component | Spare part number |
|-------------|--|-------------------|
| | AMD A10-4655M 8670M (2.8-GHz/2.0-GHz, 2-GB L2, 1333MHz DDR3L Quad 25 W) for use with FreeDOS and Ubuntu. | 737138-001 |
| | AMD A10- 4655M 8670M 2.8 GHz/2.0 GHz (2 GB L2, 1333MHz DDR3L Quad 25 W) for use with Windows Standard. | 737138-501 |
| | AMD A10- 4655M 8670M 2.8 GHz/2.0 GHz (2 GB L2, 1333MHz DDR3L Quad 25 W) for use with Windows Professional. | 737138-601 |
| | For computer models equipped with HP UMA processors | |
| | HP A4-5050 (1.55 GHz, 2MB L2 1600 MHz DDR3L) quad core, 13.5 W | 755270-001 |
| | HP A4-5050 (1.55 GHz, 2MB L2 1600 MHz DDR3L) quad core, 13.5 W | 755270-501 |
| | HP A4-5050 (1.55 GHz, 2MB L2 1600 MHz DDR3L) quad core, 13.5 W | 755270-601 |
| (11) | Fan | 732068-001 |
| (12) | RTC battery | 697917-001 |
| (13) | Heat sink assembly (includes replacement thermal material): | |
| | Heat sink for use only on computer models equipped with a graphics subsystem with AMD UMA memory 19 W | 734448-001 |
| | Heat sink for use only on computer models equipped with a graphics subsystem with AMD UMA memory 25 W | 734449-001 |
| | Heat sink for use only on computer models equipped with a graphics subsystem with AMD discrete memory 19 W | 734450-001 |
| | Heat sink for use only on computer models equipped with a graphics subsystem with AMD discrete memory 25 W | 734451-001 |
| | For use only on computer models equipped with Intel HM76 chipset and UMA graphics | 742330-001 |
| | For use only on computer models equipped with Intel HM76 chipset and switchable discrete graphics | 742331-001 |
| | For use only on computer models equipped with Intel processors and UMA graphics | 742581-001 |
| | For use only on computer models equipped with Intel processors and switchable discrete graphics | 742582-001 |
| (14) | Power connector (includes bracket): | 732067-001 |
| (15) | Hard drive connector cable is available in the hardware kit, part number 732071-001 | |
| (16) | Memory modules (2, PC3L, 12800, 1600-MHz): | |
| | 2 GB memory module | 691739-001 |
| | 4 GB memory module | 691740-001 |
| | 8 GB memory module PC3L 12800 1600Mhz SHARED | 693374-001 |
| | 8 GB memory module PC3 12800 1600Mhz SHARED | 670034-001 |
| (17) | WLAN module: | |
| | Ralink RT3290LE 802.11 bgn 1×1 Wi-Fi and Bluetooth 4.0 combo adapter | 690020-001 |
| | Qualcomm Atheros AR9485 802.11 bgn Wi-Fi adapter | 675794-001 |
| | Realtek RTL8188EE 802.11bgn Wi-Fi Adapter for use on all computer models | 709848-001 |

| Item | Component | Spare part number |
|------|--|-------------------|
| | Intel Wireless-N 7260BN 802.11 bgn 2x2 Wi-Fi + Bluetooth 4.0 combo adaptor for use with computer models with Intel processors, not supported on Ubuntu Linux | 717384-001 |
| | Qualcomm Atheros QCA9565 802.11 bgn 1x1 Wi-Fi + Bluetooth 4.0 combo | 733476-001 |
| (18) | Speakers (include, speaker cables, and 4 rubber isolators) | 732084-001 |
| (19) | 4 cell, 41-Wh, 2.8-Ah, Li-ion battery | 728460-001 |
| (20) | Base enclosure (includes battery release latch mechanism and RJ45 cover) | 742580-001 |
| (21) | Optical Drive SuperMulti DVD±R/RW Double-Layer Drive (includes bezel and bracket) | 732075-001 |
| | BD combo for computer models with Intel processors, no support for Ubuntu Linux | 749173-001 |
| (22) | Service door (part of the plastics kit 732079-001) | |

Display assembly subcomponents

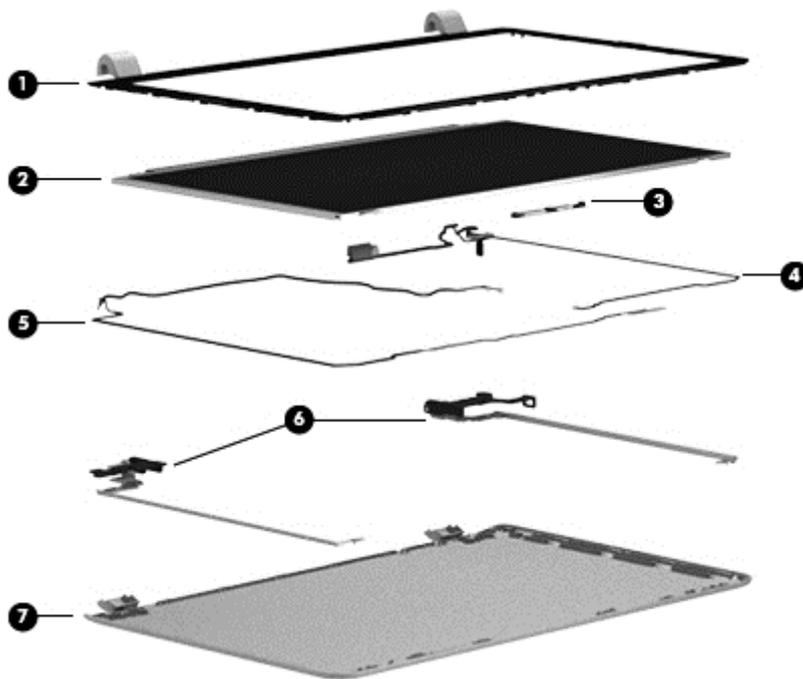

| Item | Component | Spare part number |
|------|---|-------------------|
| (1) | Display bezel (includes 2 rubber screws) | 725617-001 |
| (2) | 15.6-in, BrightView, HD, LED, SVA display panel (screws included in the screw kit, spare part number 732082-001) | 732080-001 |
| | 15.6-in, BrightView, HD, LED, SVA Touchscreen display panel (For Touchscreens, the screws spare part number is 732083-001) | |
| | In aluminum metal finish | 732073-001 |
| | In sparkling black finish | 732074-001 |
| | In pearl white finish | 737170-001 |


| Item | Component | Spare part number |
|------------|---|-------------------|
| | In flyer red finish | 737171-001 |
| | In revolutionary blue finish | 737172-001 |
| | In regal purple finish | 737173-001 |
| | In mineral black finish | 737174-001 |
| | In Goji berry finish | 737175-001 |
| | In hazel berry finish | 737176-001 |
| | In raspberry finish | 737177-001 |
| (3) | Webcam/microphone module (includes adhesive) | 738664-001 |
| (4) | Display panel cable (includes webcamera/microphone module cable and two rubber screws) | 732066-001 |
| (5) | Antenna Kit (includes left and right wireless antenna cables and transceivers and 2 rubber screws) | 732063-001 |
| (6) | Display Hinge Kit (includes left and right hinges and 2 rubber screws): | 732072-001 |
| (7) | Display back enclosure (includes 2 rubber screw covers): | |
| | In pearl white finish | 725611-001 |
| | In sparkling black finish | 725612-001 |
| | In flyer red finish | 725613-001 |
| | In revolutionary blue finish | 725614-001 |
| | In regal purple finish | 725615-001 |
| | In aluminum metal finish | 732064-001 |
| | In mineral black finish | 737166-001 |
| | In Goji berry finish | 737167-001 |
| | In hazel berry finish | 737168-001 |
| | In raspberry finish | 737169-001 |

Miscellaneous parts

| Component | Spare part number |
|--|-------------------|
| AC adapter: | |
| 45 W HP Smart AC adapter (nPFC, RC, 3-wire, 4.5 mm) | 741727-001 |
| 65 W HP Smart AC adapter (nPFC, RC, 3-wire, 4.5 mm), select models only | 714657-001 |
| 65 W HP Smart AC adapter (nPFC, RC, 3-wire, 4.5 mm) | 710412-001 |
| 90 W HP Smart AC adapter (PFC, RC, 3-wire, 4.5 mm), for use with computer models with AMD processors | 710413-001 |
| 90 W HP Smart AC adapter (PFC, RC, 3-wire, 4.5 mm), for use with computer models with AMD processors, select models only | 710414-001 |

| Component | Spare part number |
|---|--------------------------|
| Power cord (3-pin, black, 1.83-m): | |
| For use in the United States | 490371-001 |
| For use in Australia | 490371-011 |
| For use in Europe | 490371-021 |
| For use in Denmark | 490371-081 |
| For use in Switzerland | 490371-111 |
| For use in Japan | 490371-291 |
| For use in Taiwan | 490371-AB1 |
| For use in the People's Republic of China | 490371-AA1 |
| For use in South Korea | 490371-AD1 |
| For use in Thailand | 490371-201 |
| For use in the United Kingdom and Singapore | 490371-031 |
| For use in South Africa | 490371-AR1 |
| For use in Israel | 490371-BB1 |
| For use in India | 490371-D61 |
| Screw Kit for non Touchscreens | 732082-001 |
| Screw Kit for Touchscreens | 732083-001 |
| HDMI to VGA Adapter | 701943-001 |

Mass storage devices

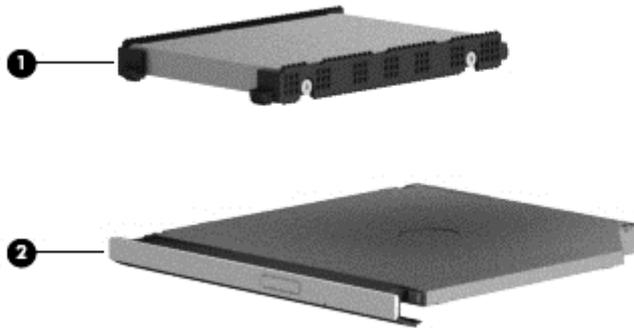

| Item | Component | Spare part number |
|------------|--|-------------------|
| (1) | Hard drive (does not include the hard drive rubber bracket, hard drive connector cable, or screws) | |
| | 1 TB, 5400 rpm, 9.5 mm | 676521-001 |
| | 750 GB, 5400 rpm, 9.5 mm | 634250-001 |
| | 500 GB 5400 rpm, 9.5 mm | 669299-005 |
| | 500 GB 5400 rpm 7 mm | 683802-005 |
| | 1 TB, 5400 rpm + 8 GB NAND hybrid, 9.5 mm, for use with computer models with Intel processors | 731999-005 |
| | 750 GB 5400 rpm + 8 GB NAND hybrid, 9.5 mm, for use with computer models with Intel processors | 732001-005 |
| | 500 GB 5400 rpm + 8 GB NAND hybrid, 7 mm, for use with computer models with Intel processors | 732000-005 |
| | Hard Drive Hardware Kit , includes: | 732071-001 |
| | Hard drive rubber bracket | |
| | Hard drive connector cable | |
| | Hard drive screws (2, not illustrated) | |
| (2) | Optical drive: Supports Zero power ODD (includes optical drive hardware kit with optical drive bezel, bracket and connector cable). | |
| | DVD+/-RW DL SuperMulti -- | 732075-001 |
| | BD combo for computer models with Intel processors, no support for Ubuntu Linux | 749173-001 |

Sequential part number listing

| Spare part number | Description |
|-------------------|---|
| 490371-001 | Power cord for use in North America (3-pin, black, 1.83-m) |
| 490371-011 | Power cord for use in Australia (3-pin, black, 1.83-m) |
| 490371-021 | Power cord for use in Europe (3-pin, black, 1.83-m) |
| 490371-031 | Power cord for use in the United Kingdom and Singapore (3-pin, black, 1.83-m) |

| Spare part number | Description |
|--------------------------|--|
| 490371-081 | Power cord for use in Denmark (3-pin, black, 1.83-m) |
| 490371-111 | Power cord for use in Switzerland (3-pin, black, 1.83-m) |
| 490371-201 | Power cord for use in Thailand (3-pin, black, 1.83-m) |
| 490371-291 | Power cord for use in Japan (3-pin, black, 1.83-m) |
| 490371-AA1 | Power cord for use in the People's Republic of China (3-pin, black, 1.83-m) |
| 490371-AB1 | Power cord for use in Taiwan (3-pin, black, 1.83-m) |
| 490371-AD1 | Power cord for use in South Korea (3-pin, black, 1.83-m) |
| 490371-AR1 | Power cord for use in South Africa (3-pin, black, 1.83-m) |
| 490371-BB1 | Power cord for use in Israel (3-pin, black, 1.83-m) |
| 490371-D61 | Power cord for use in India (3-pin, black, 1.83-m) |
| 634250-005 | 750-GB, 5400-rpm hard drive (SATA, 9.5-mm, does not include hard drive rubber bracket, 2 hard drive retention brackets, or hard drive connector cable) |
| 669299-005 | 500-GB, 5400-rpm hard drive (SATA, 9.5-mm, does not include hard drive rubber bracket, 2 hard drive retention brackets, hard drive connector cable, or screws) |
| 670034-001 | Memory 8 GB PC3 12800 1600Mhz SHARED |
| 675794-001 | WLAN Qualcomm Atheros AR9485 802.11 bgn Wi-Fi adapter |
| 676521-001 | 1-TB, 5400-rpm hard drive (SATA, 12.7-mm, does not include hard drive rubber bracket, 2 hard drive retention brackets, hard drive connector cable, or screws) |
| 683802-005 | 500-GB, 5400-rpm hard drive (SATA, 7.0-mm, does not include hard drive rubber bracket, 2 hard drive retention brackets, hard drive connector cable, or screws) |
| 690020-001 | WLAN Ralink RT3290LE 802.11 bgn 1×1 Wi-Fi and Bluetooth 4.0 combo adapter |
| 691739-001 | 2-GB memory module (PC3, 12800, 1600-MHz) |
| 691740-001 | 4-GB memory module (PC3, 12800, 1600-MHz) |
| 693374-001 | 8-GB memory module (PC3, 12800, 1600-MHz) |
| 697917-001 | RTC battery |
| 701943-001 | HDMI to VGA adapter |
| 709848-001 | WLAN Realtek RTL8188EE 802.11bgn Wi-Fi Adapter for use on all computer models |
| 710412-001 | 65 W HP Smart AC adapter (nPFC, RC, 3-wire, 4.5 mm) |
| 710413-001 | 90 W HP Smart AC adapter (PFC, RC, 3-wire, 4.5 mm), for use with computer models with AMD processors |
| 710414-001 | 90 W HP Smart AC adapter (PFC, RC, 3-wire, 4.5 mm), for use with computer models with AMD processors, select models only |
| 714657-001 | 65 W HP Smart AC adapter (nPFC, RC, 3-wire, 4.5 mm) |
| 717384-001 | Intel Wireless-N 7260BN 802.11 bgn 2x2 Wi-Fi + Bluetooth 4.0 combo adaptor for use with computer models with Intel processors, not supported on Ubuntu Linux |
| 719853-001 | Keyboard in black finish for use in the United States (includes keyboard cable) |
| 719853-031 | Keyboard in black finish for use in the United Kingdom (includes keyboard cable) |
| 719853-041 | Keyboard in black finish for use in Germany (includes keyboard cable) |

| Spare part number | Description |
|--------------------------|---|
| 719853-051 | Keyboard in black finish for use in France (includes keyboard cable) |
| 719853-061 | Keyboard in black finish for use in Italy (includes keyboard cable) |
| 719853-071 | Keyboard in black finish for use in Spain (includes keyboard cable) |
| 719853-131 | Keyboard in black finish for use in Portugal (includes keyboard cable) |
| 719853-141 | Keyboard in black finish for use in Turkey (includes keyboard cable) |
| 719853-151 | Keyboard in black finish for use in Greece (includes keyboard cable) |
| 719853-161 | Keyboard in black finish for use in Latin America (includes keyboard cable) |
| 719853-171 | Keyboard in black finish for use in Saudi Arabia (includes keyboard cable) |
| 719853-211 | Keyboard in black finish for use in Hungary (includes keyboard cable) |
| 719853-251 | Keyboard in black finish for use in Russia (includes keyboard cable) |
| 719853-261 | Keyboard in black finish for use in Bulgaria (includes keyboard cable) |
| 719853-271 | Keyboard in black finish for use in Romania (includes keyboard cable) |
| 719853-281 | Keyboard in black finish for use in Thailand (includes keyboard cable) |
| 719853-291 | Keyboard in black finish for use in Japan (includes keyboard cable) |
| 719853-A41 | Keyboard in black finish for use in Belgium (includes keyboard cable) |
| 719853-AB1 | Keyboard in black finish for use in Taiwan (includes keyboard cable) |
| 719853-AD1 | Keyboard in black finish for use in South Korea (includes keyboard cable) |
| 719853-B31 | Keyboard in black finish for International use (includes keyboard cable) |
| 719853-BA1 | Keyboard in black finish for use in Slovenia (includes keyboard cable) |
| 719853-BB1 | Keyboard in black finish for use in Israel (includes keyboard cable) |
| 719853-BG1 | Keyboard in black finish for use in Switzerland (includes keyboard cable) |
| 719853-DB1 | Keyboard in black finish for use in Canada (includes keyboard cable) |
| 719853-DH1 | Keyboard in black finish for use in Nordic regions (includes keyboard cable) |
| 719853-FL1 | Keyboard in black finish for use in Czech regions (includes keyboard cable) |
| 719853-FP1 | Keyboard in black finish for use in Northwest Africa (includes keyboard cable) |
| 720597-001 | Keyboard in black finish for use in the United States (includes keyboard cable) |
| 720597-031 | Keyboard in black finish for use in United Kingdom (includes keyboard cable) |
| 720597-041 | Keyboard in painted island style pearl white finish for use in Germany (includes keyboard cable) |
| 720597-051 | Keyboard in painted island style pearl white finish for use in France (includes keyboard cable) |
| 720597-061 | Keyboard in painted island style pearl white finish for use in Italy (includes keyboard cable) |
| 720597-071 | Keyboard in painted island style pearl white finish for use in Spain (includes keyboard cable) |
| 720597-131 | Keyboard in painted island style pearl white finish for use in Portugal (includes keyboard cable) |
| 720597-141 | Keyboard in painted island style pearl white finish for use in Turkey (includes keyboard cable) |
| 720597-151 | Keyboard in painted island style pearl white finish for use in Greece (includes keyboard cable) |

| Spare part number | Description |
|--------------------------|---|
| 720597-161 | Keyboard in painted island style pearl white finish for use in Latin America (includes keyboard cable) |
| 720597-171 | Keyboard in painted island style pearl white finish for use in Saudi Arabia (includes keyboard cable) |
| 720597-211 | Keyboard in painted island style pearl white finish for use in Hungarian (includes keyboard cable) |
| 720597-251 | Keyboard in painted island style pearl white finish for use in Russian (includes keyboard cable) |
| 720597-261 | Keyboard in linen white finish for use in Bulgaria (includes keyboard cable) |
| 720597-271 | Keyboard in painted island style pearl white finish for use in Romania (includes keyboard cable) |
| 720597-281 | Keyboard in painted island style pearl white finish for use in (includes keyboard cable) |
| 720597-291 | Keyboard in painted island style pearl white finish for use in Japan (includes keyboard cable) |
| 720597-A41 | Keyboard in painted island style pearl white finish for use in Belgium (includes keyboard cable) |
| 720597-AB1 | Keyboard in painted island style pearl white finish for use in Taiwan (includes keyboard cable) |
| 720597-AD1 | Keyboard in painted island style pearl white finish for use in Korea (includes keyboard cable) |
| 720597-B31 | Keyboard in painted island style pearl white finish for International use (includes keyboard cable) |
| 720597-BA1 | Keyboard in painted island style pearl white finish for use in Slovenia (includes keyboard cable) |
| 720597-BB1 | Keyboard in painted island style pearl white finish for use in Israel (includes keyboard cable) |
| 720597-BG1 | Keyboard in painted island style pearl white finish for use in Switzerland (includes keyboard cable) |
| 720597-DB1 | Keyboard in painted island style pearl white finish for use in (includes keyboard cable) |
| 720597-DH1 | Keyboard in painted island style pearl white finish for use in Nordic regions (includes keyboard cable) |
| 720597-FL1 | Keyboard in painted island style pearl white finish for use in the Czech Republic (includes keyboard cable) |
| 720597-FP1 | Keyboard in painted island style pearl white finish for use in the (includes keyboard cable) |
| 725611-001 | Display enclosure in pearl white |
| 725612-001 | Display enclosure in sparkling black |
| 725613-001 | Display enclosure in flyer red |
| 725614-001 | Display enclosure in revolutionary blue |
| 725615-001 | Display enclosure in regal purple |
| 725617-001 | Display bezel (includes 2 rubber screw covers and rubber bumpers) |
| 728460-001 | 4 cell, 41 Wh, 2.8-Ah, Li-ion battery |
| 731999-005 | 1 TB, 5400 rpm + 8 GB NAND hybrid, hard drive 9.5 mm, for use with computer models with Intel processors |
| 732000-005 | 500 GB 5400 rpm + 8 GB NAND hybrid, hard drive 7 mm, for use with computer models with Intel processors |
| 732001-005 | 750 GB 5400 rpm + 8 GB NAND hybrid, hard drive 9.5 mm, for use with computer models with Intel processors |
| 732063-001 | Antenna Kit (includes left and right wireless antenna cables and transceivers and 2 rubber screw covers) |
| 732064-001 | Display enclosure in aluminum metal finish (includes 2 rubber screw covers) |
| 732065-001 | Base enclosure (includes battery release latch mechanism and RJ45 cover) |

| Spare part number | Description |
|--------------------------|--|
| 732066-001 | Display panel cable (includes webcam/microphone module cable and 2 rubber screw covers) |
| 732067-001 | Power connector cable (includes bracket) |
| 732068-001 | Fan |
| 732071-001 | Hard Drive Hardware Kit (includes hard drive rubber bracket, 2 hard drive retention brackets, 2 hard drive retention screws, and hard drive connector cable) |
| 732072-001 | Display Hinge Kit (includes left and right hinges and 2 rubber screw covers) |
| 732073-001 | 15.6-in, LED, HD, BrightView display panel in aluminum metal (includes 2 rubber screw covers) |
| 732074-001 | 15.6-in, LED, HD, BrightView display panel in sparkling black (includes 2 rubber screw covers) |
| 732075-001 | DVD±RW Double-Layer SuperMulti Drive (includes bezel and bracket) |
| 732076-001 | Power button board (includes cable) |
| 732077-001 | Audio/USB port |
| 732078-001 | TouchPad button board (includes cable) |
| 732079-001 | Cover Kit (includes service door and wireless module compartment cover) |
| 732080-001 | 15.6-in, LED, HD, BrightView raw display panel (includes 2 rubber screw covers) |
| 732082-001 | Screw Kit |
| 732084-001 | Speakers (include subwoofer, speaker cables, and 4 rubber isolators) |
| 732091-001 | Top cover in pearl white finish (includes TouchPad and cable) |
| 732092-001 | Top cover in flyer red finish (includes TouchPad and cable) |
| 732093-001 | Top cover in revolutionary blue finish (includes TouchPad and cable) |
| 732094-001 | Top cover in regal purple finish (includes TouchPad and cable) |
| 732095-001 | Top cover in sparkling black finish (includes TouchPad and cable) |
| 732096-001 | Top cover in mineral black finish (includes TouchPad and cable) |
| 733476-001 | WLAN Qualcomm Atheros QCA9565 802.11 bgn 1x1 Wi-Fi + Bluetooth 4.0 combo |
| 734448-001 | Heat sink for use only on computer models equipped with a graphics subsystem with AMD UMA memory 19 W |
| 734449-001 | Heat sink for use only on computer models equipped with a graphics subsystem with AMD UMA memory 25 W |
| 734450-001 | Heat sink for use only on computer models equipped with a graphics subsystem with AMD discrete memory 19 W |
| 734451-001 | Heat sink for use only on computer models equipped with a graphics subsystem with AMD discrete memory 25 W |
| 734820-001 | System board AMD A4-5000 8670M 1.5 GHz (1 GB, L2, 1600MHz DDR3L quad core, 15 W) for use with FreeDOS and Ubuntu |
| 734820-501 | System board AMD A4-5000 8670M 1.5 GHz (1 GB, L2, 1600MHz DDR3L quad core, 15 W) for use with Windows Standard. |
| 734820-601 | System board AMD A4-5000 8670M 1.5 GHz (1 GB, L2, 1600MHz DDR3L quad core, 15 W) for use with Windows Professional. |

| Spare part number | Description |
|--------------------------|--|
| 734821-001 | System board AMD AMD A6-5200 8670M 2.0 GHz (1 GB, L2, 1600MHz DDR3L, quad core, 25 W) for use with FreeDOS and Ubuntu. |
| 734821-501 | System board AMD AMD A6-5200 8670M 2.0 GHz (1 GB, L2, 1600MHz DDR3L, quad core, 25 W) for use with Windows Standard. |
| 734821-601 | System board AMD AMD A6-5200 8670M 2.0 GHz (1 GB, L2, 1600MHz DDR3L, quad core, 25 W) for use with Windows Professional. |
| 734824-001 | System board AMD A10-5745M 8670M 2 GB (2.9-GHz/2.1-GHz, L2, 1333MHz DDR3L quad core, 25 W) for use with FreeDOS and Ubuntu |
| 734824-501 | System board AMD A10-5745M 8670M 2 GB (2.9-GHz/2.1-GHz, L2, 1333MHz DDR3L quad core, 25 W) for use with Windows Standard. |
| 734824-601 | System board AMD A10-5745M 8670M 2 GB (2.9-GHz/2.1-GHz, L2, 1333MHz DDR3L quad core, 25 W) for use with Windows Professional. |
| 734826-001 | System board AMD A4-5000 1.5 GHz (2 MB, L2, 1600MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu for use with FreeDOS and Ubuntu. |
| 734826-501 | System board AMD A4-5000 1.5 GHz (2 MB, L2, 1600MHz DDR3L, quad core, 15 W) for use with Windows Standard. |
| 734826-601 | System board AMD A4-5000 1.5 GHz (2 MB, L2, 1600MHz DDR3L, quad core, 15 W) for use with Windows Professional. |
| 734827-001 | System board AMD A6-5000 (1.5 GHz, 2 MB L2, 1600MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu. |
| 734827-501 | System board AMD A6-5000 (1.5 GHz, 2 MB L2, 1600MHz DDR3L, quad core, 15 W) for use with Windows Standard. |
| 734827-601 | System board AMD A6-5000 (1.5 GHz, 2 MB L2, 1600MHz DDR3L, quad core, 15 W) for use with Windows Professional. |
| 734829-001 | System board AMD A8-5545M A76M (2.7 GHz/1.7 GHz, 4 MB L2, 1333MHz DDR3Lquad core, 19 W) for use with FreeDOS and Ubuntu. |
| 734829-501 | System board AMD A8-5545M A76M (2.7 GHz/1.7G Hz, 4 MB L2, 1333MHz DDR3L quad core, 19 W) for use with Windows Standard. |
| 734829-601 | System board AMD A8-5545M A76M (2.7 GHz/1.7 GHz, 4 MB L2, 1333MHz DDR3L quad core, 19 W) for use with Windows Professional. |
| 737138-001 | System board AMD A10- 4655M 8670M (2.8 GHz/2.0 GHz, 2 GB L2, 1333MHz DDR3L quad core, 25 W) for use with FreeDOS and Ubuntu. |
| 737138-501 | System board AMD A10- 4655M 8670M (2.8 GHz/2.0 GHz, 2 GB L2, 1333MHz DDR3L quad core, 25 W) for use with Windows Standard. |
| 737138-601 | System board AMD A10- 4655M 8670M (2.8 GHz/2.0 GHz, 2 GB L2, 1333MHz DDR3L quad core, 25 W) for use with Windows Professional. |
| 737140-001 | System board AMD A8- 4555M (2.4 GHz/1.6 GHz, 4 MB L2, 1333MHz DDR3L quad core, 19 W) for use with FreeDOS and Ubuntu. |
| 737140-501 | System board AMD A8- 4555M (2.4 GHz/1.6 GHz, 4 MB L2, 1333MHz DDR3L quad core, 19 W) for use with Windows Standard. |
| 737140-601 | System board AMD A8- 4555M (2.4 GHz/1.6 GHz, 4 MB L2, 1333MHz DDR3L quad core, 19 W) for use with Windows Professional. |
| 737141-001 | System board AMD E1-2500 (1.4 GHz, 1 MB L2, 1600MHz DDR3L, dual core, 15 W) for use with FreeDOS and Ubuntu. |

| Spare part number | Description |
|--------------------------|--|
| 737141-501 | System board AMD E1-2500 (1.4 GHz, 1 MB L2, 1600MHz DDR3L, dual core, 15 W) for use with Windows Standard. |
| 737141-601 | System board AMD E1-2500 (1.4 GHz, 1 MB L2, 1600MHz DDR3L, dual core, 15 W) for use with Windows Professional. |
| 737166-001 | Display enclosure in mineral black finish |
| 737167-001 | Display enclosure in Goji berry finish |
| 737168-001 | Display enclosure in hazel berry finish |
| 737169-001 | Display enclosure in raspberry finish |
| 737170-001 | Touchscreen display 15.6 BV HD PRW in pearl white finish |
| 737171-001 | Touchscreen display 15.6 BV HD PRW in flyer red finish |
| 737172-001 | Touchscreen display 15.6 BV HD PRW in revolutionary blue finish |
| 737173-001 | Touchscreen display 15.6 BV HD PRW in regal purple finish |
| 737174-001 | Touchscreen display 15.6 BV HD PRW in mineral black finish |
| 737175-001 | Touchscreen display 15.6 BV HD PRW in Goji berry finish |
| 737176-001 | Touchscreen display 15.6 BV HD PRW in hazel berry finish |
| 737177-001 | Touchscreen display 15.6 BV HD PRW in raspberry finish |
| 737178-001 | Top cover in mineral black finish |
| 737179-001 | Top cover in Goji berry finish |
| 737180-001 | Top cover in hazel berry finish |
| 737181-001 | Top cover in raspberry finish |
| 738124-001 | System board AMD A10-5745M A76M (2.9 GHz/2.1 GHz, 4 MB L2, 1333MHz DDR3L quad core, 25 W) for use with FreeDOS and Ubuntu |
| 738124-501 | System board AMD A10-5745M A76M (2.9 GHz/2.1 GHz, 4 MB L2, 1333MHz DDR3L quad core, 25 W) for use with Windows Standard. |
| 738124-601 | System board AMD A10-5745M A76M (2.9 GHz/2.1 GHz, 4 MB L2, 1333MHz DDR3L quad core, 25 W) for use with Windows Professional. |
| 737981-001 | System board with Intel Celeron 1007U DC (1.5 GHz, 2 MB L3 Cache, 1600MHz DDR3) for use with FreeDOS and Ubuntu |
| 737981-501 | System board with Intel Celeron 1007U DC (1.5 GHz, 2 MB L3 Cache, 1600MHz DDR3) for use with Windows Standard |
| 737981-601 | System board with Intel Celeron 1007U DC (1.5 GHz, 2 MB L3 Cache, 1600MHz DDR3) for use with Windows Professional |
| 737982-001 | System board with Intel Core i3-3217U DC (1.8 GHz, 3 MB L3 Cache, 1600MHz DDR3, 17 W) for use with FreeDOS and Ubuntu |
| 737982-501 | System board with Intel Core i3-3217U DC (1.8 GHz, 3 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Standard |
| 737982-601 | System board with Intel Core i3-3217U DC (1.8 GHz, 3 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Professional |
| 737983-001 | System board with Intel Pentium 2117U DC (1.8 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) for use with FreeDOS and Ubuntu |

| Spare part number | Description |
|--------------------------|---|
| 737983-501 | System board with Intel Pentium 2117U DC (1.8 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Standard |
| 737983-601 | System board with Intel Pentium 2117U DC (1.8 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Professional |
| 738664-001 | Webcamera/microphone module |
| 741727-001 | 45 W HP Smart AC adapter (nPFC, RC, 3-wire, 4.5 mm), nslim |
| 742330-001 | Heat sink for use only on computer models equipped with Intel HM76 chipset and UMA graphics |
| 742331-001 | Heat sink for use only on computer models equipped with Intel HM76 chipset and switchable discrete graphics |
| 742580-001 | Base enclosure |
| 742581-001 | Heat sink for use only on computer models equipped with Intel processors and UMA graphics |
| 742582-001 | Heat sink for use only on computer models equipped with Intel processors and switchable discrete graphics |
| 749173-001 | Optical Drive BD combo for computer models with Intel processors, no support for Ubuntu Linux |
| 751493-001 | System board with Intel Core i7-4500U 1.8 GHz processor (4.0 MB L3 cache, 15 W) for use with FreeDOS and Ubuntu |
| 751493-501 | System board with Intel Core i7-4500U 1.8 GHz processor (4.0 MB L3 cache, 15 W) for use with Windows Standard |
| 751493-601 | System board with Intel Core i7-4500U 1.8 GHz processor (4.0 MB L3 cache, 15 W) for use with Windows Pro vb |
| 751494-001 | System board with Intel Core i5-4200U 840M 1.6-GHz (2 GB DC BGA 15 W) for use with FreeDOS and Ubuntu |
| 751494-501 | System board with Intel Core i5-4200U 840M 1.6-GHz (2 GB DC BGA 15 W) for use with Windows Standard |
| 751494-601 | System board with Intel Core i5-4200U 840M 1.6-GHz (2 GB DC BGA 15 W) for use with Windows Professional |
| 754312-001 | System board with Intel Core i5-4200U 1.6 GHz DC BGA 15 W) for use with FreeDOS and Ubuntu |
| 754312-501 | System board with Intel Core i5-4200U 1.6 GHz DC BGA 15 W) for use with Windows Standard |
| 754312-601 | System board with Intel Core i5-4200U 1.6 GHz DC BGA 15 W) for use with Windows Professional |
| 755270-001 | System board HP A4-5050 (1.55 GHz) quad core, 13 W |
| 755270-501 | System board HP A4-5050 (1.55 GHz) quad core, 13 W |
| 755270-601 | System board HP A4-5050 (1.55 GHz) quad core, 13 W |

4 Removal and replacement procedures preliminary requirements

Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screwdriver
- Magnetic screwdriver
- Phillips P0 and P1 screwdrivers

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.

 **NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

 **CAUTION:** Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic

Cables and connectors

⚠ CAUTION: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Drive handling

⚠ CAUTION: Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing a diskette drive or optical drive, be sure that a diskette or disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

Grounding guidelines

Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

⚠ CAUTION: To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

⚠ CAUTION: A product can be degraded by as little as 700 V.

| Typical electrostatic voltage levels | | | |
|--------------------------------------|-------------------|----------|---------|
| Event | Relative humidity | | |
| | 10% | 40% | 55% |
| Walking across carpet | 35,000 V | 15,000 V | 7,500 V |
| Walking across vinyl floor | 12,000 V | 5,000 V | 3,000 V |
| Motions of bench worker | 6,000 V | 800 V | 400 V |
| Removing DIPS from plastic tube | 2,000 V | 700 V | 400 V |
| Removing DIPS from vinyl tray | 11,500 V | 4,000 V | 2,000 V |
| Removing DIPS from Styrofoam | 14,500 V | 5,000 V | 3,500 V |
| Removing bubble pack from PCB | 26,500 V | 20,000 V | 7,000 V |
| Packing PCBs in foam-lined box | 21,000 V | 11,000 V | 5,000 V |

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm $\pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

| Material | Use | Voltage protection level |
|-----------------------|------------|--------------------------|
| Antistatic plastics | Bags | 1,500 V |
| Carbon-loaded plastic | Floor mats | 7,500 V |
| Metallized laminate | Floor mats | 5,000 V |

5 Removal and replacement procedures for Customer Self-Repair parts

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

 **NOTE:** The Customer Self-Repair program is not available in all locations. Installing a part not supported by the Customer Self-Repair program may void your warranty. Check your warranty to determine if Customer Self-Repair is supported in your location.

Component replacement procedures

 **NOTE:** Please read and follow the procedures described here to access and replace Customer Self-Repair parts successfully.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Labels on page 15](#) for details.

This chapter provides removal and replacement procedures for Customer Self-Repair parts.

There are as many as 12 screws that must be removed, replaced, and/or loosened when servicing Customer Self-Repair parts. Make special note of each screw size and location during removal and replacement.

Battery

| Description | Spare part number |
|---------------------------------------|-------------------|
| 4 cell, 41-Wh, 2.8-Ah, Li-ion battery | 728460-001 |

Before disassembling the computer, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Remove the battery:

1. Turn the computer upside down on a flat surface.
2. Firmly slide the release latch **(1)** to unlock the battery and slide the battery release latch **(2)** to release the battery.
3. Slide the battery **(3)** from the middle to remove it from the computer.




To insert the battery:

CAUTION: Do not slant the battery as you insert it. Slide the battery in straight.

1. Holding the battery in the middle, slide the battery **(1)** straight into the computer until the battery release latch locks into place.


2. Reset the battery lock **(1)** to the locked position.

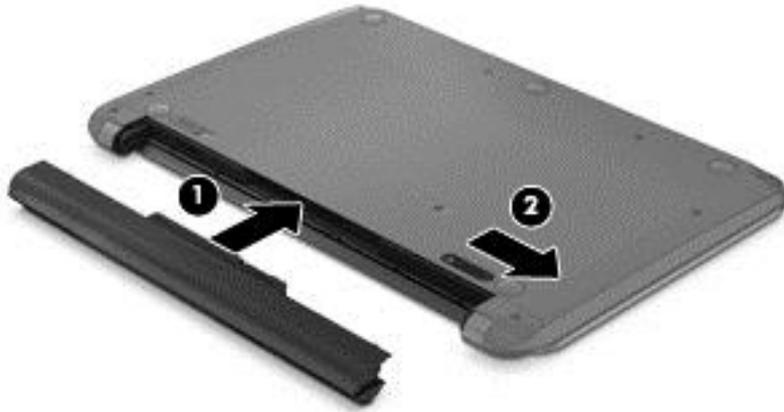

Service door

| Description | Spare part number |
|--|-------------------|
| Service door is available with the plastics kit. | 732079-001 |

1. Using a small Phillips screwdriver, loosen the service door screws **(1)** and **(2)**.
2. Lift the door **(3)**.
3. Slide the service door **(4)** forward to remove.

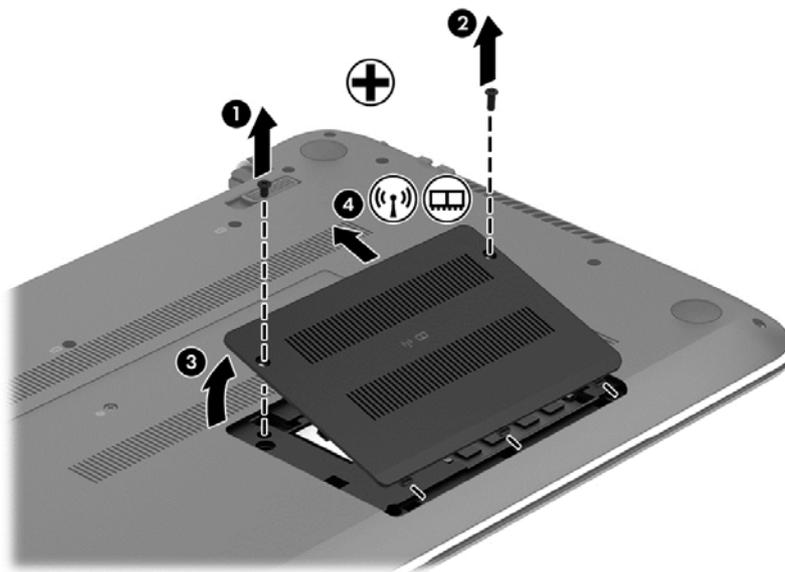

Memory module

| Description | Spare part number |
|--|-------------------|
| 4 GB memory module (PC3, 12800, 1600-MHz) | 691740-001 |
| 2 GB memory module (PC3, 12800, 1600-MHz) | 691739-001 |
| 8 GB memory module PC3L 12800 1600Mhz Shared | 693374-001 |
| 8 GB memory module PC3L 12800 1600Mhz Shared | 670034-001 |


Before removing a memory module, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)).
5. Remove the service door (see [Service door on page 42](#)).

Remove the memory module:

 **NOTE:** Note the location of the memory module. If you are replacing it, install the new memory module in the same slot.

1. Spread the two retaining tabs **(1)** on each side of the memory module slot to release the memory module. (The memory module tilts up.)
2. Remove the memory module **(2)** by pulling it away from the slot at a 45 degree angle.

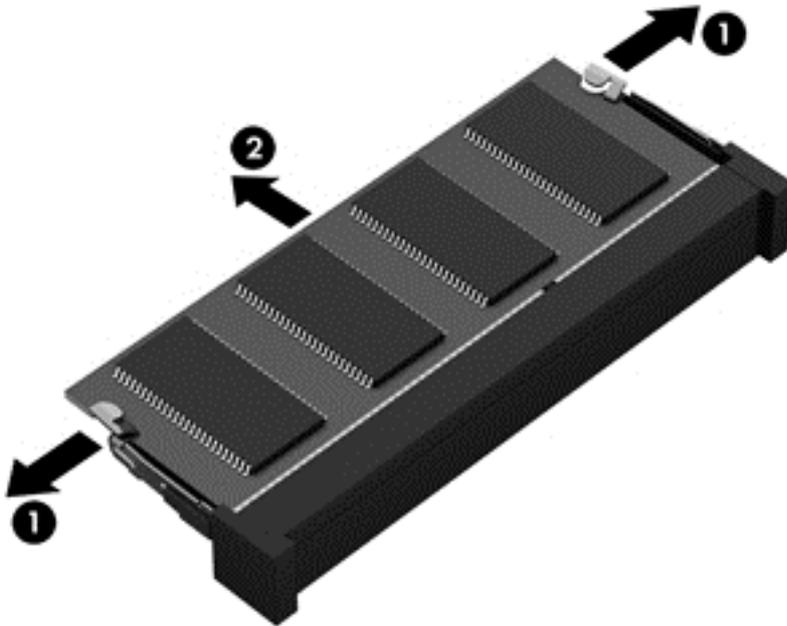

Reverse this procedure to install the memory module.


WLAN module

| Description | Spare part number |
|--|-------------------|
| Qualcomm Atheros AR9485 802.11 bgn Wi-Fi adapter | 675794-001 |
| Ralink RT3290LE 802.11 bgn 1×1 Wi-Fi and Bluetooth 4.0 combo adapter | 690020-001 |
| Realtek RTL8188EE 802.11 bgn Wi-Fi adapter | 709848-001 |
| Intel Wireless-N 7260BN 802.11 bgn 2x2 Wi-Fi + Bluetooth 4.0 combo adaptor for use with computer models with Intel processors, not supported on Ubuntu Linux | 717384-001 |
| Realtek RTL8188EE 802.11 bgn Wi-Fi adapter | 733476-001 |

CAUTION: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)).
5. Remove the service door (see [Service door on page 42](#)).
6. Locate the WLAN module **(1)**.

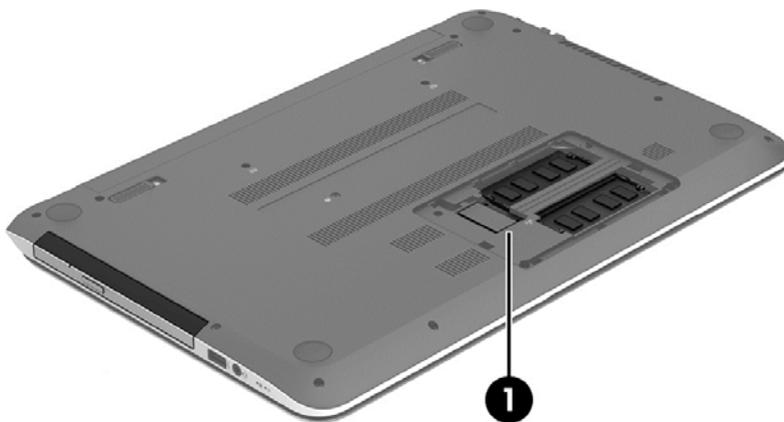

Remove the WLAN module:


1. Disconnect the WLAN antenna cables **(1)** from the terminals on the WLAN module.




NOTE: The #1 WLAN antenna cable is connected to the WLAN module “Main” terminal. The #2 WLAN antenna cable is connected to the WLAN module “Aux” terminal.

2. Remove the Phillips M2.0×2.5 screw **(2)** that secures the WLAN module to the system board. (The WLAN module tilts up.)

- Remove the WLAN module (3) by pulling the module away from the slot at an angle.

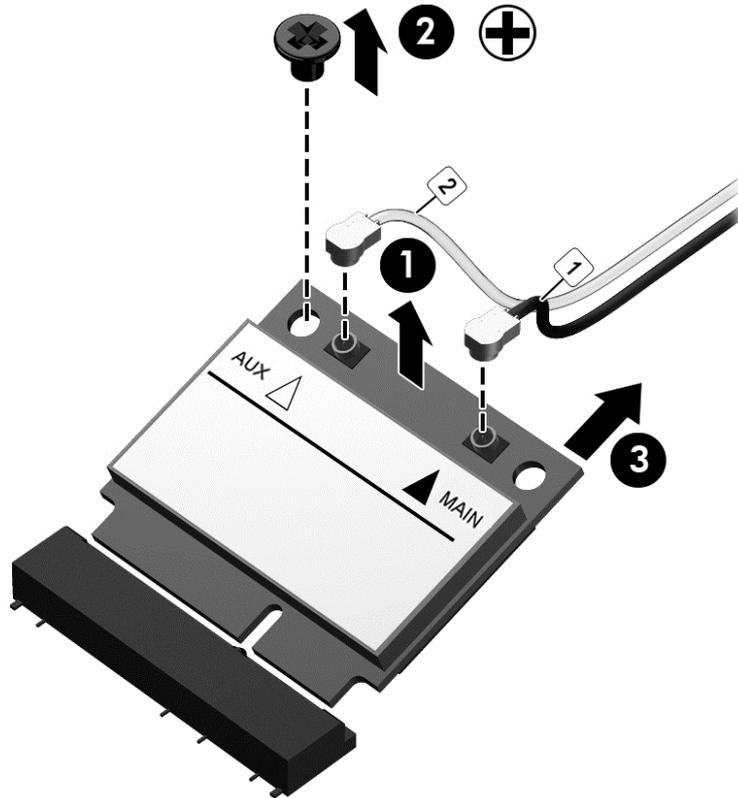

NOTE: If the WLAN antennas are not connected to the terminals on the WLAN module, the protective sleeves should be installed on the antenna connectors, as shown in the following illustration.

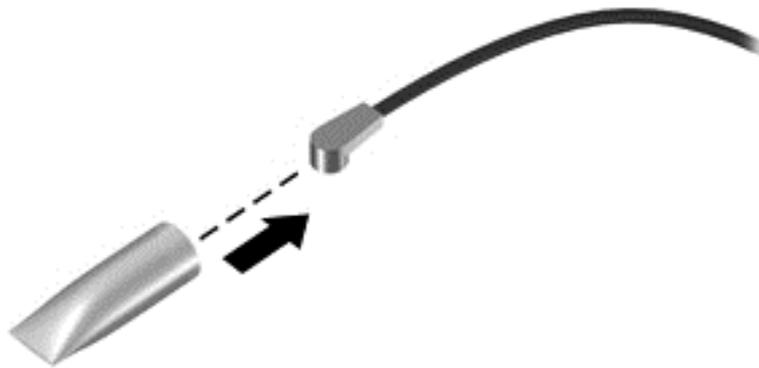

Reverse this procedure to install the WLAN module.

Optical drive

NOTE: The optical drive spare part kit includes a bezel and bracket.


| Description | Spare part number |
|--|-------------------|
| Disc ROM with SuperMulti DVD±R/RW Double-Layer Drive (includes bezel, bracket, and screws) | 732075-001 |
| BD combo for computer models with Intel processors, no support for Ubuntu Linux | 749173-001 |

Before removing the optical drive, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)).


Remove the optical drive:

1. Using a small Phillips screwdriver, remove the Phillips M2.5×6.5 screw that secures the optical drive to the computer **(1)**.
2. Using the screwdriver, push on the rear of the CD/DVD drive to disconnect it from the computer
3. If necessary, use an unbent paperclip and press in gently on the paper clip **(2)** until the disc tray releases. Pull the tray **(3)** out from the front until the optical drive is completely removed from the computer.

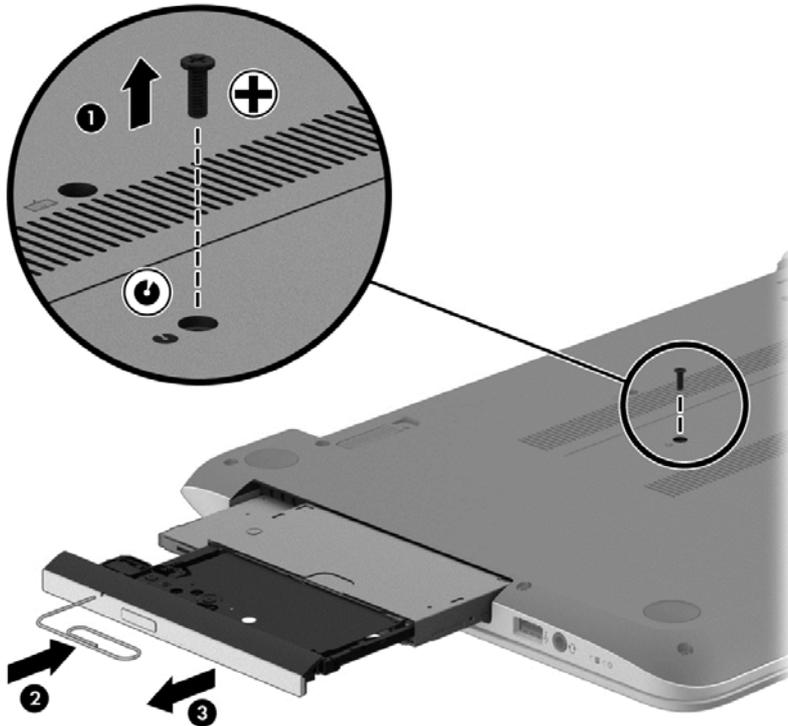


If it is necessary to replace the optical drive bracket and bezel, position the optical drive with the rear panel toward you.

1. Remove the two Phillips screws from the optical drive **(1)** and remove the bracket **(2)**.

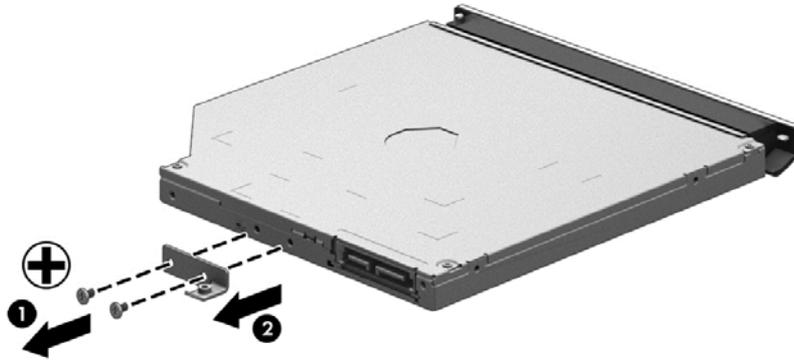

2. Use an unbent paperclip and press in gently on the paper clip **(1)** and release from the tab **(2)** until the disc tray releases. Tilt the tray **(3)** and pull the bezel **(4)** to remove it.

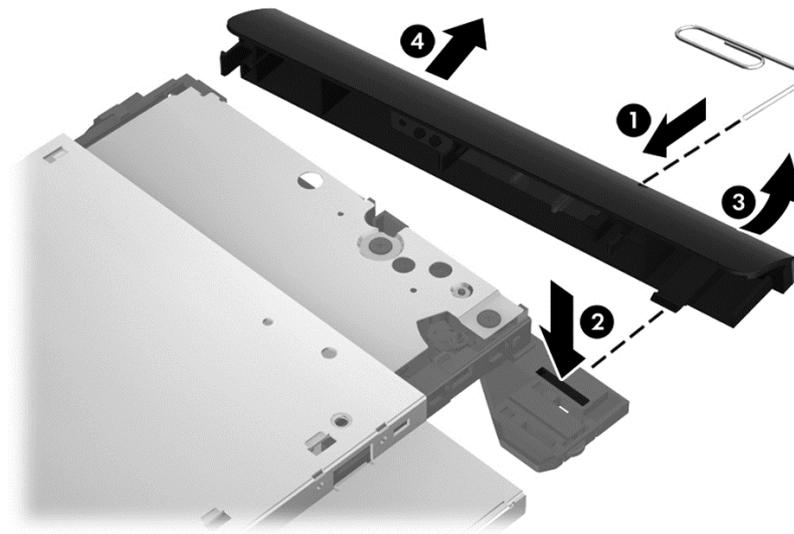

Reverse this procedure to reassemble and install the optical drive.

6 Removal and replacement procedures for Authorized Service Provider parts

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

 **CAUTION:** Components described in this chapter should only be accessed by an authorized service provider. Accessing these parts can damage the computer or void the warranty.

Component replacement procedures

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Labels on page 15](#) for details.

This chapter provides removal and replacement procedures for Authorized Service Provider only parts.

There are as many as 62 screws that must be removed, replaced, and/or loosened when servicing Authorized Service Provider only parts. Make special note of each screw size and location during removal and replacement.

Display panel

 **NOTE:** These procedures are for replacing the display panel for HP Pavilion Notebook. For procedures to replace the HP Pavilion Notebook display assembly subcomponents, see [Display assembly on page 84](#).

| Description | Spare part number |
|---|-------------------|
| Display bezel | 725617-001 |
| Display panel 15.6 in HD WLED BrightView flat panel | 732080-001 |

 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement


Before removing the display panel, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)).


Remove the panel:

If it is necessary to replace the display bezel or any of the display assembly subcomponents:


1. Remove the plastic screw covers **(1)** and the two Phillips M2.5×3.0 screws **(2)** that secure the display bezel to the display assembly.
2. If it is necessary to replace the display bezel or any of the display assembly subcomponents:
 - a. Flex the inside edges of the bottom edge **(3)**, the left and right sides **(4)**, and the top edge **(5)** of the display bezel until the bezel disengages from the display enclosure.
 - b. Remove the display bezel **(6)**.

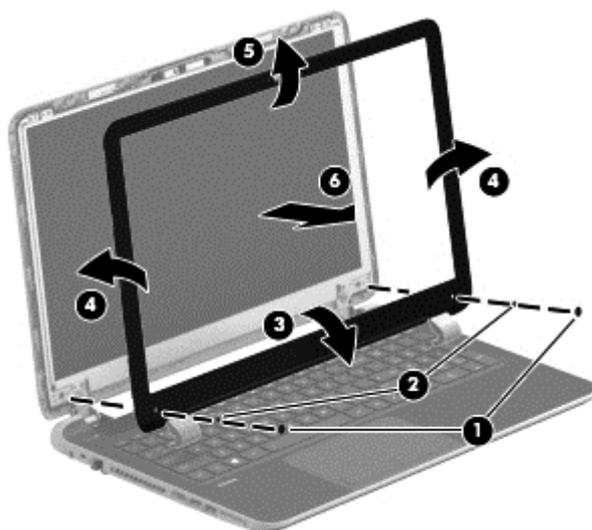

- c. Remove the four Phillips M2.0×2.5 screws (1) and carefully move the display panel (2) to the keyboard .

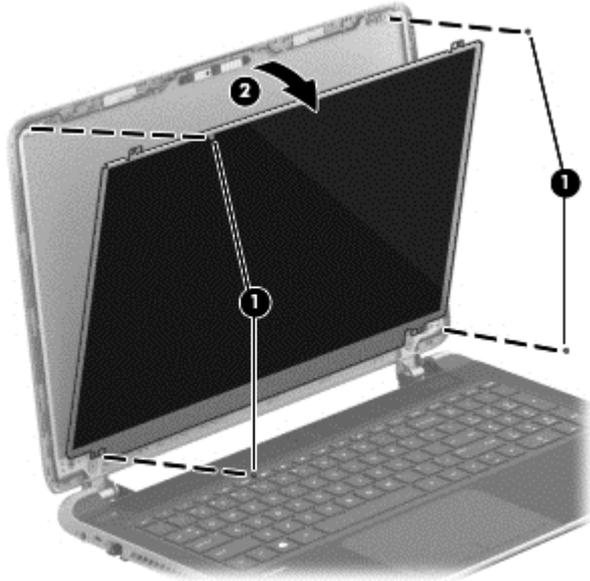

- d. Release the tab (1) and disconnect the connector (2). Lift the panel (3) to remove it.

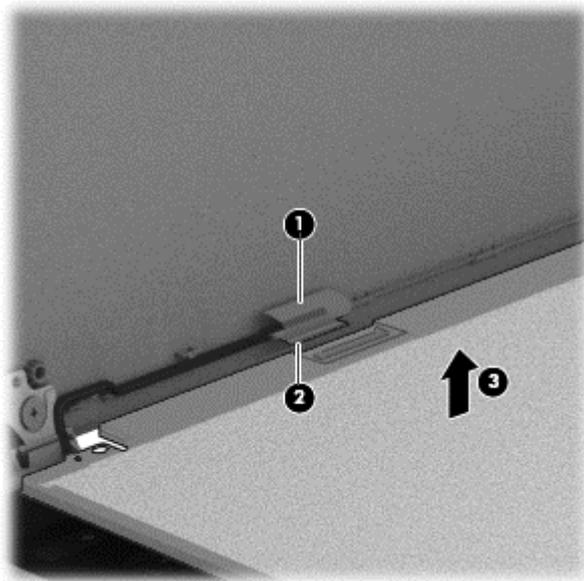

Reverse this procedure to replace the panel.

Keyboard



NOTE: The keyboard spare part kit includes a keyboard cable.

| Description | Spare part number |
|--|-------------------|
| Textured island style black finish for use in the United States | 719853-001 |
| Textured island style black finish for use in United Kingdom | 719853-031 |
| Textured island style black finish for use in Germany | 719853-041 |
| Textured island style black finish for use in France | 719853-051 |
| Textured island style black finish for use in Italy | 719853-061 |
| Textured island style black finish for use in Spain | 719853-071 |
| Textured island style black finish for use in Portugal | 719853-131 |
| Textured island style black finish for use in Turkey | 719853-141 |
| Textured island style black finish for use in Greece | 719853-151 |
| Textured island style black finish for use in Latin America | 719853-161 |
| Textured island style black finish for use in Saudi Arabia | 719853-171 |
| Textured island style black finish for use in Hungary | 719853-211 |
| Textured island style black finish for use in Russia | 719853-251 |
| Textured island style black finish for use in Bulgaria | 719853-261 |
| Textured island style black finish for use in Romania | 719853-271 |
| Textured island style black finish for use in Thailand | 719853-281 |
| Textured island style black finish for use in Japan | 719853-291 |
| Textured island style black finish for use in Belgium | 719853-A41 |
| Textured island style black finish for use in Taiwan | 719853-AB1 |
| Textured island style black finish for use in South Korea | 719853-AD1 |
| Textured island style black finish for International use | 719853-B31 |
| Textured island style black finish for use in Slovenia | 719853-BA1 |
| Textured island style black finish for use in Israel | 719853-BB1 |
| Textured island style black finish for use in Switzerland | 719853-BG1 |
| Textured island style black finish for use in Canada | 719853-DB1 |
| Textured island style black finish for use in Nordic regions | 719853-DH1 |
| Textured island style black finish for use in Czech/Slovakia regions | 719853-FL1 |
| Textured island style black finish for use in Northwest Africa | 719853-FP1 |
| Textured island style black finish for use in Canada | 719853-DB1 |
| Painted island style white finish for use in the United States | 720597-001 |
| Painted island style white finish for use in the United Kingdom | 720597-031 |


| Description | Spare part number |
|--|--------------------------|
| Painted island style white finish for use in Greece | 720597-041 |
| Painted island style white finish for use in France | 720597-051 |
| Painted island style white finish for use in Italy | 720597-061 |
| Painted island style white finish for use in Spain | 720597-071 |
| Painted island style white finish for use in Portugal | 720597-131 |
| Painted island style white finish for use in Turkey | 720597-141 |
| Painted island style white finish for use in Greece | 720597-151 |
| Painted island style white finish for use in Latin America | 720597-151 |
| Painted island style white finish for use in Saudi Arabia | 720597-171 |
| Painted island style white finish for use in Hungary | 720597-211 |
| Painted island style white finish for use in Russia | 720597-251 |
| Painted island style white finish for use in Bulgaria | 720597-261 |
| Painted island style white finish for use in Romania | 720597-271 |
| Painted island style white finish for use in Thailand | 720597-281 |
| Painted island style white finish for use in Japan | 720597-291 |
| Painted island style white finish for use in Belgium | 720597-A41 |
| Painted island style white finish for use in Taiwan | 720597-AB1 |
| Painted island style white finish for use in South Korea | 720597-AD1 |
| Painted island style white finish for International use | 720597-B31 |
| Painted island style white finish for use in Slovenia | 720597-BA1 |
| Painted island style white finish for use in Israel | 720597-BB1 |
| Painted island style white finish for use in Switzerland | 720597-BG1 |
| Painted island style white finish for use in Israel | 720597-DB1 |
| Painted island style white finish for use in Nordic regions | 720597-DH1 |
| Painted island style white finish for use in the Czech Republic and Slovakia | 720597-FL1 |
| Painted island style white finish for use in Northwest Africa | 720597-FP1 |

Before removing the keyboard, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)).

Remove the keyboard:

1. Remove the Phillips M2.5×6.5 screw that secures the keyboard to the computer.

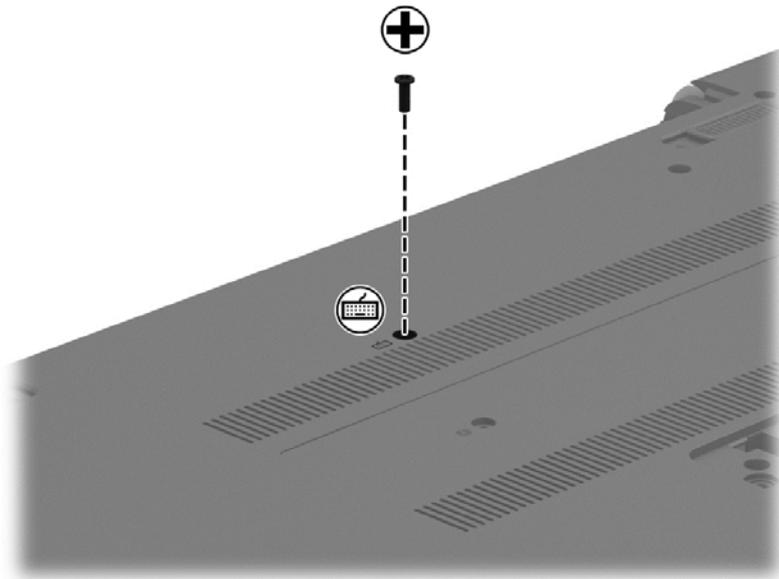

2. Rest the computer on its left side.
3. Open the computer.
4. Insert a thin tool or a keyboard push tool into the keyboard screw hole, and then press on the back of the keyboard until the keyboard disengages from the computer.

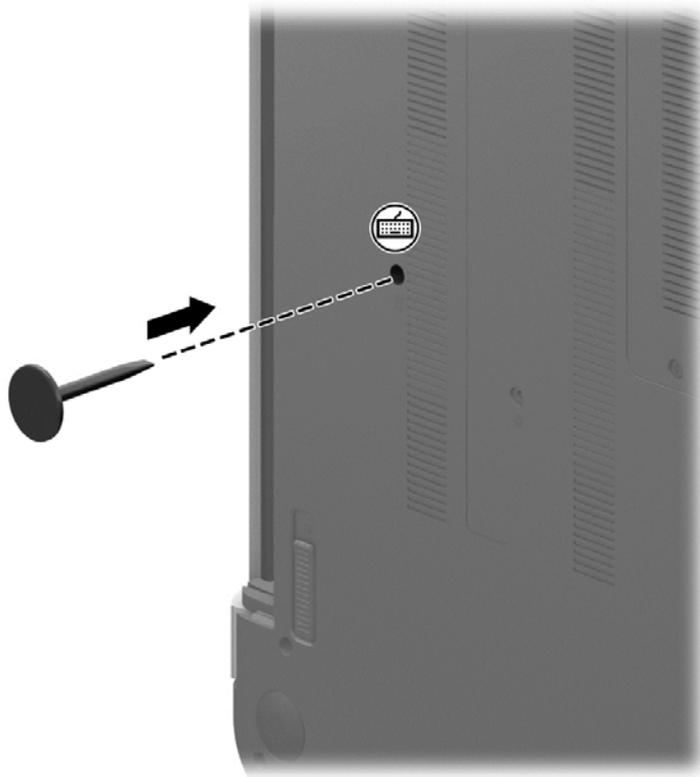


5. Turn the computer right-side up with the front toward you.

6. Gently slide your finger along the top edge of the keyboard to release the keyboard clips **(1)**. Lift the rear edge of the keyboard **(2)**, and then swing the keyboard up and forward until it rests upside down on the palm rest.



7. Release the ZIF connector **(1)** by lifting the connector tab to which the keyboard cable is connected, and then disconnect the keyboard cable **(2)** from the system board.
8. Remove the keyboard **(3)**.

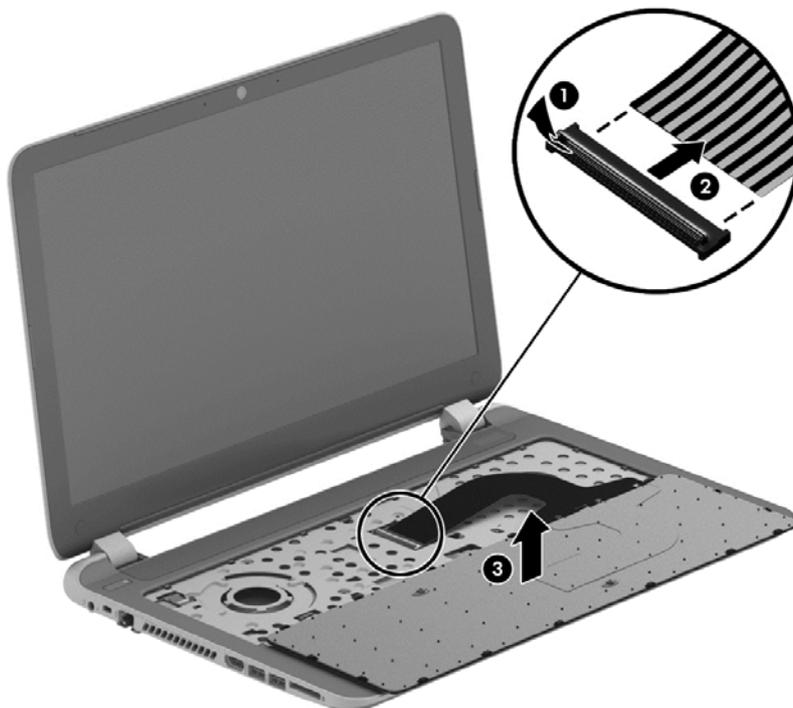

Reverse this procedure to install the keyboard.

Top cover



NOTE: The top cover spare part kit includes the TouchPad buttons, TouchPad board and TouchPad cable.

| Description | Spare part number |
|------------------------------|-------------------|
| In pearl white finish | 732091-001 |
| In flyer red finish | 732092-001 |
| In revolutionary blue finish | 732093-001 |
| In regal purple finish | 732094-001 |
| In sparkling black finish | 732095-001 |
| In aluminum metal finish | 732096-001 |
| In mineral black finish | 737178-001 |
| In Goji berry finish | 737179-001 |
| In hazel berry finish | 737180-001 |
| In raspberry finish | 737181-001 |




IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement

Before removing the top cover, follow these steps:


1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
 - a. Optical drive (see [Optical drive on page 45](#)).
 - b. Remove the service door (see [Service door on page 42](#)).
 - c. Remove the WLAN module (see [WLAN module on page 44](#)).
 - d. Remove the memory module (see [Memory module on page 42](#)).
 - e. Keyboard (see [Keyboard on page 51](#)).

Remove the top cover:

1. Remove the seven Phillips M2.5×3.0 screws that secure the top cover to the base enclosure.

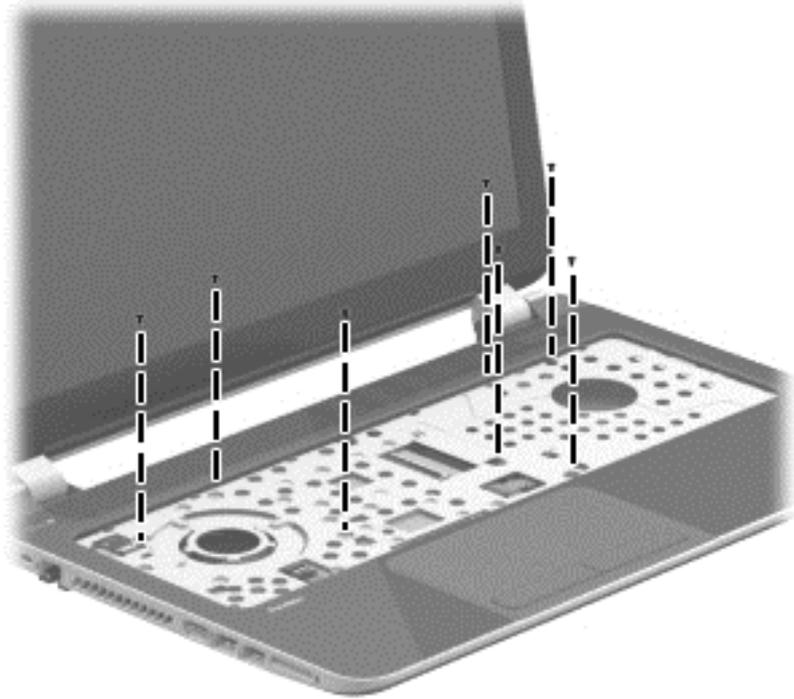


2. Disconnect the power button cable **(1)**, the TouchPad cable **(2)**, and the optical drive cable **(3)**.

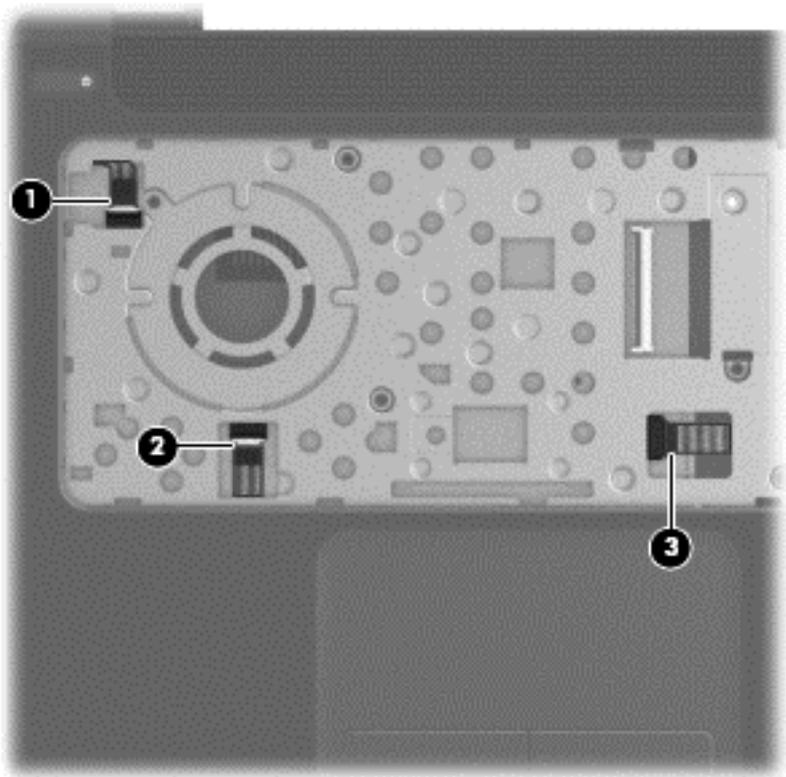


3. Close the display and turn the computer upside down.

4. Remove the eleven Phillips M2.5×6.5 screws from the bottom of the computer.

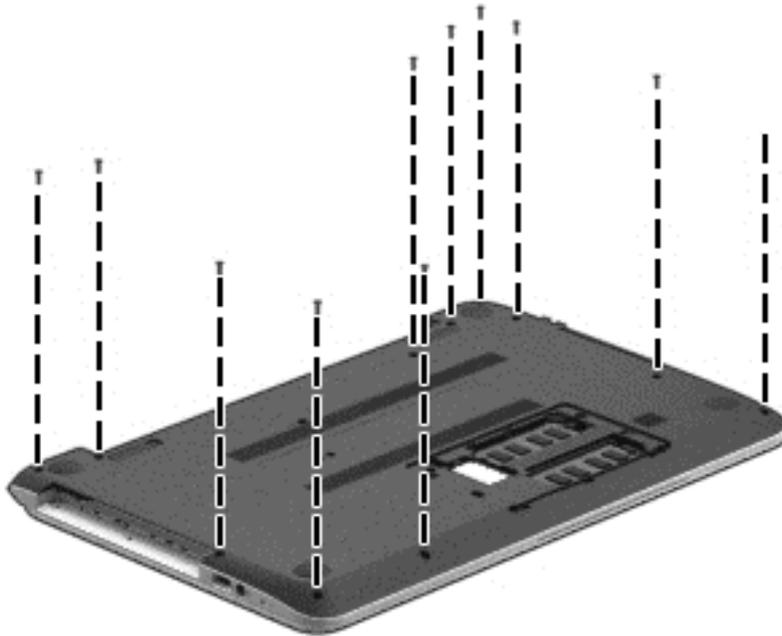


5. Remove the additional three Phillips M2.0×1.5 screws from the optical drive bay (1) and the three Phillips M2.5×6.5 screws from under the service door (2).

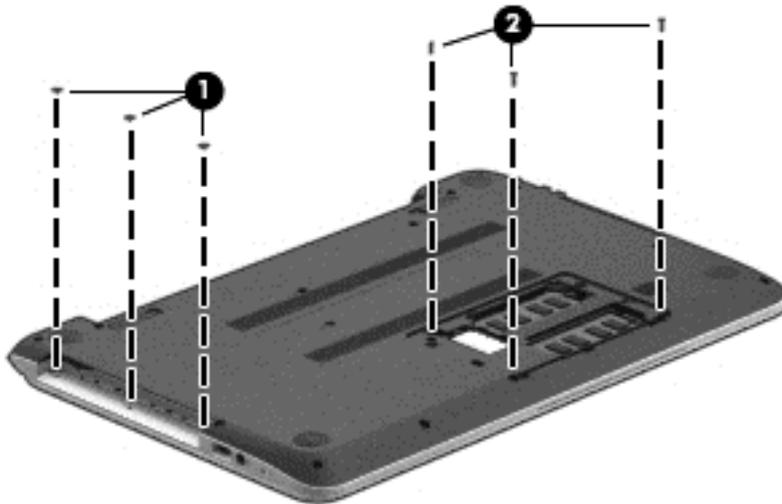

6. Turn the computer over and open the display.

7. Gently press on the right upper corner **(1)** where the display hinge and top cover meet. Lift around the edges of the top cover **(2)**. Lift to remove the top cover **(3)**.

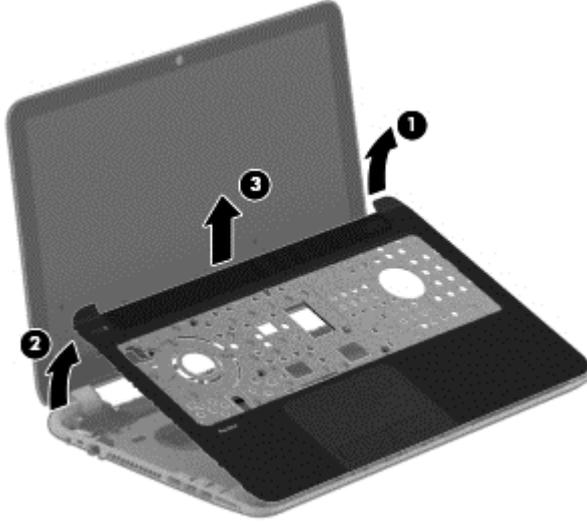

When replacing the top cover, be sure that the following components are removed from the defective top cover and installed on the replacement top cover:

- Power button board and cable (see [Power button board on page 62](#)).
- Optical drive cable, (see [Optical drive on page 45](#)).
- USB/audio board, (see [Hard drive on page 59](#)).

Reverse this procedure to install the top cover.

Hard drive



NOTE: The hard drive spare part kit includes the hard drive rubber bracket and screws. These components are included in the Hard Drive Hardware Kit, spare part number 732071-001.


| Description | Spare part number |
|---|-------------------|
| 1 TB, 5400 rpm, 7.0 mm/9.5 mm | 676521-005 |
| 750 GB, 5400 rpm, 9.5 mm | 634250-005 |
| 500 GB, 5400 rpm, 9.5 mm | 669299-005 |
| 500 GB, 5400 rpm, 7.0 mm | 683802-005 |
| 1 TB, 5400 rpm + 8 GB NAND hybrid, 9.5 mm, for use with computer models with Intel processors | 731999-005 |
| 750 GB 5400 rpm + 8 GB NAND hybrid, 9.5 mm, for use with computer models with Intel processors | 732001-005 |
| 500 GB 5400 rpm + 8 GB NAND hybrid, 7 mm, for use with computer models with Intel processors | 732000-005 |
| Hard Drive Hardware Kit (not illustrated, includes hard drive rubber bracket, 2 hard drive retention brackets, and hard drive connector cable). | 732071-001 |

Before removing the hard drive, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
 - a. Optical drive (see [Optical drive on page 45](#)).
 - b. Service door (see [Service door on page 42](#)).
 - c. WLAN module (see [WLAN module on page 44](#)).
 - d. Memory module (see [Memory module on page 42](#)).
 - e. Keyboard (see [Keyboard on page 51](#)).
 - f. Top cover (see [Top cover on page 55](#)).

Remove the hard drive:

1. Disconnect the USB/audio cable **(1)** by flipping open the ZIF connector and lifting the cable. Remove the USB/audio cable Phillips M 2.5×3.0 screw **(2)** and then lift the USB/audio board **(3)**.

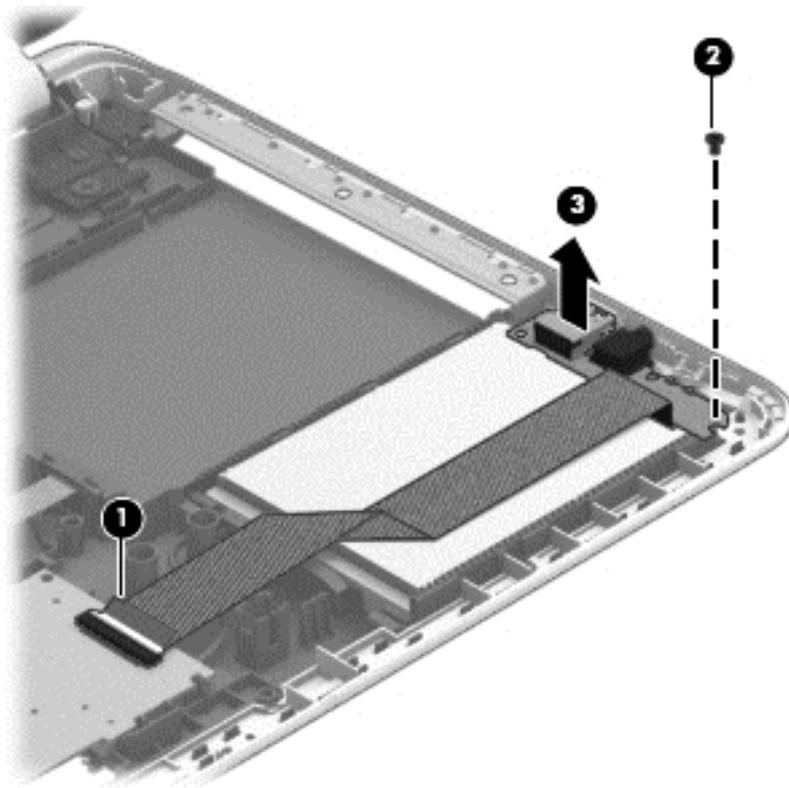


2. Lift the front of the hard drive **(1)** and slide the hard drive **(2)** forward .

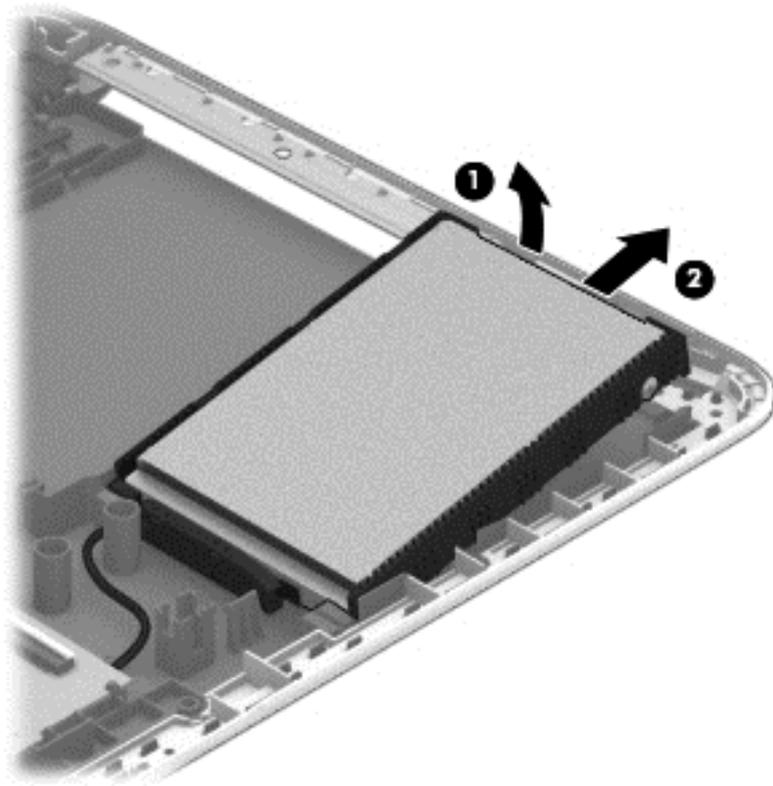


3. Release the hard drive connector cable from the clips.

 **NOTE:** You will disconnect the hard drive connector cable from the system board when you remove the system board.

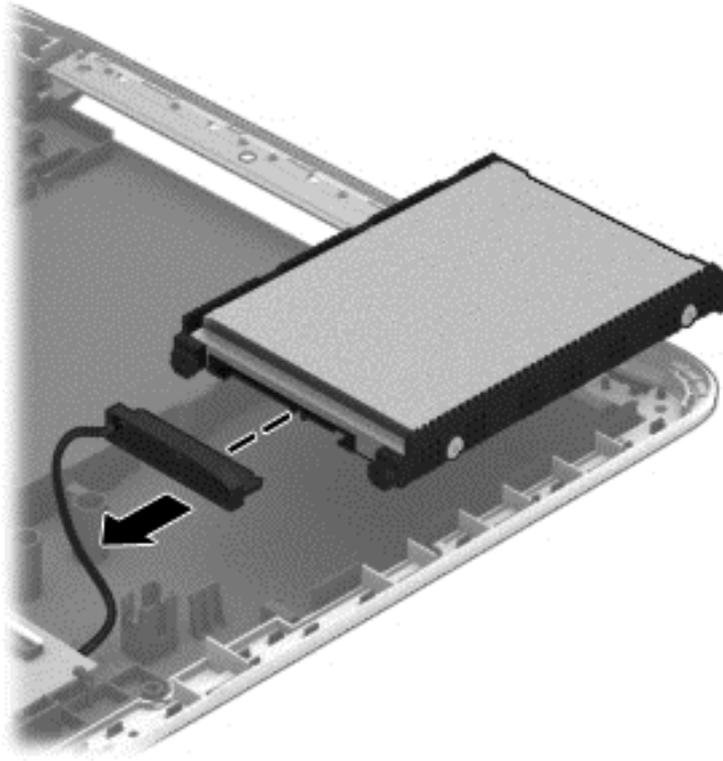

4. If it is necessary to disassemble the hard drive, perform the following steps:
 - a. Remove the four Phillips M3.0×3.5 screws (1) from the bracket and separate the front edges of the hard drive rubber bracket from the hard drive
 - b. Disassembling the hard drive

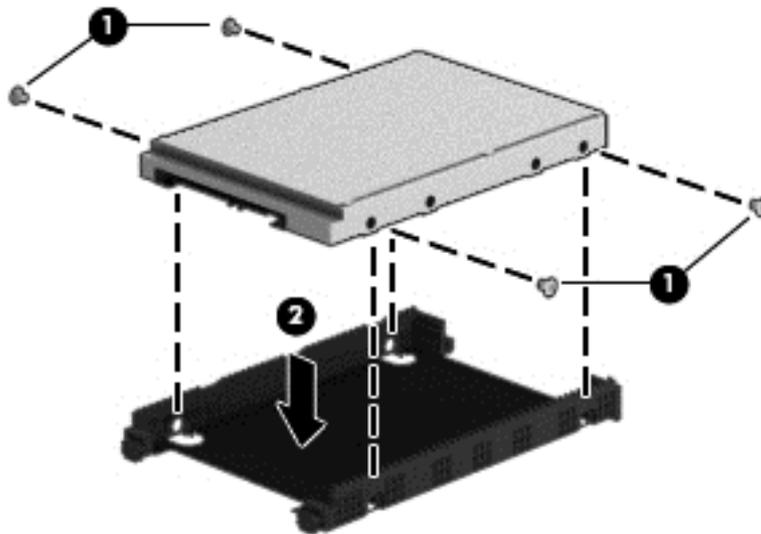

Reverse this procedure to reassemble and install the hard drive.

Power button board

| Description | Spare part number |
|-------------------------------------|-------------------|
| Power button board (includes cable) | 732076-001 |


Before removing the power button board, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
 - a. Optical drive (see [Optical drive on page 45](#)).
 - b. Service door (see [Service door on page 42](#)).
 - c. WLAN module (see [WLAN module on page 44](#)).
 - d. Memory module (see [Memory module on page 42](#)).
 - e. Keyboard (see [Keyboard on page 51](#)).
 - f. Top cover (see [Top cover on page 55](#)).

Remove the power button board:

1. Turn the top cover upside down, with the front toward you.
2. Remove the Phillips M2.5×2.5 screw **(1)** that secures the power button board to the top cover.

3. Remove the power button board (2) with cable (the cable was disconnected from the top cover when removing the top cover).

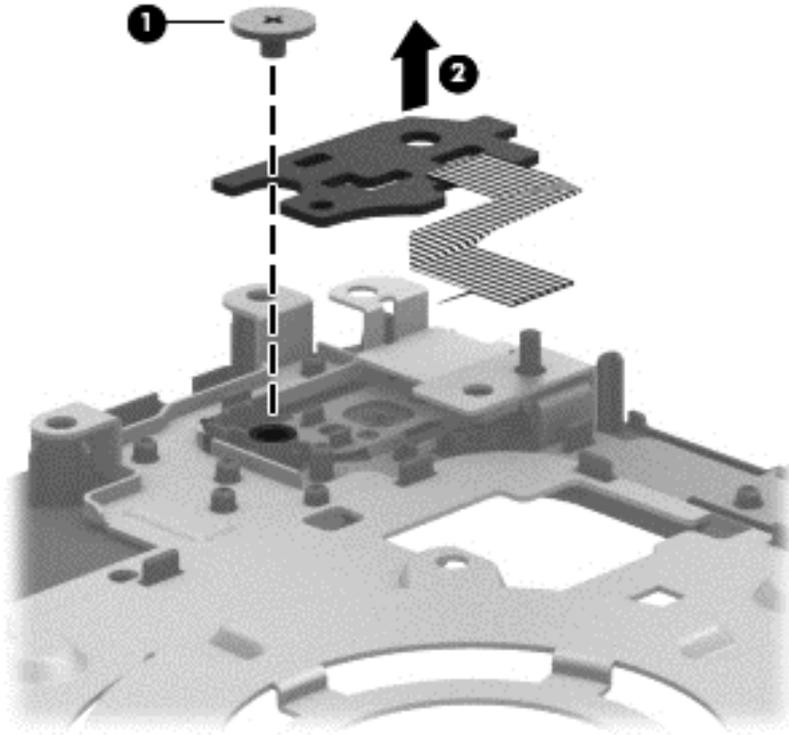

Reverse this procedure to install the power button board.

TouchPad button board

| Description | Spare part number |
|--|-------------------|
| TouchPad button board (includes cable) | 732078-001 |


Before removing the TouchPad button board, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
 - a. Optical drive (see [Optical drive on page 45](#)).
 - b. Service door (see [Service door on page 42](#)).
 - c. WLAN module (see [WLAN module on page 44](#)).
 - d. Memory module (see [Memory module on page 42](#)).
 - e. Keyboard (see [Keyboard on page 51](#)).
 - f. Top cover (see [Top cover on page 55](#)).

Remove the TouchPad button board:

1. Turn the top cover upside down, with the front toward you.
2. Release the TouchPad ZIF connector, and then disconnect the TouchPad button board cable **(1)** from the TouchPad board.
3. Remove the Phillips M2.0×3.5 screw **(2)** that secures the TouchPad button board bracket to the top cover.
4. Remove the TouchPad button board **(3)** carefully lifting the cable from the guides (the cable attached to the top cover was disconnected when removing the top cover).
5. Lift up the TouchPad button board **(4)**.

6. Remove the TouchPad button board (5).

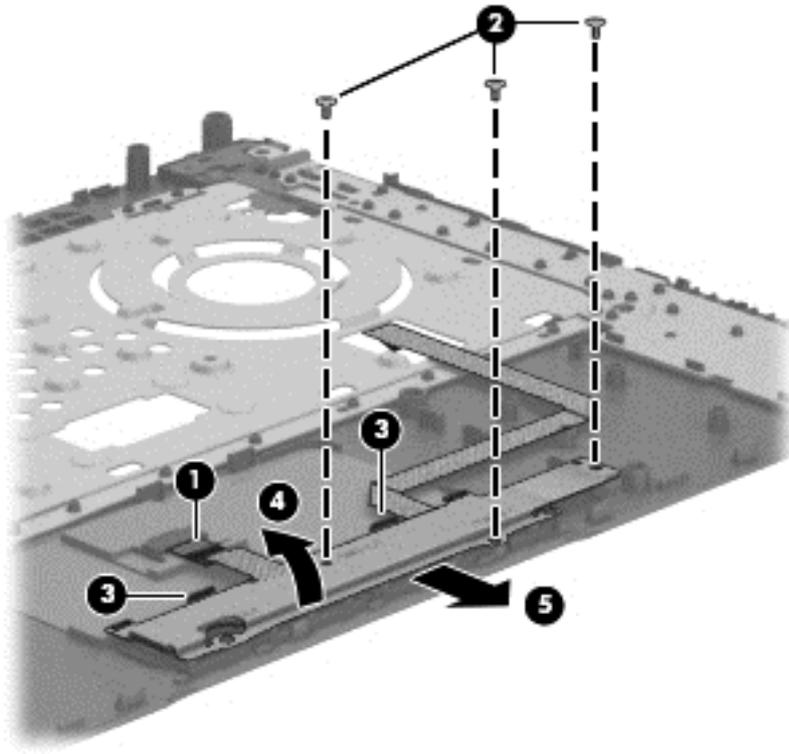

Reverse this procedure to install the TouchPad button board.

Optical drive connector cable


 **NOTE:** The optical drive connector cable is included with the Optical Drive, spare part number 732075-001.

Before removing the optical drive connector cable, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
 - a. Optical drive (see [Optical drive on page 45](#)).
 - b. Service door (see [Service door on page 42](#)).
 - c. WLAN module (see [WLAN module on page 44](#)).
 - d. Memory module (see [Memory module on page 42](#)).
 - e. Keyboard (see [Keyboard on page 51](#)).
 - f. Top cover (see [Top cover on page 55](#)).

Remove the optical drive connector cable:

1. Disconnect the optical drive connector cable (**1**) from the system board.
2. Release the optical drive connector cable from the clip (**2**) built into the base enclosure.
3. Remove the optical drive connector cable.

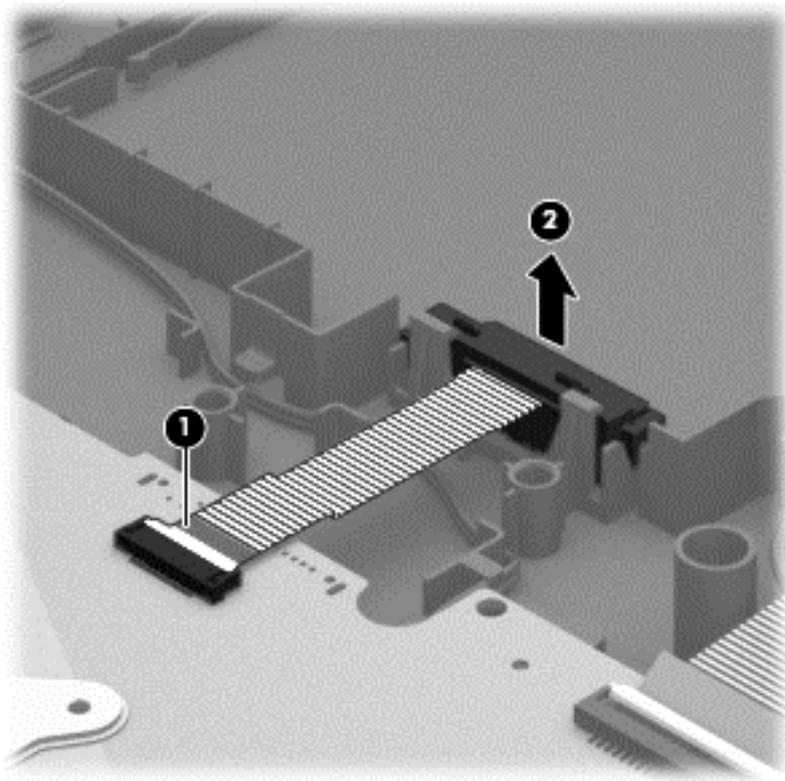

Reverse this procedure to install the optical drive connector cable.

System board



NOTE: The system board spare part kit includes replacement thermal material.

| Description | Spare part number |
|---|-------------------|
| For computer models equipped with Intel Discrete processors.. | |
| 4th generation | |
| Intel Core i7-4500U 1.8 GHz processor (4.0 MB L3 cache, 15 W) for use with FreeDOS and Ubuntu | 751493-001 |
| Intel Core i7-4500U 1.8 GHz processor (4.0 MB L3 cache, 15 W) for use with Windows Standard | 751493-501 |
| Intel Core i7-4500U 1.8 GHz processor (4.0 MB L3 cache, 15 W) for use with Windows Pro | 751493-601 |
| Intel Core i5-4200U 840M 1.6-GHz (2 GB DC BGA 15 W) for use with FreeDOS and Ubuntu | 751494-001 |
| Intel Core i5-4200U 840M 1.6-GHz (2 GB DC BGA 15 W) for use with Windows Standard | 751494-501 |
| Intel Core i5-4200U 840M 1.6-GHz (2 GB DC BGA 15 W) for use with Windows Professional | 751494-601 |
| For computer models equipped with Intel processors 3rd Generation | |
| Intel Core i5-4200M 840M 1.6-GHz (2 GB DC BGA 15 W) for use with FreeDOS and Ubuntu | 754312-001 |
| Intel Core i5-4200M 840M 1.6-GHz (2 GB DC BGA 15 W) for use with Windows Standard | 754312-501 |
| Intel Core i5-4200U 8670M 1.6-GHz (2 GB DC BGA 15 W) for use with Windows Professional | 754312-601 |
| Intel Celeron 1007U DC (1.5 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) for use with FreeDOS and Ubuntu | 737981-001 |
| Intel Celeron 1007U DC (1.5 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Standard | 737981-501 |
| Intel Celeron 1007U DC (1.5 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Professiona | 737981-601 |
| Intel Core i3-3217U DC (1.8 GHz, 3 MB L3 Cache, 1600MHz DDR3, 17 W) for use with FreeDOS and Ubuntu | 737982-001 |
| Intel Core i3-3217U DC (1.8 GHz, 3 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Standard | 737982-501 |
| Intel Core i3-3217U DC (1.8 GHz, 3 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Professional | 737982-601 |
| Intel Pentium 2117U DC (1.8 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) for use with FreeDOS and Ubuntu | 737983-001 |
| Intel Pentium 2117U DC (1.8 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Standard | 737983-501 |
| Intel Pentium 2117U DC (1.8 GHz, 2 MB L3 Cache, 1600MHz DDR3, 17 W) for use with Windows Professional | 737983-601 |
| For computer models equipped with AMD UMA processors. | |
| AMD A4-5000 (1.5 GHz, 2 MB L2, 1600MHz DDR3L, Quad 15W) for use with FreeDOS and Ubuntu. | 734826-001 |
| AMD A4-5000 (1.5 GHz, 2 MB L2, 1600MHz DDR3L, Quad 15W) for use with Windows Standard. | 734826-501 |
| AMD A4-5000 (1.5 GHz, 2 MB L2, 1600MHz DDR3L, Quad 15W) for use with Windows Professional. | 734826-601 |
| AMD A6-5000 (1.5 GHz, 2 MB L2, 1600MHz DDR3L, Quad 15W) for use with FreeDOS and Ubuntu. | 734827-001 |
| AMD A6-5000 (1.5 GHz, 2 MB L2, 1600MHz DDR3L, Quad 15W) for use with Windows Standard. | 734827-501 |
| AMD A6-5000 (1.5 GHz, 2 MB L2, 1600MHz DDR3L, Quad 15W) for use with Windows Professional. | 734827-601 |

| Description | Spare part number |
|--|--------------------------|
| AMD A8-5545M A76M (2.7 GHz/1.7 GHz, 4 MB L2, 1333MHz DDR3L Quad 19W) for use with FreeDOS and Ubuntu. | 734829-001 |
| AMD A8-5545M A76M (2.7 GHz/1.7 GHz, 4 MB L2, 1333MHz DDR3L Quad 19W) for use with Windows Standard. | 734829-501 |
| AMD A8-5545M A76M (2.7 GHz/1.7 GHz, 4 MB L2, 1333MHz DDR3L Quad 19W) for use with Windows Professional. | 734829-601 |
| AMD A8- 4555M (2.4 GHz/1.6 GHz, 4 MB L2, 1333MHz DDR3L Quad 19W) for use with FreeDOS and Ubuntu. | 737140-001 |
| AMD A8- 4555M (2.4 GHz/1.6 GHz, 4 MB L2, 1333MHz DDR3L Quad 19W) for use with Windows Standard. | 737140-501 |
| AMD A8- 4555M (2.4 GHz/1.6 GHz, 4 MB L2, 1333MHz DDR3L Quad 19W) for use with Windows Professional. | 737140-601 |
| AMD E1-2500 (1.4 GHz, 1 MB L2, 1600MHz DDR3L, Dual 15 W) for use with FreeDOS and Ubuntu. | 737141-001 |
| AMD E1-2500 (1.4 GHz, 1 MB L2, 1600MHz DDR3L, Dual 15 W) for use with Windows Standard. | 737141-501 |
| AMD E1-2500 (1.4 GHz, 1 MB L2, 1600MHz DDR3L, Dual 15 W) for use with Windows Professional. | 737141-601 |
| AMD A10-5745M A76M (2.9 GHz/2.1 GHz, 4 MB L2, 1333MHz DDR3L Quad 25W) for use with FreeDOS and Ubuntu. | 738124-001 |
| AMD A10-5745M A76M (2.9 GHz/2.1 GHz, 4 MB L2, 1333MHz DDR3L Quad 25W) for use with Windows Standard. | 738124-501 |
| AMD A10-5745M A76M (2.9 GHz/2.1 GHz, 4 MB L2, 1333MHz DDR3L Quad 25W) for use with Windows Professional. | 738124-601 |
| For computer models equipped with AMD Discrete processors. | |
| AMD A4-5000 8670M (1.5 GHz, 1 GB L2, 1600MHz DDR3L Quad 15W) for use with FreeDOS and Ubuntu. | 734820-001 |
| AMD A4-5000 8670M (1.5 GHz, 1 GB L2, 1600MHz DDR3L Quad 15W) for use with Windows Standard. | 734820-501 |
| AMD A4-5000 8670M (1.5 GHz, 1 GB L2, 1600MHz DDR3L Quad 15W) for use with Windows Professional. | 734820-601 |
| AMD A6-5200 8670M (2.0 GHz, 1 GB L2, 1600MHz DDR3L, Quad 25W) for use with FreeDOS and Ubuntu. | 734821-001 |
| AMD A6-5200 8670M (2.0 GHz, 1 GB L2, 1600MHz DDR3L, Quad 25W) for use with Windows Standard. | 734821-501 |
| AMD A6-5200 8670M (2.0 GHz, 1 GB L2, 1600MHz DDR3L, Quad 25W) for use with Windows Professional. | 734821-601 |
| AMD A10-5745M 8670M (2.9GHz/2.1GHz, 2 GB L2, 1333MHz DDR3L Quad 25W) for use with FreeDOS and Ubuntu. | 734824-001 |
| AMD A10-5745M 8670M (2.9 GHz/2.1 GHz, 2 GB L2, 1333MHz DDR3L Quad 25W) for use with Windows Standard. | 734824-501 |
| AMD A10-5745M 8670M (2.9 GHz/2.1 GHz, 2 GB L2, 1333MHz DDR3L Quad 25W) for use with Windows Professional. | 734824-601 |
| AMD A10- 4655M 8670M (2.8 GHz/2.0 GHz, 2 GB L2, 1333MHz DDR3L Quad 25W) for use with FreeDOS and Ubuntu. | 737138-001 |
| AMD A10- 4655M 8670M (2.8 GHz/2.0 GHz, 2 GB L2, 1333MHz DDR3L Quad 25W) for use with Windows Standard. | 737138-501 |
| AMD A10- 4655M 8670M (2.8 GHz/2.0 GHz, 2 GB L2, 1333MHz DDR3L Quad 25W) for use with Windows Professional. | 737138-601 |
| For computer models equipped with HP UMA processors | |

| Description | Spare part number |
|--|-------------------|
| HP A4-5050 (1.55 GHz, 2MB L2 1600 MHz DDR3L) quad core, 13.5 W | 755270-001 |
| HP A4-5050 (1.55 GHz, 2MB L2 1600 MHz DDR3L) quad core, 13.5 W | 755270-501 |
| HP A4-5050 (1.55 GHz, 2MB L2 1600 MHz DDR3L) quad core, 13.5 W | 755270-601 |

Before removing the system board, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
 - a. Optical drive (see [Optical drive on page 45](#)).
 - b. Service door (see [Service door on page 42](#)).
 - c. WLAN module (see [WLAN module on page 44](#)).
 - d. Memory module (see [Memory module on page 42](#)).
 - e. Keyboard (see [Keyboard on page 51](#)).
 - f. Top cover (see [Top cover on page 55](#)).
 - g. Hard drive (see [Hard drive on page 59](#)).

When replacing the system board, be sure that the following components are removed from the defective system board and installed on the replacement system board:


- Hard drive cable
- Power connector cable
- RTC battery (see [RTC battery on page 74](#))
- Fan (see [Heat sink assembly on page 78](#))
- Heat sink assembly (see [Heat sink assembly on page 78](#))

Remove the system board:

1. Disconnect the following cables from the system board:
 - (1) Display panel cable
 - (2) Speaker cable
 - (3) Optical drive connector cable
 - (4) Power connector cable

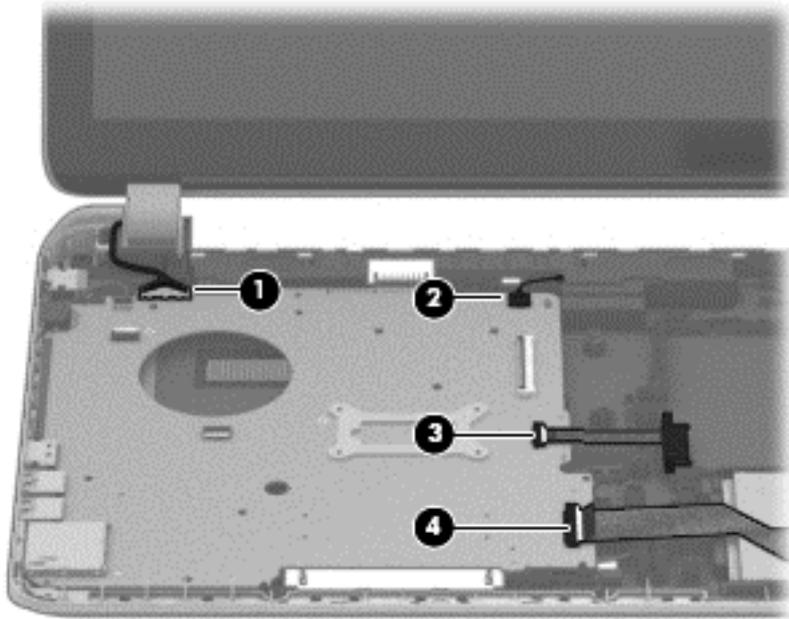


2. Remove the two Phillips M2.5×6.5 and M2.0×5.0 screws **(1)**. Remove the bracket **(2)** that secures the power connector bracket to the base enclosure.

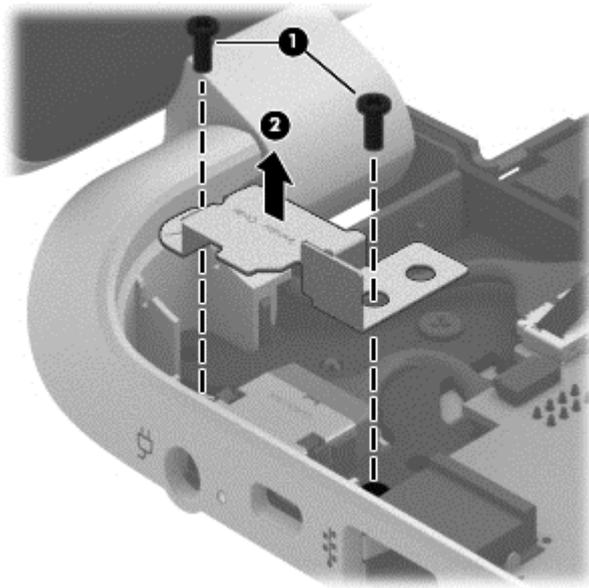


3. Remove the three Phillips M2.5×5.0 screws **(1)** that secure the system board to the base enclosure.
4. Lift the right side of the system board **(2)** until it rests at an angle.

5. Carefully remove from the power connector **(3)**. Remove the system board by sliding it up and to the right at an angle and pull the system board **(4)** carefully to the right.

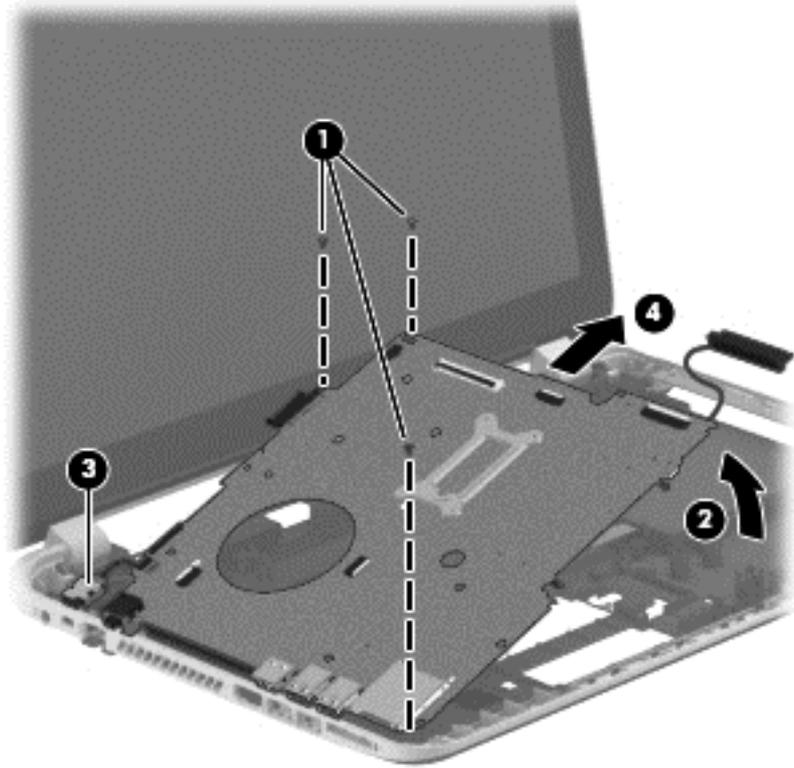

6. Remove the hard drive connector cable:
 - a. Turn the system board upside down, with the front toward you.

- b.** Disconnect the hard drive connector cable from the system board. The hard drive cable is part of the Hard Drive Hardware Kit, part number 732071-001.

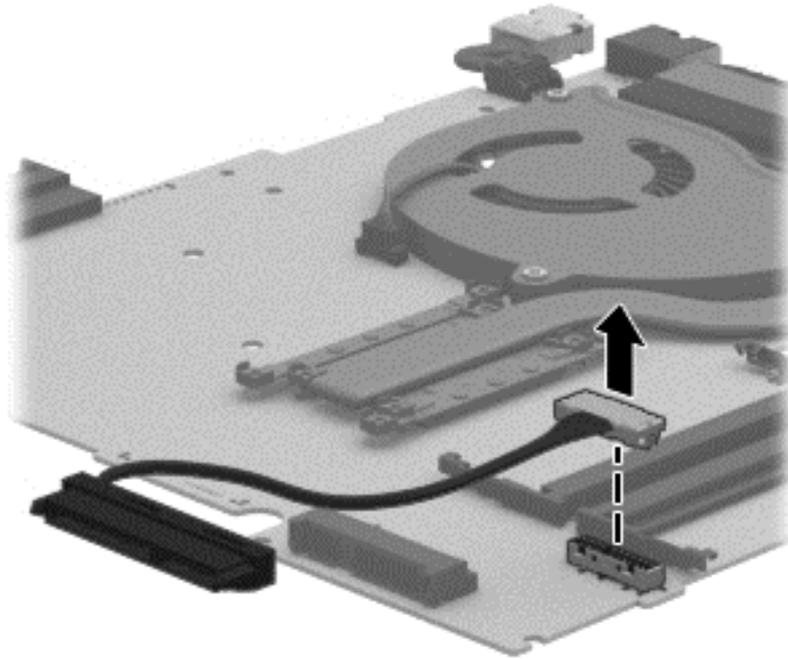

Reverse this procedure to install the system board.

RTC battery

| Description | Spare part number |
|-------------|-------------------|
| RTC battery | 697917-001 |


Before removing the RTC battery, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
 - a. Optical drive (see [Optical drive on page 45](#)).
 - b. Service door (see [Service door on page 42](#)).
 - c. WLAN module (see [WLAN module on page 44](#)).
 - d. Memory module (see [Memory module on page 42](#)).
 - e. Keyboard (see [Keyboard on page 51](#)).
 - f. Top cover (see [Top cover on page 55](#)).
 - g. Hard drive (see [Hard drive on page 59](#)).
 - h. System board (see [System board on page 68](#)).

Remove the RTC battery:

1. Use a flat-bladed, non-metallic tool **(1)** to release the RTC battery from the socket on the system board.

2. Remove the RTC battery (2).

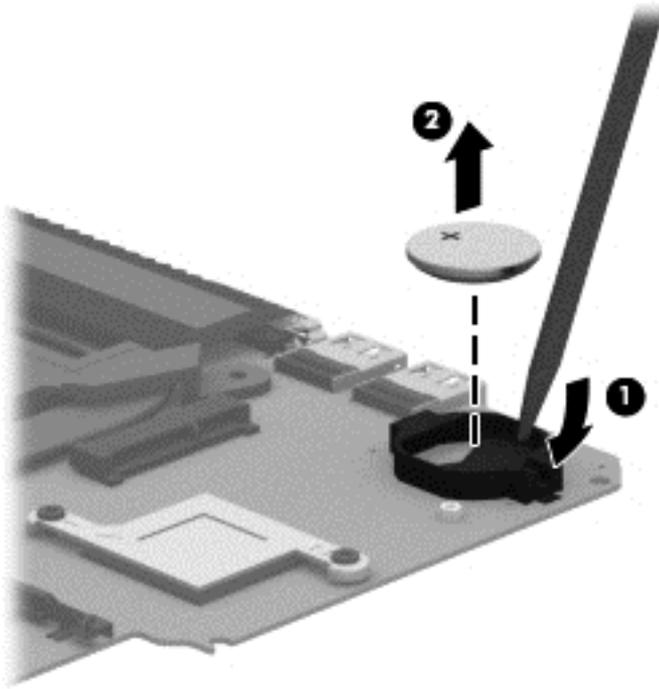

Reverse this procedure to install the RTC battery. When installing the RTC battery, make sure the “+” sign faces up.

Fan

| Description | Spare part number |
|-------------|-------------------|
| Fan | 732068-001 |



NOTE: To properly ventilate the computer, allow at least 7.6 cm (3 in) of clearance on the left side of the computer. The computer uses an electric fan for ventilation. The fan is controlled by a temperature sensor and is designed to turn on automatically when high temperature conditions exist. These conditions are affected by high external temperatures, system power consumption, power management/battery conservation configurations, battery fast charging, and software requirements. Exhaust air is displaced through the ventilation grill located on the left side of the computer.


Before removing the fan, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
 - a. Optical drive (see [Optical drive on page 45](#)).
 - b. Service door (see [Service door on page 42](#)).
 - c. WLAN module (see [WLAN module on page 44](#)).
 - d. Memory module (see [Memory module on page 42](#)).
 - e. Keyboard (see [Keyboard on page 51](#)).
 - f. Top cover (see [Top cover on page 55](#)).
 - g. Hard drive (see [Hard drive on page 59](#)).
 - h. System board (see [System board on page 68](#)).

Remove the fan:

1. Turn the system board upside down, with the front toward you.
2. Disconnect the fan cable **(1)** from the system board.
3. Remove the 2 screws **(2)** that secure the fan to the system board.

4. Remove the fan **(3)** from the system board.

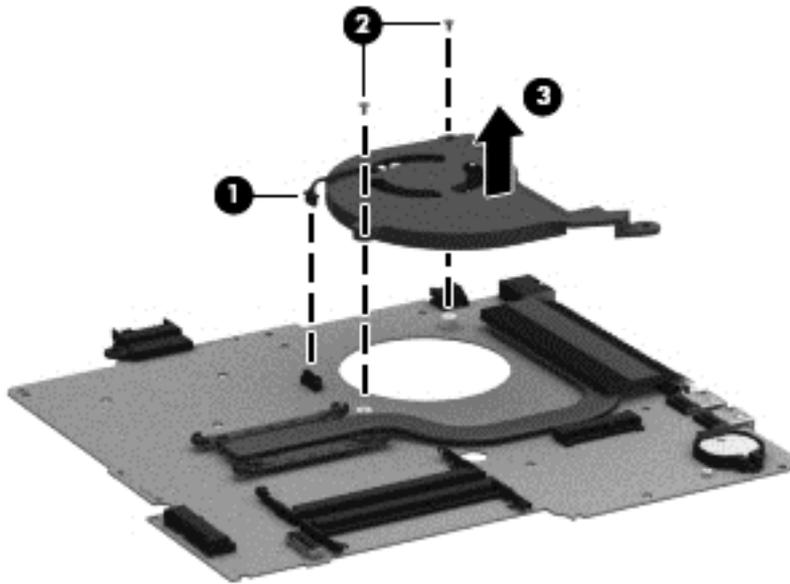

Reverse this procedure to install the fan.

Heat sink assembly

| Description | Spare part number |
|--|-------------------|
| Heat sink for use only on computer models equipped with a graphics subsystem with AMD UMA memory 19 W | 734448-001 |
| Heat sink for use only on computer models equipped with a graphics subsystem with AMD UMA memory 25 W | 734449-001 |
| Heat sink for use only on computer models equipped with a graphics subsystem with AMD discrete memory 19 W | 734450-001 |
| Heat sink for use only on computer models equipped with a graphics subsystem with AMD discrete memory 25 W | 734451-001 |
| For use only on computer models equipped with Intel HM76 chipset and UMA graphics | 742330-001 |
| For use only on computer models equipped with Intel HM76 chipset and switchable discrete graphics | 742331-001 |
| For use only on computer models equipped with Intel processors and UMA graphics | 742581-001 |
| For use only on computer models equipped with Intel processors and switchable discrete graphics | 742582-001 |



NOTE: To properly ventilate the computer, allow at least 7.6 cm (3 in) of clearance on the left side of the computer. The computer uses an electric fan for ventilation. The fan is controlled by a temperature sensor and is designed to turn on automatically when high temperature conditions exist. These conditions are affected by high external temperatures, system power consumption, power management/battery conservation configurations, battery fast charging, and software requirements. Exhaust air is displaced through the ventilation grill located on the left side of the computer.

Before removing the fan/heat sink assembly, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
 - a. Optical drive (see [Optical drive on page 45](#)).
 - b. Service door (see [Service door on page 42](#)).
 - c. WLAN module (see [WLAN module on page 44](#)).
 - d. Memory module (see [Memory module on page 42](#)).
 - e. Keyboard (see [Keyboard on page 51](#)).
 - f. Top cover (see [Top cover on page 55](#)).
 - g. Hard drive (see [Hard drive on page 59](#)).
 - h. System board (see [System board on page 68](#)).

Remove the heat sink assembly:

1. Turn the system board upside down, with the front toward you.


 **NOTE:** Steps 3 through 5 apply to computer models equipped with a graphics subsystem with discrete memory. See steps 6 and 8 for fan/heat sink assembly removal information for computer models equipped with a graphics subsystem with UMA memory.

2. Disconnect the fan cable from the system board.

 **NOTE:** Steps 3 through 5 apply to computer models equipped with a graphics subsystem with discrete memory. See steps 6 and 8 for fan/heat sink assembly removal information for computer models equipped with a graphics subsystem with UMA memory.


3. Following the 1, 2, 3, 4, 5, 6, 7 sequence stamped into the fan/heat sink assembly, loosen the four Phillips M2.0×10.0 captive screws **(1)** and the three Phillips M2.0×3.5 captive screws **(2)** that secure the fan/heat sink assembly to the system board.

4. Remove the heat sink assembly **(3)** from the system board.

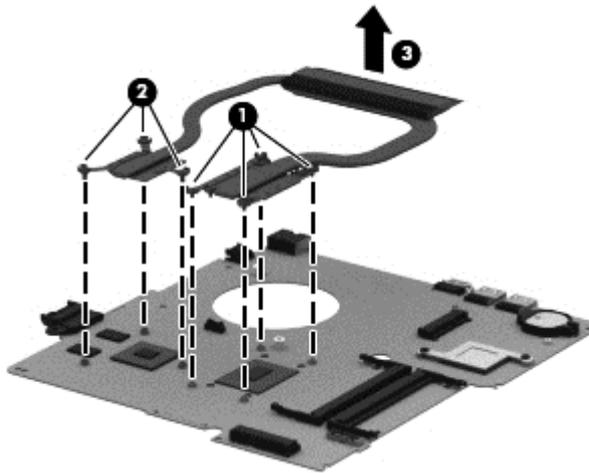


5. Thoroughly clean the thermal connections **(1)** and **(3)** on the system board and the heat sink **(2)** and **(4)** before replacing a heat sink onto a system board. Continue to step 8.

 **NOTE:** The following illustration shows the replacement thermal material locations on a computer model equipped with a graphics subsystem with discrete memory.

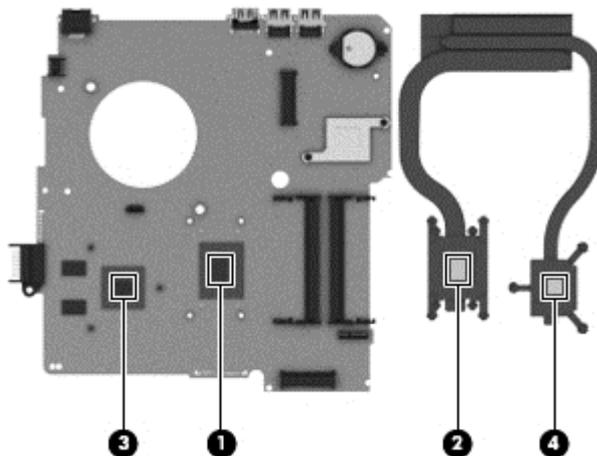


6. Following the 1, 2, 3, 4 sequence stamped into the fan/heat sink assembly, loosen the four Phillips M2.0×10.0 captive screws **(1)** that secure the fan/heat sink assembly to the system board.

7. Remove the heat sink assembly (2).

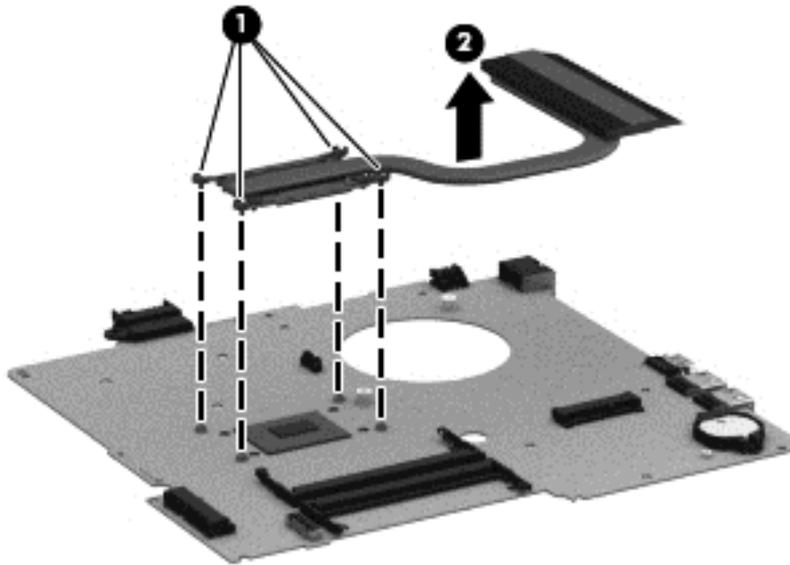

Thoroughly clean the thermal connections (1) on the system board and the heat sink (2) before replacing a heat sink onto a system board.

 **NOTE:** The following illustration shows the replacement thermal material locations on a computer model equipped with a graphics subsystem with UMA memory. Thermal paste is used on the processor (1) and the fan/heat sink assembly section (2) that services it.

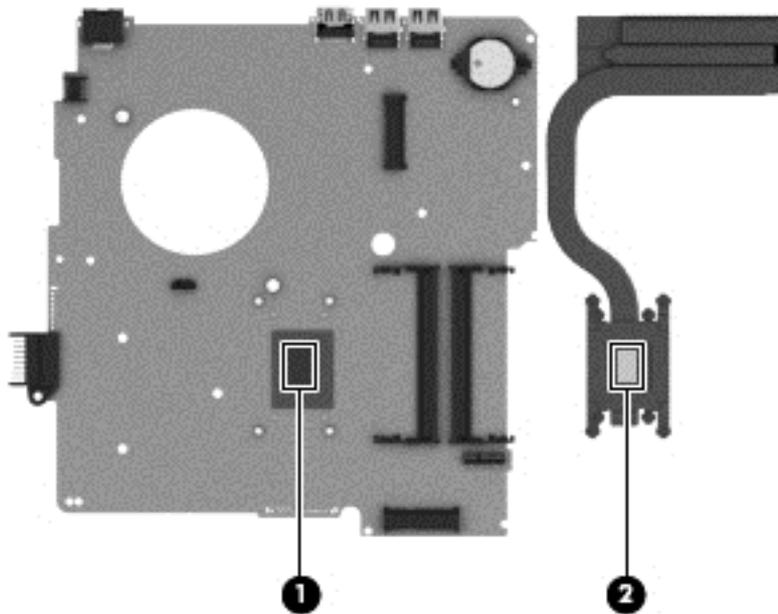

8. Reverse this procedure to install the fan/heat sink assembly. Replace the thermal material that ships with the replacement heat sink.

Power connector cable

| Description | Spare part number |
|--|-------------------|
| Power connector cable (includes bracket) | 732067-001 |

Before removing the power connector cable, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
 - a. Optical drive (see [Optical drive on page 45](#)).
 - b. Service door (see [Service door on page 42](#)).
 - c. WLAN module (see [WLAN module on page 44](#)).
 - d. Memory module (see [Memory module on page 42](#)).
 - e. Keyboard (see [Keyboard on page 51](#)).
 - f. Top cover (see [Top cover on page 55](#)).
 - g. Hard drive (see [Hard drive on page 59](#)).
 - h. System board (see [System board on page 68](#)).

Remove the power connector board:



NOTE: The power connector bracket was removed when removing the system board.

1. Turn the system board upside down, with the front toward you.
2. Release the power connector from the clip built into the system board.

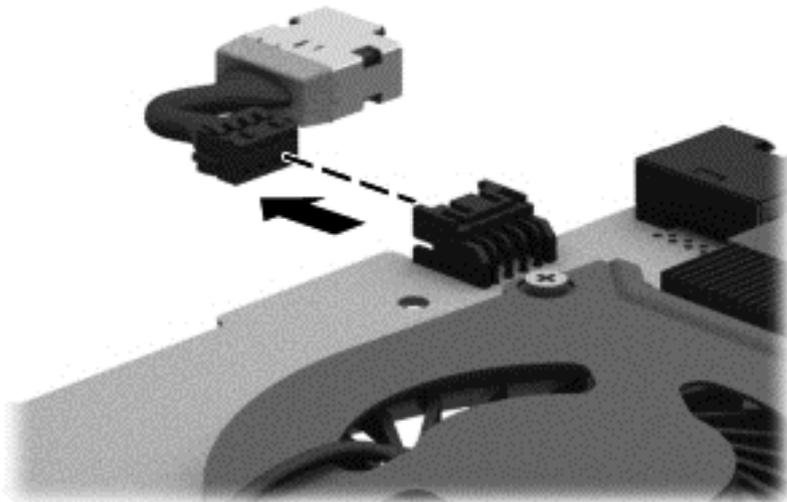

Reverse this procedure to install the power connector cable.

Speakers

| Description | Spare part number |
|---|-------------------|
| Speakers (include, speaker cable, and 4 rubber isolators) | 732084-001 |

Before removing the speakers, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
 - a. Optical drive (see [Optical drive on page 45](#)).
 - b. Service door (see [Service door on page 42](#)).
 - c. WLAN module (see [WLAN module on page 44](#)).
 - d. Memory module (see [Memory module on page 42](#)).
 - e. Keyboard (see [Keyboard on page 51](#)).
 - f. Top cover (see [Top cover on page 55](#)).
 - g. Hard drive (see [Hard drive on page 59](#)).
 - h. System board (see [System board on page 68](#)).

Remove the speakers:

- ▲ Remove the speakers by lifting up on the clip on the right side speaker and lifting the speakers. Carefully and gently lift the speaker wire connecting the left and right speakers.

 **NOTE:** The speaker connection cable was removed when removing the system board.

 **NOTE:** The speakers include rubber isolators that are installed in the screw holes. These isolators are crucial to the performance of the speakers.

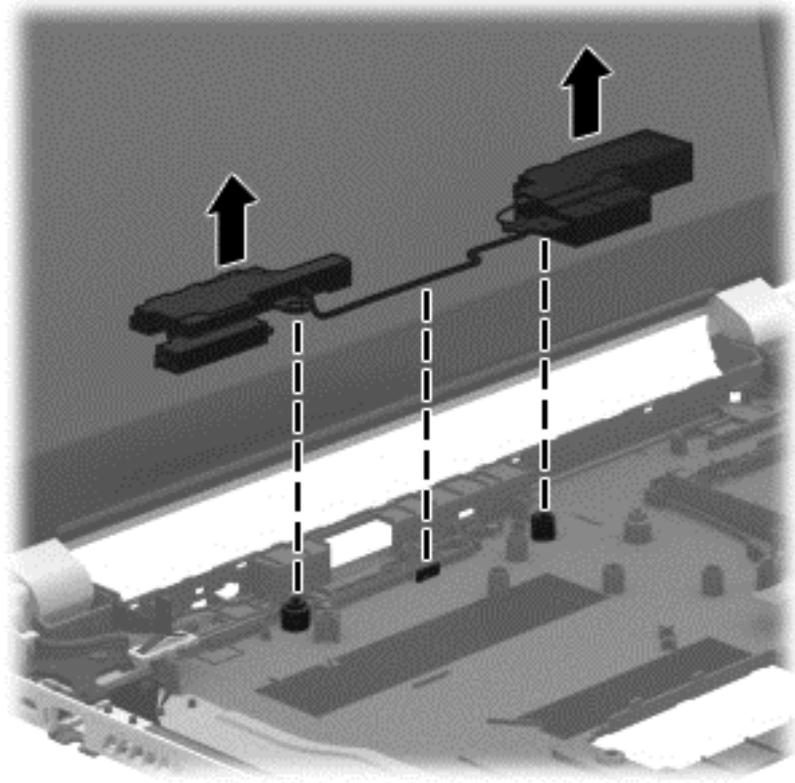

Reverse this procedure to install the speaker.

Display assembly

| Description | Spare part number |
|---|-------------------|
| Display bezel (includes 2 rubber screws) | 725617-001 |
| 15.6-in, BrightView, HD, LED, SVA display panel (screws included in the screw kit, spare part number 732082-001) | 732080-001 |
| 15.6-in, BrightView, HD, LED, SVA Touchscreen display panel (For Touchscreens, the screws spare part number is 732083-001) | |
| In aluminum metal finish | 732073-001 |
| In sparkling black finish | 732074-001 |
| In pearl white finish | 737170-001 |
| In flyer red finish | 737171-001 |
| In revolutionary blue finish | 737172-001 |
| In regal purple finish | 737173-001 |
| In mineral black finish | 737174-001 |
| In Goji berry finish | 737175-001 |
| In hazel berry finish | 737176-001 |
| In raspberry finish | 737177-001 |
| Webcamera/microphone module (includes adhesive) | 738664-001 |

| Description | Spare part number |
|---|-------------------|
| Display panel cable (includes webcamera/microphone module cable and two rubber screws) | 732066-001 |
| Antenna Kit (includes left and right wireless antenna cables and transceivers and 2 rubber screws) | 732063-001 |
| Display Hinge Kit (includes 2 rubber screws): | 732072-001 |
| Display enclosure (includes 2 rubber screw covers): | |
| In pearl white finish | 725611-001 |
| In sparkling black finish | 725612-001 |
| In flyer red finish | 725613-001 |
| In revolutionary blue finish | 725614-001 |
| In regal purple finish | 725615-001 |
| In aluminum metal finish | 732064-001 |
| In mineral black finish | 737166-001 |
| In Goji berry finish | 737167-001 |
| In hazel berry finish | 737168-001 |
| In raspberry finish | 737169-001 |

 **NOTE:** The display assembly is spared at the subcomponent level only. For more display assembly spare part information, see the individual removal subsections.


Before removing the display assembly, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
 - a. Optical drive (see [Optical drive on page 45](#)).
 - b. Service door (see [Service door on page 42](#)).
 - c. WLAN module (see [WLAN module on page 44](#)).
 - d. Memory module (see [Memory module on page 42](#)).
 - e. Keyboard (see [Keyboard on page 51](#)).
 - f. Top cover (see [Top cover on page 55](#)).
 - g. Hard drive (see [Hard drive on page 59](#)).
 - h. System board (see [System board on page 68](#)).

Remove the display assembly:


1. Remove the three Phillips M2.5×6.5 screws **(1)** and **(2)** that secure the display assembly to the base enclosure.

2. Remove the display assembly (3).

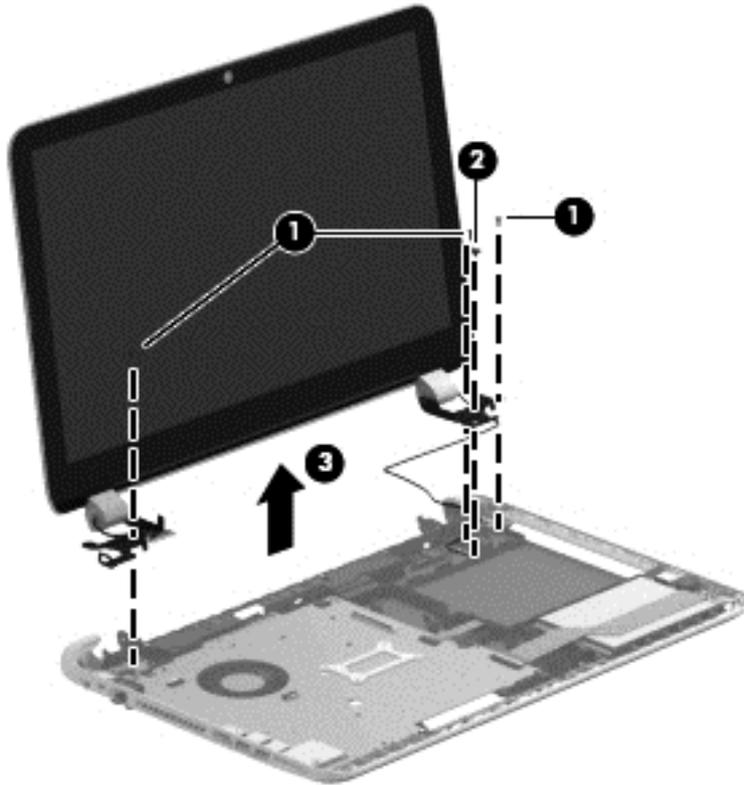


3. If it is necessary to replace the display bezel or any of the display assembly subcomponents:
 - a. Remove the two display bezel screw covers (1) and the two Phillips M2.5×5.0 screws (2) that secure the display bezel to the display assembly. The display bezel screw covers are included in the display bezel spare part kit, spare part number 676644-001, and in all display assembly subcomponent spare part kits.
 - b. Flex the inside edges of the bottom edge (3), the left and right sides (4), and the top edge (5) of the display bezel until the bezel disengages from the display enclosure.

- c. Remove the display bezel (6). The display bezel is available using spare part number 725617-001.

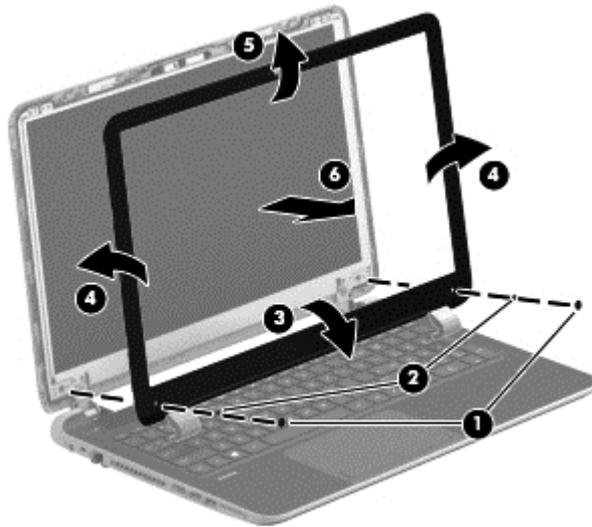


CAUTION: Be sure the work surface is clear of all tools, screws, and computer components before turning the display panel upside down on the work surface.

4. If it is necessary to replace the display panel:
- Remove the four Phillips M2.0×3.5 screws (1) that secure the display panel to the display enclosure.
 - Lift the top edge of the display panel (2) and turn the display panel upside down.

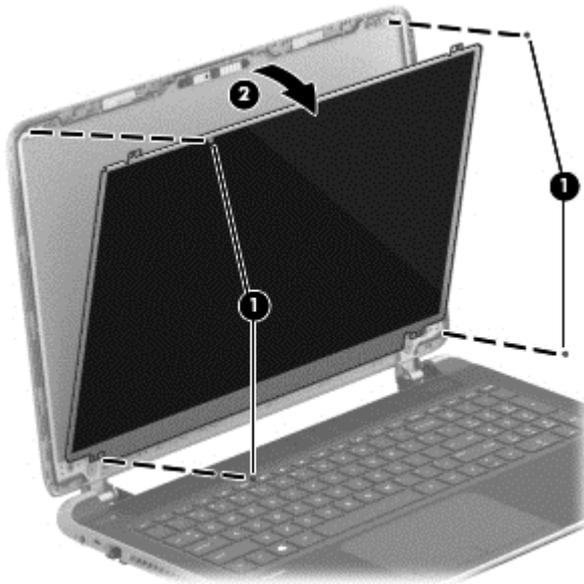


- c. Release the connector (1) that secures the display panel cable connector to the display panel.

- d. Disconnect the display panel cable **(2)** from the display panel and remove the panel **(3)**.

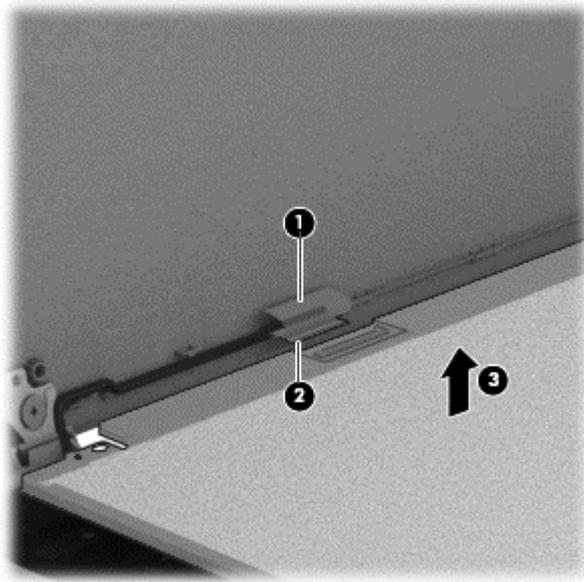


5. If it is necessary to replace the webcam/microphone module:
 - a. Disconnect the webcam/microphone module cable **(1)** from the webcam/microphone module. (The webcam/microphone module cable is part of the display panel cable.)
 - b. Detach the webcam/microphone module **(2)** from the display enclosure.

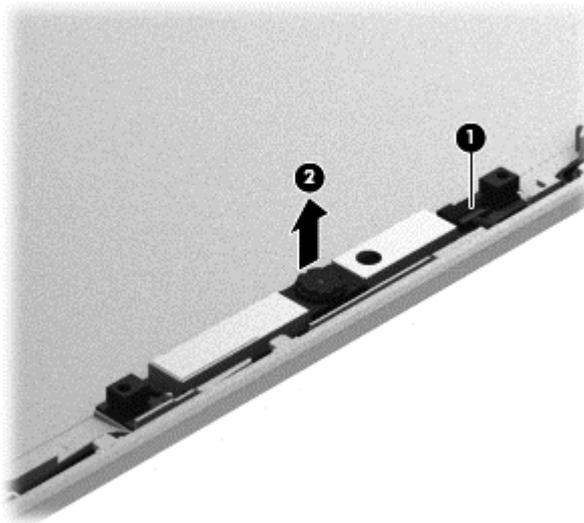


6. If it is necessary to replace the hinges:
 - a. Remove the four Phillips M2.5×4.0 screws **(1)** and **(2)** that secure the hinges to the display enclosure.
 - b. Remove the display hinge covers **(2)**.

- c. Remove the hinges and brackets **(3)** from the display enclosure.

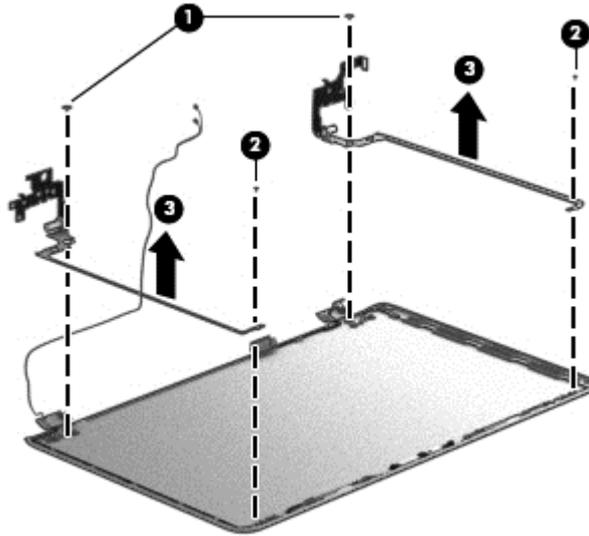

7. If it is necessary to replace the display panel cable:


- Release the display panel cable from the clips **(1)** and routing channel built into the display enclosure.
- Carefully release the cable from the channel guides **(2)** and remove the display panel cable **(3)**.

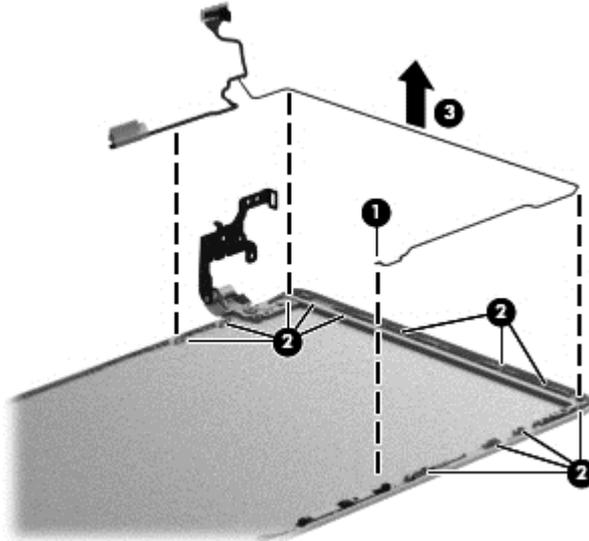

8. If it is necessary to replace the wireless antenna cables and transceivers:

- Release the wireless antenna transceivers **(1)** from the display enclosure. (The wireless antenna transceivers are attached to the display enclosure with double-sided tape.)
- Release the wireless antenna cables from the clips **(2)** built into the display enclosure.

- c. Remove the wireless antenna cables and transceivers **(3)**. The wireless antenna cables and transceivers are available in the Antenna Kit, spare part number 732063-001.

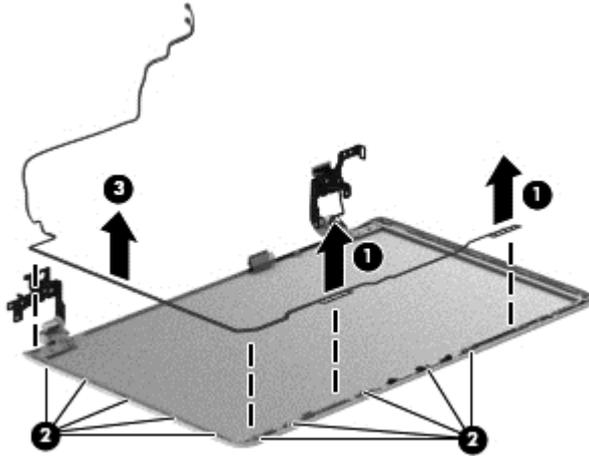

Reverse this procedure to install the display assembly.

7 Windows – Using Setup Utility (BIOS) and HP PC Hardware Diagnostics (UEFI)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

Starting Setup Utility (BIOS)

To start Setup Utility (BIOS), turn on or restart the computer, quickly press **esc**, and then press **f10**.

 **NOTE:** Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be revealed by pressing **fn+esc** (if you are already in Windows) or by using Setup Utility (BIOS).

1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 91](#)).
2. Use the arrow keys to select **Main**.
3. To exit Setup Utility (BIOS) without saving your changes, use the arrow keys to select **Exit**, select **Exit Discarding Changes**, and then press **enter**.
4. Select **Yes**.

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. From the Start screen, type `support`, and then select the **HP Support Assistant** app.
2. Click **Updates and tune-ups**, and then click **Check for HP updates now**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS, make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

If the update is more recent than your BIOS, make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are revealed on the screen after the download is complete. If no instructions are revealed, follow these steps:

1. From the Start screen, type `e`, and then select **File Explorer**.
2. Click your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder on your hard drive that contains the update.
4. Double-click the file that has an `.exe` extension (for example, `filename.exe`).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Using HP PC Hardware Diagnostics (UEFI)

HP PC Hardware Diagnostics is a Unified Extensible Firmware Interface (UEFI) that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

To start HP PC Hardware Diagnostics UEFI:

1. Turn on or restart the computer, quickly press [esc](#), and then press [f2](#).

The BIOS searches three places for the HP PC Hardware Diagnostics (UEFI) tools in the following order:

- a. Connected USB drive



NOTE: To download the HP PC Hardware Diagnostics (UEFI) tool to a USB drive, see [Downloading HP PC Hardware Diagnostics \(UEFI\) to a USB device on page 93](#).

- b. Hard drive
- c. BIOS

2. When the diagnostic tool opens, use the keyboard arrow keys to select the type of diagnostic test you want to run, and then follow the on-screen instructions.



NOTE: If you need to stop a diagnostic test, press [esc](#).

Downloading HP PC Hardware Diagnostics (UEFI) to a USB device



NOTE: The HP PC Hardware Diagnostics (UEFI) download instructions are provided in English only.

1. Go to <http://www.hp.com>.
2. Point to **Support**, and then click **Download Drivers**.
3. In the text box, enter the product name, and then click **Go**.
4. Select your computer model, and then select your operating system.
5. In the **Diagnostic** section, click **HP UEFI Support Environment**.

– or –

Click **Download**, and then select **Run**.

8 Ubuntu Linux – Using Setup Utility (BIOS) and System Diagnostics

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility includes settings for the types of peripherals installed, the startup sequence of the computer, and the amount of system and extended memory.



NOTE: Use extreme care when making changes in Setup Utility. Errors can prevent the computer from operating properly.

Starting Setup Utility

- ▲ Turn on or restart the computer. While the computer is booting press `esc`. When the Startup menu is displayed, press `f10`.

Using Setup Utility

Changing the language of Setup Utility

1. Start Setup Utility.
2. Use the arrow keys to select **System Configuration > Language**, and then press `enter`.
3. Use the arrow keys to select a language, and then press `enter`.
4. When a confirmation prompt with your language selected is displayed, press `enter`.
5. To save your change and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**, and then press `enter`.

Your change takes effect immediately.

Navigating and selecting in Setup Utility

Setup Utility does not support the TouchPad. Navigation and selection are by keystroke.

- To choose a menu or a menu item, use the arrow keys.
- To choose an item in a list or to toggle a field—for example an Enable/Disable field—use either the arrow keys or `f5` and `f6`.
- To select an item, press `enter`.
- To close a text box or return to the menu display, press `esc`.
- To display additional navigation and selection information while Setup Utility is open, press `f1`.

Displaying system information

1. Start Setup Utility.
2. Select the **Main** menu. System information such as the system time and date, and identification information about the computer is displayed.
3. To exit Setup Utility without changing any settings, use the arrow keys to select **Exit > Exit Discarding Changes**, and then press [enter](#).

Restoring factory default settings in Setup Utility

1. Start Setup Utility.
2. Use the arrow keys to select **Exit > Load Setup Defaults**, and then press [enter](#).
3. When the Setup Confirmation is displayed, press [enter](#).
4. To save your change and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**, and then press [enter](#).

The Setup Utility factory settings take effect when the computer restarts.



NOTE: Your password, security, and language settings are not changed when you restore the factory settings.

Exiting Setup Utility

- To exit Setup Utility and save your changes from the current session:
If the Setup Utility menus are not visible, press [esc](#) to return to the menu display. Then use the arrow keys to select **Exit > Exit Saving Changes**, and then press [enter](#).
- To exit Setup Utility without saving your changes from the current session:
If the Setup Utility menus are not visible, press [esc](#) to return to the menu display. Then use the arrow keys to select **Exit > Exit Discarding Changes**, and then press [enter](#).

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named `Readme.txt`, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be displayed by using Setup Utility.

1. Start Setup Utility.
2. If the system information is not displayed, use the arrow keys to select the **Main** menu.
BIOS and other system information is displayed.
3. To exit Setup Utility, use the arrow keys to select **Exit > Exit Discarding Changes**, and then press `enter`.

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Suspend or Hibernation.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. Access the page on the HP website that provides software for your computer.
2. Follow the on-screen instructions to identify your computer and access the BIOS update you want to download.
3. At the download area, follow these steps:
 - a. Identify the BIOS update that is later than the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.
Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Using Advanced System Diagnostics

Advanced System Diagnostics allows you to run diagnostic tests to determine if the computer hardware is functioning properly. The following diagnostic tests are available in Advanced System Diagnostics:

- **Start-up test**—This test analyzes the main computer components that are required to start the computer.
- **Run-in test**—This test repeats the start-up test and checks for intermittent problems that the start-up test does not detect.
- **Hard disk test**—This test analyzes the physical condition of the hard drive, and then checks all data in every sector of the hard drive. If the test detects a damaged sector, it attempts to move the data to a good sector.
- **Memory test**—This test analyzes the physical condition of the memory modules. If it reports an error, replace the memory modules immediately.
- **Battery test**—This test analyzes the condition of the battery and calibrates the battery if necessary. If the battery fails the test, contact support to report the issue and purchase a replacement battery.
- **System Tune-Up**—This group of additional tests checks your computer to make sure that the main components are functioning correctly. System Tune-Up runs longer and more comprehensive tests on memory modules, hard drive SMART attributes, the hard drive surface, the battery (and battery calibration), video memory, and the WLAN module status.

You can view system information and error logs in the Advanced System Diagnostics window.

To start Advanced System Diagnostics:

1. Turn on or restart the computer. While the computer is booting press **esc**. When the Startup menu is displayed, press **f2**.
2. Click the diagnostic test you want to run, and then follow the on-screen instructions.



NOTE: If you need to stop a diagnostics test while it is running, press **esc**.

9 Specifications

Computer specifications

| | Metric | U.S. |
|---|--|--|
| Dimensions | | |
| Width | 38.56 cm | 15.18 in |
| Depth | 25.8 cm | 10.15 in |
| Height (front to back) | 2.47 cm | .97 in |
| Weight | 2.33 or 2.56 kg (depending on configuration) | 5.14 lb or 5.67 (depending on configuration) |
| Input power | | |
| Operating voltage and current | 19.5 V dc @ 3.33 A – 65 W 19 V dc @ 4.62 A – 90 W 19.5 V dc @ 2.31 – 45 W (select models only) | |
| Temperature | | |
| Operating | 5°C to 35°C | 41°F to 95°F |
| Nonoperating | -20°C to 60°C | -4°F to 140°F |
| Relative humidity (noncondensing) | | |
| Operating | 10% to 90% | |
| Nonoperating | 5% to 95% | |
| Maximum altitude (unpressurized) | | |
| Operating | -15 m to 3,048 m | -50 ft to 10,000 ft |
| Nonoperating | -15 m to 12,192 m | -50 ft to 40,000 ft |
| NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures. | | |

15.0-inch display specifications

| | Metric | U.S. |
|-------------------|----------------|----------|
| Dimensions | | |
| Height | 17.6 cm | 6.93 in |
| Width | 31.2 cm | 12.28 in |
| Diagonal | 35.7 cm | 14.06 in |

| | Metric | U.S. |
|--------------------------------|--|------|
| Number of colors | Up to 16.8 million | |
| Contrast ratio | 200:1 (typical) | |
| Brightness | 200 nits (typical) | |
| Pixel resolution | | |
| Pitch | 0.197 × 0.197 mm | |
| Format | 1366×768) | |
| Configuration | RGB vertical stripe | |
| Backlight | LED | |
| Character display | 80 × 25 | |
| Total power consumption | 2.0 W | |
| Viewing angle | ±65° horizontal, ±50° vertical (typical) | |

Hard drive specifications

| | 1 TB* | 750 GB* | 640 GB* | 500 GB* | 320 GB* |
|---|------------------------------------|-------------------|---------------|-------------------|--------------|
| Dimensions | | | | | |
| Height | 9.5 mm | 9.5 mm | 9.5 mm | 9.5 mm | 7.0 mm |
| Width | 70 mm | 70 mm | 70 mm | 70 mm | 70 mm |
| Weight | 107 g max | 107 g max | 107 g max | 107 g max | 107 g max |
| Interface type | SATA | SATA | SATA | SATA | SATA |
| Transfer rate | 300 MB/sec | 300 MB/sec | 300 MB/sec | 300 MB/sec | 300 MB/sec |
| Security | ATA security | ATA security | ATA security | ATA security | ATA security |
| Seek times (typical read, including setting) | | | | | |
| Single track | 1.5 ms | 1.0 ms | 1.0 ms | 1.5 ms | 2.0 ms |
| Average | 11.0 ms | 14.0 ms | 14.0 ms | 12.0 ms | 12.0 ms |
| Maximum | 22.0 ms | 24.0 ms | 22.0 ms | 22.0 ms | 22.0 ms |
| Logical blocks | 1,953,525,168 | 1,465,128,359 | 1,250,242,867 | 976,752,240 | 625,121,433 |
| Disk rotational speed | 5400 rpm | 7200 and 5400 rpm | 5400 rpm | 7200 and 5400 rpm | 5400 rpm |
| Operating temperature | 5°C to 55°C (41°F to 131°F) | | | | |

*Size refers to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications may differ slightly.

NOTE: Certain restrictions and exclusions apply. Contact support for details.

10 Windows – Backing up, restoring, and recovering

This chapter provides information about the following processes:

- Creating recovery media and backups
- Restoring and recovering your system

 **NOTE:** This chapter describes an overview of backing up, restoring and recovering options. For more details about the tools provided, see the HP Support Assistant. To access the HP Support Assistant, from the Start screen, select the **HP Support Assistant app**. Use the search field to access information about backup, restore, refresh, and other recovery topics, and then follow the information provided.

Creating recovery media and backups

1. After you successfully set up the computer, create HP Recovery media. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced.

HP Recovery media you create will provide the following recovery options:

- **System Recovery**—Reinstalls the original operating system and the programs that were installed at the factory.
- **Minimized Image Recovery**—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- **Factory Reset**—Restores the computer to the state its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

See [Creating recovery media and backups on page 100](#).

2. Use the Windows tools to create system restore points and create backups of personal information. For more information and steps, see the HP Support Assistant. To access the HP Support Assistant, from the Start screen, select the **HP Support Assistant app**. Use the search field to access information about backup, restore, refresh, and other recovery topics, and then follow the information provided.

Creating HP Recovery media

HP Recovery Manager is a software program that offers a way to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and the software programs installed at the factory, and then configures the settings for the programs. HP Recovery media can also be used to customize the system or restore the factory image if you replace the hard drive.

- Only one set of HP Recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
- HP Recovery Manager examines the computer and determines the required storage capacity for the blank USB flash drive or the number of blank DVD discs that will be required.

- To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or instead you can use a high-quality blank USB flash drive.
- If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased separately) to create recovery discs, or you can obtain recovery discs for your computer from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information from the HP website. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to http://welcome.hp.com/country/us/en/wwcontact_us.html. If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub.
- Be sure that the computer is connected to AC power before you begin creating the recovery media.
- The creation process can take up to an hour or more. Do not interrupt the creation process.
- If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue, and the remaining discs will be burned.

To create HP Recovery media:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Recovery Media Creation**, and follow the on-screen instructions to continue.

If you ever need to recover the system, see [Recovering using HP Recovery Manager on page 102](#).

Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:

- Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state. For more information and steps, see Help and Support. From the Start screen, type `help`, and then select **Help and Support**.
- If you need to correct a problem with a preinstalled application or driver, use the Drivers and Applications Reinstall option of HP Recovery Manager to reinstall the individual application or driver.

From the Start screen, type `recovery`, select **HP Recovery Manager**, and then select **Drivers and Applications Reinstall**, and follow the on-screen instructions.

- If you want to reset your computer using a minimized image, you can choose the HP Minimized Image Recovery option from the HP Recovery partition or HP Recovery media. Minimized Image Recovery installs only drivers and hardware-enabling applications. Other applications included in the image continue to be available for installation through the Drivers and Applications Reinstall option in HP Recovery Manager.

For more information, see [Recovering using HP Recovery Manager on page 102](#).

- If you want to recover the computer's original factory partitioning and content, you can choose the System Recovery option from the HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 102](#).

- If you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media to restore the factory image to the replacement drive. For more information, see [Recovering using HP Recovery Manager on page 102](#).
- If you wish to remove the recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option.

For more information, see [Using the HP Recovery partition \(select models only\) on page 102](#).

Recovering using HP Recovery Manager

HP Recovery Manager software allows you to recover the computer to its original factory state. Using the HP Recovery media you created, you can choose from one of the following recovery options:

- System Recovery—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
- Minimized Image Recovery—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- Factory Reset—Restores the computer to the state its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

The HP Recovery partition (select models only) allows System Recovery and Minimized Image Recovery.

What you need to know

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.
- Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.
- HP Recovery media must be used if the computer hard drive fails.
- To use the Factory Reset, you must use HP Recovery media.
- If the HP Recovery media do not work, you can obtain recovery media for your system by contacting support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information from the HP website. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to http://welcome.hp.com/country/us/en/wwcontact_us.html.



IMPORTANT: HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you wish to retain.

Using the HP Recovery partition (select models only)

The HP Recovery partition allows you to perform a system recovery or minimized image recovery without the need for recovery discs or a recovery USB flash drive. This type of recovery can only be used if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:

1. Press **f11** while the computer boots.
– or –

- Press and hold **f11** as you press the power button.
2. Select **Troubleshoot** from the boot options menu.
 3. Select **HP Recovery Manager**, and follow the on-screen instructions.

Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
2. Insert the first HP Recovery disc you created into the optical drive on your computer or into an optional external optical drive, and then restart the computer.

– or –

Insert the HP Recovery USB flash drive you created into a USB port on your computer, and then restart the computer.

 **NOTE:** If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 103](#).

3. Follow the on-screen instructions.

Changing the computer boot order

If computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection for an optical drive or a USB flash drive.

To change the boot order:

1. Insert the HP Recovery media you created.
2. Restart the computer.
3. Press and hold **esc** while the computer is restarting, and then press **f9** for boot options.
4. Select the optical drive or USB flash drive you want to boot from.
5. Follow the on-screen instructions.

Removing the HP Recovery partition

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.



IMPORTANT: Removing the HP Recovery partition means you can no longer use Windows Refresh, the Windows Remove everything and reinstall Windows option, or the HP Recovery Manager option for minimized image recovery. Create HP Recovery media before removing the Recovery partition to ensure you have recovery options; see [Creating HP Recovery media on page 100](#).

Follow these steps to remove the HP Recovery partition:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Remove Recovery Partition**, and follow the on-screen instructions to continue.

11 Ubuntu Linux Backing up, restoring, and recovering

Recovery after a system failure is as good as your most recent backup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

Performing a system recovery

The Deja Dup Restore Tool allows you to repair or restore the computer to its original factory state. You can create an image restore DVD using a DVD±RW optical drive. You can also create a restore image on a USB storage device.

 **CAUTION:** Using Restore completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The recovery tool reinstalls the original operating system and programs and drivers that were installed at the factory. Software, drivers, and updates not installed at the factory must be manually reinstalled. Personal files must be restored from a backup.

 **NOTE:** HP recommends that you create the image restore in the event of a system failure.

Creating the restore DVDs

The restore creation software creates a set of system restore discs using blank, writable DVDs (DVD-R or DVD+R). HP recommends using blank DVD+R discs from a manufacturer you trust, because these recovery DVDs are so important. You need approximately 3 blank DVD+R discs. The program states how many discs are needed at the beginning of the process.

To create restore DVDs:

1. Click the **System menu** icon at the far right of the top panel, and then click **System Settings > Backup**.
2. Select **Storage** from the panel on the left side of the window, click the down-arrow next to **Backup Location**, and select the DVD from the drop-down list.
3. Select **Overview** from the panel on the left side of the window, and then click **Back Up Now**.
4. Follow the on-screen instructions.

Creating a restore image on a USB device

 **NOTE:** Be sure AC power is connected to the computer you begin.

Verify the exact amount of free space on your storage device before you begin the creation process. For most models, you will need at least 8 GB of free space on the storage device. However, depending on the drivers and software installed on your computer, you may need slightly more than 8 GB of space. **HP recommends that you use a 16 GB device or above for best results.**

 **IMPORTANT:** Remember to insert your USB device into the USB port on the computer before starting this procedure.

To create the restore image:

1. Click the **System menu** icon at the far right of the top panel, and then click **System Settings > Backup**.
2. Select **Storage** from the panel on the left side of the window, click the down-arrow next to **Backup location**, and select the USB device from the drop-down list.

 **NOTE:** If the USB device is not listed in the drop-down list for Backup Location, select **Local Folder**, and then click the **Choose Folder** button. Select the USB device from the panel on the left side of the Choose Folder window, and click **OK**.

3. Select **Overview** from the panel on the left side of the window, and then click **Backup Now**.
4. Follow the on-screen instructions.

Performing recovery using the restore DVD

 **NOTE:** The following procedure uses the F11 BIOS Recovery feature to perform the recovery.

1. If possible, back up all personal files.
2. Shut down the computer.
3. Be sure the restore DVD or USB device is connected to the computer.
4. Restart the computer.
5. Using the arrow keys, select **Recovery**, and then press **enter**.
6. Follow the on-screen instructions.

 **NOTE:** If you are unable to boot (start up) your computer, and you did not create a system recovery disc, you must purchase an *Ubuntu Operating System DVD* to reinstall the operating system. For additional information, refer to the *Worldwide Telephone Numbers* booklet.

Backing up your information

You should back up your computer files on a regular schedule to maintain a current backup. You can manually back up your information to an optional external drive, a network drive, discs, or the Ubuntu One website. Back up your system at the following times:

- At regularly scheduled times
- Before the computer is repaired or restored
- Before you add or modify hardware or software

To back up your home directory files to the Ubuntu One website using the Deja Dup Backup Tool:

 **NOTE:** Before you back up your information, be sure you have designated a location to save the backup files.

1. Click the **System menu** icon at the far right of the top panel, and then click **System Settings > Backup** icon.
2. Select **Folders** from the panel on the left side of the window, and beneath **Folders to back up**, select the folders to back up.

3. Select **Storage** from the panel on the left side of the window, click the down-arrow next to **Backup Location**, and select **Ubuntu One** from the drop-down list.
4. Select **Overview** from the panel on the left side of the window, and then click **Back Up Now**.



NOTE: The first time you back up your files to Ubuntu One, you will need to create an account to sign into Ubuntu One. Enter your email address and password into the account sign-in boxes and follow the on-screen instructions to complete the sign-in process.

To restore backup files:

1. Click the **System menu** icon at the far right of the top panel, and then click **System Settings > Backup** icon.
2. Click **Restore**, select the location of the backup files and the folder name, and then click **Forward**.
3. Under **Restore from When?**, select the date of the files to be restored, and then click **Forward**.
4. Select the location and folder where the files are to be restored, and then click **Forward**.
5. Follow the instructions on the screen.
6. Click **Restore** to start restoring the files, or click **Cancel** to cancel the operation.



NOTE: You may also back up to cloud storage services provided by various companies. For a small fee, they will keep your backup for you. A cloud service is recommended, since it is an easy way to keep your backups off-site and safe.

12 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC, or from 220 to 240 volts AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.5 m** (5.0 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

| Country/region | Accredited agency | Applicable note number |
|--------------------------------|-------------------|------------------------|
| Australia | EANSW | 1 |
| Austria | OVE | 1 |
| Belgium | CEBC | 1 |
| Canada | CSA | 2 |
| Denmark | DEMKO | 1 |
| Finland | FIMKO | 1 |
| France | UTE | 1 |
| Germany | VDE | 1 |
| Italy | IMQ | 1 |
| Japan | METI | 3 |
| The Netherlands | KEMA | 1 |
| Norway | NEMKO | 1 |
| The People's Republic of China | COC | 5 |
| South Korea | EK | 4 |

| Country/region | Accredited agency | Applicable note number |
|-----------------------|--------------------------|-------------------------------|
| Sweden | SEMKO | 1 |
| Switzerland | SEV | 1 |
| Taiwan | BSMI | 4 |
| The United Kingdom | BSI | 1 |
| The United States | UL | 2 |

1. The flexible cord must be Type H05VV-F, 3-conductor, 1.0-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a “T” mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00-mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
5. The flexible cord must be Type VCTF, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

13 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP Web site at <http://www.hp.com/recycle>.

Index

A

- AC adapter 8
 - spare part numbers 27
- AC adapter, spare part numbers 24
- action keys
 - identifying 13
- Advanced System Diagnostics
 - using for Ubuntu Linux computer models 97
- antenna
 - removal 89
 - spare part number 24, 29, 85, 90
- Antenna Kit, spare part number 24, 29, 85, 90
- audio, product description 3
- audio-out (headphone) jacks 7
- Audio/USB port
 - spare part numbers 30

B

- backups 105
 - for Windows computer models 100
- base enclosure, spare part number 23, 29
- battery
 - removal 40
 - spare part number 23, 29, 40
- battery cover, identifying 14
- battery lock latch l 14
- battery release latch 14
- BIOS
 - determining version for Ubuntu Linux computer models 96
 - determining version for Windows computer models 91
 - downloading an update for Ubuntu Linux computer models 96
 - downloading an update for Windows computer models 92

- updating for Ubuntu Linux computer models 96
- updating for Windows computer models 91
- Blu-ray Disc ROM with SuperMulti DVD±R/RW Double-Layer Drive
 - removal 45
 - spare part number 45
- Bluetooth label 15
- boot order, changing for Windows computer models 103
- bottom 15
- buttons
 - left TouchPad 10
 - power 11
 - right TouchPad 10

C

- caps lock light, identifying 11
- chipset, product description 1
- components
 - bottom 14
 - display 9
 - left side 8
 - right side 7
 - top 10
- computer major components 16
- computer specifications 98
- connector, power 8
- Cover Kit, spare part number 30

D

- default settings, restoring for Ubuntu Linux computer models 95
- deleted files
 - restoring for Windows computer models 101
- Disc ROM with SuperMulti DVD+/-RW Double-Layer Drive
 - spare part number 26
- Display
 - spare part numbers 32
- display
 - specifications 98

- display assembly
 - removal 84
 - spare part numbers 84
 - subcomponents 23
- display bezel
 - removal 49, 86
 - spare part number 23, 29, 49, 84, 87
- Display enclosure
 - spare part numbers 32
- display enclosure
 - spare part number 29
- display enclosure, spare part numbers 24, 29, 85
- display hinge
 - removal 88
 - spare part number 24, 30, 85, 89
- Display Hinge Kit, spare part number 24, 30, 85, 89
- Display panel
 - spare part numbers 30
- display panel
 - product description 2
 - removal 87
 - spare part number 23, 30, 84, 88
- display panel cable
 - removal 89
 - spare part number 24, 30, 85, 89
- DVD±RW Double-Layer SuperMulti Drive
 - spare part number 30

E

- esc key, identifying 13
- Ethernet, product description 3

F

- factory settings, restoring for Ubuntu Linux computer models 95
- fan
 - removal 76
 - spare part numbers 76

fan/heat sink assembly
removal 78
spare part numbers 22, 33, 78
fn key, identifying 13

G

graphics, product description 1

H

hard drive
product description 3
removal 59
spare part numbers 19, 26, 27,
59
specifications 99
hard drive connector cable
illustrated 26
Hard Drive Hardware Kit
contents 26
spare part number 19, 26, 30,
59
hard drive light 7
hard drive rubber bracket
illustrated 26
removal 61
hard drive, identifying 14
HDMI 25
HDMI adapter
spare part numbers 27
HDMI port
identifying 8
heat sink
spare part numbers 30
heat sink assembly
spare part numbers 30
HP PC Hardware Diagnostics (UEFI)
downloading for Windows
computer models 93
using on Windows computer
models 93
HP Recovery Manager
correcting boot problems for
Windows computer models
103
for Windows computer models
102
starting for Windows computer
models 102

HP Recovery media
creating for Windows computer
models 100
recovery for Windows computer
models 103

HP Recovery partition
for Windows computer models
102
recovery for Windows computer
models 102
removing for Windows computer
models 104

I

integrated numeric keypad,
identifying 13
integrated webcam, identifying 9
internal microphones, identifying 9

J

jacks
audio-out (headphone) 7
network 8
RJ-45 (network) 8

K

keyboard
product description 4
removal 51
spare part numbers 17, 27, 28,
29, 51
keypad, integrated numeric 13
keys
action 13
esc 13
fn 13
num lock 13
Windows 13

L

labels
Bluetooth 15
regulatory 15
serial number 15
service 15
wireless certification 15
WLAN 15
latch, battery release 14
latches 14
lights
AC adapter 8

caps lock 11
hard drive 7
mute 11
power 7, 11
wireless 11

M

memory card reader, identifying 8
memory module
identifying 14
product description 2
removal 42
spare part numbers 22, 27, 42
microphone
product description 3
minimized image
creating for Windows computer
models 102
minimized image recovery
for Windows computer models
102
model name 1
mute light, identifying 11

N

network jack, identifying 8
num lock key, identifying 13

O

operating system, product
description 5
optical drive
product description 3
removal 45
spare part numbers 26, 30, 45
optical drive bracket
removal 46
optical drive connector cable
removal 66
spare part number 66
optical drive, identifying 7
original system recovery
for Windows computer models
102

P

Plastics Kit, spare part number 42
pointing device, product
description 4
ports
charging (powered) 8

- HDMI 8
 - product description 4
 - USB 3.0 8
 - power button board
 - removal 62
 - spare part number 19, 30, 62
 - power button, identifying 11
 - power connector cable
 - removal 81
 - spare part number 22, 30, 81
 - power connector, identifying 8
 - power cord
 - set requirements 108
 - spare part numbers 25, 26, 27
 - power lights, identifying 7, 11
 - power requirements, product description 4
 - processor
 - product description 1
 - product description
 - audio 3
 - chipset 1
 - display panel 2
 - Ethernet 3
 - external media cards 4
 - graphics 1
 - hard drive 3
 - keyboard 4
 - memory module 2
 - microphone 3
 - operating system 5
 - optical drive 3
 - pointing device 4
 - ports 4
 - power requirements 4
 - processors 1
 - product name 1
 - security 4
 - serviceability 5
 - video 3
 - wireless 3
 - product name 1
 - product name and number, computer 15
- R**
- recovery
 - discs for Windows computer models 101, 103
 - for Windows computer models 102
 - HP Recovery Manager for Windows computer models 102
 - media for Windows computer models 103
 - starting for Windows computer models 102
 - supported discs for Windows computer models 101
 - USB flash drive for Windows computer models 103
 - using HP Recovery media for Windows computer models 101
 - recovery media
 - creating for Windows computer models 100
 - creating using HP Recovery Manager for Windows computer models 101
 - recovery partition
 - for Windows computer models 102
 - removing for Windows computer models 104
 - regulatory information
 - regulatory label 15
 - wireless certification labels 15
 - removal/replacement procedures 39, 48
 - restore
 - Windows File History 101
 - RJ-45 (network) jack, identifying 8
 - RTC battery
 - removal 74
 - spare part number 22, 27, 74
- S**
- Screw Kit, spare part number 25, 30
 - security cable slot, identifying 8
 - security, product description 4
 - serial number 15
 - serial number, computer 15
 - service cover
 - removal 42
 - spare part number 30
 - service door
 - spare part number 42
 - service labels
 - locating 15
 - serviceability, product description 5
 - Setup Utility
 - changing the language for Ubuntu Linux computer models 94
 - displaying system information for Ubuntu Linux computer models 95
 - exiting for Ubuntu Linux computer models 95
 - navigating for Ubuntu Linux computer models 94
 - restoring default settings for Ubuntu Linux computer models 95
 - selecting for Ubuntu Linux computer models 94
 - starting for Ubuntu Linux computer models 94
 - Setup Utility (BIOS), using for Windows computer models 91
 - slots
 - memory card 8
 - security cable 8
 - speakers
 - identifying 12
 - removal 83
 - spare part number 23, 30, 83
 - specifications
 - computer 98
 - display 98
 - hard drive 99
 - SuperMulti DVD±R/RW Double-Layer Drive
 - spare part number 23
 - supported discs
 - recovery for Windows computer models 101
 - system board
 - removal 68
 - spare part numbers 19, 27, 30, 31, 32, 33, 68
 - system information, displaying for Ubuntu Linux computer models 95
 - system recovery
 - for Windows computer models 102

system restore point, creating for
Windows computer models 100

WLAN module
removal 44
spare part numbers 22, 44

T

Top cover
spare part numbers 32
top cover
removal 55
spare part numbers 18, 30, 55
TouchPad
buttons 10
TouchPad button board
removal 64
spare part number 19, 30, 64
TouchPad zone, identifying 10
traveling with the computer 15

U

USB 3.0 ports identifying 8

V

vents, identifying 14
video, product description 3

W

webcam light, identifying 9
webcamera/microphone module
removal 88
spare part number 33, 88
spare part number 738664-001
24, 84
Windows
File History 101
restoring files 101
system restore point 100
Windows key, identifying 13
wireless antenna
removal 89
spare part number 24, 29, 85,
90
wireless certification label 15
wireless light 11
wireless module compartment cover
spare part number 30
wireless, product description 3
WLAN
spare part numbers 27
WLAN antennas, identifying 9
WLAN device 15
WLAN label 15