

**Color Side 1:**  
BLACK + PMS 2925

**Color Side 2:**  
BLACK + PMS 2925

**Flat size:**  
8.5 x 5.5 in.

**Finished size:**  
4.25 x 5.5 in.

 
**Fold 1:**  
Perfect-bound  
booklet;  
Spine should  
be WHITE



# Quick Start



EN Quick Start  
AR Quick Start  
BS Quick Start  
BG Quick Start  
CS Quick Start  
DA Quick Start  
DE Quick Start  
ET Quick Start  
ES Quick Start  
EL Quick Start  
FR Quick Start  
HR Quick Start  
IT Quick Start  
KK Quick Start  
LV Quick Start  
LT Quick Start  
HU Quick Start  
NL Quick Start  
NO Quick Start  
PL Quick Start  
PT Quick Start  
RO Quick Start  
RU Quick Start  
SK Quick Start  
SL Quick Start  
FI Quick Start  
SR Quick Start  
SV Quick Start  
TR Quick Start  
UK Quick Start  
HE Quick Start

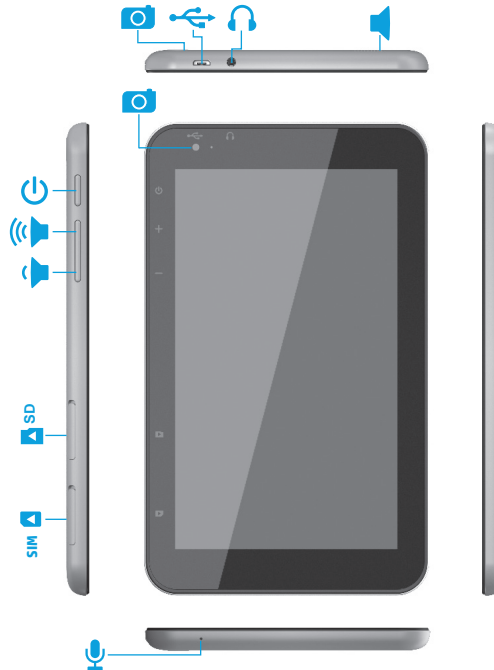

**Color Side 1:**  
BLACK + PMS 2925

**Flat size:**  
8.5 x 5.5 in.

**Fold 1:**  
Perfect-bound  
booklet;  
Spine should  
be WHITE



**Color Side 2:**  
BLACK + PMS 2925

**Finished size:**  
4.25 x 5.5 in.

## Table of Contents

EN	English	1
AR	العربية	6
BS	Bosanski	11
BG	Български	16
CS	Čeština	21
DA	Dansk	26
DE	Deutsch	31
ET	Eesti	36
ES	Español	41
EL	Ελληνικά	46
FR	Français	51
HR	Hrvatski	56
IT	Italiano	61
KK	Қазақша	66
LV	Latviešu	71
LT	Lietuvių	76
HU	Magyar	81
NL	Nederlands	86
NO	Norsk	91
PL	Polski	96
PT	Português	101
RO	Română	106
RU	Русский	111
SK	Slovenčina	116
SL	Slovenščina	121
FI	Suomi	126
SR	Srpski	131
SV	Svenska	136
TR	Türkçe	141
UK	Українська	146
HE	עברית	151
	EAC мәліметтері; Примечания о соответствии стандартам EAC	156




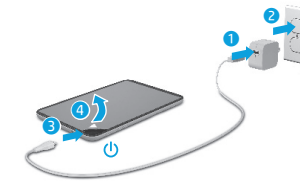 
## Setting up your tablet



**Note:** Features may vary by model and country.

**1** If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.









**2** After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.


**3** Follow the on-screen instructions to select a language and a wireless network.

## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

 
 
The following gestures can be used with your tablet:

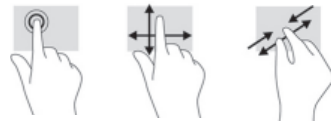

 
### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.

 

**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.


### Back up your data

HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.


### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.






 
### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).


-  **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
-  **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
-  **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).
-  **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
-  **WARNING:**  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 
## Setting up your tablet


**Note:** Features may vary by model and country.

- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



- 2 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.

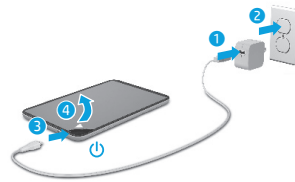







**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.

- 3 Follow the on-screen instructions to select a language and a wireless network.





## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app.


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

 

The following gestures can be used with your tablet:

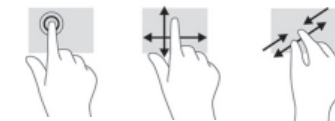

### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.



### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

### Resource

#### HP support

- Online chat with an HP technician.
- Find telephone numbers.
- Locate HP service center locations.

### Location

Go to <http://welcome.hp.com/support>

#### Product Notices, Warranty, and User Guide

- Safety and regulatory information
- The expressly provided HP Limited Warranty applicable to your tablet
- Product documentation

On the Home screen, touch the **HP User Guides** app, touch , select your **Region** and **Language**, and then select **HP Worldwide Limited Warranty and Technical Support**, **Product Notices**, or **User Guide**.

#### Serial number, product number, model number, and IMEI number

On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 


 
### Setting up your tablet



**Note:** Features may vary by model and country.

**1** If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



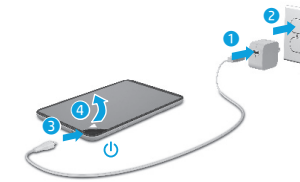





**2** After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.


**3** Follow the on-screen instructions to select a language and a wireless network.


## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

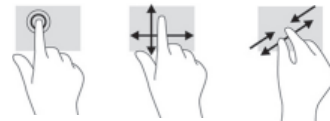

The following gestures can be used with your tablet:




### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.

 

**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.


### Back up your data

HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.

### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.



## BS More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch <b>i</b> , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.






 
### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).

 
-  **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
-  **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
-  **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).
-  **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
-  **WARNING:**  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 
## Setting up your tablet

**Note:** Features may vary by model and country.

- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



- 2 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.

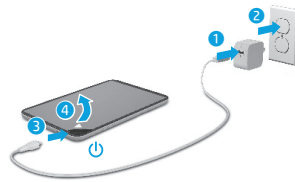







**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.

- 3 Follow the on-screen instructions to select a language and a wireless network.





## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app.


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

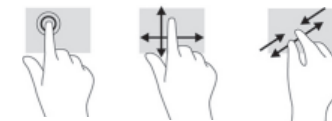

The following gestures can be used with your tablet:



### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.



### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

### Resource

#### HP support

- Online chat with an HP technician.
- Find telephone numbers.
- Locate HP service center locations.

### Location

Go to <http://welcome.hp.com/support>

#### Product Notices, Warranty, and User Guide

- Safety and regulatory information
- The expressly provided HP Limited Warranty applicable to your tablet
- Product documentation

On the Home screen, touch the **HP User Guides** app, touch , select your **Region** and **Language**, and then select **HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide**.

#### Serial number, product number, model number, and IMEI number

On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

**Limited Warranty**

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

 
**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 
**Setting up your tablet**

**Note:** Features may vary by model and country.

**1** If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.





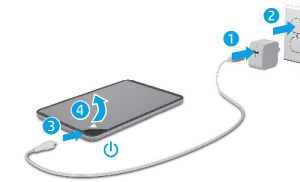



**2** After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.


**3** Follow the on-screen instructions to select a language and a wireless network.


## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures



The following gestures can be used with your tablet:




### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.

 

**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.


### Back up your data

HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.

### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## CS More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch <b>i</b> , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

 
**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 
## Setting up your tablet

 
**Note:** Features may vary by model and country.

- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



- 2 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.

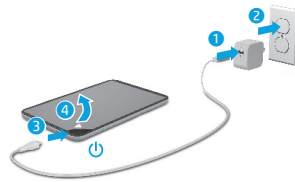







**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.

- 3 Follow the on-screen instructions to select a language and a wireless network.





## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app.


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

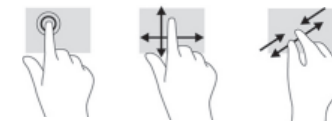

The following gestures can be used with your tablet:



### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.



### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

### Resource

### Location

#### HP support

- Online chat with an HP technician.
- Find telephone numbers.
- Locate HP service center locations.

Go to <http://welcome.hp.com/support>

#### Product Notices, Warranty, and User Guide

- Safety and regulatory information
- The expressly provided HP Limited Warranty applicable to your tablet
- Product documentation

On the Home screen, touch the **HP User Guides** app, touch , select your **Region** and **Language**, and then select **HP Worldwide Limited Warranty and Technical Support**, **Product Notices**, or **User Guide**.

#### Serial number, product number, model number, and IMEI number

On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.



### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 


 
### Setting up your tablet



**Note:** Features may vary by model and country.

**1** If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



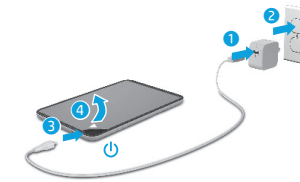





**2** After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.


**3** Follow the on-screen instructions to select a language and a wireless network.


## DE Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

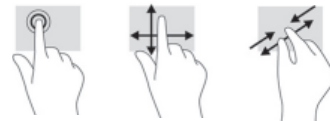

The following gestures can be used with your tablet:




### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.

 

**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.


### Back up your data

HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.

### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## DE More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch <b>i</b> , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.






 
### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).

 
-  **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
-  **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
-  **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).
-  **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
-  **WARNING:**  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 
## Setting up your tablet


**Note:** Features may vary by model and country.

- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



- 2 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.

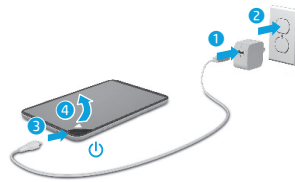







**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.

- 3 Follow the on-screen instructions to select a language and a wireless network.





## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures


 
The following gestures can be used with your tablet:

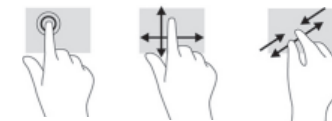

### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.



 
### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>• Online chat with an HP technician.</li> <li>• Find telephone numbers.</li> <li>• Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>• Safety and regulatory information</li> <li>• The expressly provided HP Limited Warranty applicable to your tablet</li> <li>• Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 


 
### Setting up your tablet



**Note:** Features may vary by model and country.

**1** If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



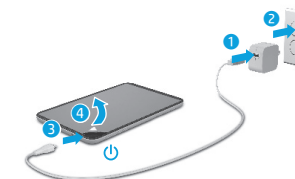





**2** After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.


**3** Follow the on-screen instructions to select a language and a wireless network.


## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

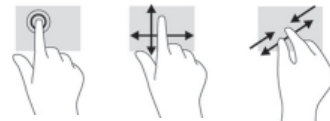

The following gestures can be used with your tablet:



### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.

 

**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.


### Back up your data

HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.


For more information, you can access the user guide from the **HP User Guides** app.

### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

#### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

#### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

#### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

#### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.







#### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).

-  **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
-  **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
-  **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).
-  **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
-  **WARNING:**  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 


 
## Setting up your tablet

**Note:** Features may vary by model and country.

- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



- 2 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.

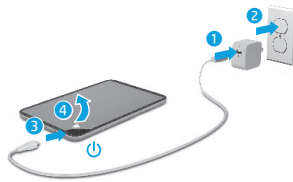







**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.

- 3 Follow the on-screen instructions to select a language and a wireless network.





## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app.


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

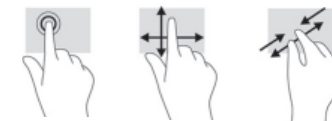

The following gestures can be used with your tablet:




### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.



 
### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>• Online chat with an HP technician.</li> <li>• Find telephone numbers.</li> <li>• Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>• Safety and regulatory information</li> <li>• The expressly provided HP Limited Warranty applicable to your tablet</li> <li>• Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 


 
### Setting up your tablet



**Note:** Features may vary by model and country.

**1** If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



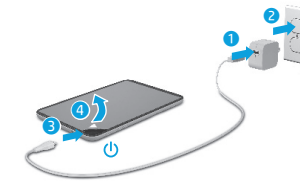





**2** After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.


**3** Follow the on-screen instructions to select a language and a wireless network.


## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

 

The following gestures can be used with your tablet:




### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.

 

**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.


### Back up your data

HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.


### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## FR More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.







### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).

 
-  **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
-  **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
-  **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).
-  **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
-  **WARNING:**  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 
## Setting up your tablet

 
**Note:** Features may vary by model and country.

- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



- 2 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.

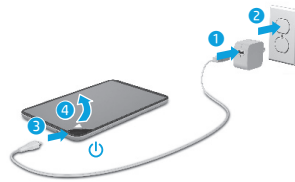







**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.

- 3 Follow the on-screen instructions to select a language and a wireless network.





## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

 
 
The following gestures can be used with your tablet:

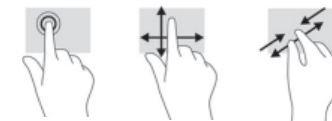

### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.



### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

### Resource

### Location

#### HP support

- Online chat with an HP technician.
- Find telephone numbers.
- Locate HP service center locations.

Go to <http://welcome.hp.com/support>

#### Product Notices, Warranty, and User Guide

- Safety and regulatory information
- The expressly provided HP Limited Warranty applicable to your tablet
- Product documentation

On the Home screen, touch the **HP User Guides** app, touch , select your **Region** and **Language**, and then select **HP Worldwide Limited Warranty and Technical Support**, **Product Notices**, or **User Guide**.

#### Serial number, product number, model number, and IMEI number

On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 


 
## Setting up your tablet



**Note:** Features may vary by model and country.

**1** If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



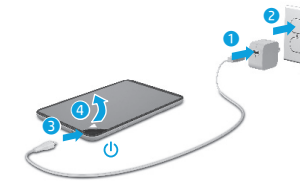**2** After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.









**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.

**3** Follow the on-screen instructions to select a language and a wireless network.





## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures



The following gestures can be used with your tablet:




### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.

 

**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.


### Back up your data

HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.

### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## IT More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch <b>i</b> , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.






 
### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).

-  **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
-  **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
-  **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).
-  **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
-  **WARNING:**  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 


 
## Setting up your tablet

**Note:** Features may vary by model and country.

**1** If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.





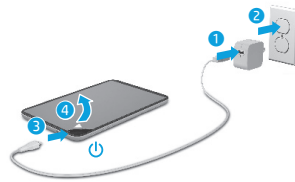



**2** After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.

**3** Follow the on-screen instructions to select a language and a wireless network.


## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

**Google Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

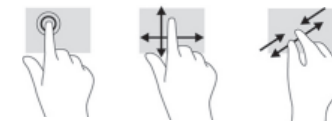

The following gestures can be used with your tablet:



### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.



### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

### Resource

### Location

#### HP support

- Online chat with an HP technician.
- Find telephone numbers.
- Locate HP service center locations.

Go to <http://welcome.hp.com/support>

#### Product Notices, Warranty, and User Guide

- Safety and regulatory information
- The expressly provided HP Limited Warranty applicable to your tablet
- Product documentation

On the Home screen, touch the **HP User Guides** app, touch , select your **Region** and **Language**, and then select **HP Worldwide Limited Warranty and Technical Support**, **Product Notices**, or **User Guide**.

#### Serial number, product number, model number, and IMEI number

On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

 
**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.





### Setting up your tablet

**Note:** Features may vary by model and country.

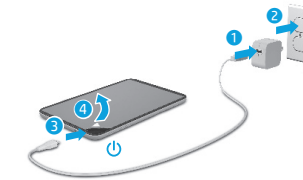





- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.
- 2 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.


- 3 Follow the on-screen instructions to select a language and a wireless network.


## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

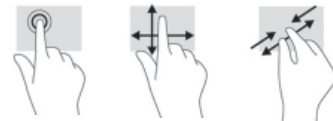

The following gestures can be used with your tablet:



 
### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.


### Back up your data

HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.


### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.







### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).

 
-  **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
-  **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
-  **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).
-  **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
-  **WARNING:**  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 
## Setting up your tablet



**Note:** Features may vary by model and country.

- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



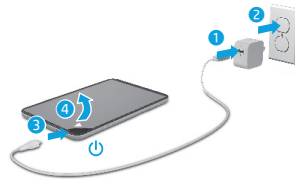- 2 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.









**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.

- 3 Follow the on-screen instructions to select a language and a wireless network.





## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app.


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

 

The following gestures can be used with your tablet:



### Use GPS

To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.


### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.



### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.




### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>• Online chat with an HP technician.</li> <li>• Find telephone numbers.</li> <li>• Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>• Safety and regulatory information</li> <li>• The expressly provided HP Limited Warranty applicable to your tablet</li> <li>• Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 


 
### Setting up your tablet


**Note:** Features may vary by model and country.

**1** If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.





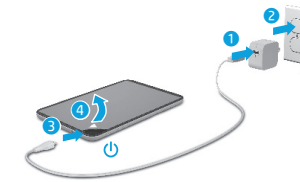



**2** After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.


**3** Follow the on-screen instructions to select a language and a wireless network.


## HU Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures


 
The following gestures can be used with your tablet:

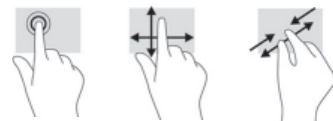

 
### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.


### Back up your data

HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.


### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## HU More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.







### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).

 
-  **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
-  **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
-  **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).
-  **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
-  **WARNING:**  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 
## Setting up your tablet

**Note:** Features may vary by model and country.

- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



- 2 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.

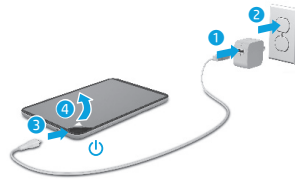







**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.

- 3 Follow the on-screen instructions to select a language and a wireless network.





## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app.


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures



The following gestures can be used with your tablet:



### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.



### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

### Resource

#### HP support

- Online chat with an HP technician.
- Find telephone numbers.
- Locate HP service center locations.

### Location

Go to <http://welcome.hp.com/support>

#### Product Notices, Warranty, and User Guide

- Safety and regulatory information
- The expressly provided HP Limited Warranty applicable to your tablet
- Product documentation

On the Home screen, touch the **HP User Guides** app, touch , select your **Region** and **Language**, and then select **HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide**.

#### Serial number, product number, model number, and IMEI number

On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 


 
### Setting up your tablet



**Note:** Features may vary by model and country.

**1** If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



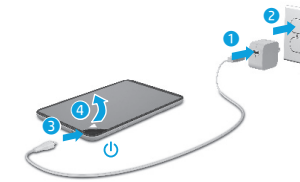**2** After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.









**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.

**3** Follow the on-screen instructions to select a language and a wireless network.

## NO


### Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.



#### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app




**Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

#### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

#### Use gestures


 
The following gestures can be used with your tablet:



#### Use GPS

 
To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.


#### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.



#### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



#### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

## NO

#### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.



#### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.





## NO More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch <b>i</b> , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.






 
### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).

-  **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
-  **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
-  **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).
-  **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
-  **WARNING:**  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.



 
## Setting up your tablet

**Note:** Features may vary by model and country.

- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



- 2 After charging the battery, press and hold the power button for about 2 seconds until the HP logo is displayed.

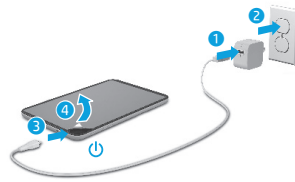

**IMPORTANT:** If the battery image is not displayed on the screen, press the power button briefly to display the image, and then press and hold the power button until the logo is displayed.

- 3 Follow the on-screen instructions to select a language and a wireless network.

## Using the Home screen

- All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
- Back**—Opens the previous screen.
- Home**—Opens or returns to the Home screen.
- Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

**Search**—Allows you to type one or more keywords to search with the installed search app

**Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch to lock or unlock the screen rotation.

### Use gestures

The following gestures can be used with your tablet:



### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.




### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>• Online chat with an HP technician.</li> <li>• Find telephone numbers.</li> <li>• Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>• Safety and regulatory information</li> <li>• The expressly provided HP Limited Warranty applicable to your tablet</li> <li>• Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 


 
### Setting up your tablet



**Note:** Features may vary by model and country.

**1** If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



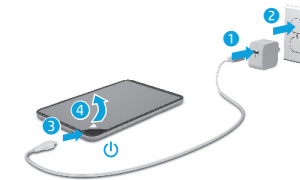**2** After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.









**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.

**3** Follow the on-screen instructions to select a language and a wireless network.





## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures


 
The following gestures can be used with your tablet:



 
### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.


### Back up your data

HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.

### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## PT More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch <b>i</b> , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.






 
### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).

-  **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
-  **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
-  **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).
-  **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
-  **WARNING:**  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.



 
## Setting up your tablet

**Note:** Features may vary by model and country.

- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



- 2 After charging the battery, press and hold the power button for about 2 seconds until the HP logo is displayed.

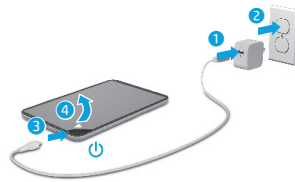

**IMPORTANT:** If the battery image is not displayed on the screen, press the power button briefly to display the image, and then press and hold the power button until the logo is displayed.

- 3 Follow the on-screen instructions to select a language and a wireless network.

## Using the Home screen

- All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
- Back**—Opens the previous screen.
- Home**—Opens or returns to the Home screen.
- Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

**Search**—Allows you to type one or more keywords to search with the installed search app.

**Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch to lock or unlock the screen rotation.

### Use gestures

The following gestures can be used with your tablet:

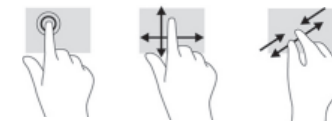

### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.




### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>• Online chat with an HP technician.</li> <li>• Find telephone numbers.</li> <li>• Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>• Safety and regulatory information</li> <li>• The expressly provided HP Limited Warranty applicable to your tablet</li> <li>• Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.



### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 


 
### Setting up your tablet



**Note:** Features may vary by model and country.

**1** If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



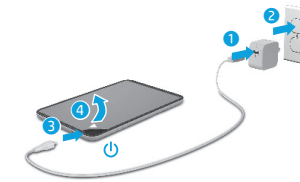





**2** After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.


**3** Follow the on-screen instructions to select a language and a wireless network.


## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

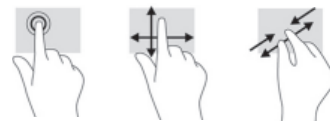

The following gestures can be used with your tablet:



 
### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.


### Back up your data

HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.


### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## RU More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.






 
### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).

-  **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
-  **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
-  **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).
-  **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
-  **WARNING:**  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 


 
## Setting up your tablet

**Note:** Features may vary by model and country.

- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.





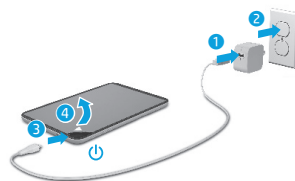



- 2 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.


- 3 Follow the on-screen instructions to select a language and a wireless network.


## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app.


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures


 
The following gestures can be used with your tablet:



### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.




### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>• Online chat with an HP technician.</li> <li>• Find telephone numbers.</li> <li>• Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>• Safety and regulatory information</li> <li>• The expressly provided HP Limited Warranty applicable to your tablet</li> <li>• Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

 
**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 
### Setting up your tablet



**Note:** Features may vary by model and country.

**1** If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



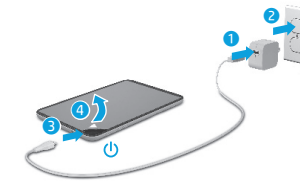





**2** After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.


**3** Follow the on-screen instructions to select a language and a wireless network.


## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

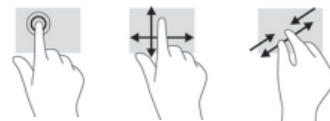

The following gestures can be used with your tablet:




### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.


### Back up your data

HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.

### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## SL More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch <b>i</b> , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.






 
### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).

-  **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
-  **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
-  **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).
-  **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
-  **WARNING:**  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.



 


 
## Setting up your tablet

**Note:** Features may vary by model and country.

- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.





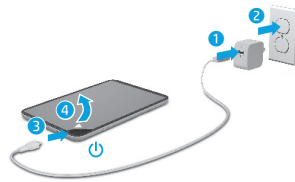



- 2 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.


- 3 Follow the on-screen instructions to select a language and a wireless network.


## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app.


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures


 
The following gestures can be used with your tablet:

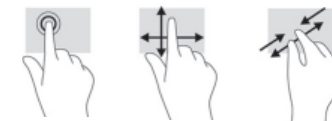


### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.




### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>• Online chat with an HP technician.</li> <li>• Find telephone numbers.</li> <li>• Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>• Safety and regulatory information</li> <li>• The expressly provided HP Limited Warranty applicable to your tablet</li> <li>• Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 


 
### Setting up your tablet



**Note:** Features may vary by model and country.

**1** If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



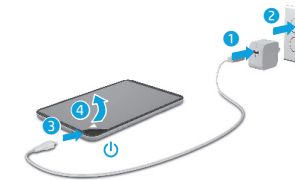





**2** After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.


**3** Follow the on-screen instructions to select a language and a wireless network.


## SR Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

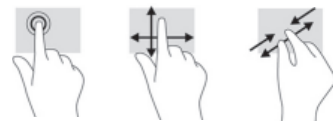

The following gestures can be used with your tablet:



 
### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.

 

**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.


### Back up your data

HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.

### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## SR More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch <b>i</b> , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.






 
### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).

-  **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
-  **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
-  **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).
-  **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
-  **WARNING:**  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 


 
## Setting up your tablet



**Note:** Features may vary by model and country.

- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



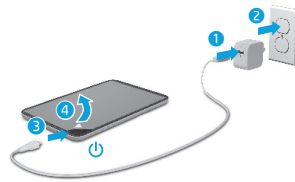





- 2 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.


- 3 Follow the on-screen instructions to select a language and a wireless network.


## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app.


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

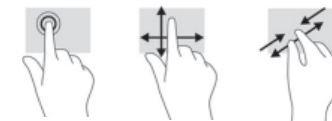

The following gestures can be used with your tablet:



### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.




### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>• Online chat with an HP technician.</li> <li>• Find telephone numbers.</li> <li>• Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>• Safety and regulatory information</li> <li>• The expressly provided HP Limited Warranty applicable to your tablet</li> <li>• Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 


 
### Setting up your tablet



**Note:** Features may vary by model and country.

**1** If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



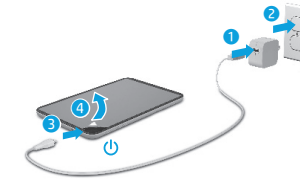**2** After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.









**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.

**3** Follow the on-screen instructions to select a language and a wireless network.





## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures



The following gestures can be used with your tablet:




### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.

 

**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.


### Back up your data

HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.

### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## TR More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch <b>i</b> , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.






 
### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).

 
-  **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
-  **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
-  **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).
-  **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
-  **WARNING:**  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 
## Setting up your tablet

**Note:** Features may vary by model and country.

- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.



- 2 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.

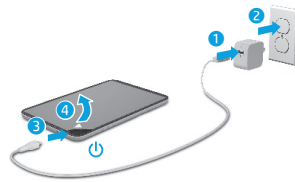







**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.

- 3 Follow the on-screen instructions to select a language and a wireless network.





## Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app.


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures

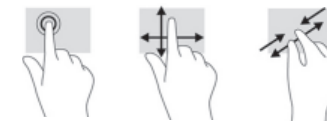

The following gestures can be used with your tablet:




### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.

### Back up your data


HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.




### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>• Online chat with an HP technician.</li> <li>• Find telephone numbers.</li> <li>• Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>• Safety and regulatory information</li> <li>• The expressly provided HP Limited Warranty applicable to your tablet</li> <li>• Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.

### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

**WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.

**WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

 
**WARNING:** To prevent possible hearing damage, do not listen at high volume levels for long periods.

 
**IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 
 


### Setting up your tablet

**Note:** Features may vary by model and country.



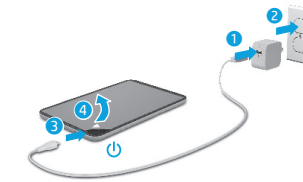



- 1 If a SIM card is not preinstalled in the tablet (select models only), install a SIM card (purchased separately) in the SIM slot.
- 2 After charging the battery, press and hold the power button  for about 2 seconds until the HP logo is displayed.



**IMPORTANT:** If the battery image is not displayed on the screen, press the power button  briefly to display the image, and then press and hold the power button  until the logo is displayed.


- 3 Follow the on-screen instructions to select a language and a wireless network.


## HE Using the Home screen

-  **All apps**—Displays a list of all apps installed. To configure your preferences, touch , and then touch .
-  **Back**—Opens the previous screen.
-  **Home**—Opens or returns to the Home screen.
-  **Recent apps**—Opens a list of apps used recently.

**NOTE:** The icons on the Home screen and the appearance of the Home screen may vary.

### Search\*

 **Search**—Allows you to type one or more keywords to search with the installed search app


 **Voice search**—Allows you to speak one or more keywords to search with the installed search app.

\*The search feature varies by model and country.

### Change your tablet's view

 
The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

**NOTE:** Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top right, and then touch  to lock or unlock the screen rotation.

### Use gestures


 
The following gestures can be used with your tablet:

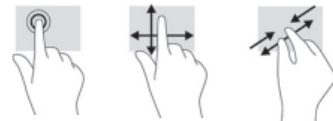


### Use GPS


To access the GPS feature, touch , touch **Location**, touch **Mode**, and then select the Location mode you want.

### Turn off the tablet

Press and hold the power button , touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button  for several seconds to turn off the tablet.

### Display apps, widgets, and notifications

**Apps**—Touch , and then touch the **Apps** tab to see a list of all apps.



**Widgets**—Touch , and then touch the **Widgets** tab to see a list of all widgets.

**Notifications**—Swipe down from the top left of the screen to see your notifications.



### Lock and unlock

**Lock**—Press the power button.

**Unlock**—Press the power button to turn on the tablet, then place your finger on  and slide the icon to the unlock  position.


### Back up your data

HP strongly encourages you to periodically back up your personal data and media on your tablet to another computer, a dedicated storage device, or to the cloud using one of several commercially available solutions.

For more information, you can access the user guide from the **HP User Guides** app.


### Download apps from the Google Play™ Store\*

You must be connected to a wireless network and signed into a Google account before you can access the Play Store to download apps.

1. On the Home screen, touch , and then touch the **Play Store** app.
2. To search for an app, touch the **Search** icon and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

\*Select models only.

## HE More HP resources

Resource	Location
<b>HP support</b> <ul style="list-style-type: none"> <li>Online chat with an HP technician.</li> <li>Find telephone numbers.</li> <li>Locate HP service center locations.</li> </ul>	Go to <a href="http://welcome.hp.com/support">http://welcome.hp.com/support</a>
<b>Product Notices, Warranty, and User Guide</b> <ul style="list-style-type: none"> <li>Safety and regulatory information</li> <li>The expressly provided HP Limited Warranty applicable to your tablet</li> <li>Product documentation</li> </ul>	On the Home screen, touch the <b>HP User Guides</b> app, touch  , select your <b>Region</b> and <b>Language</b> , and then select <b>HP Worldwide Limited Warranty and Technical Support, Product Notices, or User Guide</b> .
<b>Serial number, product number, model number, and IMEI number</b>	On the back of the tablet

### Product description

This product is a lightweight tablet and features a thin-panel display, processor, RAM, integrated battery pack, and an external AC adapter. This printed *Quick Start* guide identifies the hardware components of your tablet. The AC adapter has a rating of 100-240 V ac, 50/60 Hz, 0.3-1.0 A. You can access the latest user guide from the **HP User Guides** app.

### Specification

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated 100-240 V, 50/60 Hz.

**Note:** The tablet can operate on DC power using an industry-standard micro-B USB cable. The HP adapter included with your tablet is recommended for charging the tablet.

**Temperature** Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F

**Relative humidity (noncondensing)** Operating: 10% to 90%

### Regulatory information

For regulatory identification purposes, your product is assigned a Regulatory Model Number (RMN), HSTNH-B407D. The RMN is located on the back of the tablet, and should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).

If required, regulatory markings for your country or region are located on the back of the unit, under the removable battery (if equipped), on the packaging, or elsewhere in this document. For more safety and regulatory information, refer to the Product Notices included with your tablet, accessible via the **HP User Guides** app.

### Product notices

Some notices may not apply to your product.

One or more integrated wireless devices are installed in this device. In some environments, the use of wireless devices may be restricted. Such restrictions may apply on-board airplanes, in hospitals, near explosives, in hazardous locations, and so on. If you are uncertain of the policy that applies to the use of this product, ask for authorization to use it before you turn it on.






 
### Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product using the **HP User Guides** app. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from <http://www.hp.com/go/orderdocuments> or write to:

North America: Hewlett-Packard, MS POD, 11311 Chinden Blvd. Boise, ID 83714, USA	Europe, Middle East, Africa: Hewlett-Packard, POD, Via G. Di Vittorio, 9 20063 Cernusco s/Naviglio (MI), Italy	Asia Pacific: Hewlett-Packard, POD, P.O. Box 200 Alexandra Post Office, Singapore 911507
---	---	---

When you request a printed copy of your warranty, please include your product number, name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/vwcontact\\_us.html](http://welcome.hp.com/country/us/en/vwcontact_us.html).

-  **WARNING:** To reduce the risk of electric shock or damage to the equipment, plug the AC adapter into an AC outlet that is easily accessible at all times.
-  **WARNING:** To reduce potential safety issues, only the AC adapter provided with the product, a replacement AC adapter provided by HP, or an AC adapter purchased as an accessory from HP should be used with the product.
-  **WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).
-  **WARNING:** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
-  **WARNING:**  To prevent possible hearing damage, do not listen at high volume levels for long periods.
- IMPORTANT:** The battery(ies) in this product cannot be easily replaced by users themselves. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support. When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

 
**Color Side 1:**  
BLACK + PMS 2925

**Flat size:**  
8.5 x 5.5 in.

**Color Side 2:**  
BLACK + PMS 2925

**Finished size:**  
4.25 x 5.5 in.

**Fold 1:**  
Perfect-bound  
booklet;  
Spine should  
be WHITE



**Color Side 1:**  
BLACK + PMS 2925

**Flat size:**  
8.5 x 5.5 in.

**Color Side 2:**  
BLACK + PMS 2925

**Finished size:**  
4.25 x 5.5 in.

**Fold 1:**  
Perfect-bound  
booklet;  
Spine should  
be WHITE





**Color Side 1:**  
BLACK + PMS 2925

**Flat size:**  
8.5 x 5.5 in.

**Fold 1:**  
Perfect-bound  
booklet;  
Spine should  
be WHITE



**Color Side 2:**  
BLACK + PMS 2925

**Finished size:**  
4.25 x 5.5 in.

© Copyright 2014 Hewlett-Packard Development Company, L.P. Google and Google Play are trademarks of Google, Inc. SD Logo is a trademark of its proprietor. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical and editorial errors or omissions contained herein.

First Edition: September 2014

Printed in China  
Imprimé en Chine  
Stampato in Cina  
Impreso en China  
Impresso na China  
中国印刷  
중국에서 인쇄



778903-A21