
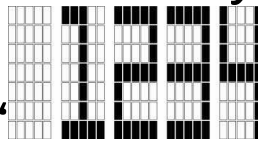


3.2 Wi-Fi connecting

1. Press the **Power** button to power on the camcorder.
2. Press the **Wi-Fi** button on the left side of the camcorder to activate the wireless feature.
3. Using the Wi-Fi function of the Smart Phone or Tablet, search for the camcorder ID from the list. Each camcorder has a unique ID no.: hplc100wXXXXXXXX
4. Select and enter Wi-Fi password (enter the 4 numeral/letter on front camcorder LCM display twice will be your Wi-Fi password).

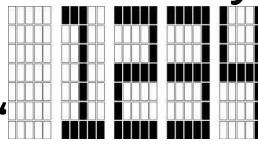

Example, if LCM display shows “”, your Wi-Fi password will be 12341234).

For iOS / Android Users:

Using the mobile device [Settings] → [Wi-Fi] → [Select camcorder ID no.: hplc100wXXXXXXXX] → [Enter the password] → [Connecting].

5. When connected to the **Pixi Cam** App  , the camcorder's LCM display will show  indicates the Wi-Fi is connected.