



Scitex FB550/FB750 Printers

Introductory Information

© Copyright 2015 Hewlett-Packard
Development Company, L.P.

Edition 2

Legal notices

The information contained herein is subject to
change without notice.

The only warranties for HP products and
services are set forth in the express warranty
statement accompanying such products and
services. Nothing herein should be construed
as constituting an additional warranty. HP shall
not be liable for technical or editorial errors or
omissions contained herein.

Introductory information

Other sources of information

A complete User Guide to your printer is available on the Web (<http://www.hp.com/>). That guide provides information on the following topics:

- Getting started
- Printing
- Using the control panel
- calibrating the printer
- Maintenance
- Technical specifications
- Troubleshooting

You can also find legal and warranty information on the CD. Further information is available at HP's support Web site (<http://www.hp.com/>).

Safety precautions

The following precautions ensure the proper use of the printer and prevent the printer from being damaged. Follow these precautions at all times.

- Use the power supply voltage specified on the nameplate. Avoid overloading the printer's electrical outlet with multiple devices.
- Ensure the printer is well-grounded. Failure to ground the printer may result in electrical shock, fire, and susceptibility to electromagnetic interference.
- Do not disassemble or repair the printer yourself. Contact your local HP Service Representative for service.
- Use only the electrical cord supplied by HP with the printer. Do not damage, cut, or repair the power cord. A damaged power cord has risk of fire and electric shock. Replace a damaged power cord with an HP-approved power cord.
- Do not allow metal or liquids (except those used in HP Cleaning Kits) to touch the internal parts of the printer. Doing so may cause fire, electric shock, or other serious hazards.
- Unplug the printer power cord from the power outlet and call your service representative in any of the following cases:

- The power cord or plug is damaged.
- The curing lamps enclosures are damaged.
- The printer has been damaged by an impact.
- There is any mechanical or enclosure damage.
- Liquid has entered the printer.
- There is smoke or an unusual smell coming from the printer.
- The printer has been dropped or the curing lamps module has been damaged.
- The printer is not operating normally.

 **CAUTION:** Turn off the printer in either of the following cases:

- During a thunderstorm
- During a power failure

Take special care with zones marked with warning labels.

When power is removed from the printer, a small amount of ink may seep from the printheads. If possible, ensure that the printhead carriage is over the service station before removing power from the printer. This seepage can be prevented by connecting the vacuum system to auxiliary power. See manual for details.
