



**HP Spectre x360 Convertible PC
(model numbers 13-4000 through 4099
and 13-4100 through 4199) and
HP Spectre Pro x360 Convertible PC**

Maintenance and Service Guide
IMPORTANT! This document is intended for
HP authorized service providers only.

© Copyright 2015 Hewlett-Packard
Development Company, L.P.

Bluetooth is a trademark owned by its
proprietor and used by Hewlett-Packard
Company under license. Intel and Core are U.S.
registered trademarks of Intel Corporation.
Microsoft and Windows are U.S. registered
trademarks of Microsoft Corporation. SD Logo
is a trademark of its proprietor.

The information contained herein is subject to
change without notice. The only warranties for
HP products and services are set forth
in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors or
omissions contained herein.

First Edition: September 2015

Document Part Number: 824524-001

Product notice

This guide describes features that are common
to most models. Some features may not be
available on your computer.

Not all features are available in all editions
of Windows 10 or Windows 8. This computer
may require upgraded and/or separately
purchased hardware, drivers, and/or software
to take full advantage of Windows 10 or
Windows 8 functionality. See for
<http://www.microsoft.com> details.

Safety warning notice

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

Table of contents

1 Product description	1
2 External component identification	6
Display	6
Keys	7
Lights	8
Speakers	8
TouchPad	9
Left side	10
Right side	12
3 Illustrated parts catalog	14
Locating the serial number, product number, and model number	14
Computer major components	15
Miscellaneous parts	21
4 Removal and replacement preliminary requirements	23
Tools required	23
Service considerations	23
Plastic parts	23
Cables and connectors	23
Grounding guidelines	24
Electrostatic discharge damage	24
Packaging and transporting guidelines	25
Workstation guidelines	25
5 Removal and replacement procedures	27
Unlocking the device and disabling Always On Remote Management (select HP devices only)	27
Bottom cover	28
Battery	29
WLAN module	30
Solid-state drive	32
Fan	33
Speakers	34
TouchPad	35
Card reader board	37

System board	38
Heat sink	42
Keyboard	43
Display assembly	46
Audio jack board	48
Power connector cable	49
6 Using Setup Utility (BIOS) – Windows 10	50
Starting Setup Utility (BIOS)	50
Updating Setup Utility (BIOS)	50
Determining the BIOS version	51
Downloading a BIOS update	51
Synchronizing a tablet and keyboard (select products only)	52
7 Using HP PC Hardware Diagnostics (UEFI) – Windows 10	53
Downloading HP PC Hardware Diagnostics (UEFI) to a USB device	54
8 Using Setup Utility (BIOS) – Windows 8	55
Starting Setup Utility (BIOS)	55
Updating the BIOS	55
Determining the BIOS version	55
Downloading a BIOS update	56
9 Using HP PC Hardware Diagnostics (UEFI) – Windows 8	57
Downloading HP PC Hardware Diagnostics (UEFI) to a USB device	58
10 Using Setup Utility (BIOS) and HP PC Hardware Diagnostics (UEFI) – Windows 7	59
Starting Setup Utility (BIOS)	59
Updating the BIOS	59
Determining the BIOS version	59
Downloading a BIOS update	60
Using HP PC Hardware Diagnostics (UEFI)	61
Downloading HP PC Hardware Diagnostics (UEFI) to a USB device	62
11 Specifications	63
12 Backing up, restoring, and recovering – Windows 10	64
Creating recovery media and backups	64
Creating HP Recovery media (select products only)	65
Using Windows Tools	66

Restore and recovery	66
Recovering using HP Recovery Manager	67
What you need to know before you get started	67
Using the HP Recovery partition (select products only)	68
Using HP Recovery media to recover	68
Changing the computer boot order	69
Removing the HP Recovery partition (select products only)	69
13 Backing up, restoring, and recovering – Windows 8	70
Creating recovery media and backups	70
Creating HP Recovery media (select models only)	71
Using Windows tools	72
Restore and recovery	72
Recovering using HP Recovery Manager	73
What you need to know before you get started	73
Using the HP Recovery partition (select models only)	73
Using HP Recovery media to recover	74
Changing the computer boot order	74
Removing the HP Recovery partition (select models only)	74
14 Backing up, restoring, and recovering – Windows 7	75
Creating backups	75
Creating recovery media to recover the original system	75
What you need to know	75
Creating the recovery media	76
Creating system restore points	76
What you need to know	76
Creating a system restore point	76
Backing up system and personal information	77
Tips for a successful backup	77
What you need to know	77
Creating a backup using Windows Backup and Restore	78
Restore and recovery	78
Restoring to a previous system restore point	78
Restoring specific files	78
Restoring specific files using Windows Backup and Restore	78
Recovering the original system using HP Recovery Manager	79
What you need to know	79
Recovering using HP Recovery partition (select models only)	79
Recovering using the recovery media	80
Changing the computer boot order	80

15 Statement of Volatility	81
Non-volatile memory usage	83
Questions and answers	85
16 Power cord set requirements	87
Requirements for all countries	87
Requirements for specific countries and regions	87
17 Recycling	89
Index	90

1 Product description

Category	Description	HP Spectre x360 Convertible PC	HP Spectre Pro x360 Convertible PC
Product Name	HP Spectre x360 Convertible PC (model numbers 13-4000 through 4099 and 13-4100 through 4199)	x	
	HP Spectre Pro x360 Convertible PC		x
Processor	<ul style="list-style-type: none">• Intel™ Core® i7-6560U 2.20-GHz (SC turbo up to 3.20-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W)• Intel Core i7-6500U 2.50-GHz (SC turbo up to 3.10-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W)• Intel Core i5-6200U 2.30-GHz (SC turbo up to 2.80-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W)• Intel Core i7-5600U 2.60-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W)• Intel Core i7-5500U 2.40-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W)• Intel Core i5-5300U 2.30-GHz (SC turbo up to 2.90-GHz) processor (1600-MHz FSB, 3.00-MB L2 cache, dual core, 15 W)• Intel Core i5-5200U 2.20-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W)	x	x
Chipset	Intel processor controller hub (PCH)	x	x
Graphics	Internal Graphics: Intel HD Graphics 5500	x	x

Category	Description	HP Spectre x360 Convertible PC	HP Spectre Pro x360 Convertible PC
Graphics (continued)	Support for HD decode, DX12, and HDMI	x	x
Panel	13.3-in (2560×1440), BrightView, quad high-definition (QHD), white-light emitting (WLED), UWVA, TouchScreen with flush glass and MultiTouch enabled; eDP1.3+PSR at 72% Color Gamut (CG), 16:9 ultra-wide aspect ratio; typical brightness: 340 nits, (2.55-mm) 13.3-in (1920×1080), BrightView, full high-definition (fHD), WLED, UWVA, TouchScreen with flush glass and MultiTouch enabled; eDP1.2 at 72% Color Gamut (CG), 16:9 ultra-wide aspect ratio; typical brightness: 340 nits, (2.85-mm)	x	x
Memory	Support for LPDDR3-1600 dual channel Supports 8192-MB (256-MB×4×16×4PCs) and 4096-MB (128-MB×2×32×4PCs) configurations	x	x
Primary storage	Support for single PCIe / SATA M2 solid-state drive configuration as storage (scope M2 2260/2280 DS solid-state drive) in the following configurations: <ul style="list-style-type: none">● 512-GB solid-state drive supporting three-level cell (TLC)● 256-GB solid-state drive supporting TLC● 128-GB solid-state drive supporting TLC	x	x
	Support for single PCIe / SATA M2 solid-state drive configuration as storage (scope M2 2260/2280 DS solid-state drive) in the following configurations: <ul style="list-style-type: none">● 256-GB solid-state drive self-encrypting drive (SED) supporting multi-level cell (MLC)● 180-GB solid-state drive supporting MLC● 128-GB solid-state drive supporting MLC	x	
Audio and video	Webcam: HP TrueVision Full HD, fixed (no tilt), with activity light	x	x


Category	Description	HP Spectre x360 Convertible PC	HP Spectre Pro x360 Convertible PC
Audio and video (continued)	<p>1920×1080 by 30 frames per second</p> <p>Dual array digital microphones with appropriate beam-forming, echo-cancellation, noise-suppression software</p> <p>Support for voice recognition</p> <p>HD Audio (Realtek ALC3242)</p> <p>Two speakers</p>	x	x
Wireless	<p>Integrated wireless local area network (WLAN) options by way of wireless module</p> <p>Two built-in WLAN antennas (in display assembly)</p> <p>Support for Miracast and Intel WiDi Pro</p> <p>Support for the following WLAN modules:</p> <ul style="list-style-type: none"> ● Intel Dual Band Wireless-AC 7265 802.11 ac 2×2 WiFi + Bluetooth 4.0 Combo Adapter ● Intel Dual Band Wireless-N 7265BN 802.11 b/g/n 2×2 WiFi + Bluetooth 4.0 Combo Adapter ● Intel Dual Band Wireless-AC 7265 802.11 ac 2×2 WiFi + BT 4.0 Combo Adapter ● Intel Dual Band Wireless-N 7265BN 802.11 a/b/g/n 2×2 WiFi + Bluetooth 4.0 Combo Adapter 	x	x
External media cards	HP multiformat Micro Digital Media Reader Slot with push-push technology. Reads data from and writes data to digital memory cards such as Secure Digital (SD).	x	x
Ports	<ul style="list-style-type: none"> ● AC adapter HP Smart plug (4.5-mm barrel) ● Audio: one combo audio-out (headphone)/audio-in (microphone) jack, supports jack auto-detection ● DisplayPort 1.2 ● High-definition multimedia interface (HDMI) v.1.4b, supporting up to 1920×1200 at 60 Hz 	x	x

Category	Description	HP Spectre x360 Convertible PC	HP Spectre Pro x360 Convertible PC
Ports (continued)	<ul style="list-style-type: none"> USB 3.0 (2) 	x	x
Keyboard/pointing devices	Full-size, backlight, island-style keyboard Touchpad requirements: <ul style="list-style-type: none"> ClickPad with imaging sensor Multi-touch gestures enabled Taps enabled as default Support for Microsoft® Windows® 8 modern TrackPad gestures, drivers for Windows 7 Professional 	x	x
Power requirements	Support for 65-W HP Smart adapter (non-PFC, EM, 3-wire, 4.5-mm) and 45-W HP Smart adapter (non-PFC, RC, 3-wire, 4.5-mm) Support for a 3-cell, 56-WHr, 4.96-AHr, Li-ion battery (includes cable)	x	x
Security	Support for Trusted Platform Module 1.2 (TPM)	x	x
Operating system	Preinstalled: Windows 10 and Windows 8.1 Preinstalled: <ul style="list-style-type: none"> Windows 8.1 Chinese 64-bit (only available with PRC Country Loc) Windows 8.1 Emerging Markets 64-bit (available only in Africa-English, Asia-Pacific, Russia, Saudi Arabia, and Turkey) Windows 8.1 Multilanguage 64-bit Windows 8.1 Professional 64-bit Windows 8.1 Professional 64-bit Education Windows 7 Professional 64-bit Certified: Microsoft WHQL Web-only support: <ul style="list-style-type: none"> Windows 8 Chinese 64-bit Windows 8 Emerging Markets 64-bit Windows 8 Multilanguage 64-bit 	x	x

Category	Description	HP Spectre x360 Convertible PC	HP Spectre Pro x360 Convertible PC
Operating system (continued)	<ul style="list-style-type: none"> ● Windows 8 Professional 64-bit ● Windows 7 Enterprise 64-bit ● Windows 7 Enterprise 32-bit ● Windows 7 Professional 64-bit 		x
Serviceability	End user replaceable part: AC adapter	x	x

2 External component identification


Display

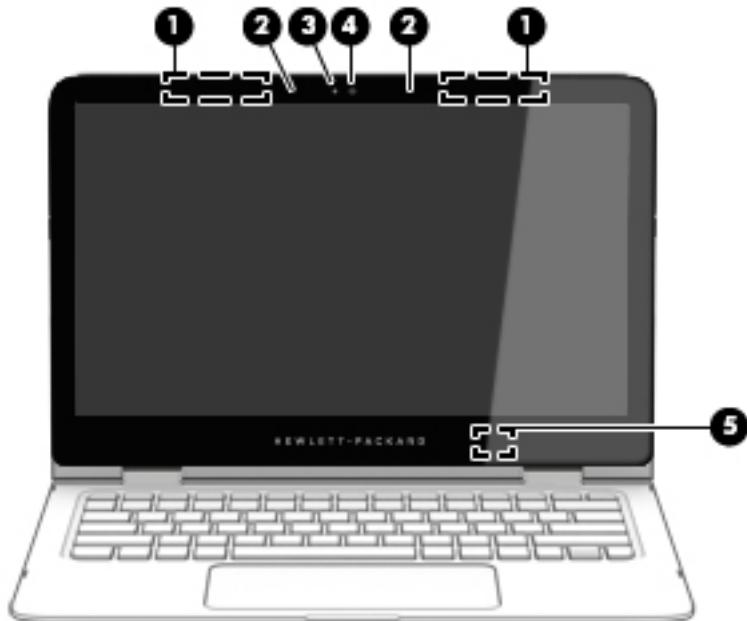

Item	Component	Description
(1)	WLAN antennas*	Send and receive wireless signals to communicate with WLANs.
(2)	Internal microphones	Record sound.
(3)	Webcam light	On: The webcam is in use.
(4)	Webcam	Records video and captures photographs. Some models allow you to video conference and chat online using streaming video. To use the webcam: <ul style="list-style-type: none">● Windows 10 – Type camera in the taskbar search box, and then select Camera.● Windows 8 – Access HP Support Assistant. To access HP Support Assistant on the Start screen, select the HP Support Assistant app.● Windows 7 – Select Start > All Programs > Communication and Chat > HP WebCam.
(5)	Internal display switch	Turns off the display and initiates Sleep if the display is closed while the power is on.


Item	Component	Description
		NOTE: The internal display switch is not visible from the outside of the computer.
		NOTE: The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. For wireless regulatory notices, see the section of the <i>Regulatory, Safety, and Environmental Notices</i> that applies to your country or region.
		To access this document:
	Windows 10:	Select the Start button, select All apps , select HP Help and Support , and then select HP Documentation .
	Windows 8 or Windows 7:	<p>▲ Select the HP Support Assistant app on the Start screen, select My computer, and then select User guides.</p>

Keys

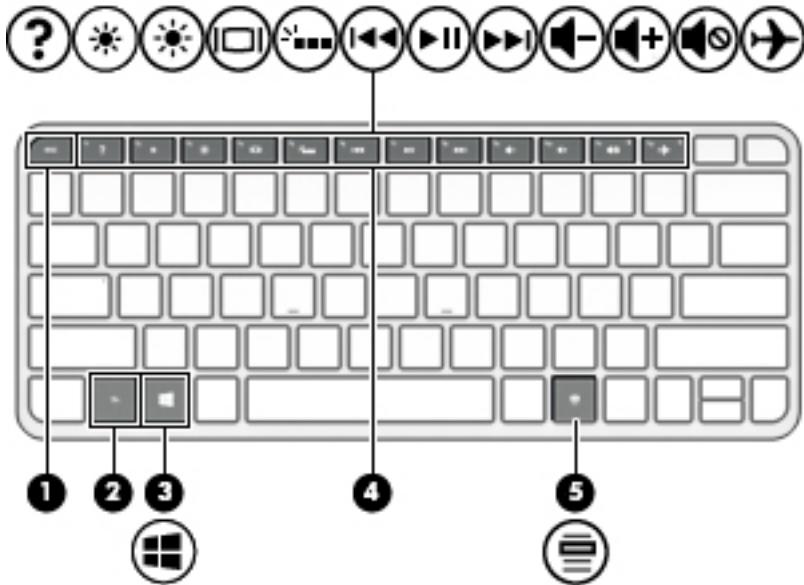

Item	Component	Description
(1)	esc key	Displays system information when pressed in combination with the fn key.
(2)	fn key	Displays system information when pressed in combination with the esc key.
(3)	Windows key	Returns you to the Start screen from an open app or the Windows desktop. NOTE: Pressing the Windows key again will return you to the previous screen.
(4)	Action keys	Execute frequently used system functions. NOTE: The f5 action key turns the radiance backlight keyboard feature off or on.
(5)	Windows applications key	Displays options for a selected object.

Lights

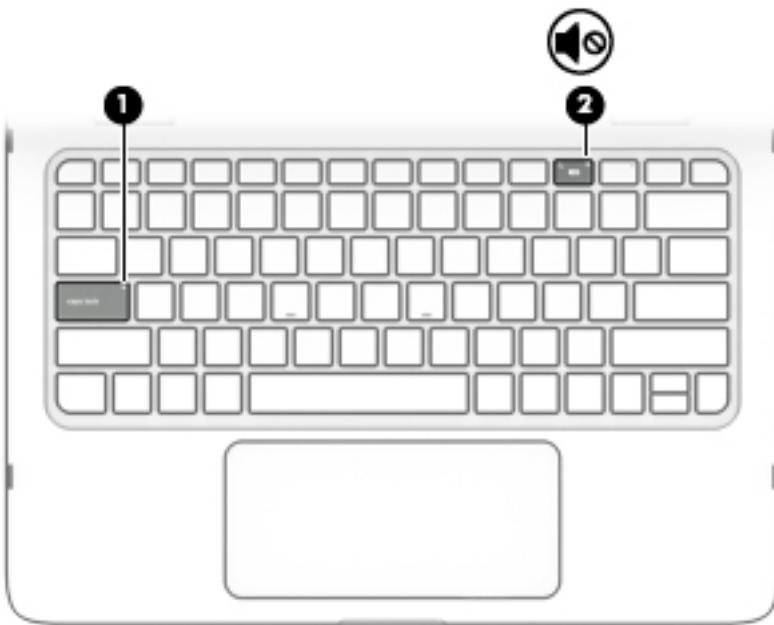

Item	Component	Description
(1)	Caps lock light	On: Caps lock is on, which switches the keys to all capital letters.
(2)	Mute light	<ul style="list-style-type: none">Amber: Computer sound is off.Off: Computer sound is on.

Speakers




Component	Description
Speakers	Produce sound.

TouchPad



Item	Component	Description
(1)	TouchPad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2)	TouchPad left button	Functions like the left button on an external mouse.
(3)	TouchPad right button	Functions like the right button on an external mouse.


Left side

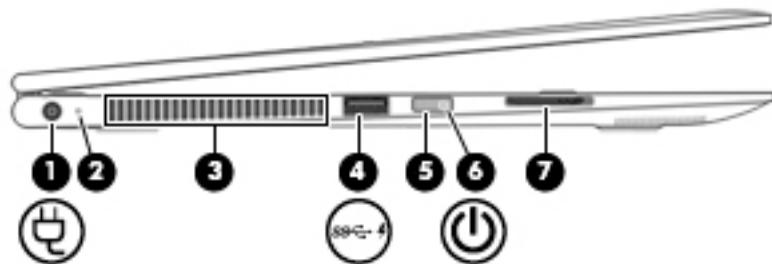

Item	Component	Description
(1)	Power connector	Connects an AC adapter.
(2)	AC adapter/battery light	<ul style="list-style-type: none">• Solid white: The computer is connected to external power and the battery is fully charged.• Solid amber: The computer is connected to external power and the battery is charged from 0 to 99 percent.• Slowly blinking white: A battery that is the only available power source has reached a low battery level. Less than 12 percent of the battery life is left.• Quickly blinking white: A battery that is the only available power source has reached a critical battery level. Less than 7 percent of the battery life is left.• Off: The computer is running on a battery as the power source.
(3)	Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4)	USB 3.0 charging (powered) port	Connects an optional USB device, such as a keyboard, mouse, external drive, printer, scanner or USB hub. Standard USB ports will not charge all USB devices or will charge using a low current. Some USB devices require power and require you to use a powered port. NOTE: USB charging ports can also charge select models of cell phones and MP3 players, even when the computer is off.
(5)	Power button	<ul style="list-style-type: none">• When the computer is off, press the button to turn on the computer.• When the computer is on, press the button briefly to initiate Sleep.• When the computer is in the Sleep state, press the button briefly to exit Sleep.• When the computer is in Hibernation, press the button briefly to exit Hibernation. CAUTION: Pressing and holding down the power button will result in the loss of unsaved information.

Item	Component	Description
(5)	Power button (<i>continued</i>)	<p>If the computer has stopped responding and Windows shutdown procedures are ineffective, press and hold the power button down for at least 5 seconds to turn off the computer.</p>
		<p>To learn more about your power settings, see your power options.</p>
		<ul style="list-style-type: none"> ▲ From the Start screen, type power, select Power and sleep settings, and then select Power and sleep from the list of applications. <p>– or –</p>
		<ul style="list-style-type: none"> From the Windows desktop, right-click the Start button, and then select Power Options.
(6)	Power light	<ul style="list-style-type: none"> ● On: The computer is on. ● Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other components. ● Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.
(7)	Memory card reader	<p>Reads optional memory cards that enable you to store, manage, share or access information.</p> <p>To insert a card:</p> <ul style="list-style-type: none"> ▲ Hold the card label-side up, with connectors facing the slot, insert the card into the slot, and then push in on the card until it is firmly seated. <p>To remove a card:</p> <ul style="list-style-type: none"> ▲ Press in on the card it until it pops out.

Right side

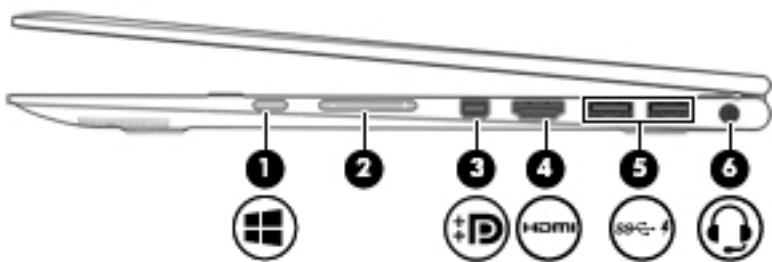

Item	Component	Description
(1)	Windows button	Returns you to the Start screen from an open app or the Windows desktop. NOTE: Pressing the Windows button again will return you to the previous screen.
(2)	Volume button	Controls speaker volume.
(3)	Mini DisplayPort	Connects an optional digital display device, such as a high-performance monitor or projector.
(4)	HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High-Definition Multimedia Interface (HDMI) device.
(5)	USB 3.0 charging (powered) ports	Connect an optional USB device, such as a keyboard, mouse, external drive, printer, scanner or USB hub. Standard USB ports will not charge all USB devices or will charge using a low current. Some USB devices require power and require you to use a powered port. NOTE: USB charging ports can also charge select models of cell phones and MP3 players, even when the computer is off.
(6)	Audio-out (headphone)/Audio-in (microphone) jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional microphone-only devices. NOTE: When a device is connected to the jack, the computer speakers are disabled. NOTE: Be sure that the device cable has a 4-conductor connector that supports both audio-out (headphone) and audio-in (microphone). WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i> . To access this guide: Windows 10: Select the Start button, select All apps , select HP Help and Support , and then select HP Documentation . Windows 8 or Windows 7:

Item	Component	Description
		<p>▲ Select the HP Support Assistant app on the Start screen, select My computer, and then select User guides.</p>


3 Illustrated parts catalog




NOTE: HP continually improves and changes product parts. For complete and current information on supported parts for the computer, go to <http://partsurfer.hp.com>, select the country or region, and then follow the on-screen instructions.

Locating the serial number, product number, and model number

The product name **(1)**, serial number **(2)**, product number **(3)**, warranty information **(4)**, and model name **(5)** are located on the bottom of the computer. You may need this information when you travel internationally or when you contact support.

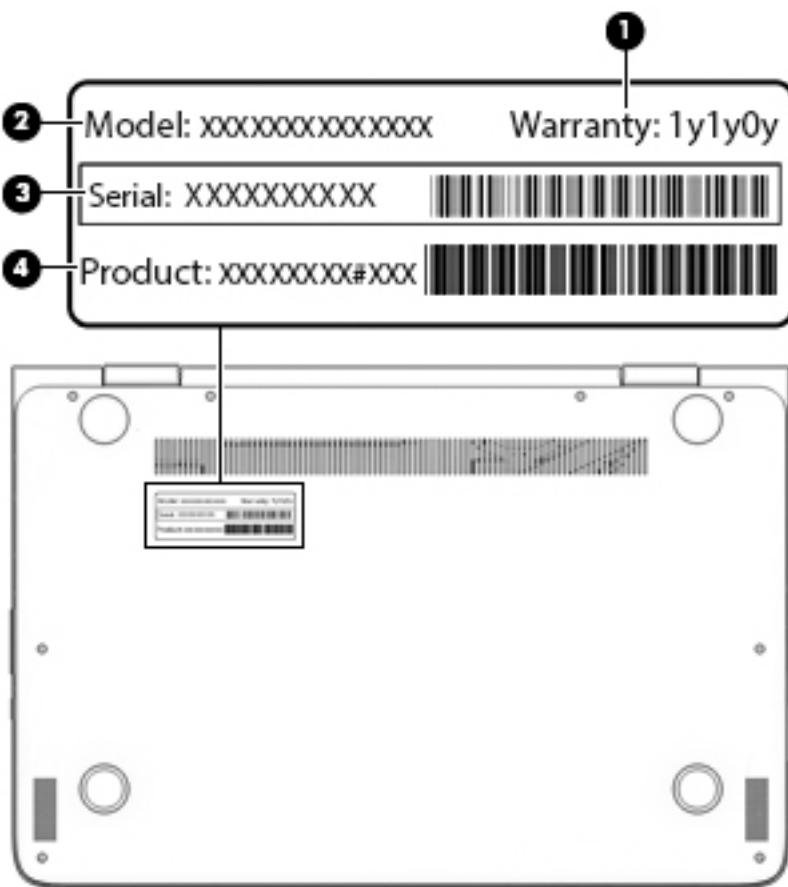

Computer major components

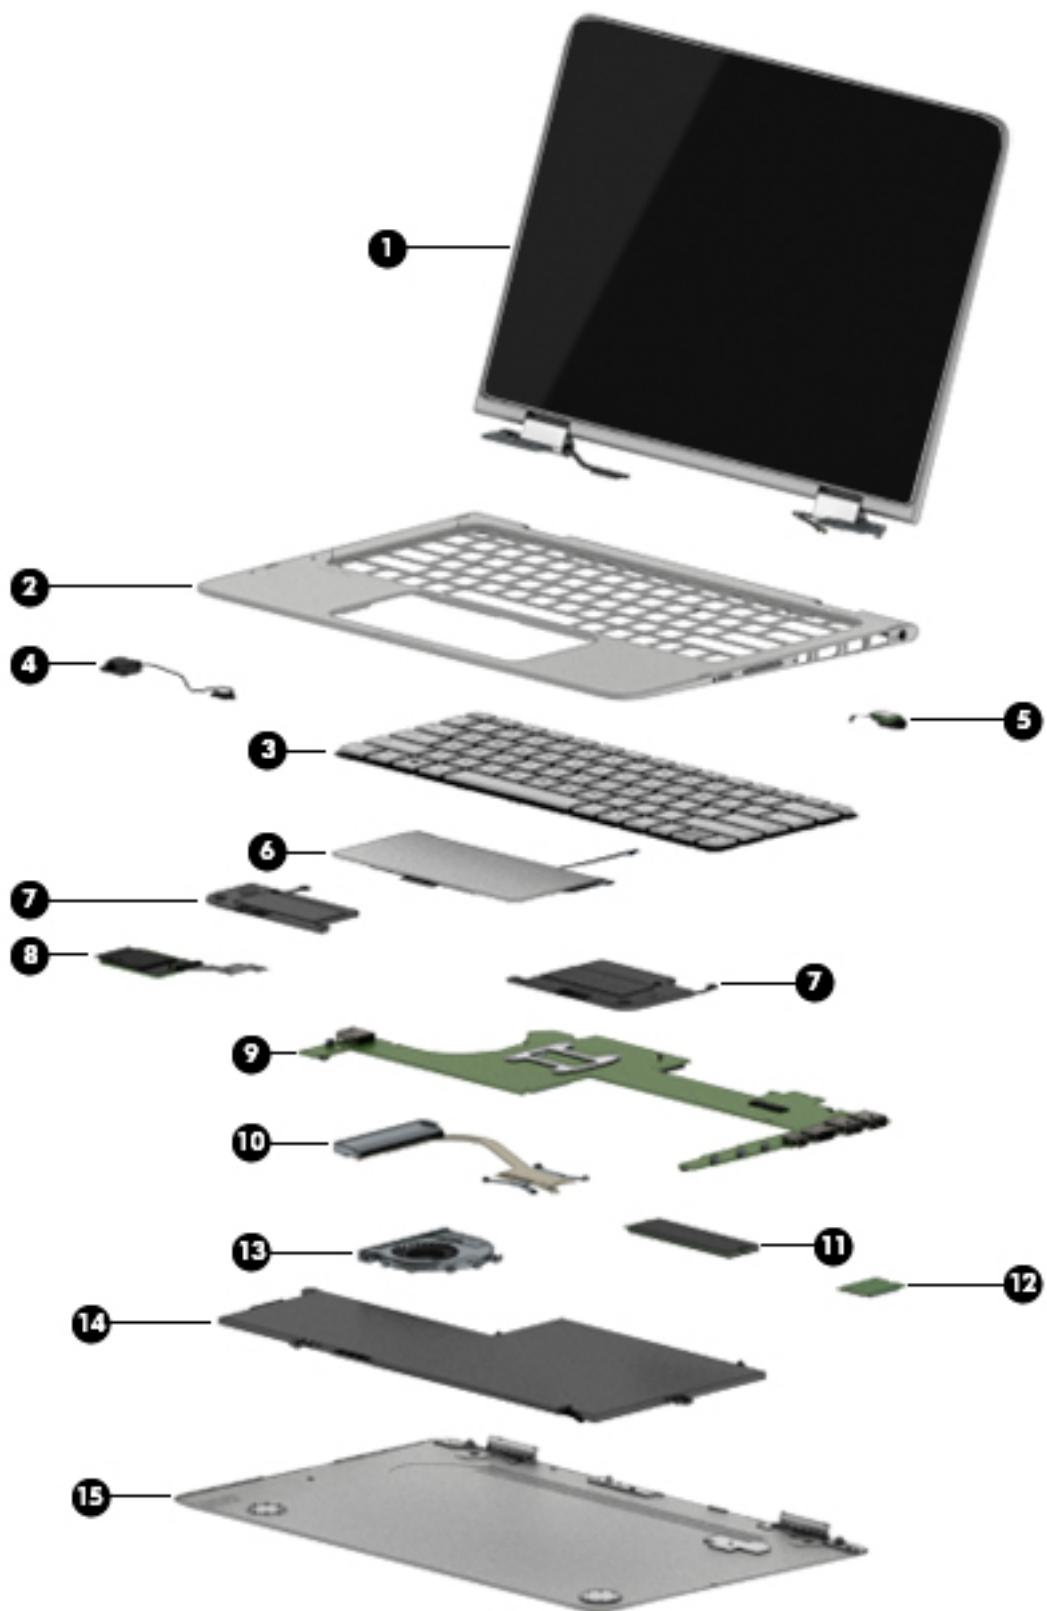

Item	Component	Spare part number
(1)	Display assembly: 13.3-in, ultra wide aspect ratio, TouchScreen (includes display panel cable, microphones, hinges, webcam, and wireless antenna cables and transceivers)	
	13.3-in, QHD, WLED, BrightView (2560×1440), UWVA, 2.55-mm in ash silver finish for use only on computers with model numbers 13-4100 through 13-4199 and equipped with an Intel Core i-7 5500U or Intel Core i-5 5200U processor	833713-001
	13.3-in, FHD, WLED, BrightView (1920×1080), UWVA, 2.55-mm in ash silver finish for use only on computers with model numbers 13-4100 through 13-4199 and equipped with an Intel Core i-7 5500U or Intel Core i-5 5200U processor	833712-001
	13.3-in, QHD, WLED, BrightView (2560×1440), UWVA, 2.55-mm in natural silver finish for use only on computers with model numbers 13-4100 through 13-4199 and equipped with an Intel Core i-7 6550U, Intel Core i-7 6500U, or Intel Core i-5 6200U processor	828823-001
	13.3-in, FHD, WLED, BrightView (1920×1080), UWVA, 2.55-mm in natural silver finish for use only on computers with model numbers 13-4100 through 13-4199 and equipped with an Intel Core i-7 6550U, Intel Core i-7 6500U, or Intel Core i-5 6200U processor	828822-001
	13.3-in, QHD, WLED, BrightView (2560×1440), UWVA, 2.55-mm in natural silver finish for use only on computers with model numbers 13-4000 through 13-4099	801496-001
	13.3-in, FHD, WLED, BrightView (1920×1080), UWVA, 2.55-mm in natural silver finish for use only on computers with model numbers 13-4000 through 13-4099	801495-001
(2)	Top cover:	
	In ash silver finish for use only on computers with model numbers 13-4100 through 13-4199 and equipped with an Intel Core i-7 5500U or Intel Core i-5 5200U processor	833716-001
	In natural silver finish for use only on computers with model numbers 13-4100 through 13-4199 and equipped with an Intel Core i-7 6550U, Intel Core i-7 6500U, or Intel Core i-5 6200U processor	831855-001
	In natural silver finish for use only on computers with model numbers 13-4000 through 13-4099	801509-001
(3)	Keyboard (includes keyboard cable and keyboard backlight cable):	
	In ash silver finish for use on all computers with model numbers 13-4100 through 13-4199:	
	For use in Belgium	833714-A41
	For use in Canada	833714-DB1
	For use in the Czech Republic and Slovakia	833714-FL1
	For use in Denmark, Finland, and Norway	833714-DH1
	For use in France	833714-051
	For use in Germany	833714-041
	For use in Greece	833714-151
	For use in Italy	833714-061
	For use in Japan	833714-291
	For use in Latin America	833714-161
	For use in the Netherlands	833714-B31
	For use in Portugal	833714-131

Item	Component	Spare part number
	For use in Russia	833714-251
	For use in Saudi Arabia	833714-171
	For use in South Korea	833714-AD1
	For use in Spain	833714-071
	For use in Switzerland	833714-BG1
	For use in Turkey	833714-141
	For use in the United Kingdom and Singapore	833714-031
	For use in the United States	833714-001
	In natural silver finish for use on all computers with model numbers 13-4000 through 13-4099:	
	For use in Belgium	801508-A41
	For use in Canada	801508-DB1
	For use in the Czech Republic and Slovakia	801508-FL1
	For use in Denmark, Finland, and Norway	801508-DH1
	For use in France	801508-051
	For use in Germany	801508-041
	For use in Greece	801508-151
	For use in Italy	801508-061
	For use in the Netherlands	801508-B31
	For use in Portugal	801508-131
	For use in Russia	801508-251
	For use in Saudi Arabia	801508-171
	For use in South Korea	801508-AD1
	For use in Spain	801508-071
	For use in Turkey	801508-141
	For use in the United Kingdom and Singapore	801508-031
	For use in the United States	801508-001
	In natural silver finish for use only on HP Spectre Pro x360 Convertible PC computer models:	
	For use in Israel	801508-BB1
	For use in Japan	801508-291
	In natural silver finish for use only on HP Spectre x360 Convertible PC computer models with model numbers 13-4000 through 13-4099:	
	For use in Latin America	801508-161
	For use in Switzerland	801508-BG1
(4)	Power connector cable	801513-001
(5)	Audio jack board (includes cable):	

Item	Component	Spare part number
	For use only on computer models equipped with an Intel Core i-7 6550U, Intel Core i-7 6500U, or Intel Core i-5 6200U processor	828820-001
	For use only on computer models equipped with an Intel Core i-7 5600U, Intel Core i-7 5500U, Intel Core i-5 5300U, or Intel Core i-5 5200U processor	801497-001
(6)	TouchPad (includes cable):	
	In ash silver finish for use only on computers with model numbers 13-4100 through 13-4199	833715-001
	In natural silver finish for use only on computers with model numbers 13-4000 through 13-4099	801499-001
(7)	Speakers (includes left and right speakers and cables)	801501-001
(8)	Card reader board (includes cable):	
	For use only on computer models equipped with an Intel Core i-7 6550U, Intel Core i-7 6500U, or Intel Core i-5 6200U processor	828821-001
	For use only on computer models equipped with an Intel Core i-7 5600U, Intel Core i-7 5500U, Intel Core i-5 5300U, or Intel Core i-5 5200U processor	801498-001
(9)	System board (includes a graphics subsystem with UMA memory and replacement thermal material):	
	For use only on HP Spectre x360 Convertible PC computer models with model numbers 13-4100 through 13-4199:	
	Equipped with an Intel Core i7-6560U 2.20-GHz (SC turbo up to 3.20-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 10 or Windows 8 Professional operating system	828824-601
	Equipped with an Intel Core i7-6560U 2.20-GHz (SC turbo up to 3.20-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 8.0-GB of system memory, and a non-Windows operating system	828824-001
	Equipped with an Intel Core i7-6500U 2.50-GHz (SC turbo up to 3.10-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 10 or Windows 8 Professional operating system	828825-601
	Equipped with an Intel Core i7-6500U 2.50-GHz (SC turbo up to 3.10-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 8.0-GB of system memory, and a non-Windows operating system	828825-001
	Equipped with an Intel Core i5-6200U 2.30-GHz (SC turbo up to 2.80-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 10 or Windows 8 Professional operating system	828826-601
	Equipped with an Intel Core i5-6200U 2.30-GHz (SC turbo up to 2.80-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 8.0-GB of system memory, and a non-Windows operating system	828826-001
	Equipped with an Intel Core i5-6200U 2.30-GHz (SC turbo up to 2.80-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 4.0-GB of system memory, and the Windows 10 or Windows 8 Professional operating system	828827-601
	Equipped with an Intel Core i5-6200U 2.30-GHz (SC turbo up to 2.80-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 4.0-GB of system memory, and a non-Windows operating system	828827-001
	For use only on computers with model numbers 13-4000 through 13-4099:	
	Equipped with an Intel Core i5-5200U 2.20-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 10 or Windows 8 Professional operating system	801506-601

Item	Component	Spare part number
	Equipped with an Intel Core i5-5200U 2.20-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 10 or Windows 8 Standard operating system	801506-501
	Equipped with an Intel Core i5-5200U 2.20-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and a non-Windows operating system	801506-001
	Equipped with an Intel Core i5-5200U 2.20-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 4.0-GB of system memory, and the Windows 10 or Windows 8 Professional operating system	801507-601
	Equipped with an Intel Core i5-5200U 2.20-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 4.0-GB of system memory, and the Windows 10 or Windows 8 Standard operating system	801507-501
	Equipped with an Intel Core i5-5200U 2.20-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 4.0-GB of system memory, and a non-Windows operating system	801507-001
For use only on HP Spectre Pro x360 Convertible PC computer models:		
	Equipped with an Intel Core i7-5600U 2.60-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 10 or Windows 8 Professional operating system	808445-601
	Equipped with an Intel Core i7-5600U 2.60-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 10 or Windows 8 Standard operating system	808445-501
	Equipped with an Intel Core i7-5600U 2.60-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and a non-Windows operating system	808445-001
	Equipped with an Intel Core i5-5300U 2.30-GHz (SC turbo up to 2.90-GHz) processor (1600-MHz FSB, 3.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 10 or Windows 8 Professional operating system	808444-601
	Equipped with an Intel Core i5-5300U 2.30-GHz (SC turbo up to 2.90-GHz) processor (1600-MHz FSB, 3.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 10 or Windows 8 Standard operating system	808444-501
	Equipped with an Intel Core i5-5300U 2.30-GHz (SC turbo up to 2.90-GHz) processor (1600-MHz FSB, 3.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and a non-Windows operating system	808444-001
	Equipped with an Intel Core i5-5300U 2.30-GHz (SC turbo up to 2.90-GHz) processor (1600-MHz FSB, 3.00-MB L2 cache, dual core, 15 W), 4.0-GB of system memory, and the Windows 10 or Windows 8 Professional operating system	808443-601
	Equipped with an Intel Core i5-5300U 2.30-GHz (SC turbo up to 2.90-GHz) processor (1600-MHz FSB, 3.00-MB L2 cache, dual core, 15 W), 4.0-GB of system memory, and the Windows 10 or Windows 8 Standard operating system	808443-501
	Equipped with an Intel Core i5-5300U 2.30-GHz (SC turbo up to 2.90-GHz) processor (1600-MHz FSB, 3.00-MB L2 cache, dual core, 15 W), 4.0-GB of system memory, and a non-Windows operating system	808443-001
For use only on HP Spectre x360 Convertible PC computer models with model numbers 13-4000 through 13-4099:		
	Equipped with an Intel Core i7-5500U 2.40-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 10 or Windows 8 Professional operating system	801505-601

Item	Component	Spare part number
	Equipped with an Intel Core i7-5500U 2.40-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 10 or Windows 8 Standard operating system	801505-501
	Equipped with an Intel Core i7-5500U 2.40-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and a non-Windows operating system	801505-001
(10)	Heat sink (includes replacement thermal material):	
	For use only on computer models equipped with an Intel Core i-7 6550U, Intel Core i-7 6500U, or Intel Core i-5 6200U processor	828819-001
	For use only on computer models equipped with an Intel Core i-7 5600U, Intel Core i-7 5500U, Intel Core i-5 5300U, or Intel Core i-5 5200U processor	801494-001
(11)	Solid-state drive:	
	For use on all computer models:	
	512-GB, M2, SATA3 solid-state drive supporting TLC	801504-001
	256-GB, M2, SATA3 solid-state drive supporting TLC	801503-001
	128-GB, M2, SATA3 solid-state drive supporting TLC	801502-001
	For use only on HP Spectre Pro x360 Convertible PC computer models:	
	256-GB, M2, SATA3 SED solid-state drive supporting MLC	813147-001
	180-GB, M2, SATA3 solid-state drive supporting MLC	808446-001
	128-GB, M2, SATA3 solid-state drive supporting MLC	813146-001
(12)	WLAN module:	
	For use only on HP Spectre x360 Convertible PC computer models:	
	Intel Dual Band Wireless-AC 7265 802.11 ac 2×2 WiFi + Bluetooth 4.0 Combo Adapter	793840-005
	Intel Dual Band Wireless-AC 7265 802.11 ac 2×2 WiFi + Bluetooth 4.0 Combo Adapter	756751-005
	Intel Dual Band Wireless-N 7265AN 802.11 b/g/n 2×2 WiFi + Bluetooth 4.0 Combo Adapter	793843-005
	Intel Dual Band Wireless-N 7265BN 802.11 b/g/n 2×2 WiFi + Bluetooth 4.0 Combo Adapter	780308-005
	For use only on HP Spectre Pro x360 Convertible PC computer models:	
	Intel Dual Band Wireless-AC 7265 802.11 ac 2×2 WiFi + Bluetooth 4.0 Combo Adapter	756749-005
	Intel Dual Band Wireless-N 7265BN 802.11 a/b/g/n 2×2 WiFi + Bluetooth 4.0 Combo Adapter	756748-005
(13)	Fan (includes cable):	
	For use only on computer models equipped with an Intel Core i-7 6550U, Intel Core i-7 6500U, or Intel Core i-5 6200U processor	828818-001
	For use only on computer models equipped with an Intel Core i-7 5600U, Intel Core i-7 5500U, Intel Core i-5 5300U, or Intel Core i-5 5200U processor	801493-001
(14)	Battery , 3-cell, 56-WHr, 4.96-AHr, Li-ion (includes cable)	789116-005
(15)	Bottom cover (includes 4 rubber feet):	

Item	Component	Spare part number
	In ash silver finish for use only on computers with model numbers 13-4100 through 13-4199	833711-001
	In natural silver finish for use only on computers with model numbers 13-4000 through 13-4099	801492-001

Miscellaneous parts

Component	Spare part number
AC adapter:	
65-W HP Smart adapter (non-PFC, EM, 3-wire, 4.5-mm) for use on all computer models	714657-001
45-W HP Smart adapter (non-PFC, RC, 3-wire, 4.5-mm) for use on all computer models	741727-001
45-W HP Smart adapter (non-PFC, RC, 3-wire, 4.5-mm) for use only on HP Spectre Pro x360 Convertible PC computer models	742436-001
HP sleeve	806206-001
HP HDMI-to-VGA adapter	701943-001
HP RJ45-to-USB adapter dongle	539614-001
Power cord (3-pin, black, 1.83-m):	
For use on all computer models:	
For use in Australia	490371-011
For use in Denmark	490371-081
For use in Europe	490371-021
For use in North America	490371-001
For use in the People's Republic of China	490371-AA1
For use in South Korea	490371-AD1
For use in Switzerland	490371-111
For use in the United Kingdom and Singapore	490371-031
For use only on HP Spectre Pro x360 Convertible PC computer models:	
For use in Israel	490371-BB1
For use only on HP Spectre x360 Convertible PC computer models:	
For use in India	490371-D61
For use in Japan	490371-291
For use in Thailand	490371-201
For use in South Africa	490371-AR1
Power cord (3-pin, black, 1.00-m):	
For use only on HP Spectre Pro x360 Convertible PC computer models:	

Component	Spare part number
For use in Australia	755530-011
For use in Denmark	755530-081
For use in Europe	755530-021
For use in Israel	755530-BB1
For use in the People's Republic of China	755530-AA1
For use in South Korea	755530-AD1
For use in Switzerland	755530-111
For use in the United Kingdom and Singapore	755530-031
Power cord for use only in Japan (2-pin, black, 1.00-m)	762689-291
Screw Kit	801500-001

4 Removal and replacement preliminary requirements

Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screw driver
- Magnetic screw driver
- Phillips P0 screw driver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



NOTE: As you remove each subassembly from the tablet, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts



CAUTION: Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

Cables and connectors



CAUTION: When servicing the tablet, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the tablet.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Grounding guidelines

Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

 **CAUTION:** To prevent damage to the tablet when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

 **CAUTION:** A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels

Event	Relative humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screw drivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm $\pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

Material	Use	Voltage protection level
Antistatic plastics	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V

5 Removal and replacement procedures



NOTE: This chapter provides removal and replacement procedures for Authorized Service Provider only components. Components described in this chapter should only be accessed by an authorized service provider. Accessing these components can damage the computer or void the warranty.

There are as many as 90 screws that must be removed, replaced, and/or loosened when servicing the computer. Make special note of each screw size and location during removal and replacement.



NOTE: HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Unlocking the device and disabling Always On Remote Management (select HP devices only)



NOTE: This section applies only to HP Spectre Pro x360 Convertible PC computer models.

HP Touchpoint Manager (HPTM) is a complete cloud-based solution for managing devices. For select HP devices with the Windows operating system, the Always On Remote Management (AORM) feature is automatically activated when HP Touchpoint Manager software is installed.

AORM can perform a secure BIOS level lock and can also securely erase internal drives (except for encrypted self-encrypting drives). The HP Touchpoint Manager website (<http://www.hptouchpointmanager.com>) provides access to the AORM lock feature. The device must be unlocked using an authorized PIN from the same website before you can access HP Computer Setup and start the Windows operating system.



IMPORTANT: A service agent cannot retrieve the PIN from the HP Touchpoint Manager website. If a locked device is returned for service, the agent must contact the customer to obtain the PIN to unlock the device. If a PIN is not available, the entire system board must be replaced.

Before returning the device for service, be sure to unlock the device using the PIN from the HP Touchpoint Manager website (<http://www.hptouchpointmanager.com>), and also disable the AORM feature in HP Computer Setup.

To disable AORM:

1. Access HP Computer Setup (F10).

- a. Turn on or restart the device, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Press **f10** to enter Computer Setup.



NOTE: If the BIOS is protected with an Administrator password, enter the password.

2. Select **Advanced**, and then select **HP Touchpoint Manager Options**.

3. Clear the **Allow Activation** check box.

4. Select **Save changes and exit**.

Bottom cover



NOTE: The bottom cover spare part kit includes 4 rubber feet.


Description	Spare part number
In ash silver finish for use only on computers with model numbers 13-4100 through 13-4199	833711-001
In natural silver finish for use only on computers with model numbers 13-4000 through 13-4099	801492-001

Before disassembling the computer, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.


Remove the bottom cover:

1. Close the computer.
2. Turn the computer upside down with the front toward you.
3. Remove the two Torx5 T5M2.0×8.0 screws **(1)** and the six Torx5 T5M2.0×3.9 screws **(2)** that secure the bottom cover to the computer.

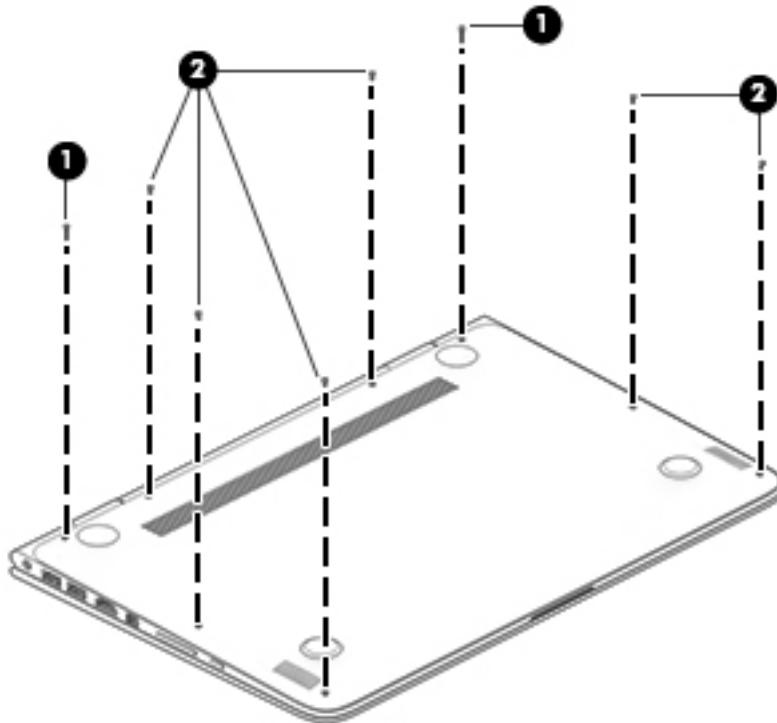

4. Separate the rear edge of the bottom cover **(1)** from the top cover until it rests at an angle.

5. Remove the bottom cover (2).

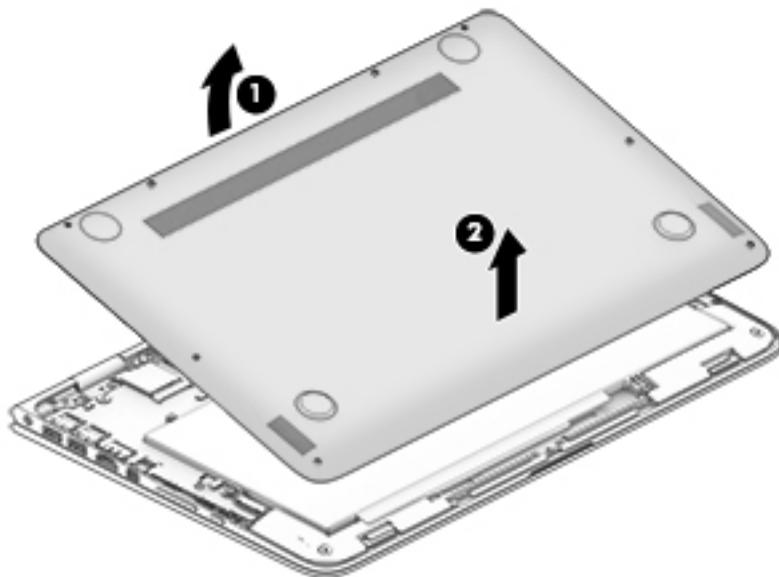

6. Turn the computer right side up, with the front toward you.

Reverse this procedure to install the bottom cover.

Battery

Description	Spare part number
Battery, 3-cell, 56-WHr, 4.96-AHr, Li-ion (includes cable)	789116-005

Before removing the battery, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).


⚠️ WARNING! To reduce potential safety issues, use only the battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

⚠️ CAUTION: Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before removing the battery.

Remove the battery:

1. Disconnect the battery cable (1) from the system board.
2. Release the battery cable from the routing channel (2) built into the battery.
3. Release the speaker cable from the routing channel (3) built into the battery.

4. Remove the four PM2.0×4.0 screws (4) that secure the battery to the top cover.
5. Remove the battery (5).

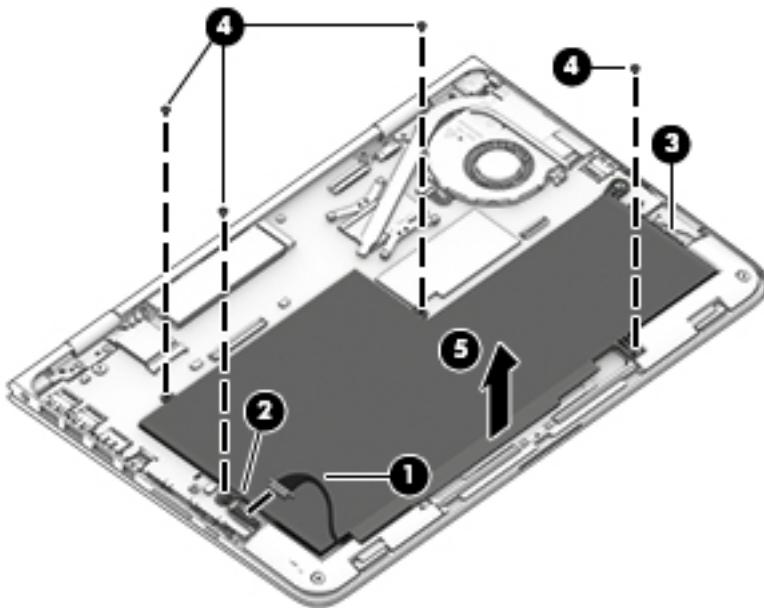

Reverse this procedure to install the battery.

WLAN module

Description	Spare part number
For use only on HP Spectre x360 Convertible PC computer models:	
Intel Dual Band Wireless-AC 7265 802.11 ac 2×2 WiFi + Bluetooth 4.0 Combo Adapter	793840-005
Intel Dual Band Wireless-AC 7265 802.11 ac 2×2 WiFi + Bluetooth 4.0 Combo Adapter	756751-005
Intel Dual Band Wireless-N 7265AN 802.11 b/g/n 2×2 WiFi + Bluetooth 4.0 Combo Adapter	793843-005
Intel Dual Band Wireless-N 7265BN 802.11 b/g/n 2×2 WiFi + Bluetooth 4.0 Combo Adapter	780308-005
For use only on HP Spectre Pro x360 Convertible PC computer models:	
Intel Dual Band Wireless-AC 7265 802.11 ac 2×2 WiFi + Bluetooth 4.0 Combo Adapter	756749-005
Intel Dual Band Wireless-N 7265BN 802.11 a/b/g/n 2×2 WiFi + Bluetooth 4.0 Combo Adapter	756748-005

⚠ CAUTION: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.

3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Disconnect the battery cable from the system board (see [Battery on page 29](#)).


Remove the WLAN module:

1. Disconnect the WLAN antenna cables **(1)** from the terminals on the WLAN module.




NOTE: The WLAN antenna cable labeled “1” connects to the WLAN module “Main” terminal labeled “1”. The WLAN antenna cable labeled “2” connects to the WLAN module “Aux” terminal labeled “2”.

2. Remove the Phillips PM2.0×2.7 screw **(2)** that secures the WLAN module to the top cover. (The WLAN module tilts up.)
3. Remove the WLAN module **(3)** by pulling the module away from the slot at an angle.

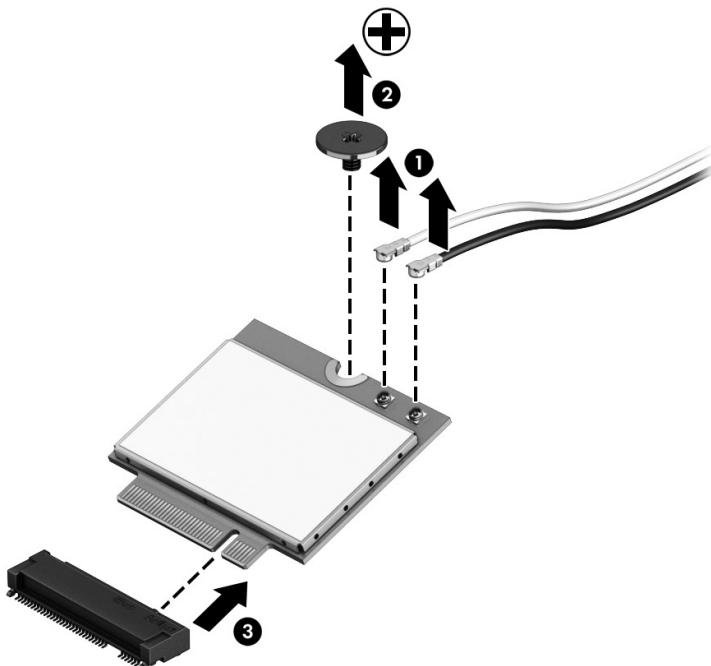

NOTE: If the WLAN antenna cables are not connected to the terminals on the WLAN module, protective sleeves should be installed on the antenna connectors, as shown in the following illustration.

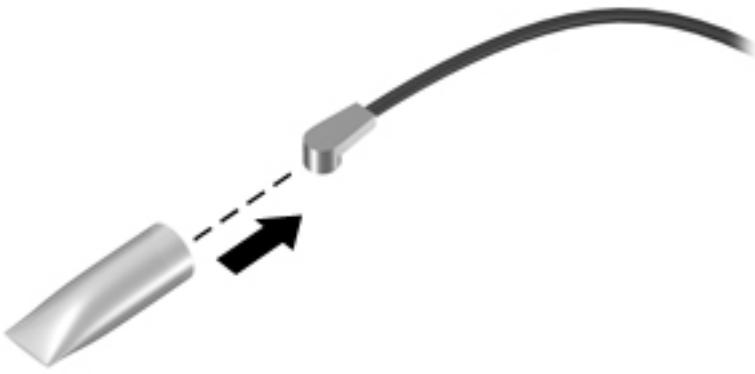

Reverse this procedure to install the WLAN module.

Solid-state drive

Description	Spare part number
For use on all computer models:	
512-GB, M2, SATA3 solid-state drive supporting TLC	801504-001
256-GB, M2, SATA3 solid-state drive supporting TLC	801503-001
128-GB, M2, SATA3 solid-state drive supporting TLC	801502-001
For use only on HP Spectre Pro x360 Convertible PC computer models:	
256-GB, M2, SATA3 SED solid-state drive supporting MLC	813147-001
180-GB, M2, SATA3 solid-state drive supporting MLC	808446-001
128-GB, M2, SATA3 solid-state drive supporting MLC	813146-001


Before removing the solid-state drive, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Disconnect the battery cable from the system board (see [Battery on page 29](#)).

Remove the solid-state drive:

1. Remove the PM2.0×2.9 screw (1) that secures the solid-state drive to the bottom cover. (The solid-state drive tilts up.)

2. Remove the solid-state drive (2) by pulling the drive away from the slot at an angle.

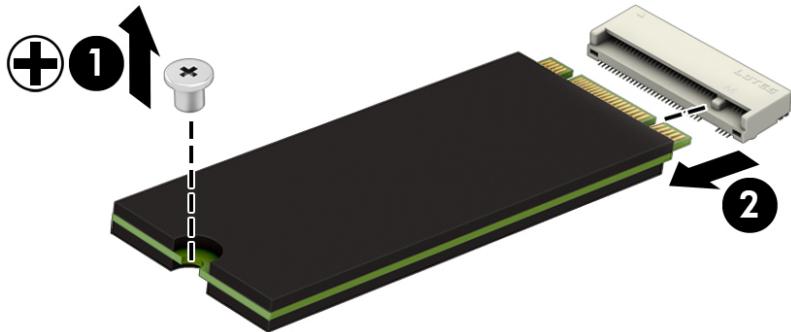

Reverse this procedure to install the solid-state drive.

Fan

 **NOTE:** The fan spare part kit includes the fan cable.

Description	Spare part number
For use only on computer models equipped with an Intel Core i-7 6550U, Intel Core i-7 6500U, or Intel Core i-5 6200U processor	828818-001
For use only on computer models equipped with an Intel Core i-7 5600U, Intel Core i-7 5500U, Intel Core i-5 5300U, or Intel Core i-5 5200U processor	801493-001


 **NOTE:** To properly ventilate the computer, allow at least 7.6 cm (3 in) of clearance on the left side of the computer. The computer uses an electric fan for ventilation. The fan is controlled by a temperature sensor and is designed to turn on automatically when high temperature conditions exist. These conditions are affected by high external temperatures, system power consumption, power management/battery conservation configurations, battery fast charging, and software requirements. Exhaust air is displaced through the ventilation grill located on the left side of the computer.

Before removing the fan, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Disconnect the battery cable from the system board (see [Battery on page 29](#)).

Remove the fan:

1. Disconnect the fan cable (1) from the system board.
2. Remove the two Phillips PM2.0×4.0 screws (2) that secure the fan to the top cover.
3. Remove the fan (3).

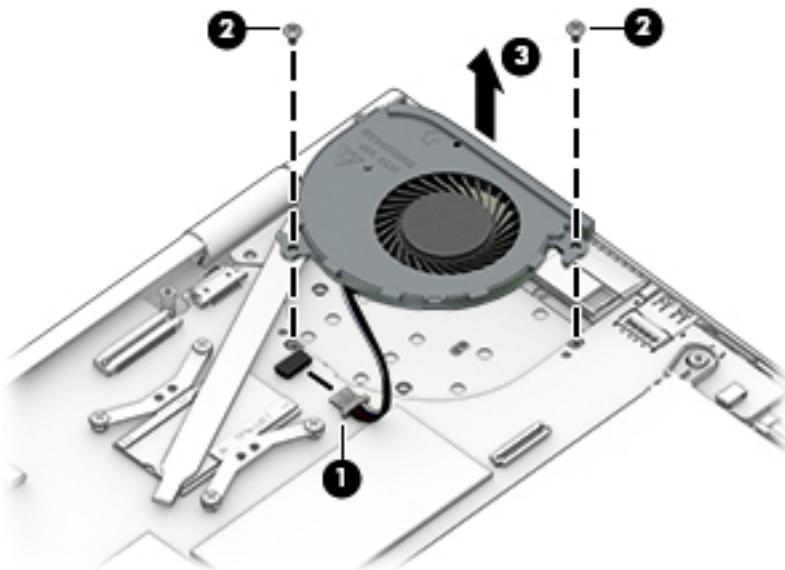

Reverse this procedure to install the fan.

Speakers

Description	Spare part number
Speakers (include left and right speakers and cables)	801501-001


Before removing the speakers, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Disconnect the battery cable from the system board (see [Battery on page 29](#)).

Remove the speakers:

1. Disconnect the speaker cables (1) from the system board.
2. Remove the three Phillips PM2.0×2.7 screws (2) that secure the speakers to the top cover.

3. Remove the speakers (3).

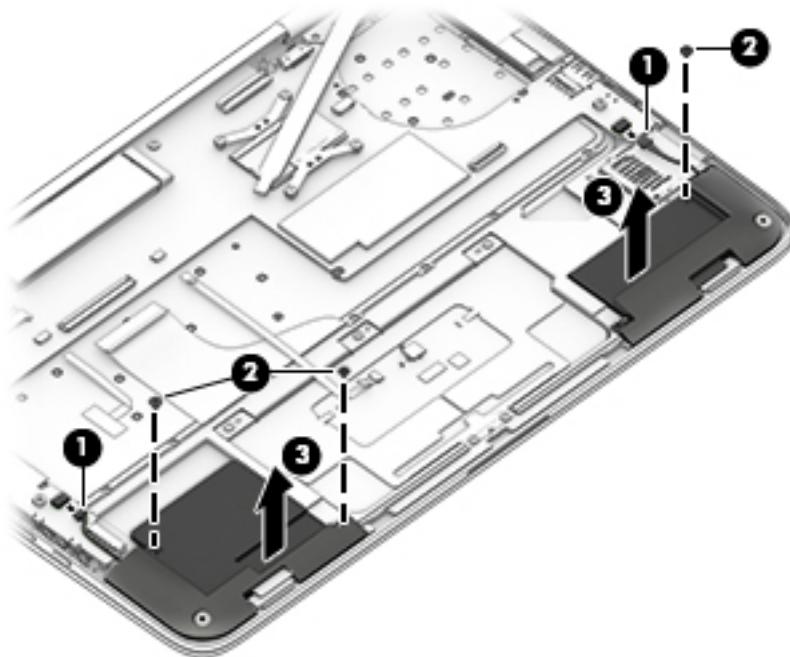

Reverse this procedure to install the speakers.

TouchPad

 **NOTE:** The TouchPad spare part kit includes the TouchPad cable.

Description	Spare part number
In ash silver finish for use only on computers with model numbers 13-4100 through 13-4199	833715-001
In natural silver finish for use only on computers with model numbers 13-4000 through 13-4099	801499-001


Before removing the TouchPad, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 29](#)).


Remove the TouchPad:

1. Release the zero insertion force (ZIF) connector (1) to which the TouchPad cable is attached, and then disconnect the TouchPad cable from the system board.

2. Remove the five Phillips PM1.5×2.3 screws **(2)** that secure the TouchPad to the top cover.

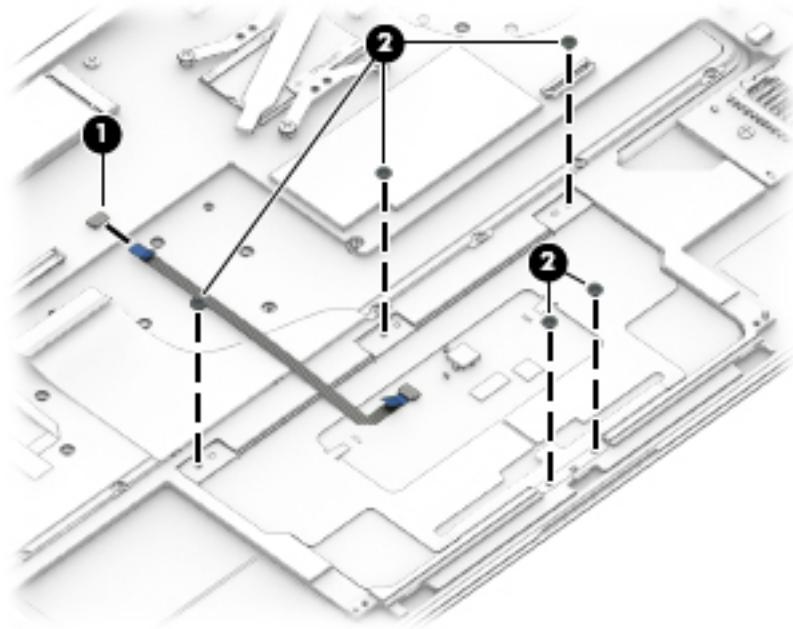

3. Remove the TouchPad and cable.

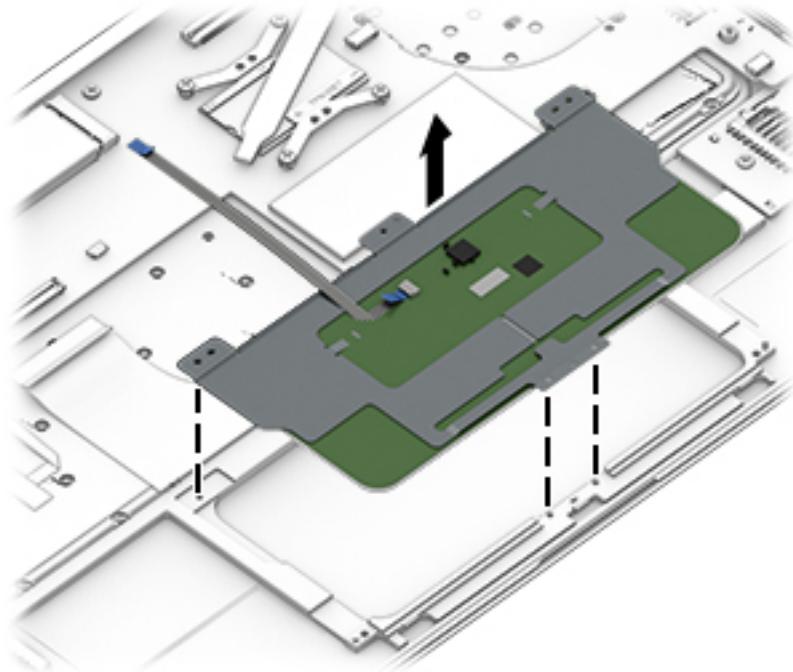

Reverse this procedure to install the TouchPad.

Card reader board



NOTE: The card reader board spare part kit includes the card reader board cable.


Description	Spare part number
For use only on computer models equipped with an Intel Core i-7 6550U, Intel Core i-7 6500U, or Intel Core i-5 6200U processor	828821-001
For use only on computer models equipped with an Intel Core i-7 5600U, Intel Core i-7 5500U, Intel Core i-5 5300U, or Intel Core i-5 5200U processor	801498-001

Before removing the card reader board, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 29](#)).
6. Remove the speakers (see [Speakers on page 34](#)).

Remove the card reader board:

1. Release the ZIF connector (1) to which the card reader board cable is attached, and then disconnect the card reader board cable from the system board.
2. Remove the Phillips PM2.0×2.7 screws (2) that secure the card reader board to the top cover.
3. Remove the card reader board (3) and cable from the top cover.

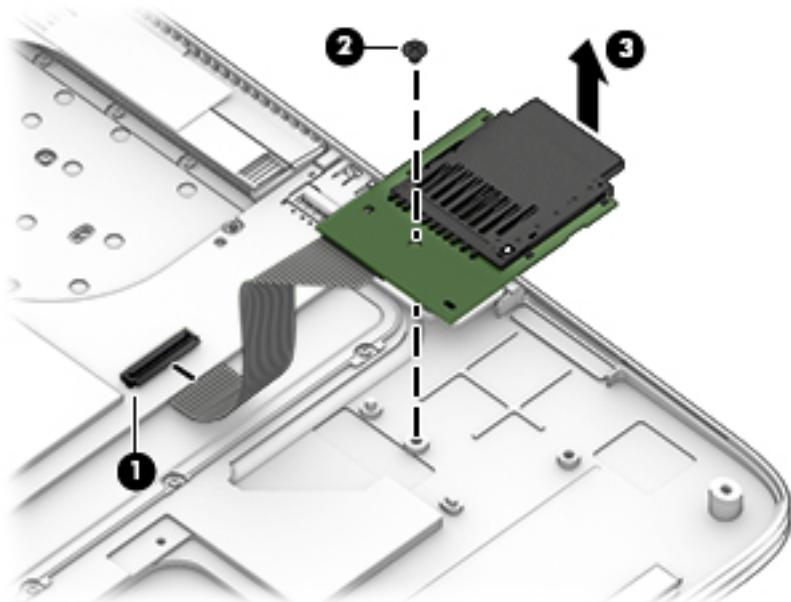

4. Remove the card reader board.

Reverse this procedure to install the card reader board.

System board



NOTE: The system board spare part kit includes a graphics subsystem with UMA memory and replacement thermal material.

Description	Spare part number
For use only on HP Spectre x360 Convertible PC computer models with model numbers 13-4100 through 13-4199:	
Equipped with an Intel Core i7-6550U 2.20-GHz (SC turbo up to 3.20-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 10 or Windows 8 Professional operating system	828824-601
Equipped with an Intel Core i7-6550U 2.20-GHz (SC turbo up to 3.20-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 8.0-GB of system memory, and a non-Windows operating system	828824-001
Equipped with an Intel Core i7-6500U 2.50-GHz (SC turbo up to 3.10-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 10 or Windows 8 Professional operating system	828825-601
Equipped with an Intel Core i7-6500U 2.50-GHz (SC turbo up to 3.10-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 8.0-GB of system memory, and a non-Windows operating system	828825-001
Equipped with an Intel Core i5-6200U 2.30-GHz (SC turbo up to 2.80-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 10 or Windows 8 Professional operating system	828826-601
Equipped with an Intel Core i5-6200U 2.30-GHz (SC turbo up to 2.80-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 8.0-GB of system memory, and a non-Windows operating system	828826-001
Equipped with an Intel Core i5-6200U 2.30-GHz (SC turbo up to 2.80-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 4.0-GB of system memory, and the Windows 10 or Windows 8 Professional operating system	828827-601
Equipped with an Intel Core i5-6200U 2.30-GHz (SC turbo up to 2.80-GHz) processor (1866-MHz FSB, 4.00-MB L3 cache, dual core, 15 W), 4.0-GB of system memory, and a non-Windows operating system	828827-001
For use only on computers with model numbers 13-4000 through 13-4099:	
Equipped with an Intel Core i5-5200U 2.20-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 8 Professional operating system	801506-601
Equipped with an Intel Core i5-5200U 2.20-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 8 Standard operating system	801506-501
Equipped with an Intel Core i5-5200U 2.20-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and a non-Windows operating system	801506-001
Equipped with an Intel Core i5-5200U 2.20-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 4.0-GB of system memory, and the Windows 8 Professional operating system	801507-601
Equipped with an Intel Core i5-5200U 2.20-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 4.0-GB of system memory, and the Windows 8 Standard operating system	801507-501
Equipped with an Intel Core i5-5200U 2.20-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 4.0-GB of system memory, and a non-Windows operating system	801507-001
For use only on HP Spectre Pro x360 Convertible PC computer models:	
Equipped with an Intel Core i7-5600U 2.60-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 8 Professional operating system	808445-601

Description	Spare part number
Equipped with an Intel Core i7-5600U 2.60-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 8 Standard operating system	808445-501
Equipped with an Intel Core i7-5600U 2.60-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and a non-Windows operating system	808445-001
Equipped with an Intel Core i5-5300U 2.30-GHz (SC turbo up to 2.90-GHz) processor (1600-MHz FSB, 3.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 8 Professional operating system	808444-601
Equipped with an Intel Core i5-5300U 2.30-GHz (SC turbo up to 2.90-GHz) processor (1600-MHz FSB, 3.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 8 Standard operating system	808444-501
Equipped with an Intel Core i5-5300U 2.30-GHz (SC turbo up to 2.90-GHz) processor (1600-MHz FSB, 3.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and a non-Windows operating system	808444-001
Equipped with an Intel Core i5-5300U 2.30-GHz (SC turbo up to 2.90-GHz) processor (1600-MHz FSB, 3.00-MB L2 cache, dual core, 15 W), 4.0-GB of system memory, and the Windows 8 Professional operating system	808443-601
Equipped with an Intel Core i5-5300U 2.30-GHz (SC turbo up to 2.90-GHz) processor (1600-MHz FSB, 3.00-MB L2 cache, dual core, 15 W), 4.0-GB of system memory, and the Windows 8 Standard operating system	808443-501
Equipped with an Intel Core i5-5300U 2.30-GHz (SC turbo up to 2.90-GHz) processor (1600-MHz FSB, 3.00-MB L2 cache, dual core, 15 W), 4.0-GB of system memory, and a non-Windows operating system	808443-001
For use only on HP Spectre x360 Convertible PC computer models:	
Equipped with an Intel Core i7-5500U 2.40-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 8 Professional operating system	801505-601
Equipped with an Intel Core i7-5500U 2.40-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and the Windows 8 Standard operating system	801505-501
Equipped with an Intel Core i7-5500U 2.40-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L2 cache, dual core, 15 W), 8.0-GB of system memory, and a non-Windows operating system	801505-001

Before removing the system board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 29](#)).
6. Remove the fan (see [Fan on page 33](#)).

When replacing the system board, be sure that the following components are removed from the defective system board and installed on the replacement system board:


- WLAN module (see [WLAN module on page 30](#))
- Solid-state drive (see [Solid-state drive on page 32](#))
- Heat sink (see [Heat sink on page 42](#))

Remove the system board:

1. Release the ZIF connector **(1)** to which the audio jack cable is attached, and then disconnect the audio jack cable from the system board.
2. Disconnect the WLAN antenna cables **(2)** from the terminals on the WLAN module.


 **NOTE:** The WLAN antenna cable labeled “1” connects to the WLAN module “Main” terminal labeled “1”. The WLAN antenna cable labeled “2” connects to the WLAN module “Aux” terminal labeled “2”.

3. Release the ZIF connector **(3)** to which the display panel cable is attached, and then disconnect the display panel cable from the system board.
4. Disconnect the power connector cable **(4)** from the system board.

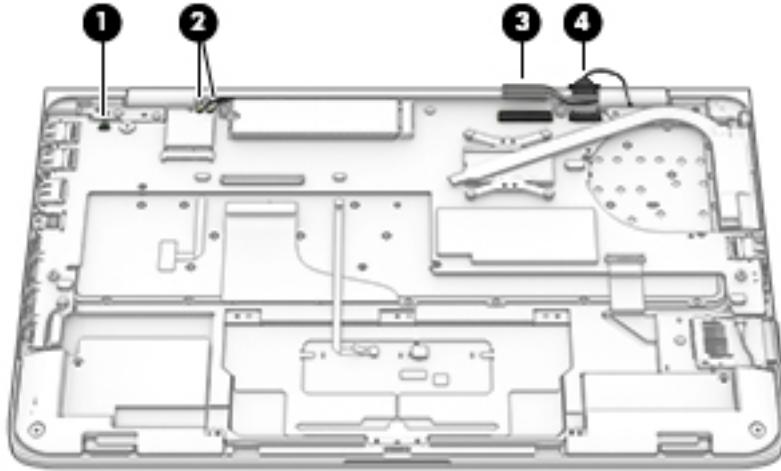


5. Disconnect the speaker cables **(1)** from the system board.
6. Release the ZIF connector **(2)** to which the keyboard backlight cable is attached, and then disconnect the keyboard backlight cable from the system board.
7. Release the ZIF connector **(3)** to which the keyboard cable is attached, and then disconnect the keyboard cable from the system board.
8. Release the ZIF connector **(4)** to which the TouchPad cable is attached, and then disconnect the TouchPad cable from the system board.

- 9.** Release the ZIF connector **(5)** to which the card reader board cable is attached, and then disconnect the card reader board cable from the system board.

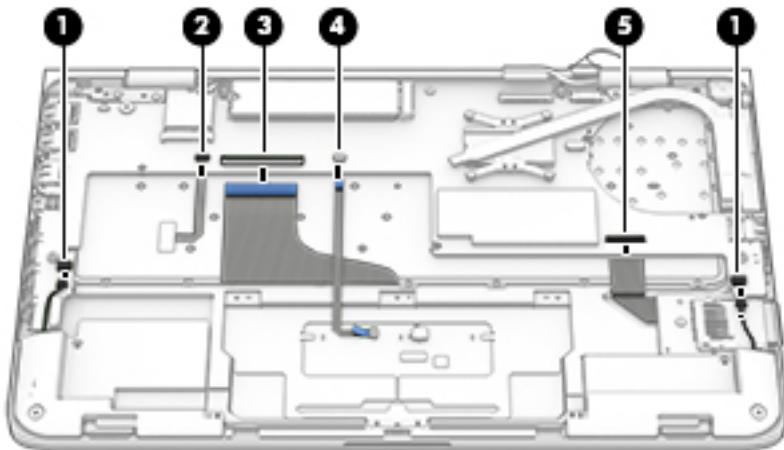

- 10.** Remove the Phillips PM2.0×2.6 broad head screw **(1)** and the Phillips PM2.0×2.7 screw **(2)** that secure the system board to the top cover.
11. Lift the front edge system board **(3)** until it rests at an angle.
12. Remove the system board **(4)** by sliding it up and forward at an angle.

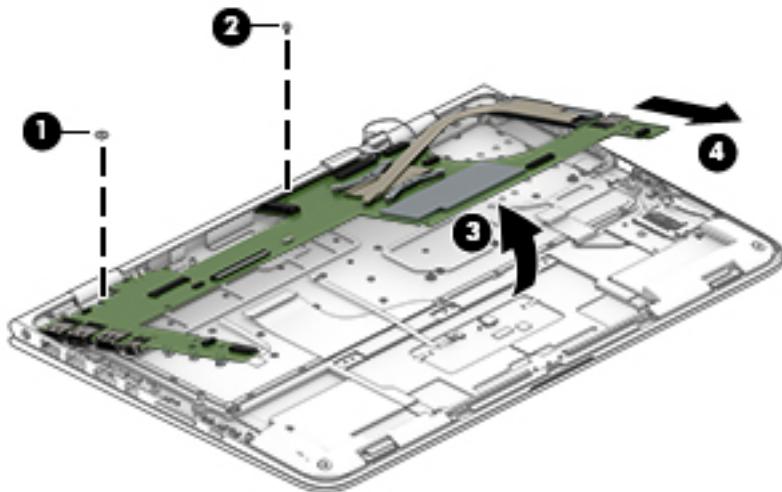

Reverse this procedure to install the system board.

Heat sink



NOTE: The heat sink spare part kit includes replacement thermal material.

Description	Spare part number
For use only on computer models equipped with an Intel Core i-7 6550U, Intel Core i-7 6500U, or Intel Core i-5 6200U processor	828819-001
For use only on computer models equipped with an Intel Core i-7 5600U, Intel Core i-7 5500U, Intel Core i-5 5300U, or Intel Core i-5 5200U processor	801494-001

Before removing the heat sink, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)), and then remove the following components:
 - a. Remove the battery (see [Battery on page 29](#)).
 - b. Remove the fan (see [Fan on page 33](#)).
 - c. Remove the system board (see [System board on page 38](#)).

Remove the heat sink:

1. Loosen the four captive Phillips PM2.0×2.7 screws **(1)** that secure the heat sink to the system board.


NOTE: Due to the adhesive quality of the thermal material located between the heat sink and system board components, it may be necessary to move the heat sink from side to side to detach it.

2. Remove the heat sink **(2)**.

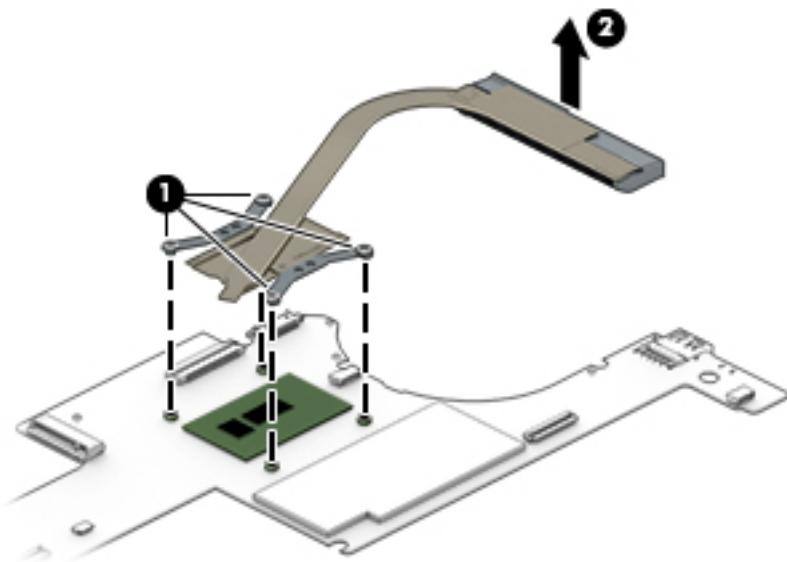



NOTE: The thermal material must be thoroughly cleaned from the surfaces of the heat sink and the system board each time the heat sink is removed. Thermal paste is used on the processor (**1**) and the heat sink section (**2**) that services it.

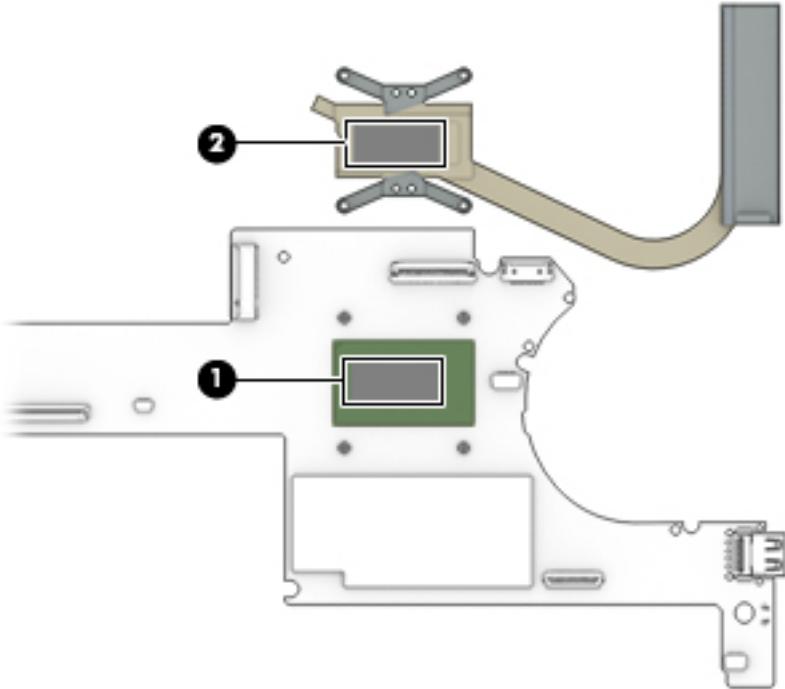

Reverse this procedure to install the heat sink.

Keyboard



NOTE: The keyboard spare part kit includes the keyboard cable and the keyboard backlight cable.

For use in country or region	Spare part number	For use in country or region	Spare part number
In ash silver finish for use on all computers with model numbers 13-4100 through 13-4199:			
For use in Belgium	833714-A41	For use in the Netherlands	833714-B31
For use in Canada	833714-DB1	For use in Portugal	833714-131
For use in the Czech Republic and Slovakia	833714-FL1	For use in Russia	833714-251
For use in Denmark, Finland, and Norway	833714-DH1	For use in Saudi Arabia	833714-171
For use in France	833714-051	For use in South Korea	833714-AD1
For use in Germany	833714-041	For use in Spain	833714-071
For use in Greece	833714-151	For use in Switzerland	833714-BG1
For use in Italy	833714-061	For use in Turkey	833714-141
For use in Japan	833714-291	For use in the United Kingdom and Singapore	833714-031
For use in Latin America	833714-161	For use in the United States	833714-001


For use in country or region	Spare part number	For use in country or region	Spare part number
In natural silver finish for use on all computers with model numbers 13-4000 through 13-4099:			
For use in Belgium	801508-A41	For use in Portugal	801508-131
For use in Canada	801508-DB1	For use in Russia	801508-251
For use in the Czech Republic and Slovakia	801508-FL1	For use in Saudi Arabia	801508-171
For use in Denmark, Finland, and Norway	801508-DH1	For use in South Korea	801508-AD1
For use in France	801508-051	For use in Spain	801508-071
For use in Germany	801508-041	For use in Turkey	801508-141
For use in Greece	801508-151	For use in the United Kingdom and Singapore	801508-031
For use in Italy	801508-061	For use in the United States	801508-001
In natural silver finish for use only on HP Spectre Pro x360 Convertible PC computer models:			
For use in Israel	801508-BB1	For use in Japan	801508-291
In natural silver finish for use only on HP Spectre x360 Convertible PC computer models with model numbers 13-4000 through 13-4099:			
For use in Latin America	801508-161	For use in Switzerland	801508-BG1

Before removing the keyboard, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)), and then remove the following components:
 - a. Remove the battery (see [Battery on page 29](#)).
 - b. Remove the fan (see [Fan on page 33](#)).
 - c. Remove the system board (see [System board on page 38](#)).

Remove the keyboard:

1. Remove the 55 Phillips PM1.1×1.5 screws that secure the keyboard to the top cover from the locations in the following illustration.

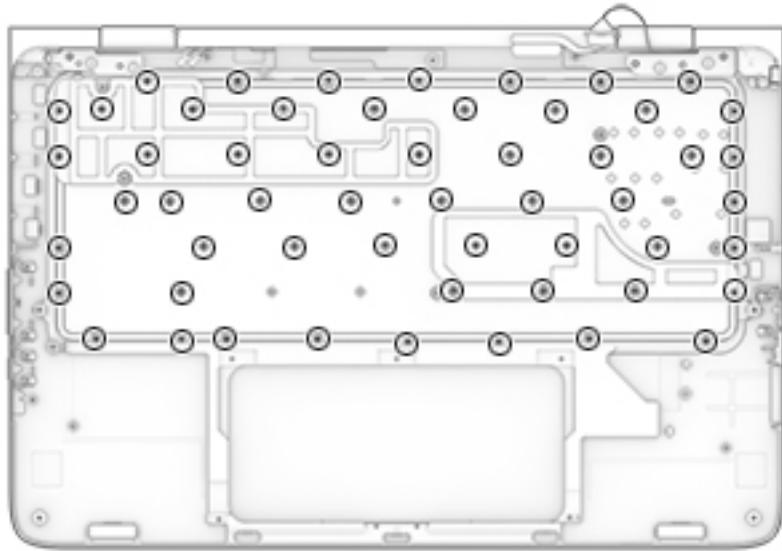

2. Remove the keyboard shields **(1)**.
3. Remove the keyboard **(2)**.

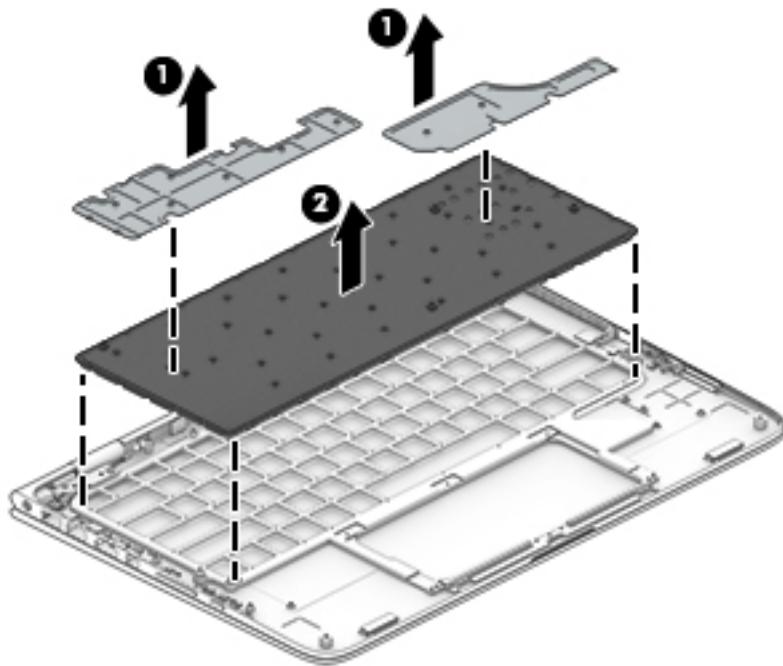

Reverse this procedure to install the keyboard.

Display assembly

Description	Spare part number
Display assembly: 13.3-in, ultra wide aspect ratio, TouchScreen (includes display panel cable, microphones, hinges, webcam, and wireless antenna cables and transceivers)	
13.3-in, QHD, WLED, BrightView (2560×1440), UWVA, 2.55-mm in ash silver finish for use only on computers with model numbers 13-4100 through 13-4199 and equipped with an Intel Core i-7 5500U or Intel Core i-5 5200U processor	833713-001
13.3-in, FHD, WLED, BrightView (1920×1080), UWVA, 2.55-mm in ash silver finish for use only on computers with model numbers 13-4100 through 13-4199 and equipped with an Intel Core i-7 5500U or Intel Core i-5 5200U processor	833712-001
13.3-in, FHD, WLED, BrightView (2560×1440), UWVA, 2.55-mm in natural silver finish for use only on computers with model numbers 13-4100 through 13-4199 and equipped with an Intel Core i-7 6550U, Intel Core i-7 6500U, or Intel Core i-5 6200U processor	828823-001
13.3-in, FHD, WLED, BrightView (1920×1080), UWVA, 2.55-mm in natural silver finish for use only on computers with model numbers 13-4100 through 13-4199 and equipped with an Intel Core i-7 6550U, Intel Core i-7 6500U, or Intel Core i-5 6200U processor	828822-001
13.3-in, QHD, WLED, BrightView (2560×1440), UWVA, 2.55-mm in natural silver finish for use only on computers with model numbers 13-4000 through 13-4099	801496-001
13.3-in, FHD, WLED, BrightView (1920×1080), UWVA, 2.55-mm in natural silver finish for use only on computers with model numbers 13-4000 through 13-4099	801495-001


Before removing the display assembly, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)), and then remove the following components:
 - a. Remove the battery (see [Battery on page 29](#)).
 - b. Remove the fan (see [Fan on page 33](#)).
 - c. Remove the system board (see [System board on page 38](#)).


Remove the display assembly:

1. Open the computer to the interactive position, as shown in the following illustrations.
2. Release the WLAN antenna cables from the retention post **(1)** built into the top cover.

3. Release the display panel cable from the retention post **(2)** built into the top cover.

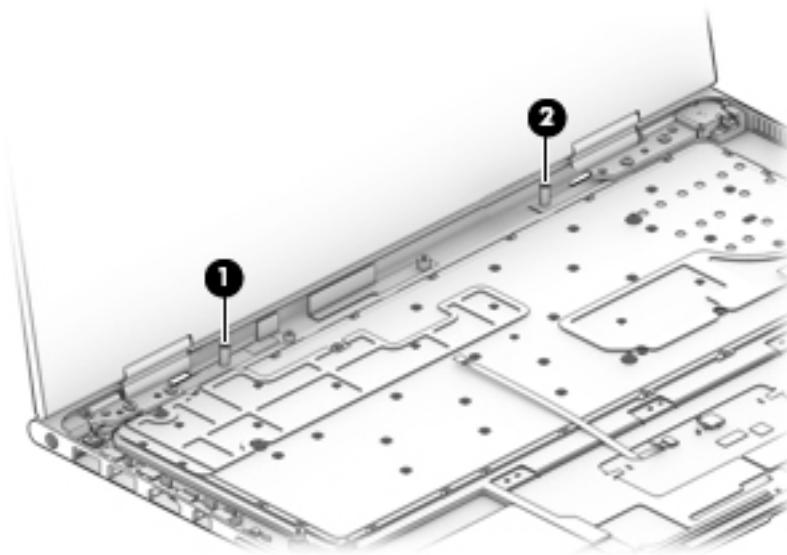

4. Remove the four Phillips PM2.5×4.1 screws **(1)** that secure the display assembly to the top cover.
5. Slide the display assembly **(2)** forward until the display hinges **(3)** clear the top cover.
6. Remove the display assembly **(4)**.

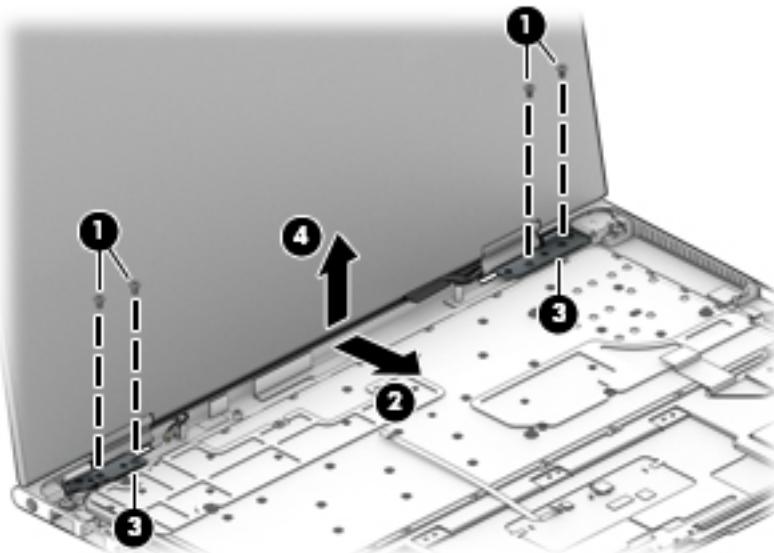

Reverse this procedure to install the display assembly.

Audio jack board



NOTE: The audio jack board spare part kit includes the audio jack board cable.


Description	Spare part number
For use only on computer models equipped with an Intel Core i-7 6550U, Intel Core i-7 6500U, or Intel Core i-5 6200U processor	828820-001
For use only on computer models equipped with an Intel Core i-7 5600U, Intel Core i-7 5500U, Intel Core i-5 5300U, or Intel Core i-5 5200U processor	801497-001

Before removing the audio jack board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)), and then remove the following components:
 - a. Remove the battery (see [Battery on page 29](#)).
 - b. Remove the fan (see [Fan on page 33](#)).
 - c. Remove the system board (see [System board on page 38](#)).
 - d. Remove the display assembly (see [Display assembly on page 46](#)).

Remove the audio jack board:

1. Remove the Phillips PM2.0×2.0 broad head screw **(1)** that secures the audio jack board to the top cover.
2. Remove the audio jack board **(2)**.

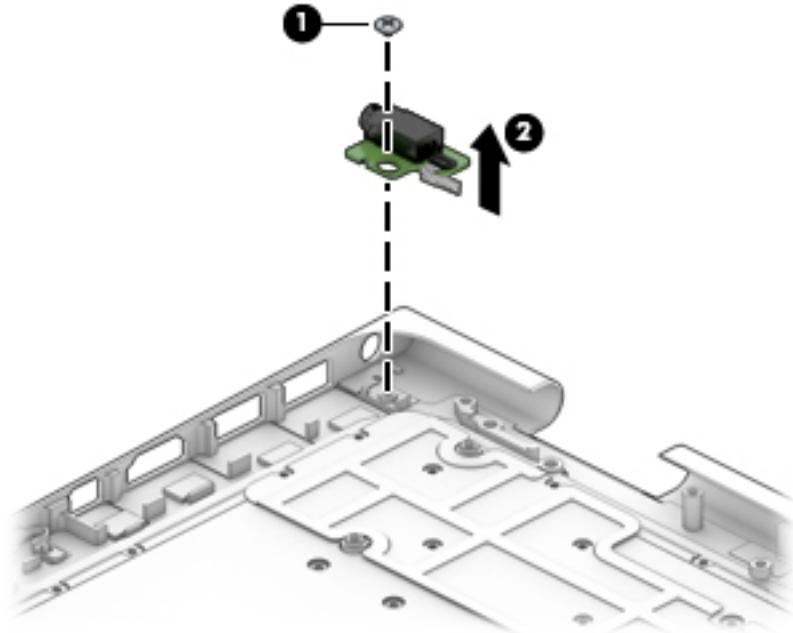

Reverse this procedure to install the audio jack board.

Power connector cable


Description	Spare part number
Power connector cable	801513-001

Before removing the power connector cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)), and then remove the following components:
 - a. Remove the battery (see [Battery on page 29](#)).
 - b. Remove the fan (see [Fan on page 33](#)).
 - c. Remove the system board (see [System board on page 38](#)).
 - d. Remove the display assembly (see [Display assembly on page 46](#)).

Remove the power connector cable:

1. Release the power connector cable (1) from the retention clips built into the bottom cover.
2. Remove the Phillips PM2.0×4.1 screw (2) that secures the power connector to the top cover.
3. Remove the power connector cable (3).

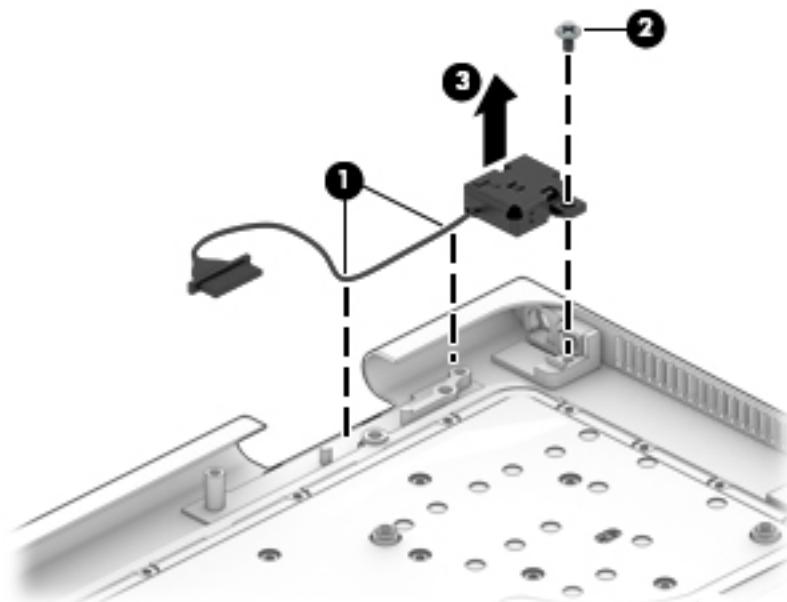

Reverse this procedure to install the power connector cable.

6 Using Setup Utility (BIOS) – Windows 10

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.



NOTE: To start Setup Utility on convertible computers, your computer must be in notebook mode and you must use the keyboard attached to your notebook. The on-screen keyboard, which displays in tablet mode, cannot access Setup Utility.

Starting Setup Utility (BIOS)



CAUTION: Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.



NOTE: To start Setup Utility on convertible computers, your computer must be in notebook mode and you must use the keyboard attached to your notebook. The on-screen keyboard, which displays in tablet mode, cannot access Setup Utility.

- Computers or tablets with keyboards:
 - ▲ Turn on or restart the computer, quickly press `esc`, and then press `f10`.
- Tablets without keyboards:
 1. Turn on or restart the tablet, and then quickly hold down the volume down button.
– or –
Turn on or restart the tablet, and then quickly hold down the Windows button.
 2. Tap `f10`.

Updating Setup Utility (BIOS)

Updated versions of Setup Utility (BIOS) may be available on the HP website.

Updated versions of Setup Utility (BIOS) may be available on the HP website.

Some download packages contain a file named `Readme.txt`, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Setup Utility (BIOS), first determine the BIOS version on your computer.

To reveal the BIOS version information (also known as ROM date and System BIOS):

1. Type **support** in the taskbar search box, and then select the **HP Support Assistant** app.
– or –
Click the question mark icon in the taskbar.
2. Select **My PC**, and then select **Specifications**.
– or –
▲ Use Setup Utility (BIOS).

To use Setup Utility (BIOS):

1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 50](#)).
2. Select **Main**, select **System Information**, and then make note of the BIOS version.
3. Select **Exit**, select **No**, and then follow the on-screen instructions.

To check for later BIOS versions, see [Downloading a BIOS update on page 51](#).

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

 **NOTE:** If your computer is connected to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

1. Type **support** in the taskbar search box, and then select the **HP Support Assistant** app.
– or –
Click the question mark icon in the taskbar.
2. Click **Updates**, and then click **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS version, make a note of the date,

name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.

- b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

BIOS installation procedures vary. Follow any instructions that appear on the screen after the download is complete. If no instructions appear, follow these steps:

1. Type `file` in the taskbar search box, and then select **File Explorer**.
 2. Click your hard drive designation. The hard drive designation is typically Local Disk (C:).
 3. Using the hard drive path you recorded earlier, open the folder that contains the update.
 4. Double-click the file that has an .exe extension (for example, *filename.exe*).
- The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Synchronizing a tablet and keyboard (select products only)

For a tablet with a detachable keyboard, when you attach the tablet to the keyboard and restart the computer, Setup Utility (BIOS) checks to see if the Embedded Controller firmware on the keyboard needs to be synchronized. If so, synchronization begins. If the synchronization is interrupted, a notification screen displays for 10 seconds before the tablet restarts and attempts to synchronize again.

 **NOTE:** The Embedded Controller firmware will synchronize ONLY if the tablet or keyboard battery is more than 50% charged, or if your tablet is connected to AC power.

7 Using HP PC Hardware Diagnostics (UEFI) – Windows 10

HP PC Hardware Diagnostics is a Unified Extensible Firmware Interface (UEFI) that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

 **NOTE:** To start BIOS on a convertible computer, your computer must be in notebook mode and you must use the keyboard attached to your tablet. The on-screen keyboard, which displays in tablet mode, cannot access BIOS.

To start HP PC Hardware Diagnostics UEFI:

1. Start BIOS:

- Computers or tablets with keyboards:
 - ▲ Turn on or restart the computer, quickly press **esc**.
- Tablets without keyboards:
 - ▲ Turn on or restart the tablet, and then quickly hold down the volume down button.
 - or –
 - Turn on or restart the tablet, and then quickly hold down the Windows button.

2. Press or tap **f2.**

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB drive
 -  **NOTE:** To download the HP PC Hardware Diagnostics (UEFI) tool to a USB drive, see [Downloading HP PC Hardware Diagnostics \(UEFI\) to a USB device on page 54](#).
 - b. Hard drive
 - c. BIOS
- 3.** When the diagnostic tool opens, select the type of diagnostic test you want to run, and then follow the on-screen instructions. On a tablet, press the volume down button to stop a diagnostic test.

 **NOTE:** If you need to stop a diagnostic test on computers or tablets with a keyboard, press **esc**.

Downloading HP PC Hardware Diagnostics (UEFI) to a USB device

There are two options to download HP PC Hardware Diagnostics to a USB device:

Download the latest UEFI version:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. In the HP PC Hardware Diagnostics section, click the **Download** link, and then select **Run**.

Download any version of UEFI for a specific product:

1. Go to <http://www.hp.com/support>, and then select your country. The HP Support page is displayed.
2. Click **Drivers & Downloads**.
3. In the text box, enter the product name, and then click **Go**.
– or –
Click **Find Now** to let HP automatically detect your product.
4. Select your computer, and then select your operating system.
5. In the **Diagnostic** section, follow the on-screen instructions to select and download the UEFI version you want.

8 Using Setup Utility (BIOS) – Windows 8

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** To start the Setup Utility, your computer must be in notebook mode and you must use the keyboard attached to your notebook. The on-screen keyboard which displays in tablet mode cannot access the Setup Utility.

Starting Setup Utility (BIOS)

 **CAUTION:** Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

- ▲ Turn on or restart the computer, quickly press **esc**, and then press **f10**.

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaks*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than the one currently installed on the computer, you need to know the version of the system BIOS that is installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be revealed from the Start screen by typing **support**, selecting the **HP Support Assistant** app, and then selecting **System Information**, or by using Setup Utility (BIOS).

1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 55](#)).
2. Select **Main**, and then make note of your BIOS version.
3. Select **Exit**, select **Exit Discarding Changes**, and then follow the on-screen instructions.

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

 **NOTE:** If your computer is connected to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

1. From the Start screen, type `support`, and then select the **HP Support Assistant** app.

– or –

From the Windows desktop, click the question mark icon in the notification area, at the far right of the taskbar.

2. Click **Updates and tune-ups**, and then click **Check for HP updates now**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:

a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS, make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.

b. Follow the on-screen instructions to download your selection to the hard drive.

If the update is more recent than your BIOS, make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

BIOS installation procedures vary. Follow any instructions that appear on the screen after the download is complete. If no instructions appear, follow these steps:

1. From the Start screen, type `file`, and then select **File Explorer**.

– or –

From the Windows desktop, right-click the **Start** button, and then select **File Explorer**.

2. Click your hard drive designation. The hard drive designation is typically Local Disk (C:).
 3. Using the hard drive path you recorded earlier, open the folder on your hard drive that contains the update.
 4. Double-click the file that has an .exe extension (for example, *filename.exe*).
- The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

9 Using HP PC Hardware Diagnostics (UEFI) – Windows 8

HP PC Hardware Diagnostics is a Unified Extensible Firmware Interface (UEFI) that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

 **NOTE:** To start the Setup Utility, your computer must be in notebook mode and you must use the keyboard attached to your notebook. The on-screen keyboard which displays in tablet mode cannot access the Setup Utility.

To start HP PC Hardware Diagnostics (UEFI):

1. Start Setup Utility, by turning on or restarting the computer, and then quickly pressing the **esc** key.
2. Press or tap **f2**.

The BIOS searches 3 places for the diagnostic tools, in the following order:

- a. Connected USB drive **NOTE:** To download the HP PC Hardware Diagnostics (UEFI) tool to a USB drive, see [Downloading HP PC Hardware Diagnostics \(UEFI\) to a USB device on page 58](#).
 - b. Hard drive
 - c. BIOS
3. When the diagnostic tool opens, use the keyboard arrow keys to select the type of diagnostic test you want to run, and then follow the on-screen instructions.

 **NOTE:** If you need to stop a diagnostic test, press the **esc** key.

Downloading HP PC Hardware Diagnostics (UEFI) to a USB device



NOTE: Instructions for downloading HP PC Hardware Diagnostics (UEFI) are provided in English only.

There are two options to download HP PC Hardware Diagnostics to a USB device:

Option 1: HP PC Diagnostics homepage—Provides access to the latest UEFI version

1. Go to <http://www.hp.com/go/techcenter/pcdiags>.
2. Click the **Download** link under HP PC Hardware Diagnostics, and then select **Run**.

Option 2: Support and Drivers pages—Provide downloads for a specific product for earlier and later versions

1. Go to <http://www.hp.com>.
2. Point to **Support**, located at the top of the page, and then click **Download Drivers**.
3. In the text box, enter the product name, and then click **Go**.
– or –
Click **Find Now** to let HP automatically detect your product.
4. Select your computer model, and then select your operating system.
5. In the **Diagnostic** section, click **HP UEFI Support Environment**.
– or –
Click **Download**, and then select **Run**.

10 Using Setup Utility (BIOS) and HP PC Hardware Diagnostics (UEFI) – Windows 7

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** To start the Setup Utility, your computer must be in notebook mode and you must use the keyboard attached to your notebook. The on-screen keyboard which displays in tablet mode cannot access the Setup Utility.

Starting Setup Utility (BIOS)

- ▲ To start Setup Utility (BIOS), turn on or restart the computer, quickly press **esc**, and then press **f10**.

 **NOTE:** Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPqgs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be displayed by pressing **fn+esc** (if you are already in Windows) or by using Setup Utility (BIOS).

1. Start Setup Utility (BIOS).
2. Use the arrow keys to select **Main**, and then make note of your current BIOS version.
3. To exit Setup Utility (BIOS) without saving your changes, use the tab key and the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**.

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep or Hibernation.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. Select **Start > All Programs > HP Help and Support > HP Support Assistant**.
2. Follow the on-screen instructions to identify your computer and access the BIOS update you want to download.
3. At the download area, follow these steps:

a. Identify the BIOS update that is later than the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.

b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps:

1. Open Windows Explorer by selecting **Start > Computer**.
2. Double-click your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder on your hard drive that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Using HP PC Hardware Diagnostics (UEFI)

HP PC Hardware Diagnostics is a Unified Extensible Firmware Interface (UEFI) that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

-  **NOTE:** To start the Setup Utility, your computer must be in notebook mode and you must use the keyboard attached to your notebook. The on-screen keyboard which displays in tablet mode cannot access the Setup Utility.

To start HP PC Hardware Diagnostics UEFI:

1. Start Setup Utility, by turning on or restarting the computer, and then quickly pressing the **esc** key.
2. Press or tap **f2**.

The BIOS searches 3 places for the diagnostic tools, in the following order:

- a. Connected USB drive

 **NOTE:** To download the HP PC Hardware Diagnostics (UEFI) tool to a USB drive, see [Downloading HP PC Hardware Diagnostics \(UEFI\) to a USB device on page 58](#).
 - b. Hard drive
 - c. BIOS
3. When the diagnostic tool opens, use the keyboard arrow keys to select the type of diagnostic test you want to run, and then follow the on-screen instructions.

-  **NOTE:** If you need to stop a diagnostic test, press **esc**.

Downloading HP PC Hardware Diagnostics (UEFI) to a USB device

 **NOTE:** Instructions for downloading HP PC Hardware Diagnostics (UEFI) are provided in English only.

There are two options to download HP PC Hardware Diagnostics to a USB device.

Download the latest UEFI version:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Click the **Download** link in the HP PC Hardware Diagnostics section, and then select **Run**.

Download any version of UEFI for a specific product:

1. Go to <http://www.hp.com/support>, and then select your country. The HP Support page is displayed.
2. Click **Drivers & Downloads**.
3. In the text box, enter the product name, and then click **Go**.
– or –
Click **Find Now** to let HP automatically detect your product.
4. Select your computer model, and then select your operating system.
5. In the **Diagnostic** section, click **HP UEFI Support Environment**.
– or –
Click **Download**, and then select **Run**.

11 Specifications

	Metric	U.S.
Dimensions		
Width	32.5 cm	12.80 in
Depth	21.8 cm	8.58 in
Height (front to rear)	1.54 to 1.60 cm	0.61 to 0.63 in
Weight (equipped with solid-state drive)	1.50 kg	3.30 lbs
Input power		
Operating voltage and current	19.5 V dc @ 2.31 A – 45 W 19.5 V dc @ 3.33 A – 65 W	
NOTE: This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.		
NOTE: The computer operating voltage and current can be found on the system regulatory label.		
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

12 Backing up, restoring, and recovering – Windows 10

This chapter provides information about the following processes. The information in the chapter is standard procedure for most products.

- Creating recovery media and backups
- Restoring and recovering your system

For additional information, refer to the HP support assistant app.

- ▲ Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.
 - or –
 - Click the question mark icon in the taskbar.



IMPORTANT: If you will be performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.

IMPORTANT: For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning any recovery process.

Creating recovery media and backups

The following methods of creating recovery media and backups are available on select products only. Choose the available method according to your computer model.

- Use HP Recovery Manager to create HP Recovery media after you successfully set up the computer. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced. For information on creating recovery media, see [Creating HP Recovery media \(select products only\) on page 65](#). For information on the recovery options that are available using the recovery media, see [Using Windows Tools on page 66](#).
- Use Windows tools to create system restore points and create backups of personal information.
For more information, see [Recovering using HP Recovery Manager on page 67](#).



NOTE: If storage is 32 GB or less, Microsoft System Restore is disabled by default.

Creating HP Recovery media (select products only)

If possible, check for the presence of the Recovery partition and the Windows partition. From the **Start** menu, select **File Explorer**, and then select **This PC**.

- If your computer does not list the Windows partition and the Recovery partition, you can obtain recovery media for your system from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information on the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.
- You can use Windows tools to create system restore points and create backups of personal information, see *Using Windows tools on page 61*.
- If your computer does list the Recovery partition and the Windows partition, you can use HP Recovery Manager to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and software programs that were installed at the factory and then configures the settings for the programs. HP Recovery media can also be used to customize the system or restore the factory image if you replace the hard drive.
 - Only one set of recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
 - HP Recovery Manager examines the computer and determines the required storage capacity for the media that will be required.
 - To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, or DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or, instead, you can use a high-quality blank USB flash drive.
 - If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased separately) to create recovery discs. If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub. If you cannot create DVD media yourself, you can obtain recovery discs for your computer from HP. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information on the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.
 - Be sure that the computer is connected to AC power before you begin creating the recovery media.
 - The creation process can take an hour or more. Do not interrupt the creation process.
 - If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue.

To create HP Recovery media:

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning these steps.

1. Type **recovery** in the taskbar search box, and then select **HP Recovery Manager**.
2. Select **Create recovery media**, and then follow the on-screen instructions.

If you ever need to recover the system, see [Recovering using HP Recovery Manager on page 67](#).

Using Windows Tools

You can create recovery media, system restore points, and backups of personal information using Windows tools.



NOTE: If storage is 32 GB or less, Microsoft System Restore is disabled by default.

For more information and steps, see the Get started app.

- ▲ Select the **Start** button, and then select the **Get started** app.

Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:



IMPORTANT: Not all methods are available on all products.

- Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state. For more information see the Get started app.
 - ▲ Select the **Start** button, and then select the **Get started** app.
- If you need to correct a problem with a preinstalled application or driver, use the Reinstall drivers and/or applications option (select products only) of HP Recovery Manager to reinstall the individual application or driver.
 - ▲ Type `recovery` in the taskbar search box, select **HP Recovery Manager**, select **Reinstall drivers and/or applications**, and then follow the on-screen instructions.
- If you want to recover the Windows partition to original factory content, you can choose the System Recovery option from the HP Recovery partition (select products only) or use the HP Recovery media. For more information, see Recovering using [HP Recovery Manager on page 67](#). If you have not already created recovery media, see [Creating HP Recovery media \(select products only on page 65\)](#).
- On select products, if you want to recover the computer's original factory partition and content, or if you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 67](#).
- On select products, if you want to remove the recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option.

For more information, see Removing the [Removing the HP Recovery partition \(select products only on page 69\)](#).

Recovering using HP Recovery Manager

HP Recovery Manager software allows you to recover the computer to its original factory state by using the HP Recovery media that you either created or that you obtained from HP, or by using the HP Recovery partition (select products only). If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 65](#).

What you need to know before you get started

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.
-
-  **IMPORTANT:** Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.
-
- To use the Factory Reset option (select products only), you must use HP Recovery media. If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 65](#).
 - If your computer does not allow the creation of HP Recovery media or if the HP Recovery media does not work, you can obtain recovery media for your system from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.

 **IMPORTANT:** HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you want to retain.

Using HP Recovery media, you can choose from one of the following recovery options:

-
-  **NOTE:** Only the options available for your computer display when you start the recovery process.
-
- System Recovery—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
 - Factory Reset—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

The HP Recovery partition (select products only) allows System Recovery only.

Using the HP Recovery partition (select products only)

The HP Recovery partition allows you to perform a system recovery without the need for recovery discs or a recovery USB flash drive. This type of recovery can be used only if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:



IMPORTANT: For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning these steps (select products only).

1. Type `recovery` in the taskbar search box, select **Recovery Manager**, and then select **HP Recovery Environment**.

– or –

For computers or tablets with keyboards attached, press **f11** while the computer boots, or press and hold **f11** as you press the power button.

For tablets without keyboards:

Turn on or restart the tablet, and then quickly hold down the volume down button; then select **f11**.

– or –

Turn on or restart the tablet, and then quickly hold down the Windows button; then select **f11**.

2. Select **Troubleshoot** from the boot options menu.
3. Select **Recovery Manager**, and then follow the on-screen instructions.

Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
2. Insert the HP Recovery media, and then restart the computer.



NOTE: If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 69](#).

3. Follow the on-screen instructions.

Changing the computer boot order

If your computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection to an optical drive or a USB flash drive.

To change the boot order:

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning these steps.

1. Insert the HP Recovery media.

2. Access BIOS:

For computers or tablets with keyboards attached:

▲ Turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.

For tablets without keyboards:

▲ Turn on or restart the tablet, and then quickly hold down the volume down button; then select **f9**.

– or –

Turn on or restart the tablet, and then quickly hold down the Windows button; then select **f9**.

3. Select the optical drive or USB flash drive from which you want to boot.

4. Follow the on-screen instructions.

Removing the HP Recovery partition (select products only)

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.

 **IMPORTANT:** After you remove the HP Recovery partition, you will not be able to perform System Recovery or create HP recovery media from the HP Recovery partition. So before you remove the Recovery partition, create HP Recovery media; see [Creating HP Recovery media \(select products only\) on page 65](#).

 **NOTE:** The Remove Recovery Partition option is only available on products that support this function.

Follow these steps to remove the HP Recovery partition:

1. Type **recovery** in the taskbar search box, and then select **HP Recovery Manager**.

2. Select **Remove Recovery Partition**, and then follow the on-screen instructions.

13 Backing up, restoring, and recovering – Windows 8

This chapter provides information about the following processes. The information in the chapter is standard procedure for most models.

- Creating recovery media and backups
- Restoring and recovering your system

For additional information, refer to the HP Support Assistant.

- ▲ From the Start screen, type `support`, and then select the **HP Support Assistant** app.

- or -

From the Windows desktop, click the question mark icon in the notification area, at the far right of the taskbar.

Creating recovery media and backups

The following methods of creating recovery media and backups are available on select models only. Choose the available method according to your computer model.

- Use HP Recovery Manager after you successfully set up the computer to create HP Recovery media. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced. For information on creating recovery media, see [Creating HP Recovery media \(select models only\) on page 71](#). For information on the recovery options that are available using the recovery media, see [Recovering using HP Recovery Manager on page 73](#).
- Use Windows tools to create system restore points and create backups of personal information. For more information, see [Using Windows tools on page 72](#).



NOTE: If storage is 32 GB or less, Microsoft System Restore is disabled by default.

Creating HP Recovery media (select models only)



IMPORTANT: If your computer does not list a Recovery Media Creation option, you can obtain recovery media for your system from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.

HP Recovery Manager is a software program that allows you to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and the software programs installed at the factory and then configures the settings for the programs. HP Recovery media can also be used to customize the system or restore the factory image if you replace the hard drive.

- Only one set of recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
- HP Recovery Manager examines the computer and determines the required storage capacity for the media that will be required.
- To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, or DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or, instead, you can use a high-quality blank USB flash drive.
- If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased separately) to create recovery discs, or you can obtain recovery discs for your computer from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions. If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub.
- Be sure that the computer is connected to AC power before you begin creating the recovery media.
- The creation process can take an hour or more. Do not interrupt the creation process.
- If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue, and the remaining discs will be burned.

To create HP Recovery media:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Recovery Media Creation**, and then follow the on-screen instructions.

If you ever need to recover the system, see [Recovering using HP Recovery Manager on page 73](#).

Using Windows tools

You can create system restore points and create backups of personal information using Windows tools.



NOTE: If storage is 32 GB or less, Microsoft System Restore is disabled by default.

- ▲ From the Start screen, type `help`, and then select **Help and Support**.

- or -

From the Windows desktop, click the question mark icon in the notification area, at the far right of the taskbar.

For more information and steps, see Help and Support.

Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:



IMPORTANT: Not all methods are available on all models.

- Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state. For more information see Help and Support.
 - ▲ From the Start screen, type `support`, and then select the **HP Support Assistant** app.

- or -

From the Windows desktop, click the question mark icon in the notification area, at the far right of the taskbar.
- If you need to correct a problem with a preinstalled application or driver, use the Drivers and Applications Reinstall option of HP Recovery Manager to reinstall the individual application or driver.
 - ▲ From the Start screen, type `recovery`, select **HP Recovery Manager**, select **Drivers and Applications Reinstall**, and then follow the on-screen instructions.
- On select models, if you want to reset your computer using a minimized image, you can choose the HP Minimized Image Recovery option from the HP Recovery partition or HP Recovery media. Minimized Image Recovery installs only drivers and hardware-enabling applications. Other applications included in the image continue to be available for installation through the Drivers and Applications Reinstall option in HP Recovery Manager.

For more information, see [Recovering using HP Recovery Manager on page 73](#).
- If you want to recover the Windows partition to original factory content, you can choose the System Recovery option from the HP Recovery partition (select models only) or use the HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 73](#). If you have not already created recovery media, see [Creating HP Recovery media \(select models only\) on page 71](#).
- On select models, if you want to recover the computer's original factory partition and content , or if you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 73](#).
- On select models, if you want to remove the recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option.

For more information, see [Removing the HP Recovery partition \(select models only\) on page 74](#).

Recovering using HP Recovery Manager

HP Recovery Manager software allows you to recover the computer to its original factory state by using the HP Recovery media that you either created or that you obtained from support, or by using the HP Recovery partition (select models only). If you have not already created recovery media, see [Creating HP Recovery media \(select models only\) on page 71](#).

What you need to know before you get started

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.
-
-  **IMPORTANT:** Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.
-
- HP Recovery media must be used if the computer hard drive fails. If you have not already created recovery media, see [Creating HP Recovery media \(select models only\) on page 71](#).
 - To use the Factory Reset option (select models only), you must use HP Recovery media. If you have not already created recovery media, see [Creating HP Recovery media \(select models only\) on page 71](#).
 - If your computer does not allow the creation of HP Recovery media or if the HP Recovery media does not work, you can obtain recovery media for your system from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.

 **IMPORTANT:** HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you want to retain.

Using HP Recovery media, you can choose from one of the following recovery options:

 **NOTE:** Only the options available for your computer display when you start the recovery process.

- System Recovery—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
- Minimized Image Recovery (select models only)—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- Factory Reset—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

The HP Recovery partition (select models only) allows System Recovery and Minimized Image Recovery (select models only).

Using the HP Recovery partition (select models only)

The HP Recovery partition allows you to perform a system recovery or minimized image recovery (select models only) without the need for recovery discs or a recovery USB flash drive. This type of recovery can be used only if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:

1. From the Start screen, type `recovery`, select **Recovery Manager**, and then select **HP Recovery Environment**.

- or -

Press **f11** while the computer boots, or press and hold **f11** as you press the power button.

2. Select **Troubleshoot** from the boot options menu.
3. Select **Recovery Manager**, and then follow the on-screen instructions.

Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
2. Insert the HP Recovery media, and then restart the computer.

 **NOTE:** If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 74](#).

3. Follow the on-screen instructions.

Changing the computer boot order

If your computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection for an optical drive or a USB flash drive.

To change the boot order:

1. Insert the HP Recovery media.
2. Start Computer Setup:
 - ▲ Turn on or restart the computer, quickly press **esc**, and then press **f9** for boot options.
3. Select the optical drive or USB flash drive from which you want to boot.
4. Follow the on-screen instructions.

Removing the HP Recovery partition (select models only)

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.

 **IMPORTANT:** After you remove the HP Recovery partition, you can no longer use the Windows Refresh option or the Windows option to remove everything and reinstall Windows. In addition, you will not be able to perform System Recovery or Minimized Image Recovery from the HP Recovery partition. So before you remove the Recovery partition, create HP Recovery media; see [Creating HP Recovery media \(select models only\) on page 71](#).

Follow these steps to remove the HP Recovery partition:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Remove Recovery Partition**, and then follow the on-screen instructions.

14 Backing up, restoring, and recovering – Windows 7

Your computer includes tools provided by the operating system and HP to help you safeguard your information and retrieve it if ever needed.

Creating backups

1. Use HP Recovery Manager to create recovery media immediately after you set up the working computer.
2. As you add hardware and software programs, create system restore points.
3. As you add photos, video, music, and other personal files, create a backup of your system and personal information.

Creating recovery media to recover the original system

After you successfully set up the computer, you should create recovery discs or a recovery flash drive using HP Recovery Manager. You will need these recovery discs or recovery flash drive to perform a system recovery should the hard drive become corrupted. A system recovery reinstalls the original operating system, and then configures the settings for the default programs.

What you need to know

- Only one set of recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
- HP Recovery Manager examines the computer and determines the required storage capacity for the flash drive or the number of blank DVD discs that will be required.

Use DVD-R, DVD+R, DVD-R DL, DVD+R DL discs or a flash drive. Do not use rewriteable discs such as CD ±RW, DVD±RW, double-layer DVD±RW, and BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software.

- If your computer does not include an integrated optical drive, you can use an optional external optical drive (purchased separately) to create recovery discs, or you can obtain recovery discs for your computer from the HP website. If you use an external optical drive, it must be connected directly to a USB port on the computer, not to a USB port on an external device, such as a USB hub.
- Be sure that the computer is connected to AC power before you begin creating the recovery media.
- The creation process can take up to an hour or more. Do not interrupt the creation process.
- Store the recovery media in a safe location, separate from the computer.
- If necessary, you can exit the program before you have finished creating the recovery media. The next time you open HP Recovery Manager, you will be prompted to continue the process.

Creating the recovery media

1. Select **Start** and type `recovery` in the search field. Select **Recovery Manager** from the list. Allow the action to continue, if prompted.
2. Click **Recovery Media Creation**.
3. Follow the on-screen instructions to continue.

To recover, see [Recovering the original system using HP Recovery Manager on page 79](#).

Creating system restore points

A system restore point is a snapshot of certain hard drive contents saved by Windows System Restore at a specific time. A restore point contains information such as registry settings that Windows uses. Restoring to a previous restore point allows you to reverse changes that have been made to the system since the restore point was created.

Restoring to an earlier system restore point does not affect data files saved or emails created since the last restore point, but it does affect software you may have installed.

For example, if you download a photo from a digital camera and then restore the computer to the state it was on the previous day, the photo remains on the computer.

However, if you install photo viewing software and then restore your computer to the state it was on the previous day, the software will be uninstalled, and you won't be able to use it.

What you need to know

- If you restore to a restore point and then change your mind, you can undo the restoration.
- You should create system restore points:
 - Before you add or change software or hardware
 - Periodically, whenever the computer is running normally
- System Restore also saves shadow copies of files that have been changed since the last restore point was created. For more information about using shadow copies to restore, see Help and Support.

Creating a system restore point

1. Select **Start > Control Panel > System and Security > System**.
2. In the left pane, click **System Protection**.
3. Click the **System Protection** tab.
4. Click **Create**, and follow the on-screen instructions.

To restore, see [Restoring to a previous system restore point on page 78](#).

Backing up system and personal information

Your computer stores information that is important to you, such as files, emails, and photos, and you will want to keep that information even if you download a virus or the system stops working properly. How completely you are able to recover your files depends on how recent your backup is. As you add new software and data files, you should create backups on a regular basis.

Tips for a successful backup

- Number backup discs before inserting them into the optical drive.
- Store personal files in the Documents, Music, Pictures, and Videos libraries, and back up these folders periodically.
- Save customized settings in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time-saver if you have to re-enter your preferences.

To create a screen shot:

1. Display the screen you want to save.

2. Copy the screen image:

To copy only the active window, press **alt+prt sc**.

To copy the entire screen, press **prt sc**.

3. Open a word-processing document or graphics editing program, and then select **Edit > Paste**. The screen image is added to the document.

4. Save and print the document.

What you need to know

- You can back up your information to an optional external hard drive, a flash drive, a network drive, or discs.
- Connect the computer to AC power during backups.
- Allow enough time for the backup. Depending on files sizes, it may take more than an hour.
- Verify the amount of free space on your backup storage device before you back up.
- You should back up:
 - Before adding or changing software or hardware.
 - Before the computer is repaired or restored.
 - On a regular schedule to be sure you have recent copies of personal information.
 - After you add many files—for example, if you saved videos from a birthday party.
 - Before using antivirus software to remove a malicious program.
 - After adding information that is hard to replace, such as pictures, videos, music, project files, or data records.

Creating a backup using Windows Backup and Restore

Windows allows you to back up files using Windows Backup and Restore. You can select the level you want to back up, from individual folders to drives. The backups are compressed to save space. To back up:

1. Select **Start > Control Panel > System and Security > Backup and Restore**.
2. Follow the on-screen instructions to schedule and create a backup.



NOTE: Windows includes the User Account Control feature to improve the security of the computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. See Help and Support for more information.

To restore, see [Restoring specific files using Windows Backup and Restore on page 78](#).

Restore and recovery

Restoring to a previous system restore point

Sometimes installing a software program causes your computer or Windows to behave unpredictably. Usually uninstalling the software fixes the problems. If uninstalling does not fix the problems, you can restore the computer to a previous system restore point (created at an earlier date and time).

To restore to a previous system restore point, when the computer was running correctly:

1. Select **Start > Control Panel > System and Security > System**.
2. In the left pane, click **System Protection**.
3. Click the **System Protection** tab.
4. Click **System Restore**, and follow the on-screen instructions.

Restoring specific files

If files are accidentally deleted from the hard disk and they can no longer be restored from the Recycle Bin, or if files become corrupt, restoring specific files is useful. Restoring specific files is also useful if you ever choose to recover the original system using HP Recovery Manager. You can only restore specific files that you have backed up before.

Restoring specific files using Windows Backup and Restore

Windows allows you to restore files that were backed up using Windows Backup and Restore:

1. Select **Start > Control Panel > System and Security > Backup and Restore**.
2. Follow the on-screen instructions to restore your backup.



NOTE: Windows includes the User Account Control feature to improve the security of the computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. See Help and Support for more information.

Recovering the original system using HP Recovery Manager

HP Recovery Manager software allows you to repair or recover the computer to its original factory state.

What you need to know

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the disc provided by the manufacturer.
- A system recovery should be used as a final attempt to correct computer issues. If you have not already tried restore points (see [Restoring to a previous system restore point on page 78](#)) and partial restores (see [Restoring specific files on page 78](#)), try them before using HP Recovery Manager to recover your system.
- A system recovery must be performed if the computer hard drive fails or if all attempts to correct any functional computer issues fail.
- If the recovery media do not work, you can obtain recovery discs for your system from the HP website.
- The Minimized Image Recovery option is recommended for advanced users only. All hardware-related drivers and software are re-installed, but other software applications are not. Do not interrupt the process until it is complete, otherwise the recovery will fail.

Recovering using HP Recovery partition (select models only)

The HP Recovery partition (select models only), allows you to restore your system without the need for recovery discs or a recovery flash drive. This type of recovery can only be used if the hard drive is still working.

To check for the presence of a recovery partition, select **Start**, right-click **Computer** then select **Manage > Disk Management**. If the recovery partition is present, a Recovery drive is listed in the window.



NOTE: Recovery discs have been included if your computer did not ship with a recovery partition.

1. Access HP Recovery Manager in either of the following ways:
 - Select **Start** and type `recovery` in the search field. Select **Recovery Manager** from the list.
– or –
 - Turn on or restart the computer, and then press `esc` while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen. Then press `f11` while the “F11 (System Recovery)” message is displayed on the screen.
2. Click **System Recovery** in the **HP Recovery Manager** window.
3. Follow the on-screen instructions.

Recovering using the recovery media

1. If possible, back up all personal files.
2. Insert the first recovery disc into the optical drive on your computer or an optional external optical drive, and then restart the computer.

– or –

Insert the recovery flash drive into a USB port on your computer, and then restart the computer.

 **NOTE:** If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 80](#).

3. Press **f9** at system bootup.
4. Select the optical drive or the flash drive.
5. Follow the on-screen instructions.

Changing the computer boot order

To change the boot order for recovery discs:

1. Restart the computer.
2. Press **esc** while the computer is restarting, and then press **f9** for boot options.
3. Select **Internal CD/DVD ROM Drive** from the boot options window.

To change the boot order for a recovery flash drive:

1. Insert the flash drive into a USB port.
2. Restart the computer.
3. Press **esc** while the computer is restarting, and then press **f9** for boot options.
4. Select the flash drive from the boot options window.

15 Statement of Volatility



NOTE: This chapter applies only to HP Spectre Pro x360 Convertible PC computer models.

The purpose of this document is to provide general information regarding non-volatile memory in industry-standards based HP Business Notebook PC systems and provide general instructions for restoring nonvolatile memory that can contain personal data after the system has been powered off and the hard drive has been removed.

HP Business Notebook PC products that use Intel-based or AMD®-based system boards contain volatile DDR memory. The amount of nonvolatile memory present in the system depends upon the system configuration. Intel-based and AMD-based system boards contain nonvolatile memory subcomponents as originally shipped from HP assuming that no subsequent modifications have been made to the system and assuming that no applications, features, or functionality have been added to or installed on the system.

Following system shutdown and removal of all power sources from an HP Business Notebook PC system, personal data can remain on volatile system memory (DIMMs) for a finite period of time and will also remain in nonvolatile memory. The steps below will remove personal data from the notebook PC, including the nonvolatile memory found in Intel-based and AMD-based system boards. Some of these steps are disclosed in the Maintenance and Service Guides available for HP PC products available on the product support pages at www.hp.com.

1. Follow steps (a) through (l) below to restore the nonvolatile memory that can contain personal data. Restoring or re-programming nonvolatile memory that does not store personal data is neither necessary nor recommended.
 - a. Enter BIOS (F10) Setup by powering on the system and pressing **F10** when prompted near the bottom of the display, or press the **ESC** key to display the start up menu, then press **F10**. If the system has a BIOS administrator password, enter the password at the prompt.
 - b. Select the **File** menu, then **Restore Defaults**.
 - c. Select the **System Configuration** menu, then **Restore Security Defaults**.
 - d. If an asset or ownership tag is set, select the **Security** menu and scroll down to the **Utilities** menu. Select **System IDs**, and then select the tag that has been set. Press the spacebar once to clear the tag, then press **Enter** to return to the prior menu.
 - e. If a DriveLock password is set, select the **Security** menu, scroll down to **DriveLock**, then select **DriveLock password**. Select the desired hard drive. Click **Disable protection**, enter the existing master DriveLock password, then press **Enter** to confirm and return to the prior menu. Repeat this procedure if more than one hard drive has a DriveLock password.
 - f. If an Automatic DriveLock password is set, select the **Security menu**, scroll down to **Automatic DriveLock**, then select the desired hard drive and disable protection. Repeat this procedure if more than one hard drive has an Automatic DriveLock password.
 - g. Select the **File** menu, then **Reset BIOS Security** to factory default. Click **yes** at the warning message.
 - h. Select the **File** menu, then **Save Changes and Exit**.

- i. Reboot the system. If the system has a Trusted Platform Module and/or fingerprint sensor, one or two prompts will appear: one to clear the TPM and the other to reset fingerprint sensor. Press **F1** to accept or **F2** to reject.

If the HP notebook model number ends in a 'p' or 'w' and includes Intel Centrino with VProTM, reboot the PC and enter BIOS Setup by pressing **F10** when prompted. Select **System Configuration**, then **AMT Options**. Then select **Un-configure AMT on next boot**. Select **Save**, then **Yes**. Select the **File** menu, and then select **Save Changes and Exit**. Reboot the system and confirm that you want to un-configure AMT.
 - j. If the optional Intel Anti-Theft Technology (AT) was activated, contact the provider to deactivate it.
 - k. If the optional Absolute® Software Computrace® management and tracking service was activated on the notebook PC, contact the provider to deactivate it.
 - l. Remove all power and system batteries for at least 24 hours.
2. Remove and retain the storage drive or clear the contents of the drive.
 - a. **Hard Disk Drive (HDD)**

Clear the HDD contents by using the HP Disk Sanitizer® utility or a third party application that, ideally, is U.S. Department of Defense (DOD) 5220.22-M approved.

To run HP Disk Sanitizer, enter BIOS Setup by powering on the system and pressing **F10** when prompted near the bottom of the display, or press **ESC** to display the start up menu, then press **F10**. Select the **Security** menu and scroll down to the **Utilities** menu. Select **Disk Sanitizer** and select the desired drive. For a higher level of protection, select **Optimum**.

 **NOTE:** This process will take a long time, and the amount of time varies based on the hard drive capacity.
 - b. **Solid State Drive (SSD)**

Clear the SSD contents by using the BIOS Setup Secure Erase command option, or by using a third party utility designed to erase data from an SSD. To run Secure Erase, enter BIOS Setup by powering on the system and pressing **F10** when prompted near the bottom of the display. Select the **Security** menu and scroll down to the **Utilities** menu. Select **Secure Erase** and select the desired hard drive.

Non-volatile memory usage

Non Volatile Memory Type	Amount (Size)	Does this memory store customer data?	Does this memory retain data when power is removed?	What is the purpose of this memory?	How is data input into this memory?	How is this memory write protected?
Real Time Clock (RTC) battery backed-up CMOS configuration memory (CMOS)	256 Bytes	No	Yes	Stores system date and time and limited keyboard controller data.	Using the F10 Setup utility or changing the Microsoft Windows date and time.	This memory is not write-protected. HP recommends password protecting the F10 Setup utility.
Controller (NIC) EEPROM	64 KBytes (not customer accessible)	No	Yes	Store NIC configuration and NIC firmware.	Using a utility from the NIC vendor that can be run from DOS.	A utility is required to write data to this memory and is available from NIC vendor. Writing data to this ROM in an inappropriate manner will render the NIC nonfunctional.
Keyboard ROM	64 KBytes (not customer accessible)	No	Yes	Stores firmware code (keyboard, mouse, & battery management).	Programmed at the factory. Code is updated when the system BIOS is updated.	A utility is required for writing data to this memory and is available on the HP website. Writing data to this ROM in an inappropriate manner can render the PC nonfunctional.
DIMM Serial Presence Detect (SPD) configuration data	256 Bytes per memory module, 128 Bytes programmable (not customer accessible)	No	Yes	Stores memory module information.	Programmed by the memory vendor.	Data cannot be written to this memory when the module is installed in a PC. The specific write protection method varies by memory vendor.
System BIOS	4 to 5 MBytes	Yes	Yes	Store system BIOS code and PC configuration data.	System BIOS code is programmed at the factory. Code is updated when the system BIOS is updated. Configuration data and settings are input	A utility is required for writing data to this memory and is available on the HP website. Writing data to this ROM in an inappropriate manner can

Non Volatile Memory Type	Amount (Size)	Does this memory store customer data?	Does this memory retain data when power is removed?	What is the purpose of this memory?	How is data input into this memory?	How is this memory write protected?
					using the F10 setup utility or a custom utility.	render the PC nonfunctional.
Intel Management Engine Firmware (present only in models ending in a 'p' or 'w' or with Intel Centrino Pro technology)	1.5 or 5 MBytes	Yes	Yes	Stores Management Engine Code, Settings, Provisioning Data and iAMT third party data store.	Management Engine Code is programmed at the factory. Code is updated via Intel secure firmware update utility. Unique Provisioning Data can be entered at the factory or by an administrator using the Management Engine (MEBx) setup utility. The third party data store contents can be populated by a remote management console or local applications registered by an administrator to have access to the space.	The Intel chipset is configured to enforce hardware protection to block all direct read/write access to this area. An Intel utility is required for updating the firmware. Only firmware updates digitally signed by Intel can be applied using this utility.
Bluetooth flash	2 MBits	No	Yes	Stores Bluetooth configuration and firmware.	Programmed at the factory. Tools for writing data to this memory are not publicly available but can be obtained from the silicon vendor.	A utility is required for writing data to this memory and is made available through newer versions of the driver if the flash requires an upgrade.
802.11 WLAN EEPROM	4 KBytes to 8 KBytes	No	Yes	Stores configuration and calibration data.	Programmed at the factory. Tools for writing data to this memory are not made public.	A utility is required for writing data to this memory and is typically not made available to the public unless a firmware upgrade is necessary to

Non Volatile Memory Type	Amount (Size)	Does this memory store customer data?	Does this memory retain data when power is removed?	What is the purpose of this memory?	How is data input into this memory?	How is this memory write protected?
Webcamera	64 KBits	No	Yes	Store webcam configuration and firmware.	Using a utility from the device manufacturer that can be run from Windows.	address a unique issue.
Fingerprint reader	512 KBytes flash	Yes	Yes	Stores fingerprint templates.	By enrolling in HP ProtectTools Security Manager.	Only a digitally signed application can make the call to write to the flash.

Questions and answers

1. **How can the BIOS settings be restored (returned to default settings)?**
 - a. Turn on or restart the computer and press **F10** when prompted near the bottom of the display.
 - b. Select **File**, then select **Restore defaults**.
 - c. Follow the on-screen instructions.
 - d. Select **File**, save changes and exit, then press **Enter**.
2. **What kind of configuration data is stored on the DIMM Serial Presence Detect (SPD) memory module? How would this data be written?**

The DIMM SPD memory contains information about the memory module such as size, serial number, data width, speed/timing, voltage and thermal information. This information is written by the module manufacturer and stored on an EEPROM. This EEPROM cannot be written to when the memory module is installed in a PC. Third party tools do exist that can write to the EEPROM when the memory module is not installed in a PC. There are various third party tools available to read SPD memory.
3. **Does the “Firmware Hub for System BIOS” contain the BIOS program? Is this chip writable, and if so how?**

The Firmware Hub does contain the BIOS program and is writable. A utility is required to perform the write function.
4. **In some PC systems, the Firmware Hub for System BIOS is a flash memory chip so that updates can be written by the customer. Is this true for these BIOS chips?**

Yes, they are flash memory chips.

5. What is meant by “Restore the nonvolatile memory found in Intel-based system boards?”

This relates to clearing the Real Time Clock (RTC) CMOS memory that contains PC configuration data.

6. Does resetting the CMOS configuration memory return the PC back to factory defaults?

The process of resetting the CMOS will return certain system settings to factory default but will not reset many of the system data and configuration defaults to their default settings. To return these system data and configuration defaults to default settings, refer to question and answer 1 and follow the instructions for returning the BIOS settings to factory defaults.

16 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC, or from 220 to 240 volts AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least 1.0 m (3.3 ft) and no more than 2.0 m (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer. Requirements for all countries 113

Requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Australia	EANSW	1
Austria	OVE	1
Belgium	CEBC	1
Canada	CSA	2
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
Italy	IMQ	1
Japan	METI	3
The Netherlands	KEMA	1
Norway	NEMKO	1
The People's Republic of China	COC	5

Country/region	Accredited agency	Applicable note number
South Korea	EK	4
Sweden	CEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	4
The United Kingdom	BSI	1
The United States	UL	2
<p>1. The flexible cord must be Type H05VV-F, 3-conductor, 1.0-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.</p> <p>2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.</p> <p>3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00-mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.</p> <p>4. The flexible cord must be Type RVV, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.</p> <p>5. The flexible cord must be Type VCTF, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.</p>		

17 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP Web site at <http://www.hp.com/recycle>.

Index

- A**
- AC adapter, spare part numbers 21
 - AC adapter/battery light 10
 - action keys 7
 - antenna, location 6
 - audio jack board
 - removal 48
 - spare part number 48
 - spare part numbers 17
 - audio, product description 2, 3
 - audio-in jack 12
 - audio-out jack 12
- B**
- backups 70, 75
 - battery
 - removal 29
 - spare part number 20, 29
 - BIOS
 - determining version 55, 59
 - downloading an update 56, 60
 - starting the Setup Utility 55
 - updating 55, 59
 - boot order, changing 74, 80
 - bottom cover
 - removal 28
 - spare part numbers 20, 28
 - buttons
 - power 10, 11
 - TouchPad 9
 - volume 12
 - Windows 12
- C**
- cables, service considerations 23
 - caps lock light 8
 - card reader board
 - removal 37
 - spare part numbers 18, 37
 - chipset, product description 1
 - components
 - display 6
 - keys 7
 - left side 10
 - lights 8
- D**
- deleted files, restoring 78
 - display assembly
 - removal 46
 - spare part numbers 46
 - display components 6
 - display panel, product description 2
 - display switch 6
 - DisplayPort 12
- E**
- electrostatic discharge 24
 - equipment guidelines 26
 - esc key 7
 - external media cards, product description 3
- F**
- fan
 - removal 33
 - spare part numbers 20, 33
 - fn key 7
- G**
- graphics, product description 1, 2
 - grounding guidelines 24
 - guidelines
 - equipment 26
 - grounding 24
 - packaging 25
 - transporting 25
 - workstation 25
- H**
- HDMI port 12
- I**
- right side 12
 - speakers 8
 - TouchPad 9
- J**
- jacks
 - audio-in 12
 - audio-out 12
 - headphone 12
 - microphone 12
- K**
- key components 7
 - keyboard
 - removal 43
 - spare part numbers 16, 43
 - keys
 - action 7
 - esc 7
 - fn 7
 - Windows 7
 - Windows applications 7
- L**
- left-side components 10
 - light components 8
 - lights
 - AC adapter/battery 10
 - caps lock 8
 - mute 8

- power 11
webcam 6
- M**
- memory card reader 11
memory, product description 2
microphone
 location 6
 product description 2, 3
microphone jack 12
minimized image recovery 73
minimized image, creating 73
model name 1
mute light 8
- O**
- operating system, product
 description 4, 5
original system recovery 73, 79
- P**
- packaging guidelines 25
plastic parts, service
 considerations 23
ports
 DisplayPort 12
 HDMI 12
 product description 3, 4
 USB 3.0 10, 12
power button 10, 11
power connector 10
power connector cable
 removal 49
 spare part number 17, 49
power cord
 set requirements 87
 spare part numbers 21, 22
power light 11
power requirements, product
 description 4
primary storage, product
 description 2
processor, product description 1
product description
 audio 2, 3
 chipset 1
 display panel 2
 external media cards 3
 graphics 1, 2
 memory 2
 microphone 2, 3
- operating system 4, 5
ports 3, 4
power requirements 4
primary storage 2
processors 1
product name 1
security 4
serviceability 5
solid-state drive 2
video 2, 3
wireless 3
- product name 1
- R**
- recovering from the recovery discs 80
recovering the original system 79
recovery 78
 discs 71, 74
 HP Recovery Manager 73, 79
 media 74
 options 72
 starting 73
 supported discs 71
 system 73
 USB flash drive 74
 using HP Recovery media 71
- recovery discs 75
recovery media 75
 creating 71
 creating using HP Recovery
 Manager 71
recovery partition, removing 74
recovery, system 79
removal/replacement procedures 27
restore points 76
restoring the original system
 creating recovery media 75
right-side components 12
RJ45-to-USB adapter dongle, spare
 part number 21
- S**
- Screw Kit, spare part number 22
security, product description 4
service considerations
 cables 23
 connectors 23
 plastic parts 23
- serviceability, product description 5
sleeve, spare part number 21
solid-state drive
 product description 2
 removal 32
 spare part numbers 20, 32
speaker components 8
speakers
 location 8
 removal 34
 spare part number 18, 34
supported discs 75
supported discs, recovery 71
system board
 removal 38
 spare part numbers 18, 38
system recovery 73, 79
system restore point, creating 70, 72
system restore points 76
system restore points, creating 76
- T**
- tools required 23
top cover, spare part numbers 16
TouchPad
 components 9
 removal 35
 spare part numbers 18, 35
TouchPad button 9
TouchPad zone 9
transporting guidelines 25
- U**
- USB 3.0 port 10, 12
- V**
- vents 10
video, product description 2, 3
volume button 12
- W**
- webcam light 6
webcam, location 6
Windows applications key 7
Windows Backup and Restore,
 restoring files 78
Windows button 12
Windows key 7
Windows system restore point 70, 72

Windows tools 72
wireless antenna, location 6
wireless, product description 3
WLAN antenna, location 6
WLAN module
 removal 30
 spare part numbers 20, 30
workstation guidelines 25