



**f555g**

**Car Camcorder**  
行車記錄器  
行车记录仪

**Quick Start Guide**  
快速啟動指南  
快速启动指南

For the full version of the f555g product user manual go to: [www.hp.com/support](http://www.hp.com/support)  
f555g 完整版產品使用者手冊請至: [www.hp.com/support](http://www.hp.com/support)  
f555g 完整版產品用戶手冊請至: [www.hp.com/support](http://www.hp.com/support)

## Battery warning

- ❖ Always charge using the provided system. Improper handling of the battery may result in explosion.
- ❖ Never dismantle or pierce the battery or allow the battery to short-circuit.
- ❖ Keep the battery out of reach of children.
- ❖ Batteries may explode if exposed to open fire. Never dispose of batteries in a fire.
- ❖ Do not place or expose the battery under extreme heat.
- ❖ Disposed of used batteries observing local regulations.
- ❖ **Never replace the battery on your own; have the dealer do it for you.**

## Notes on Installation

1. This product shall be installed near the rear view mirror, at the center and top of windshield for optimal viewing.
2. Make sure that the lens is within the wiping range of the windscreen wiper to ensure a clear view even when it rains.
3. Do not touch the lens with your fingers. Finger grease may be left on the lens and will result in unclear videos or snapshots. Clean the lens on a regular basis.
4. Do not install the camcorder on a tinted window. Doing so may damage the tint film.
5. Make sure that the installation position is not hindered by the tinted window.
6. To use the products of the attached power charger only, please do not use other brand power charger, in order to avoid equipment burn or cause the battery explosion.

**For more operation details, please refer to CD-ROM.**

# 1 Introduction

## 1.1 Package Contents

The package contains the following items. In case there is any missing or damaged item, contact your dealer immediately.

 
Car Recorder



Quick start guide



CD-ROM




Bracket



Car adapter



## 1.2 Product Overview

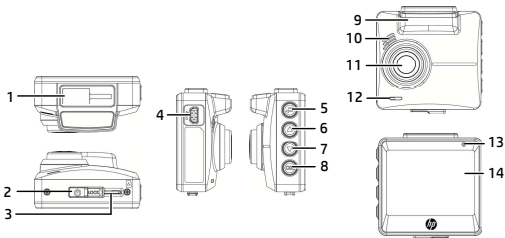 


No.	Item
1	Bracket Socket
2	Power Switch
3	Memory Card Slot
4	USB / Power Connector
5	Back Button (↶)
6	Up Button (▲)
7	Down Button (▼)

No.	Item
8	Enter Button (OK)
9	GPS Antenna
10	Speaker
11	Wide Angle Lens
12	Microphone
13	LED Indicator
14	LCD Panel

## 2 Getting Started
 
### 2.1 Inserting the Memory Card

Insert memory card with the gold section facing upward and the screen of the camcorder facing upward too, as illustrated. Push the memory card in until a click sound is heard, indicating the card is in position.

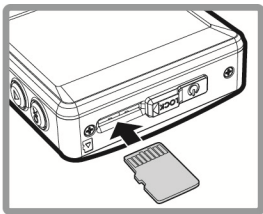

#### To remove the memory card

Push to eject the memory card out of the slot.


**Note:**

1. Do not remove or insert the memory card when the camcorder is turned on. This may damage the memory card.
2. Please use a Class 10 or higher rating Micro SD card, max. up to 32GB.
3. Please format the micro SD cards before the initial use.
4. When removing the memory card, please take note that the memory card will be ejected quickly and may get lost. This is a characteristic of the memory card ejection slot to facilitate easy removal by the user.

## 2.2 Installing in Vehicles


### 2.2.1 Mount to Windshield

 1. Attach the bracket to the camcorder. Slide it into the bracket holder until you hear a click.
2. Before installing the bracket, please use alcohol to clean the windshield and suction cup of the bracket. Wait for dry and press suction-cup on the windshield.
3. Hold the base firmly on the windshield and press down the clamp to mount the car holder to the windshield. Make sure the base is securely locked in place.



### 2.2.2 Adjust the camcorder position

 
1. Loosen the knob to swivel the camcorder vertically or horizontally.
2. Then tighten the knob to make sure the camcorder is securely locked in place.

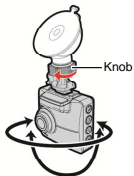

## 2.3 Connecting to Power

Use only the attached power connector for activating the camcorder and charging the built-in battery.

 1. Connect one end of power connector to USB/Power connector port on the camcorder.
2. Plug the other end of the car adapter to the cigarette lighter socket of your vehicle. Once the vehicle engine is started, the camcorder automatically turns on.

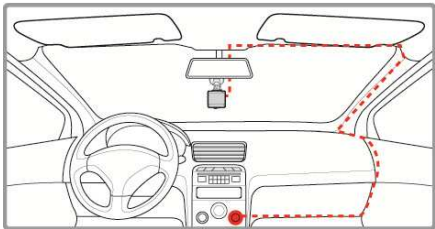

**Note:**

This camcorder shall be installed near the rear view mirror, at the center and top of windshield for optimal viewing.

## 2.4 Powering the Camcorder On / Off

### 2.4.1 Auto Power On/Off

Once the vehicle engine is started, the camcorder automatically turns on. If the **Automatic Record** function is enabled, the recording will automatically start right after the camcorder turns on.

## 2.5 Initial Settings

Before using the camcorder, we recommend you to set up the correct **Date and Time** and **Automatic Record**.

### 2.5.1 Setting the Universal Time Code (UTC)

Depending on your location, you may need to change the current UTC setting of the camcorder so that the correct date and time are updated when a GPS signal is detected.

1. If recording is in progress, press the ▼ button to stop recording.
2. Press the ↶ button to open the OSD menu.
3. Use the ▲ or ▼ buttons to navigate to the **Satellite Synchronization** option and press the **OK** button. Ensure that the **On** setting is selected and press the **OK** button again to view the UTC setting.
4. Refer to the UTC Map below and use the ▲ or ▼ button to select the desired setting and press the **OK** button to confirm the setting.
5. Press the ↶ button to exit the menu.



City	UTC	City	UTC	City	UTC	City	UTC	City	UTC
Accra	0	Budapest *	+1	Houston *	-6	Melbourne	+10	Santiago	-4
Addis Ababa	+3	Buenos Aires	-3	Indianapolis *	-5	Mexico City *	-6	Santo Domingo	-4
Adelaide **	+9	Cairo	+2	Islamabad	+5	Miami *	-5	São Paulo	-3
Algiers	+1	Calgary *	-7	Istanbul *	+2	Minneapolis *	-6	Seattle *	-8
Almaty	+6	Canberra	+10	Jakarta	+7	Minsk	+3	Seoul	+9
Amman *	+2	Cape Town	+2	Jerusalem *	+2	Montevideo	-3	Shanghai	+8
Amsterdam *	+1	Caracas **	-4	Johannesburg	+2	Montreal *	-5	Singapore	+8
Anadyr	+12	Casablanca *	0	Kabul **	+4	Moscow	+4	Sofia *	+2
Anchorage *	-9	Chicago *	-6	Karachi	+5	Mumbai **	+5	St. John's **	-3
Ankara *	+2	Columbus *	-5	Kathmandu **	+5	Nairobi	+3	Stockholm *	+1
Antananarivo	+3	Copenhagen *	+1	Rhartoum	+3	Nassau *	-5	Suva	+12
Asuncion	-4	Dallas *	-6	Kingston	-5	New Delhi **	+5	Sydney	+10
Athens *	+2	Dar es Salaam	+3	Kinshasa	+1	New Orleans *	-6	Taipei	+8
Atlanta *	-5	Darwin **	+9	Kiritimati	+14	New York *	-5	Tallinn *	+2
Auckland	+12	Denver *	-7	Kolkata **	+5	Oslo *	+1	Tashkent	+5
Baghdad	+3	Detroit *	-5	Kuala Lumpur	+8	Ottawa *	-5	Tegucigalpa	-6
Bangalore	+5	Dhaka	+6	Kuwait City	+3	Paris *	+1	Tehran **	+3
Bangkok	+7	Doha	+3	Kyiv *	+2	Perth	+8	Tokyo	+9
Barcelona *	+1	Dubai	+4	La Paz	-4	Philadelphia *	-5	Toronto *	-5
Beijing	+8	Dublin *	0	Lagos	+1	Phoenix	-7	Vancouver *	-8
Beirut *	+2	Edmonton *	-7	Lahore	+5	Prague *	+1	Vienna *	+1
Belgrade *	+1	Frankfurt *	+1	Las Vegas *	-8	Reykjavik	0	Warsaw *	+1
Berlin *	+1	Guatemala	-6	Lima	-5	Rio de Janeiro	-3	Washington DC *	-5
Bogota	-5	Halifax *	-4	Lisbon *	0	Riyadh	+3	Winnipeg *	-6
Boston *	-5	Hanoi	+7	London *	0	Rome *	+1	Yangon **	+6
Brasilia	-3	Harare	+2	Los Angeles *	-8	Salt Lake City *	-7	Zagreb *	+1
Brisbane	+10	Havana *	-5	Madrid *	+1	San Francisco *	-8	Zürich *	+1
Brussels *	+1	Hong Kong	+8	Managua	-6	San Juan	-4		
Bucharest *	+2	Honolulu	-10	Manila	+8	San Salvador	-6		

\* Be sure to adjust for daylight saving time (DST) by adding +1 hour to the UTC offset.

\*\* These areas may observe half hour increments and daylight saving time (DST).

# 3 Using the Car Camcorder

## 3.1 Recording Videos

### 3.1.1 Record videos while driving

When the vehicle engine starts up and the **Automatic Record** function is enabled, the camcorder automatically turns on and starts recording. Recording stops and shut down after the engine is switched off.

**Note:**

On some cars, the recording will continue when the engine is switched off. If this happens, please manually turn off the cigarette lighter or remove the car adapter from the cigarette lighter.

### 3.1.2 Emergency Recording

To start Emergency Recording, do the following:

1. During the recording period, press the **OK** button to enter emergency recording mode. The wordings, **“Emergency”**, will be displayed on the top right-hand corner of the display screen. Files that are saved during the emergency recording mode will be protected.
2. Press the ▼ to stop recording immediately.



### 3.1.3 Driving Safety

 
Menu Item	Description
LDWS	Once your car's location is determined by GPS and the LDWS function is enabled, this product produces voice and screen message alerts when you drive off of or change lanes at speeds over 50 km/h (31 mile/h).
FCWS	Once your car's location is determined by GPS and the FCWS function is enabled, this product produces voice and screen message alerts when you drive at speeds over 60 km/h (37 mile/h) and are less than 20m away from the car in front of you.
FCMD	Once your car's location is determined by GPS and the FCMD function is enabled, this product starts to detect the motion of cars in front of you after your car remains motionless for 20 seconds. It produces voice and screen message alerts when the movement of the car in front of you changes its images in the camera.
Collision Detection	Activate/suspend use of the collision detection function. Emergency recording will be activated automatically when any collision is detected.
Parking Mode	To monitor the vehicle when it is parked.
Speed Cam Alert	This product begins emergency recording once it detects any vibrations caused by a collision. <b>Note: The speed cam alert function must have the speed cam datum from the country you use. The function will be void if the product are used</b>

Menu Item	Description
	<p><b>in any others countries. Please consult with the shop you purchased if the function is void. The product never guarantee the speed cam datum will be included for the worldwide countries.</b></p>

## 3.2 Playback Videos and Photos

If recording is in progress, press the ▼ button to stop recording.

1. Press the ↶ button to enter the OSD menu.
2. Press the ▲/▼ button, select the File Playback and then press the OK button.
3. Press the ▲/▼ button, select the file type that you wish to view, and then press the OK button.
4. Press the ▲/▼ button to view the previous/next file and then press the OK button to view the file on full screen.

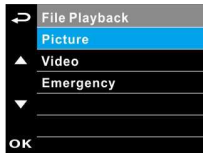


### Note:

You can press the ▲ button from the standby screen and directly enter the playback mode. The final recording will be shown on the screen.

## 3.2.1 Deleting Files

If recording is in progress, press the ▼ button to stop recording.

 1. Press the ↶ button to enter the OSD menu.
2. Press the ▲/▼ button, select “File Deletion”, and press the OK button.
3. Press the ▲/▼ button, select file type and press the OK button.
4. Press the ▲/▼ button, select the file that you wish to delete and then press the OK button to enter the deletion menu.
5. Press the ▲/▼ button to select an item.

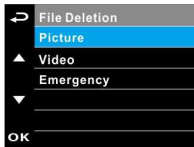

Item	Description
Delete One	Delete the current file.
Delete All	Delete all files.

6. Press the OK button, please confirm deletion.

**Note:**

Deleted files cannot be restored. Please ensure that files have been backed up before deleting.

## 電池注意事項

- ❖ 僅可使用本系統充電，未正確處理電池可能會引發爆炸。
- ❖ 請勿自行拆裝、穿刺電池，或使電池短路。
- ❖ 請將電池放在孩童拿不到的地方。
- ❖ 電池接觸明火可能會引起爆炸，請勿將電池丟棄到火中。
- ❖ 請勿將電池放置於高溫下。
- ❖ 請根據當地法規妥善處理使用過的電池。
- ❖ **嚴禁自行更換電池，欲更換電池請洽經銷商。**

## 安裝須知

1. 本產品應安裝在靠近後視鏡之處，並盡量趨近於前擋風玻璃中央位置，以獲得最佳的視野。
2. 確定鏡頭是在擋風玻璃雨刷的範圍內，確保視野良好，即使雨天亦然。
3. 不要用手指碰觸鏡頭。手指上的油垢可能會留在鏡頭上，導致錄像或攝影不清楚。定期清潔鏡頭。
4. 不要將產品安裝在有色車窗上。因為這樣會損壞淺色薄膜。
5. 確定安裝位置不會受有色車窗的阻礙。
6. 本產品僅適用產品所附之電源連接器，請勿使用其他廠牌以免設備燒毀或導致電池爆炸。

**欲瞭解更多的操作訊息，請參閱 CD-ROM。**

# 1 導論

## 1.1 包裝內容

以下為包裝內容物。若有任何遺漏或損壞項目，請立即聯絡您的經銷商，外觀請依內容物實際狀況為主。

行車記錄器



快速使用手冊



光碟



 
托架



電源連接器



## 1.2 產品概要

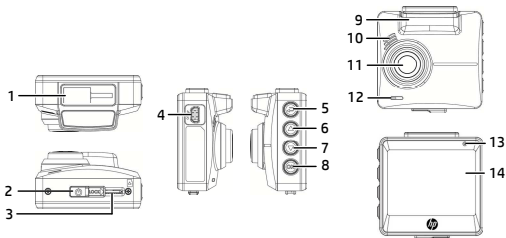

編號	項目
1	托架插孔
2	電源開關
3	記憶卡插槽
4	USB / 電源連接孔
5	返回按鈕 (↶)
6	向上按鈕 (▲)
7	向下按鈕 (▼)


編號	項目
8	輸入按鈕 (OK)
9	衛星定位天線
10	揚聲器
11	廣角鏡頭
12	麥克風
13	LED 指示燈
14	螢幕



## 2 開始
 
### 2.1 插入記憶卡

將記憶卡之黃金接觸點面朝上，以及設備螢幕面朝上，如圖示插入記憶卡。推入記憶卡直到咔嗒一聲，插入定位為止。

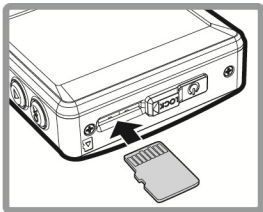

#### 取出記憶卡

推記憶卡，彈出插槽。

 
#### 註：

1. 設備在開機狀態時，不要取出或插入記憶卡，以免損壞記憶卡。
2. 請使用 **Micro SD** 卡等級 **10** 以上，最高支援 **32GB**。
3. 使用前請先格式化 **Micro SD** 卡。
4. 取出記憶卡時，小心記憶卡快速彈出導致遺失記憶卡，此為記憶卡插槽彈片特性，便於使用者易於取出。

## 2.2 安裝於車內

### 2.2.1 固定在擋風玻璃上

1. 將托架卡榫推入設備上方的托架插孔中，直到聽到咔嗒聲固定。
2. 用酒精擦拭托架的吸盤及擋風玻璃至乾淨，並等待酒精干透，將托架的吸盤輕壓於擋風玻璃上，再按下托架的夾子固定托架。
3. 確認托架已牢牢固定。



### 2.2.2 調整設備位置

 
1. 鬆開旋鈕，將設備垂直或水平方向調整。
2. 鎖緊旋鈕，並確認設備已牢牢固定。



## 2.3 連接電源

限使用本設備所附之電源連接器，啟動設備以及充電。

1. 將電源連接器的一端連接到設備的 **USB / 電源** 連接孔。
2. 將電源連接器的另一端插接汽車內的點煙器的插孔。汽車引擎一旦發動，設備即自動開機。

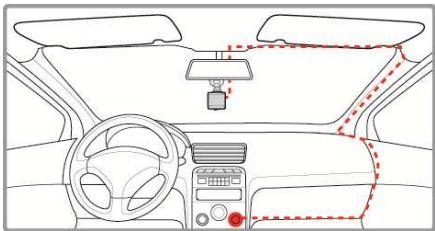

**註：**

本設備應安裝在靠近後視鏡之處，並盡量趨近於前擋風玻璃正中央上方位置，以獲得最佳的視野。

## 2.4 設備開/關

### 2.4.1 自動開/關

汽車引擎一旦發動，則設備即自動開機。若啟動**自動錄影**功能，則在設備開機後，即開始自動錄影。

## 2.5 首次設定

在使用設備之前，我們建議先設定正確的**日期與時間**，並啟動**自動錄影**功能。

### 2.5.1 設定通用時間碼 (UTC)

您可能要依據目前的所在位置，變更行車記錄器的 **UTC** 設定，以便在偵測到 **GPS** 訊號時更新正確的日期和時間。

1. 若正在錄影，按下 ▼ 按鈕停止錄影。
2. 按 ↶ 按鈕開啟 **OSD** 功能表。
3. 使用 ▲ 或 ▼ 按鈕前往「衛星同步」選項，然後按「確定」按鈕。確保選擇「開啟」設定值，然後再按一次「確定」按鈕，查看 **UTC** 設定。
4. 請參閱下列 **UTC** 地圖，然後使用 ▲ 或 ▼ 按鈕選擇所需的設定值，然後按「確定」按鈕確認設定。
5. 按 ↶ 按鈕離開功能表。

City	UTC	City	UTC	City	UTC	City	UTC	City	UTC
Accra	0	Budapest *	+1	Houston *	-6	Melbourne	+10	Santiago	-4
Addis Ababa	+3	Buenos Aires	-3	Indianapolis *	-5	Mexico City *	-6	Santo Domingo	-4
Adelaide **	+9	Cairo	+2	Islamabad	+5	Miami *	-5	São Paulo	-3
Algiers	+1	Calgary *	-7	Istanbul *	+2	Minneapolis *	-6	Seattle *	-8
Almaty	+6	Canberra	+10	Jakarta	+7	Minsk	+3	Seoul	+9
Amman *	+2	Cape Town	+2	Jerusalem *	+2	Montevideo	-3	Shanghai	+8
Amsterdam *	+1	Caracas **	-4	Johannesburg	+2	Montreal *	-5	Singapore	+8
Anadyr	+12	Casablanca *	0	Kabul **	+4	Moscow	+4	Sofia *	+2
Anchorage *	-9	Chicago *	-6	Karachi	+5	Mumbai **	+5	St. John's **	-3
Ankara *	+2	Columbus *	-5	Kathmandu **	+5	Nairobi	+3	Stockholm *	+1
Antananarivo	+3	Copenhagen *	+1	Khartoum	+3	Nassau *	-5	Suva	+12
Asuncion	-4	Dallas *	-6	Kingston	-5	New Dehi **	+5	Sydney	+10
Athens *	+2	Dar es Salaam	+3	Kinshasa	+1	New Orleans *	-6	Taipei	+8
Atlanta *	-5	Darwin **	+9	Kiritimati	+14	New York *	-5	Tallinn *	+2
Auckland	+12	Denver *	-7	Kolkata **	+5	Oslo *	+1	Tashkent	+5
Baghdad	+3	Detroit *	-5	Kuala Lumpur	+8	Ottawa *	-5	Tegucigalpa	-6
Bangalore	+5	Dhaka	+6	Kuwait City	+3	Paris *	+1	Tehran **	+3
Bangkok	+7	Doha	+3	Kyiv *	+2	Perth	+8	Tokyo	+9
Barcelona *	+1	Dubai	+4	La Paz	-4	Philadelphia *	-5	Toronto *	-5
Beijing	+8	Dublin *	0	Lagos	+1	Phoenix	+7	Vancouver *	-8
Beirut *	+2	Edmonton *	-7	Lahore	+5	Prague *	+1	Vienna *	+1
Belgrade *	+1	Frankfurt *	+1	Las Vegas *	-8	Reykjavik	0	Warsaw *	+1
Berlin *	+1	Guatemala	-6	Lima	-5	Rio de Janeiro	-3	Washington DC *	-5
Bogota	-5	Hallifax *	-4	Lisbon *	0	Riyadh	+3	Winnipeg *	-6
Boston *	-5	Hanoi	+7	London *	0	Rome *	+1	Yangon **	+6
Brasilia	-3	Harare	+2	Los Angeles *	-8	Salt Lake City *	-7	Zagreb *	+1
Brisbane	+10	Havana *	-5	Madrid *	+1	San Francisco *	-8	Zürich *	+1
Brussels *	+1	Hong Kong	+8	Managua	-6	San Juan	-4		
Bucharest *	+2	Honolulu	-10	Manila	+8	San Salvador	-6		

\* 確保針對日光節約時間 (DST) 進行調整 (在 UTC 時差上增加 1 小時)

\*\* 這些區域可能有實施半小時增加單位以及日光節約時間 (DST)

## 3 使用行車記錄器

### 3.1 錄影

#### 3.1.1 行駛中錄影

當汽車引擎發動以及**自動錄影**功能啟動時，設備會自動開機並開始錄影。當引擎熄火時設備自動停止錄影並進行關機。

**註：**

有些汽車當引擎熄火後仍會繼續錄影，若有這種情形請以手動方式關掉點煙器或將電源連接器從點煙器拆下。

#### 3.1.2 緊急錄影

啟動緊急錄影，其方式如下：

1. 在錄影中按壓 **OK** 按鈕將會進入緊急錄影模式，並於螢幕右角會顯示 "緊急錄影" 字樣，在緊急錄影模式中錄下的檔案會被保護起來。
2. 按下 **▼** 即會停止錄影。



### 3.1.3 行車安全

目錄選項	說明
車道偏移警示	當衛星定位完成後，行車時速達 50 km/h (31 mile/h) 以上且偏離行駛車道或變換車道時，設備會發出語音與警示畫面提醒。
前車車距警示	當衛星定位完成後，行車時速達 60 km/h (38 mile/h) 以上且與前方車距低於20公尺時，設備會發出語音與警示畫面提醒。
前車起步警示	設備將在衛星定位完成且車輛處於靜止狀態達 20 秒時啟動判定。當前方車輛移動使設備偵測到鏡頭前的影像有所變化時，設備會發出語音與警示畫面提醒。
碰撞偵測	當車輛發生碰撞並使設備感測到震動時，設備會自動啟動緊急錄影。
停車模式	監控車輛停置時的狀況。
測速照相提示	當衛星定位完成且車輛接近測速照相機時，設備會發出語音與警示畫面提醒。 <b>註：測速照相提示的功能必須具有該國或該地區的測速照相圖資，若至其他國家或地區使用，可能會造成此功能無法作用。本產品不保證測速照相的圖資包含您所在的國家，若功能無法使用請與當地經銷商確認。</b>

## 3.2 播放影片與照片

若正在錄影，須先按 ▼ 按鈕，停止錄影。

1. 按 ↶ 按鈕，進入 OSD 目錄。
2. 按 ▲/▼ 按鈕，選取檔案播放，再按 OK 按鈕。
3. 按 ▲/▼ 按鈕，選取您要瀏覽的檔案類別，再按 OK 按鈕。
4. 按 ▲/▼ 按鈕，檢視上一個/下一個檔案，再按 OK 按鈕，檢視全螢幕中檔案。



### 註:

您可以從待機螢幕，按 ▲ 按鈕直接進入播放模式，最後的錄影會顯示在螢幕上。



### 3.2.1 檔案刪除

若正在錄影，須先按 **▼** 按鈕，停止錄影。

1. 按 **↶** 按鈕，進入 OSD 目錄。
2. 按 **▲/▼** 按鈕，選取**檔案刪除**，再按 **OK** 按鈕。
3. 按 **▲/▼** 按鈕，選取檔案類別，再按 **OK** 按鈕。
4. 按 **▲/▼** 按鈕，選取您想要刪除的檔案，再按 **OK** 按鈕，進入刪除目錄。
5. 按 **▲/▼** 按鈕，選取一個選項。



項目	說明
刪除單檔	刪除目前的檔案。
刪除全部	刪除全部檔案。

6. 按 **OK** 按鈕，確認刪除。

#### 註:

刪除之檔案不能回復。刪除前請確認檔案留有備份。

## 电池警告

- ❖ 请务必使用随附的系统进行充电。电池处置不当可能导致爆炸。
- ❖ 禁止拆解、撞击、挤压或投入火中，切勿使电池短路。请勿置于高温环境中。若出现严重鼓胀，请勿继续使用。
- ❖ 将电池置于儿童无法触及之处。
- ❖ 电池暴露在明火下可能爆炸。处理电池时切勿放入火中。
- ❖ 切勿将电池放置于高温下。
- ❖ 请按照当地法规处理废电池。
- ❖ **切勿自行更换电池,更换不当会有爆炸危险,请交由经销商进行更换。**

## 安装需知

- ❖ 本产品应安装在靠近后视镜之处，并尽量接近前挡风玻璃正中央上方位置，以获得最好的视野。
- ❖ 确定镜头是在挡风玻璃雨刷的范围内，确保视野良好，即使雨天也同样好。
- ❖ 不要用手指触摸镜头。手指上的油脂可能会留在镜头上，导致摄像或摄影不清楚。定期清洁镜头。
- ❖ 不要将产品安装在有色车窗上。因为这样会损坏浅色薄膜。
- ❖ 确定安装位置不会受有色车窗的阻碍。
- ❖ 本设备仅适用产品所附之电源适配器，请勿使用其他厂牌以免设备烧毁或导致电池爆炸。

**欲了解更多操作信息，请参阅 CD-ROM。**

# 1 介绍

## 1.1 包装清单

以下为包装清单。如果有任何遗漏或损坏项目，请立即联系您的经销商，外观请依内容物实际状况为主。

 
行车记录仪



快速入门手册



光盘




托架



电源适配器



## 1.2 产品概要

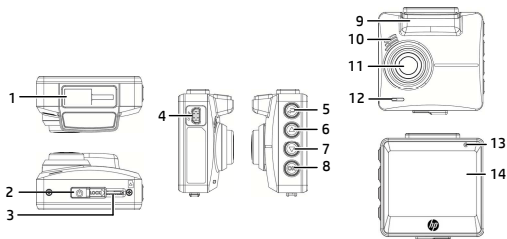 


编号	项目
1	托架插孔
2	电源开关
3	存储卡插槽
4	USB /电源接孔
5	返回按钮 (←)
6	向上按钮 (▲)
7	向下按钮 (▼)

编号	项目
8	输入按钮 (OK)
9	卫星定位天线
10	扬声器
11	广角镜头
12	麦克风
13	LED 指示灯
14	屏幕

## 2 入门
 
### 2.1 插入存储卡

将存储卡之黄金接触点面朝上，以及设备屏幕面朝上，如图示插入存储卡。推入存储卡直到咔嗒一声，插入定位为止。

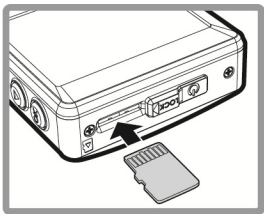

#### 取出存储卡

推存储卡，弹出插槽。

 
#### 注：

1. 设备在开机状态时，不要取出或插入存储卡，以免损坏存储卡。
2. 请使用 **Micro SD** 卡等级 **10** 以上，最高支持 **32GB**。
3. 使用前请先格式化 **Micro SD** 存储卡。
4. 取出存储卡时，小心存储卡快速弹出导致遗失存储卡，此为存储卡插槽具弹片特性，便于使用者易于取出。

## 2.2 安装在车内

### 2.2.1 调整设备位置

1. 将托架卡榫推入设备上方的托架插孔中，直到听到咔嗒声固定。
2. 用酒精擦拭托架的吸盘及挡风玻璃，并等待酒精干透。将托架的吸盘轻压于挡风玻璃上，再按下托架的夹子固定托架。
3. 确认托架已牢牢固定。



### 2.2.2 调整设备位置

 
1. 松开旋钮，将设备垂直或水平方向调整。
2. 锁紧旋钮，并确认设备已牢牢固定。



## 2.3 连接电源

限使用产品所附之电源适配器，启动设备以及充电。

1. 将电源适配器的一端连接到设备的 USB / 电源接口。
2. 将电源适配器的另一端插接汽车内的香烟点火器的插孔。汽车引擎一旦发动，设备即自动开机。

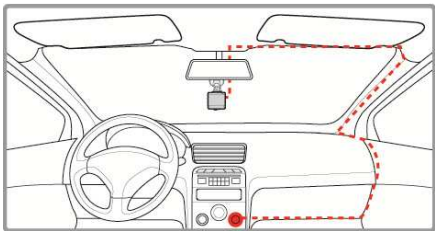

**注：**

本设备应安装在靠近后视镜之处，并尽量接近前挡风玻璃正中央上方位置，以获得最好的视野。

## 2.4 设备开/关

### 2.4.1 自动开/关

汽车引擎一旦发动，设备就自动开机。如果启动*自动摄像*功能，则在设备开机后，即开始自动摄像。

## 2.5 初始设置

在使用设备之前，在使用设备之前，我们建议先设置正确的**日期与时间**，并启动*自动摄像*功能。

### 2.5.1 设置世界时间代码 (UTC)

根据您的位置，您可能需要更改行车记录仪的当前UTC设置，以便在检测到GPS信号时更新正确的日期和时间。

1. 如果正在进行录制，请按 **▼** 按钮停止录制。
2. 按 **↶** 按钮打开OSD菜单。
3. 使用 **▲** 或 **▼** 按钮导航至 "卫星同步" 选项，并按 "确定" (**OK**) 按钮。确保选择 "开" 设置，并再次按 "确定" (**OK**) 按钮查看UTC设置。
4. 请参阅下面的UTC地图，使用 **▲** 或 **▼** 按钮选择所需设置，并按 "确定" (**OK**) 按钮确认设置。
5. 按 **↶** 按钮退出菜单。



City	UTC	City	UTC	City	UTC	City	UTC	City	UTC
Accra	0	Budapest *	+1	Houston *	-6	Melbourne	+10	Santiago	-4
Addis Ababa	+3	Buenos Aires	-3	Indianapolis *	-5	Mexico City *	-6	Santo Domingo	-4
Adelaide **	+9	Cairo	+2	Islamabad	+5	Miami *	-5	São Paulo	-3
Algiers	+1	Calgary *	-7	Istanbul *	+2	Minneapolis *	-6	Seattle *	-8
Almaty	+6	Canberra	+10	Jakarta	+7	Minsk	+3	Seoul	+9
Amman *	+2	Cape Town	+2	Jerusalem *	+2	Montevideo	-3	Shanghai	+8
Amsterdam *	+1	Caracas **	-4	Johannesburg	+2	Montreal *	-5	Singapore	+8
Anadyr	+12	Casablanca *	0	Kabul **	+4	Moscow	+4	Sofia *	+2
Anchorage *	-9	Chicago *	-6	Karachi	+5	Mumbai **	+5	St. John's **	-3
Ankara *	+2	Columbus *	-5	Kathmandu **	+5	Nairobi	+3	Stockholm *	+1
Antananarivo	+3	Copenhagen *	+1	Rhartoum	+3	Nassau *	-5	Suva	+12
Asuncion	-4	Dallas *	-6	Kingston	-5	New Delhi **	+5	Sydney	+10
Athens *	+2	Dar es Salaam	+3	Kinshasa	+1	New Orleans *	-6	Taipei	+8
Atlanta *	-5	Darwin **	+9	Kiritimati	+14	New York *	-5	Tallinn *	+2
Auckland	+12	Denver *	-7	Kolkata **	+5	Oslo *	+1	Tashkent	+5
Baghdad	+3	Detroit *	-5	Kuala Lumpur	+8	Ottawa *	-5	Tegucigalpa	-6
Bangalore	+5	Dhaka	+6	Kuwait City	+3	Paris *	+1	Tehran **	+3
Bangkok	+7	Doha	+3	Kyiv *	+2	Perth	+8	Tokyo	+9
Barcelona *	+1	Dubai	+4	La Paz	-4	Philadelphia *	-5	Toronto *	-5
Beijing	+8	Dublin *	0	Lagos	+1	Phoenix	-7	Vancouver *	-8
Beirut *	+2	Edmonton *	-7	Lahore	+5	Prague *	+1	Vienna *	+1
Belgrade *	+1	Frankfurt *	+1	Las Vegas *	-8	Reykjavik	0	Warsaw *	+1
Berlin *	+1	Guatemala	-6	Lima	-5	Rio de Janeiro	-3	Washington DC *	-5
Bogota	-5	Halifax *	-4	Lisbon *	0	Riyadh	+3	Winnipeg *	-6
Boston *	-5	Hanoi	+7	London *	0	Rome *	+1	Yangon **	+6
Brasilia	-3	Harare	+2	Los Angeles *	-8	Salt Lake City *	-7	Zagreb *	+1
Brisbane	+10	Havana *	-5	Madrid *	+1	San Francisco *	-8	Zürich *	+1
Brussels *	+1	Hong Kong	+8	Managua	-6	San Juan	-4		
Bucharest *	+2	Honolulu	-10	Manila	+8	San Salvador	-6		

\* 调整夏令时 (DST) 时, 请确保向UTC偏差加1小时

\*\* 以下地区可能需要向夏令时 (DST) 加半小时

## 3 使用行车记录仪

### 3.1 摄像

#### 3.1.1 行驶中摄像

当汽车引擎发动以及**自动摄像**功能打开时,设备即自动开机并开始摄像。当引擎熄火时设备自动停止摄像并进行关机。

**注:**

有些汽车当引擎熄火时还会继续摄像,若有此情况请以手动方式关掉香烟点火器,或将电源适配器从香烟点火器拆下。

#### 3.1.2 紧急摄像

开启紧急摄像,其方式如下:

1. 在摄像中按压 **OK**按钮将会进入紧急摄像模式,并于屏幕左上角会显示"**紧急摄像**"字样,在紧急摄像模式中录下的文件会被保护起来。
2. 按下 **▼** 即会停止摄像。



### 3.1.3 行车安全

菜单选项	说明
车道偏移侦测	当卫星定位完成后，行车时速达 <b>50 km/h (31 mile/h)</b> 以上且偏离行驶车道或变换车道时，设备会发出提示音与警示画面提醒。
前车车距侦测	当卫星定位完成后，行车时速达 <b>60 km/h (37 mile/h)</b> 以上且与前方车距低于 <b>20 米</b> 时，设备会发出语音与警示画面提醒。
前车发动警示音	设备将在卫星定位完成且车辆处于静止状态达 <b>20 秒</b> 时启动判定。当前方车辆移动使设备侦测到镜头前的影像有所变化时，设备会发出语音与警示画面提醒。
碰撞侦测	当车辆发生碰撞并使设备感测到震动时，设备会自动启动紧急摄像。
停车模式	备监控车辆停置时的状况。
测速照相提示	当车辆接近测速照相机时，系统发出警示音。 <b>注：测速照相提示的功能必须具有该国或该地区的测速照相图资，若至其他国</b>

菜单选项	说明
	家或地区使用, 可能造成此功能无法作用。本产品不保证测速照相的图资包含您所在的国家, 若功能无法使用请与当地经销商确认。

## 3.2 播放视频与照片

如果正在摄像, 需先按 ▼ 按钮, 停止摄像。

1. 按 ↶ 按钮, 进入 OSD 菜单。
2. 按 ▲/▼ 按钮, 选取档案播放, 再按 OK 按钮。
3. 按 ▲/▼ 按钮, 选取您要浏览的档案类别, 再按 OK 按钮。
4. 按 ▲/▼ 按钮, 检视上一个/下一个档案, 再按 OK 按钮, 检视全屏幕中档案。



### 注:

您可以从待机屏幕, 按 ▲ 按钮直接进入播放模式, 最后的录影会显示在屏幕上。

## 3.2.1 文件删除

如果正在摄像，需先按 **▼** 按钮，停止摄像。

1. 按 **↶** 按钮，进入 OSD 菜单。
2. 按 **▲/▼** 按钮，选取文件删除，再按 **OK** 按钮。
3. 按 **▲/▼** 按钮，选取文件类型，再按 **OK** 按钮。
4. 按 **▲/▼** 按钮，选取您想要删除的文件，再按 **OK** 按钮，进入删除菜单。
5. 按 **▲/▼** 按钮，选取一个选项。



项目	说明
删除单档	删除目前的文件。
删除全部	删除全部文件。

6. 按 **OK** 按钮，确认删除。

### 注:

删除的文件不能恢复。删除前确保文件留有备份。

