Hewlett-Packard Certificate of Volatility							
Model:		rt Number:		Address:			
		CF388A=M452nw		Hewlett Packard Company			
		394A=M452dw	,	11311 Chinden Blvd			
				Boise, ID 83714			
Volatile Memory							
Does the device contain volatile memory (Memory whose contents are lost when power is removed)?							
Yes No If Yes please describe the type, size, function, and steps to clear the memory below Type (SRAM, DRAM, etc): Size: User Modifiable: Function: Used for temporary Steps to clear memory:							
Type (SRAM, DRAM, etc): Size: 128M		Oser Modifiable.	storage during the processir				
.23			of jobs and for applications	OFF , the memory is erased.			
			running on the OS.				
T (ODANA DDANA ()	0:	☐ Yes ⊠ No					
Type (SRAM, DRAM, etc):	Size:	User Modifiable:	Function: Used for temporary storage	Steps to clear memory: When the printer is powered			
			during the processing of job				
			and for applications running				
	050145		on the OS.				
Type (SRAM, DRAM, etc):	256MB Size:	☐ Yes ☒ No User Modifiable:	Function:	Steps to clear memory:			
Type (SICAINI, DICAINI, etc).	SIZE.	Yes No	i unction.	Steps to clear memory.			
Non-Volatile Memory							
			whose contents are retained whose contents are retained whose				
Type (Flash, EEPROM, etc):	se descrit Size:	De the type, size, to User Modifiable:	unction, and steps to clear the Function:	Steps to clear memory:			
Type (Flash, EEF Row, etc).	256MB	☐ Yes ☒ No	Device Firmware	NA			
Type (Flash, EEPROM, etc):	Size:	User Modifiable: Yes No	Function:	Steps to clear memory:			
Type (Flash, EEPROM, etc):	Size:	User Modifiable:	Function:	Steps to clear memory:			
	l						
			ass Storage				
Does the device contain m				mamary holow			
Yes No If Yes please describe the type, size, function, and steps to clear the memory below Type (HDD, Tape, etc): Size: User Modifiable: Function: Steps to clear memory:							
71 (☐ Yes ☐ No		,			
Type (HDD, Tape, etc):	Size:	User Modifiable: Yes No	Function:	Steps to clear memory:			
USB Does the item accept USB input and if so, for what purpose (i.e Print Jobs, device firmware updates, scan upload)?							
Does the item accept USB ⊠ Yes □ No If Yes plea			oose (i.e Print Jobs, device firm	nware updates, scan upload)?			
			, photos and can be used to u	pload printer firmware.			
The front USB host can accept print jobs, scan uploads, photos and can be used to upload printer firmware. Can any data other than scan upload be sent to the USB device)?							
Rear USB host when configured will accept stored jobs, encrypted files stored and deleted by user.							
RF/RFID							
Does the item use RF or RFID for receive or transmit of any data including remote diagnostics. (e.g. Cellular phone,							
Bluetooth) Yes No If Yes please describe below Purpose: Wireless Information string							
Frequency: 13.56MHz Bandwidth: 106-424kbps							
Modulation: Manchester, 10% ASK			Effective Radiate Power (ERP): Not an internal radiator.				
Load modulation as passive tag emulation.							
Specifications:							

Other Transmission Capabilities					
Does the device employ any other methods of non-wired access to transmit or receive any data whatsoever (e.g. anything					
other than standard hard wired TCP/IP, direct USB, or parallel connections)? 🛛 Yes 🗌 No If Yes please describe below:					
Purpose: Wireless Network Connectivity					
Frequency: 2.4 GHz Band	Bandwidth: 802.11n 20Mhz				
Modulation: Multiple	Effective Radiate Power (ERP): 802.11n 15+-1.5dBm				
Specifications: 802.11 n/a/b/g					

Other Capabilities				
Does the device employ any other method of communications such as a Modem to transmit or receive any data				
whatsoever? Yes No If Yes please describe below:				
Purpose:				
Specifications				

Author Information							
Name	Title	Email	Business Unit				
Leo Liu	Technical Marketing Engineer	technical.marketing@hp.com	LES CA				
Ricardo Osuna	R&D Engineer	technical.marketing@hp.com	LES R&D				