# **HP PageWide C500 Press**

## **Customer Self-Repair Document (CSR)**

**English Edition** 



## Replacing a Spider Board

CSR Level:	CSR B
Part Number:	CX257-00320
Part Name:	PROGRAMMED SPIDER TSABAR IFEC
Frequency:	as needed
Document ID:	c05942227
Revision:	Draft 1
Date:	11-March-2018



Required personnel:	1
Required time:	10 minutes
Required tools:	Phillips screwdriver

### Caution:

It is strongly recommended to wear an antistatic wrist strap to prevent electrostatic damage to sensitive electronic components.

#### Important:

Make sure to comply with all relevant federal, state, and local regulations when disposing of replaced parts.



### **Procedure**

- 1. Turn off power to the IFEC.
- 2. Open the IFEC door. The Spider boards on mounted on the left wall of the cabinet.



1 Spider boards

**3.** Disconnect the cables from the Spider board to be replaced.











**4.** Use a Phillips screwdriver to remove the four screws that secure the Spider board to its base.

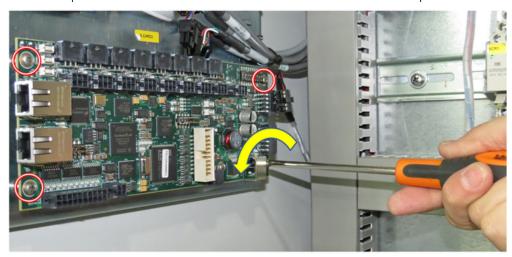


**5.** Remove the Spider board from the IFEC.

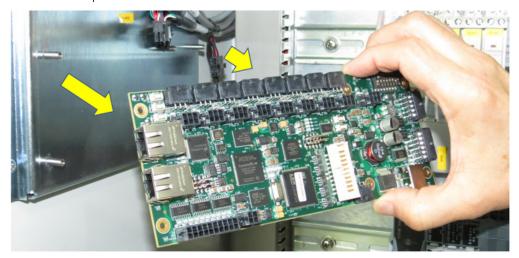


Rev. Preliminary 3/4



**6.** Install the new Spider board and secure it with the four screws removed the old board.

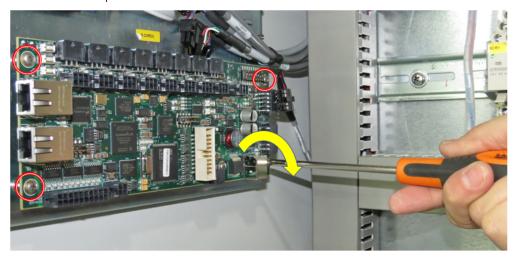

**7.** Reconnect the cables to the connectors on the board. Make sure to connect each cable to the correct connector.

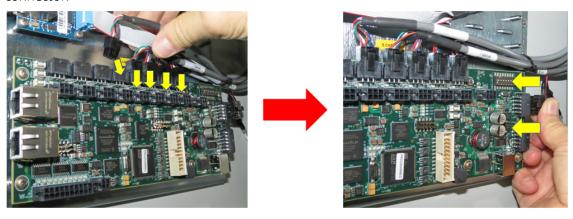

- 8. Close the IFEC door.
- **9.** Restore power to the IFEC.

4/4 Rev. Preliminary