




Start here

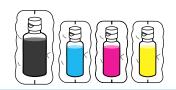


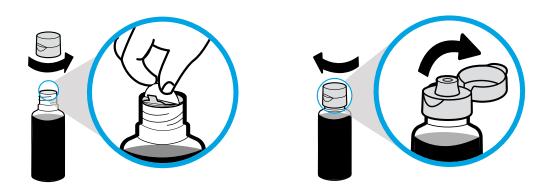


Remove black bottle cap, remove seal. Replace cap, flip lid open.

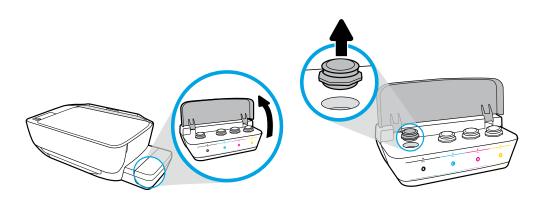

Open ink tank lid. Remove plug from black tank.

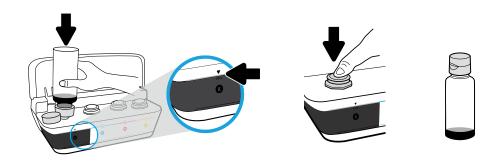

Hold bottle on tank nozzle. Fill ink to line. Replace plug and press firmly to close.

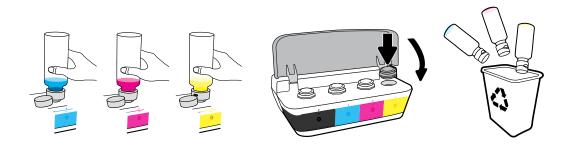



Repeat steps for each color. Close lid. Save remaining black ink for refilling.

Unpack and power on






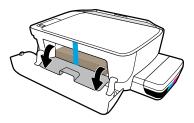

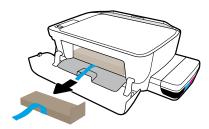

Remove packing material, tape, and two cardboard restraints.



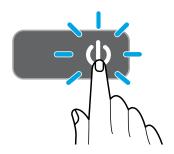


Plug in power cord and turn on printer.







Connect USB cable only when prompted during software installation.

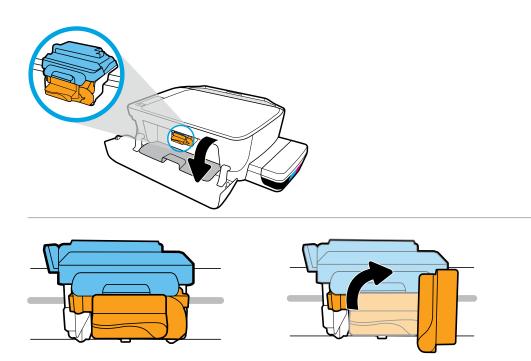

Wait for print carriage to move to center and stop. Turn orange handle.

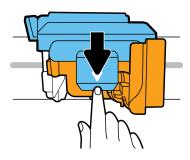



Press down on blue latch to open.

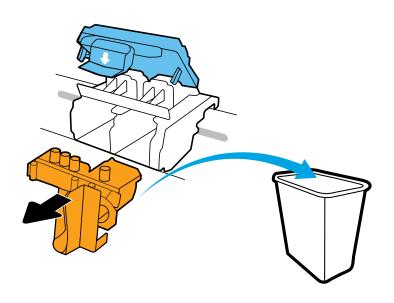


Remove and discard orange plastic piece. Handle carefully to avoid ink stains.

Install printheads

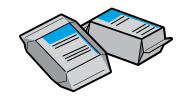


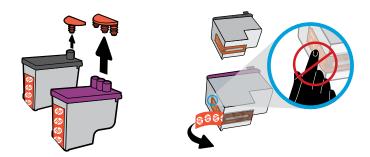

Remove plugs from tops of printheads, then remove tape from contacts using pull tabs.

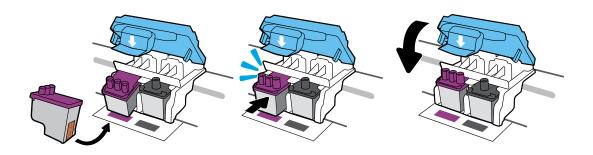


Slide in printheads until they snap. Firmly close blue latch.

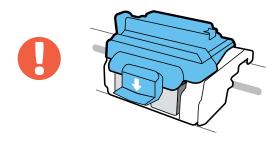

IMPORTANT! Keep blue latch closed after printhead installation.




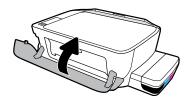


Close printhead access door, then close front door.

Load paper




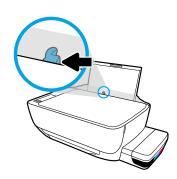

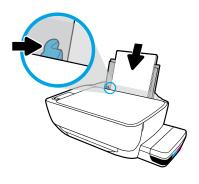





Pull out input tray. Load plain white paper and adjust guide. Pull out output tray and extender.

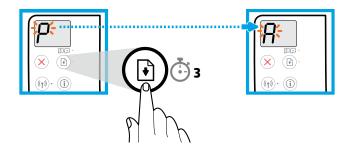

Press (Resume) for 3 seconds. Wait for alignment page to print when blinking "P" becomes "A".

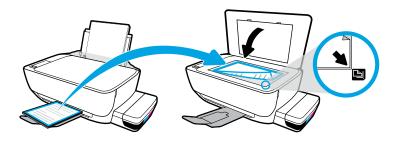

Place alignment page on scanner glass.

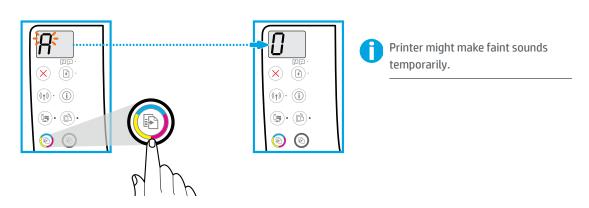

Press (Color Copy) to complete printhead alignment. Continue setup when "A" becomes "0".



Complete setup at 123.hp.com



Download HP Smart software to complete printer setup.



hp.com/support/printer-setup






Trouble getting started? Find setup information and videos online.




IMPORTANT: Read following pages to prevent damage to your printer.




Always maintain proper ink levels

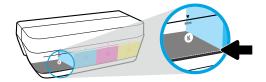

Always refill ink before it falls below lower line.

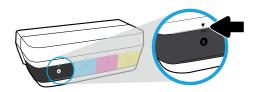

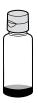


Fill ink to upper line. Some ink might be left in the bottles.



, Product service or repairs required as a result of filling the ink tanks improperly and/or using non-HP ink will not be covered under warranty.



Keep latch closed

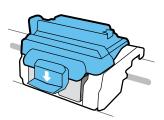



After setup, do not open the blue latch unless installing new printheads or moving printer outside home or office.



Moving printer after setup

Short Distance: If you are moving the printer within your home or office, keep blue latch closed, and keep printer level.

Long Distance: If you are moving the printer outside your home or office, visit **hp.com/support** or contact HP.



Z4B56-90043