


Check if the computer has Intel Optane Memory

1. Type “Device Manager” in Windows search, then click **Device Manager**.

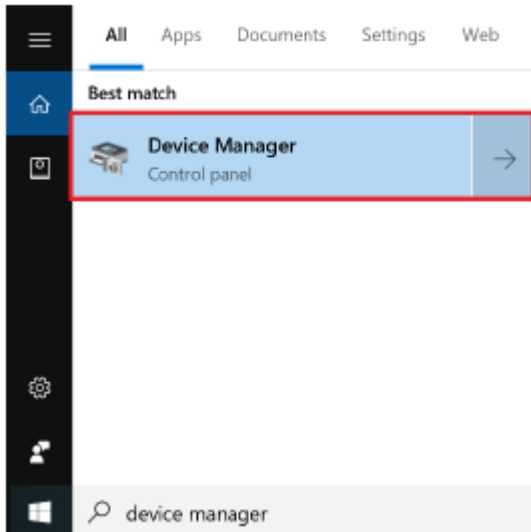

2. Locate and expand **Disk drives**.
 - If it shows “**Intel Optane+932GBHDD**”, the computer has Intel Optane memory (left).
 - If it DOES NOT show “Intel Optane+932GBHDD”, the computer does not have Intel Optane memory (right).

